





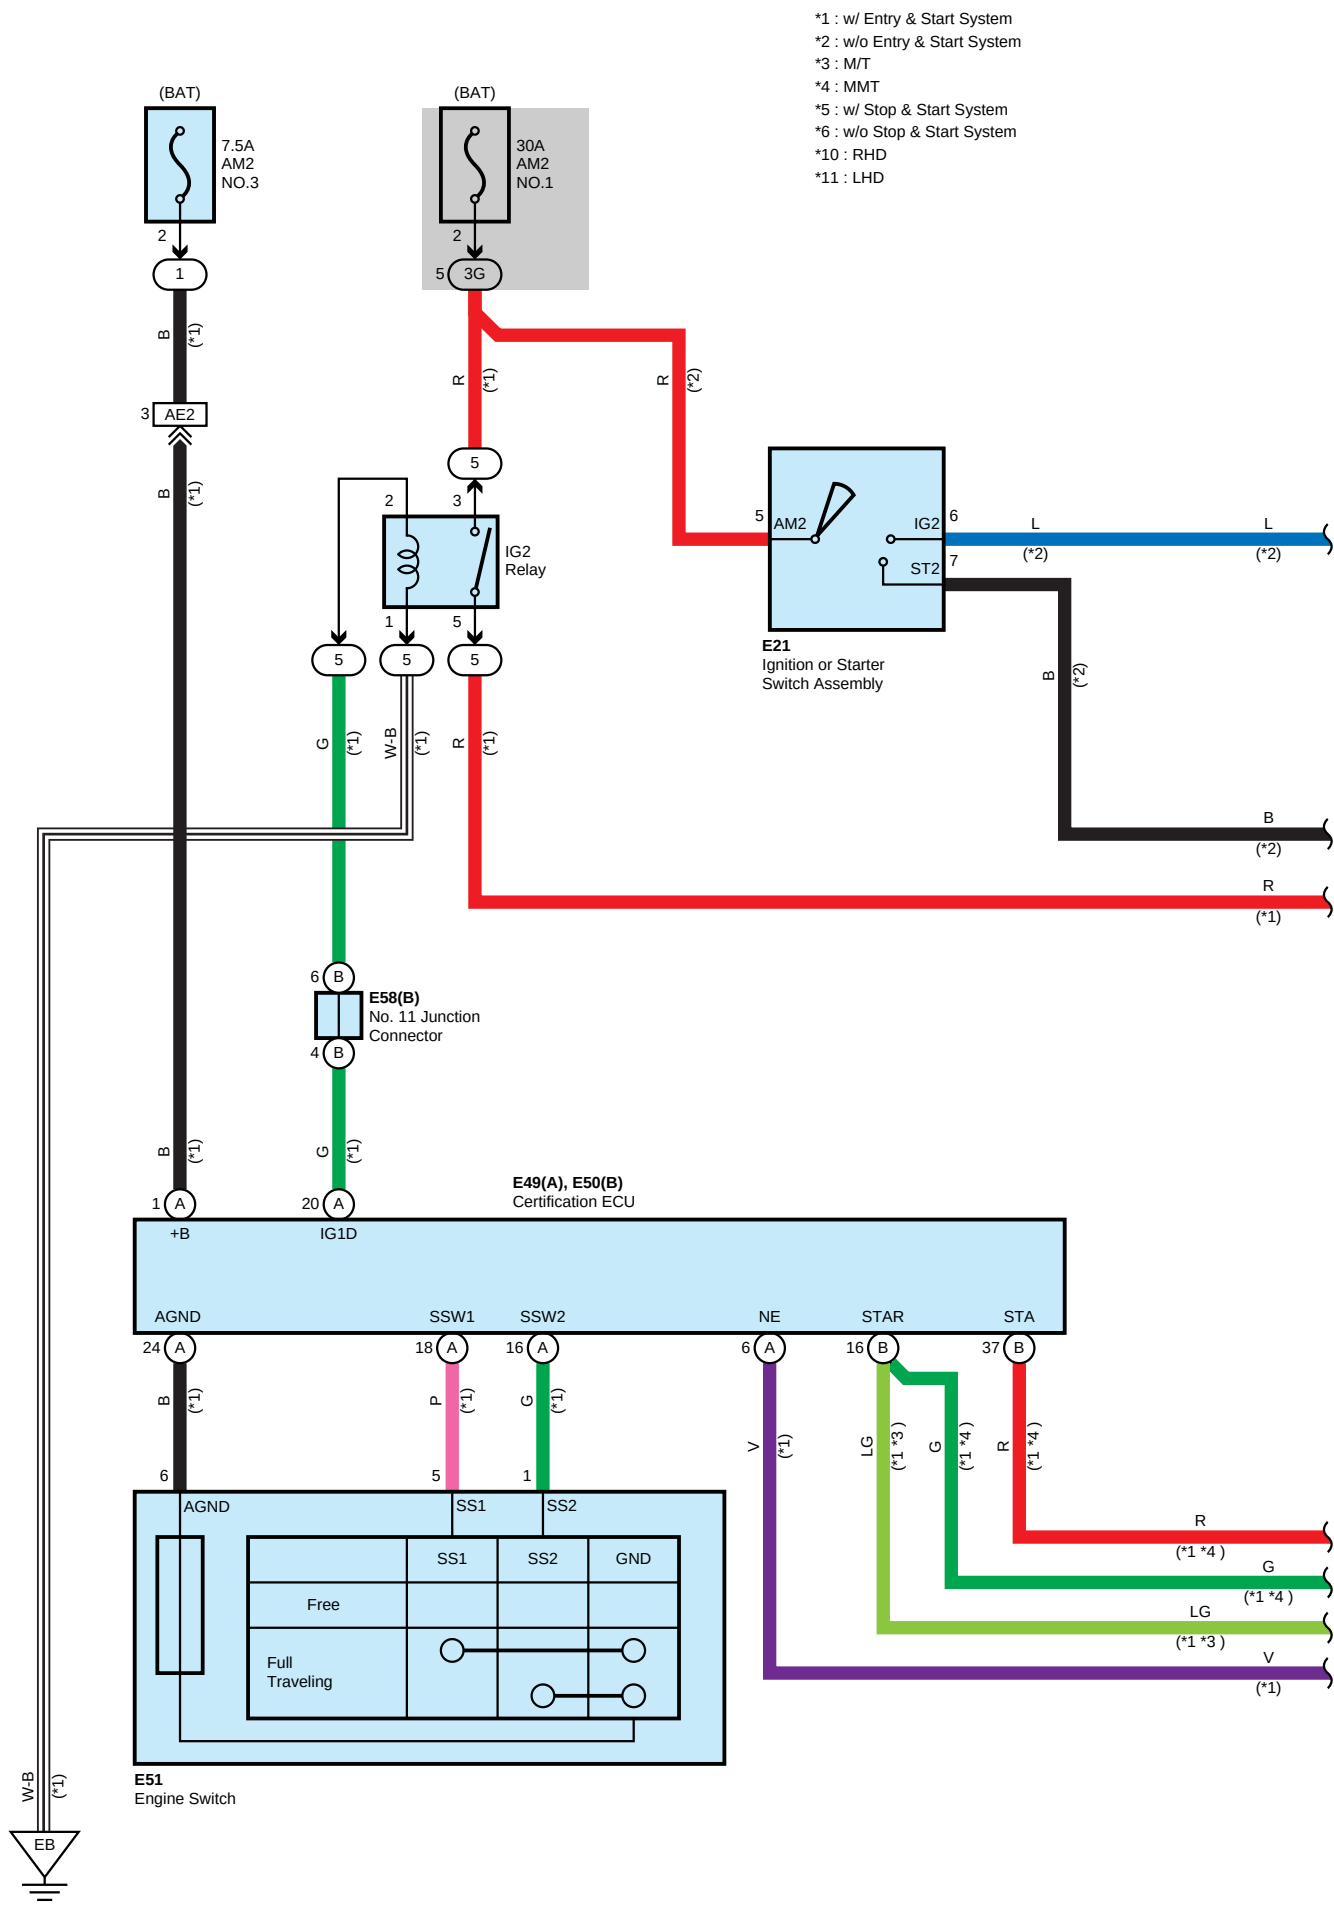

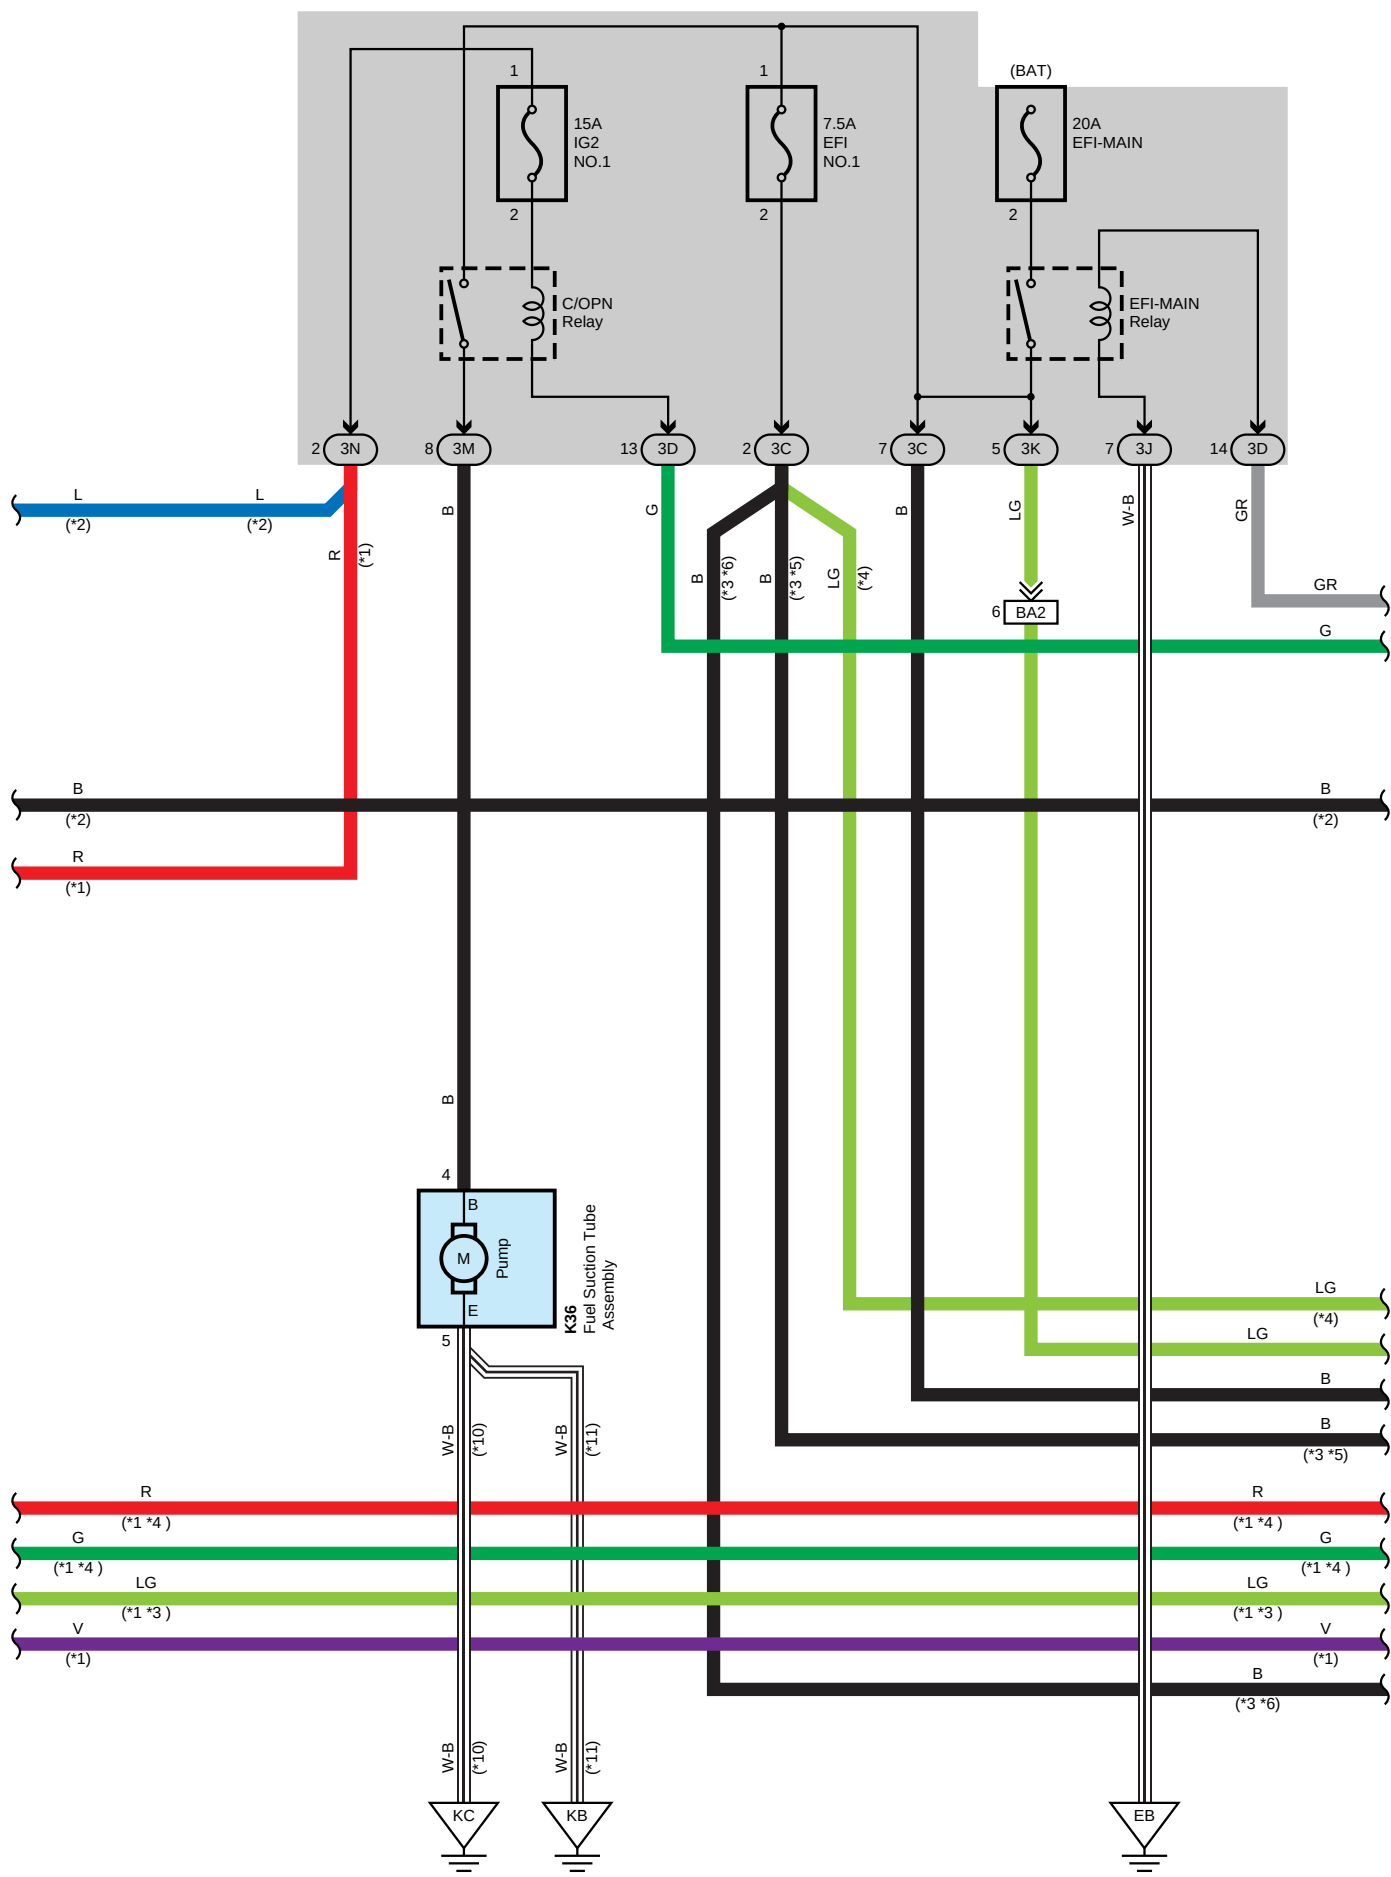

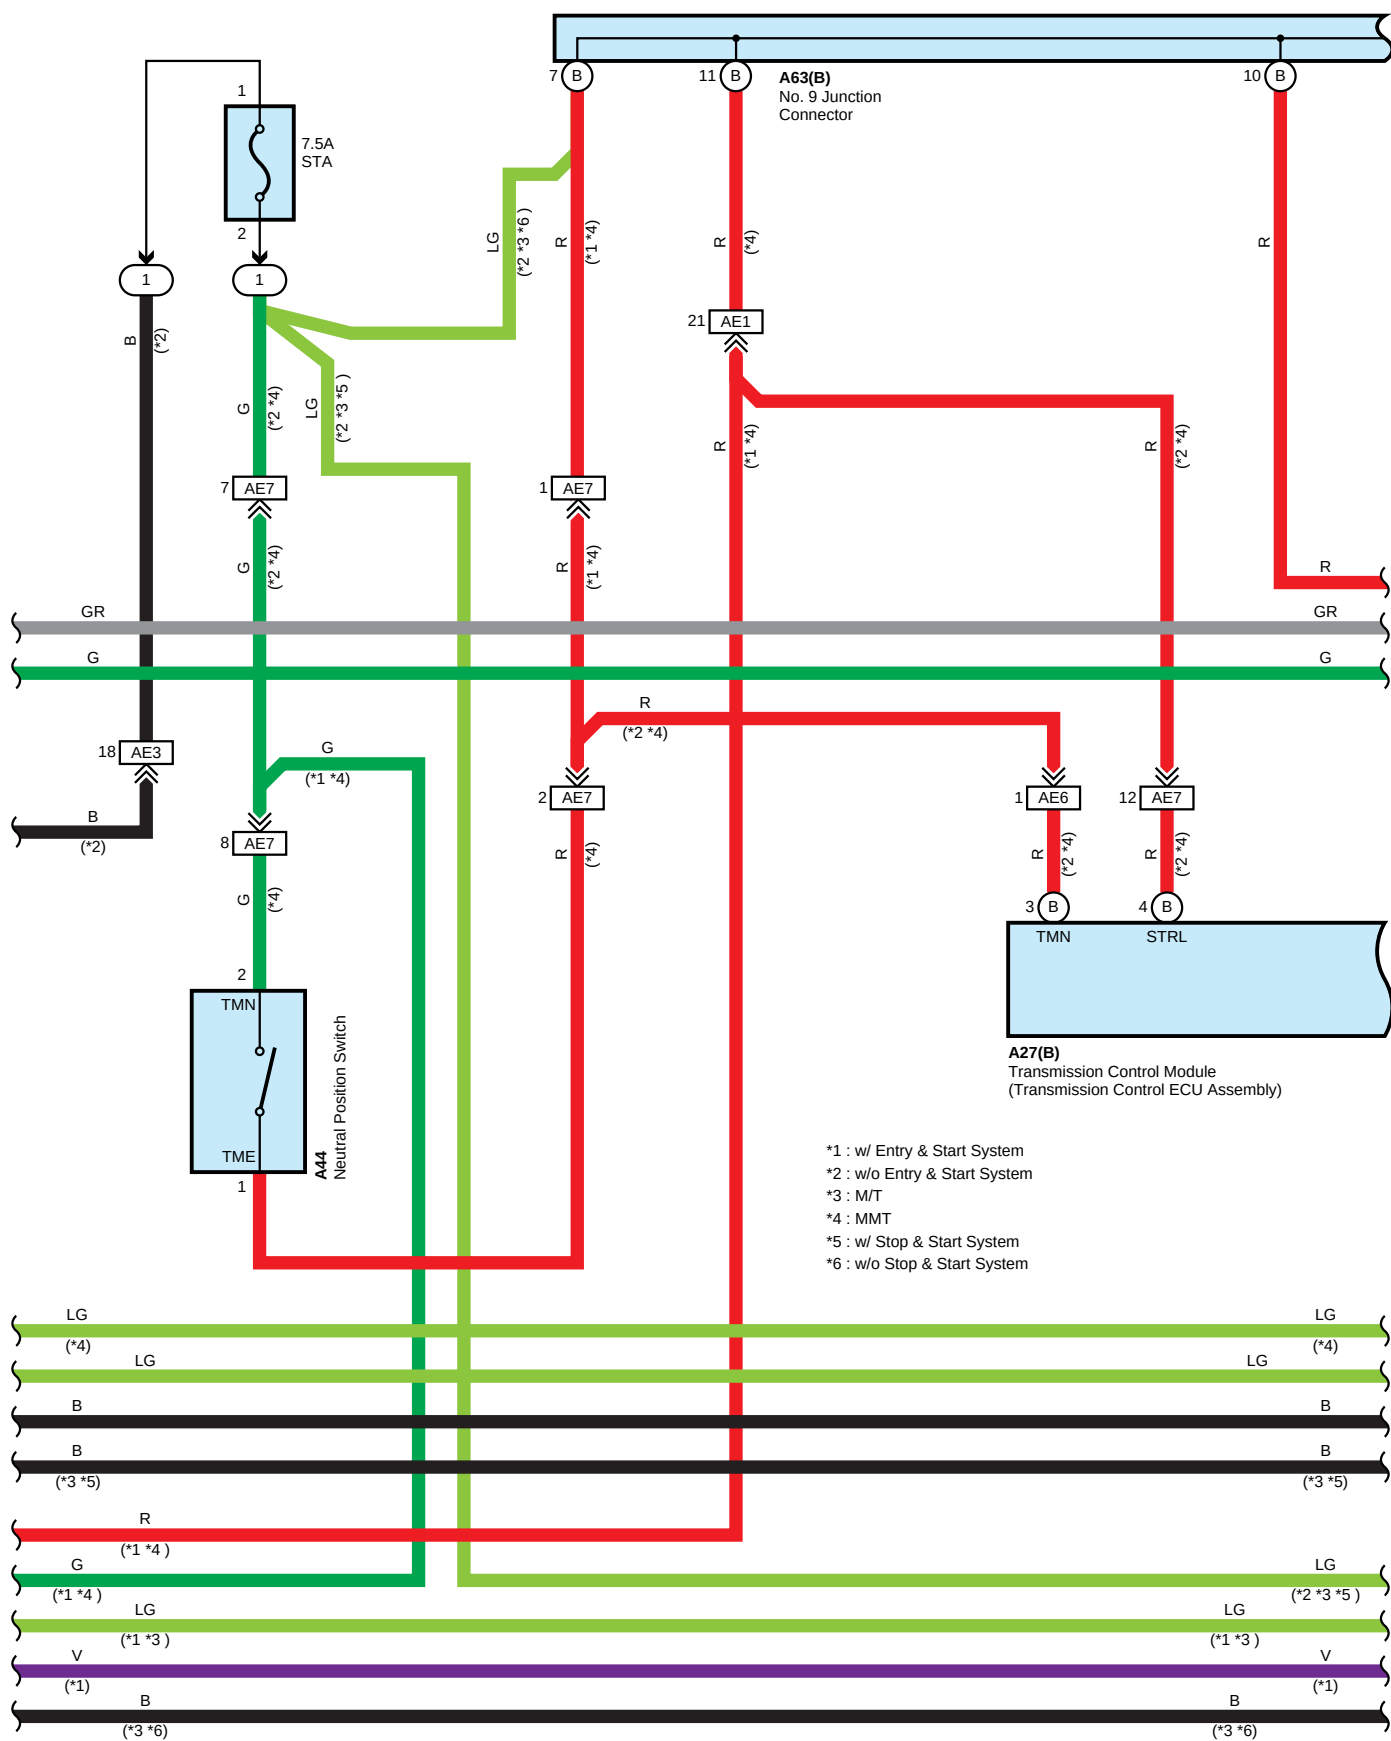

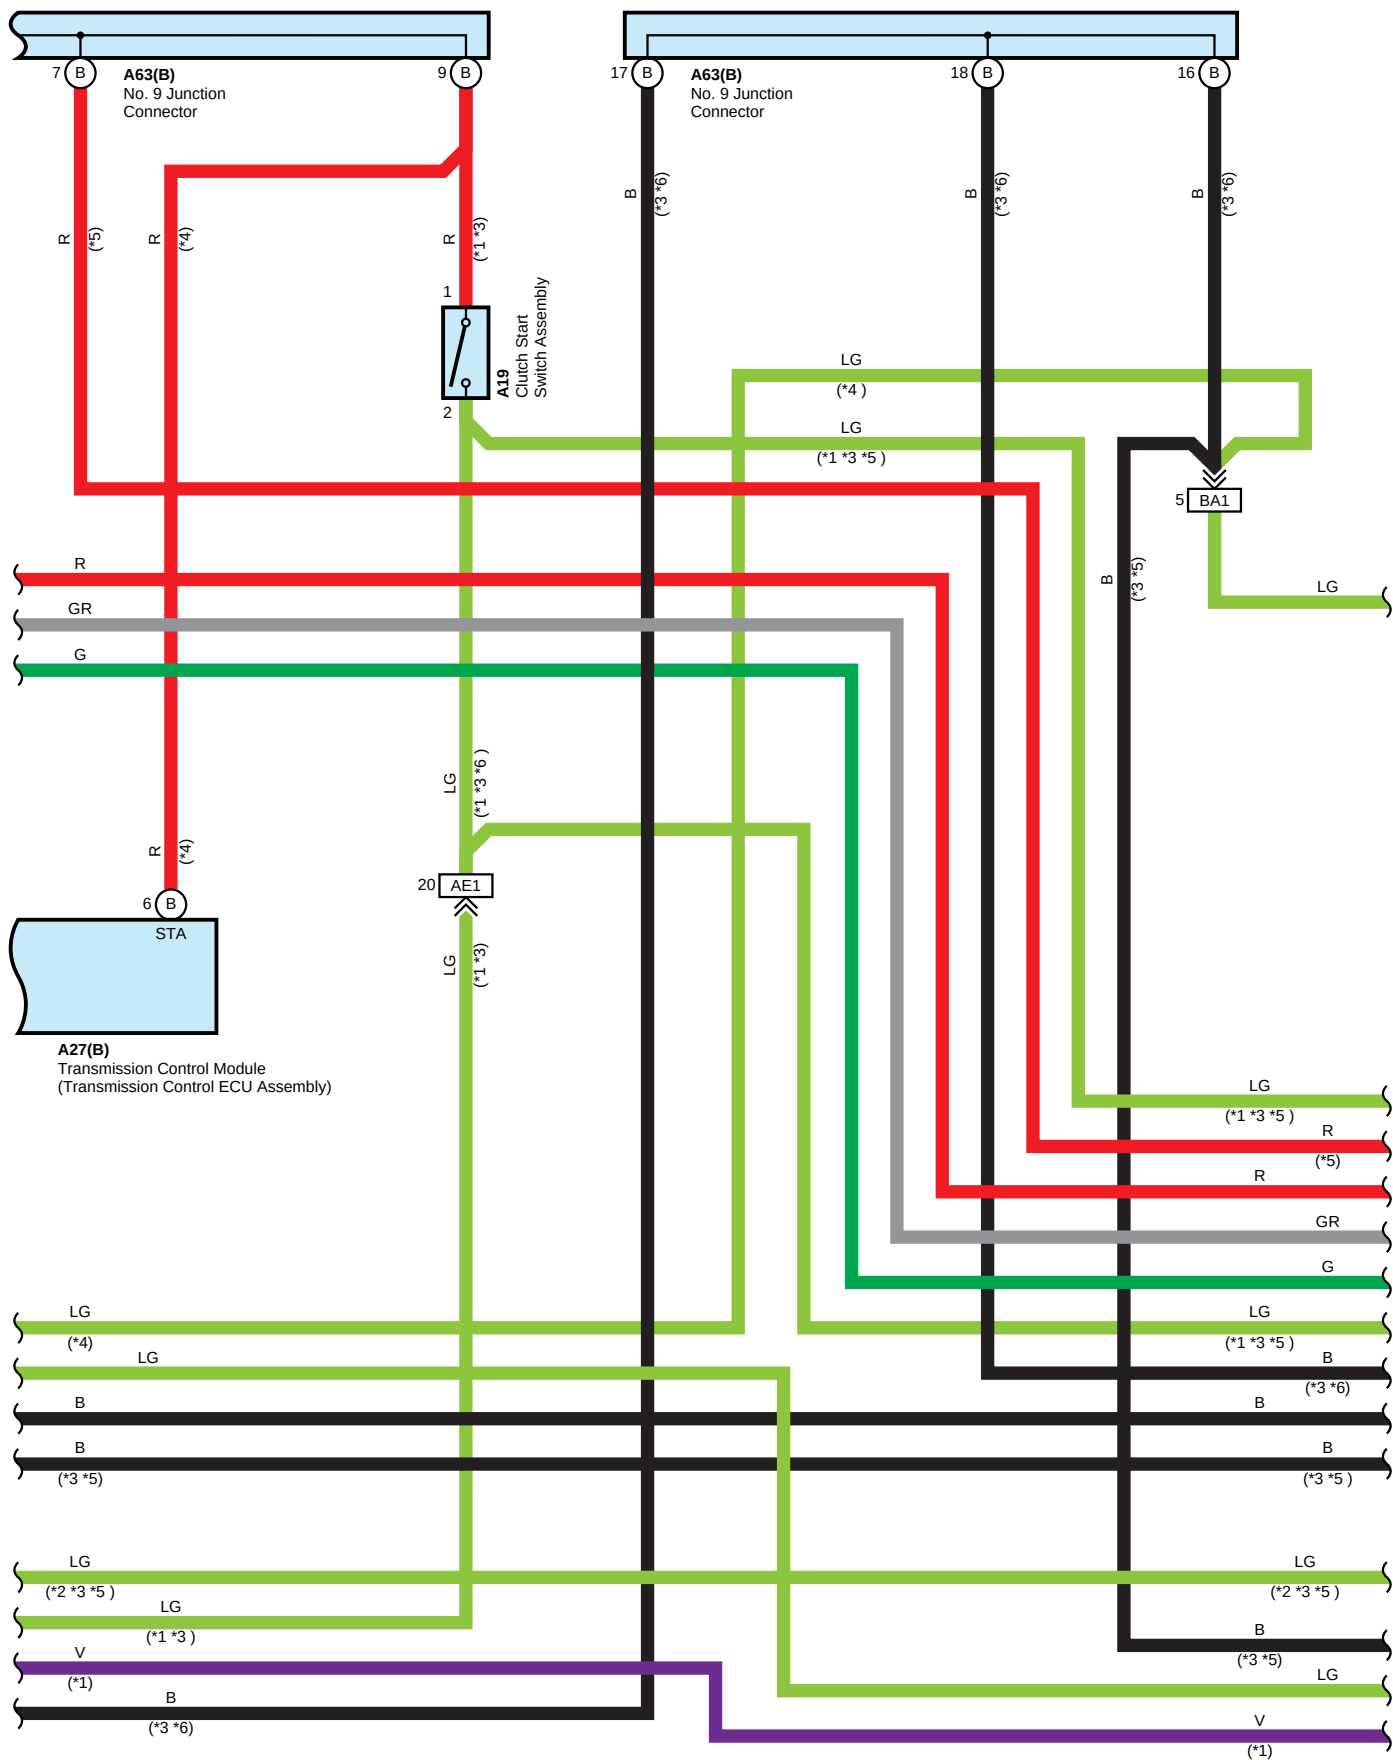



A64(B)
No. 10 Junction
Connector

A24(B)
Engine Stop and
Start ECU


Legend:


- *1 : w/ Entry & Start System
- *2 : w/o Entry & Start System
- *3 : M/T
- *5 : w/ Stop & Start System
- *6 : w/o Stop & Start System

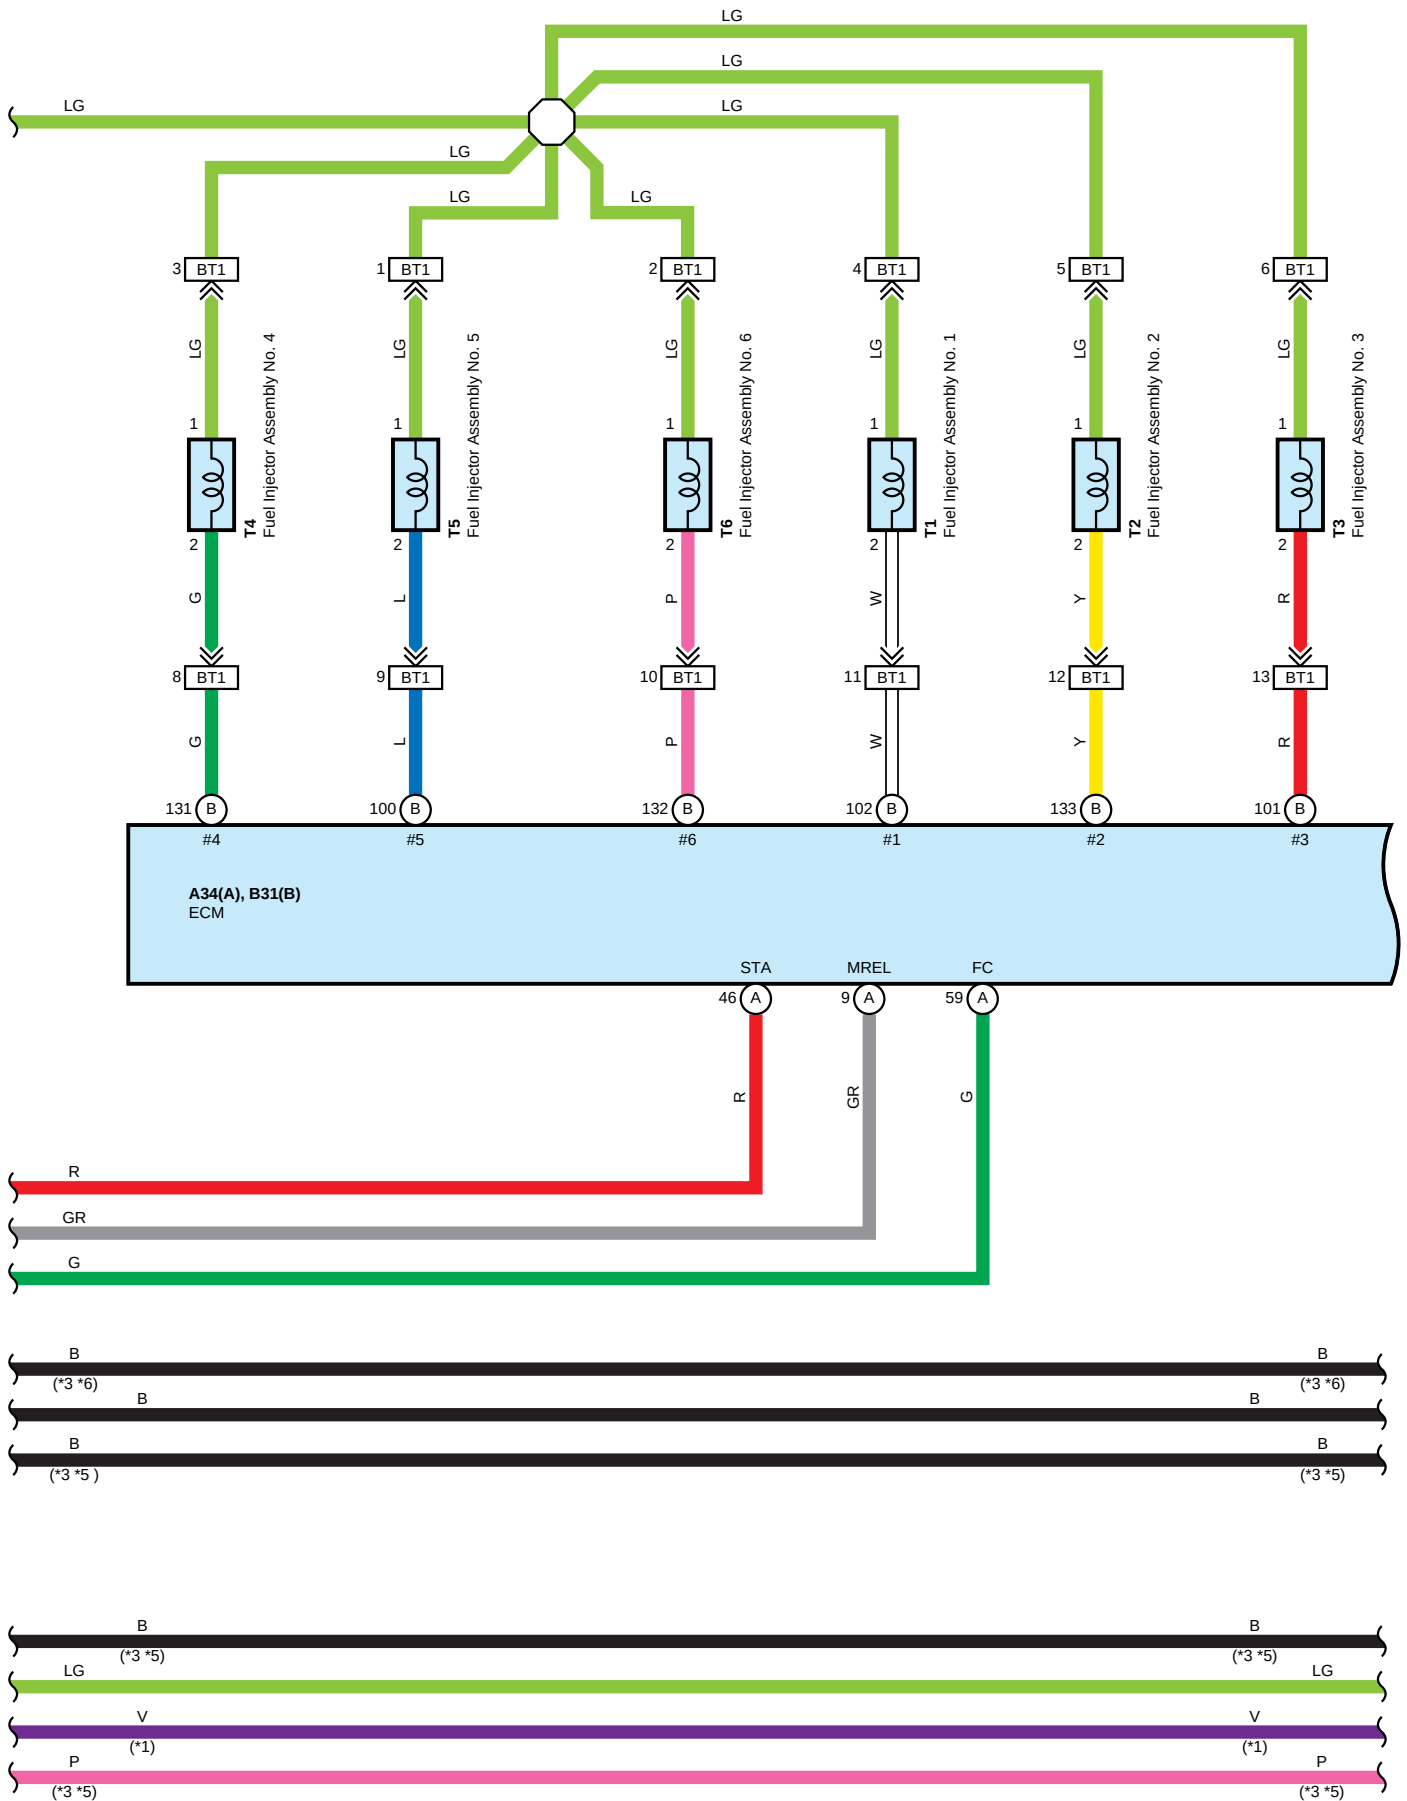

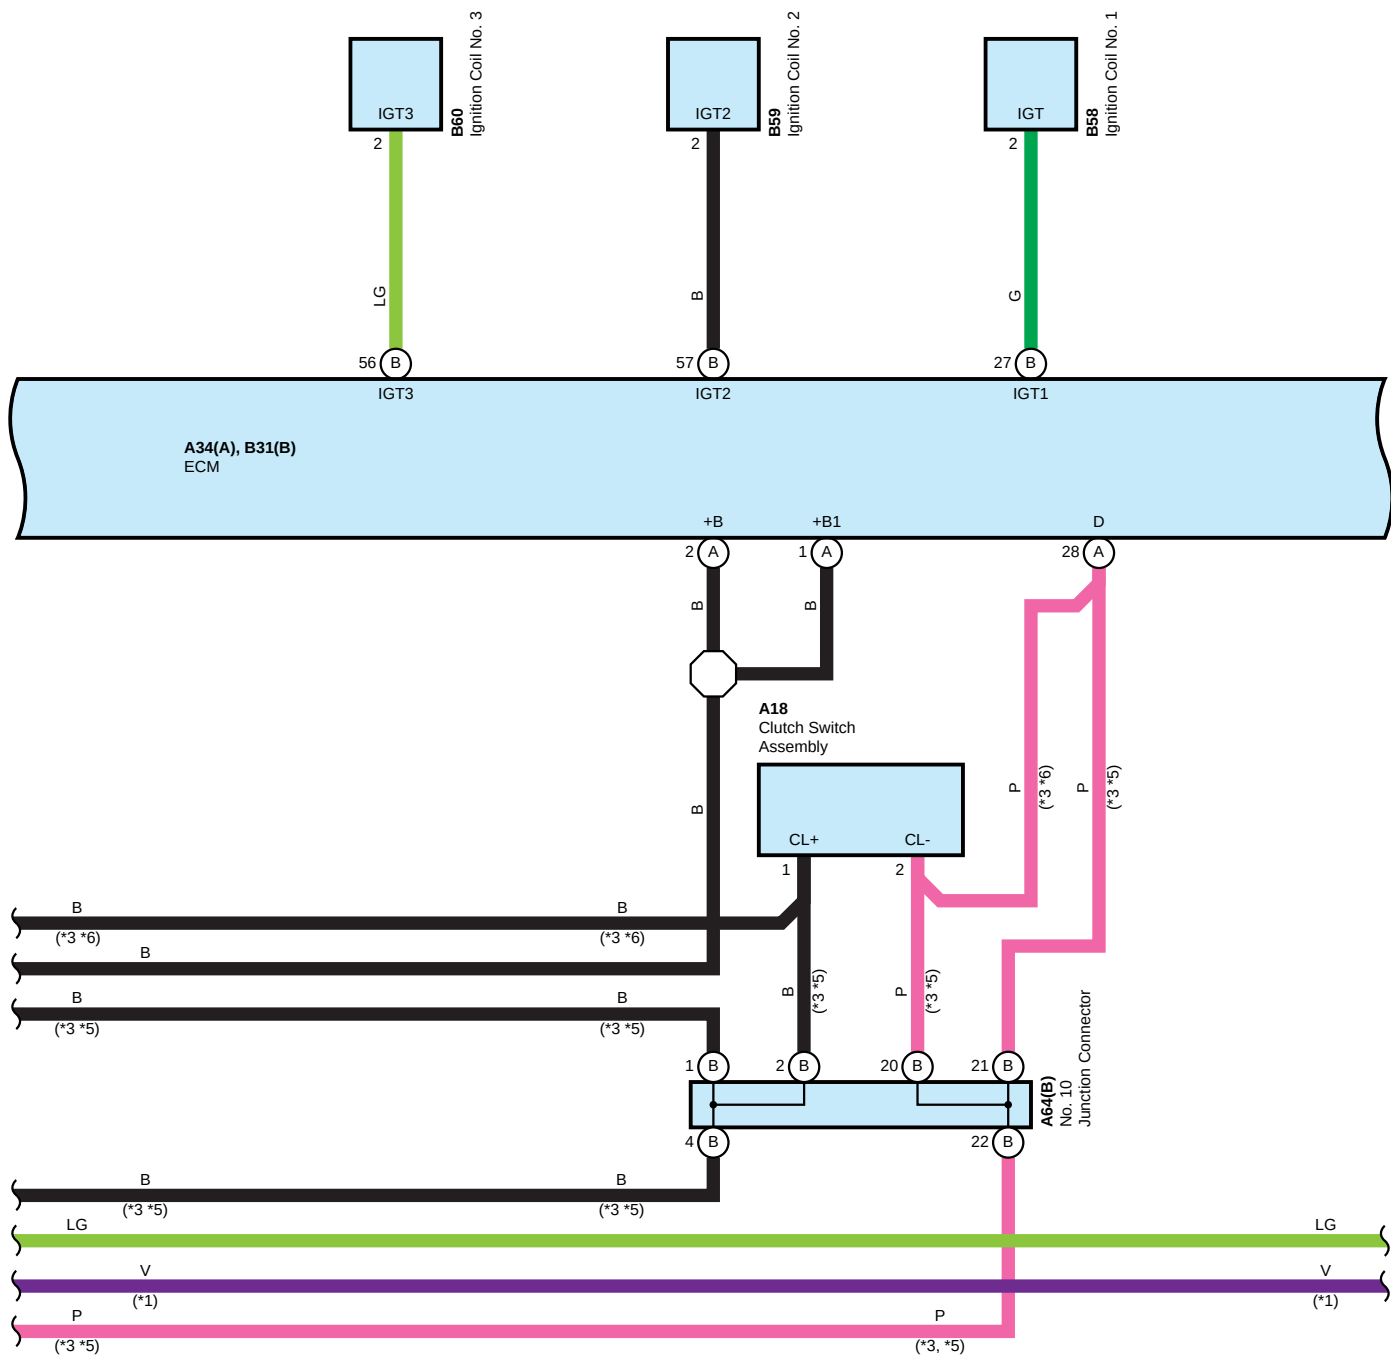


- *1 : w/ Entry & Start System
- *3 : M/T
- *5 : w/ Stop & Start System
- *6 : w/o Stop & Start System

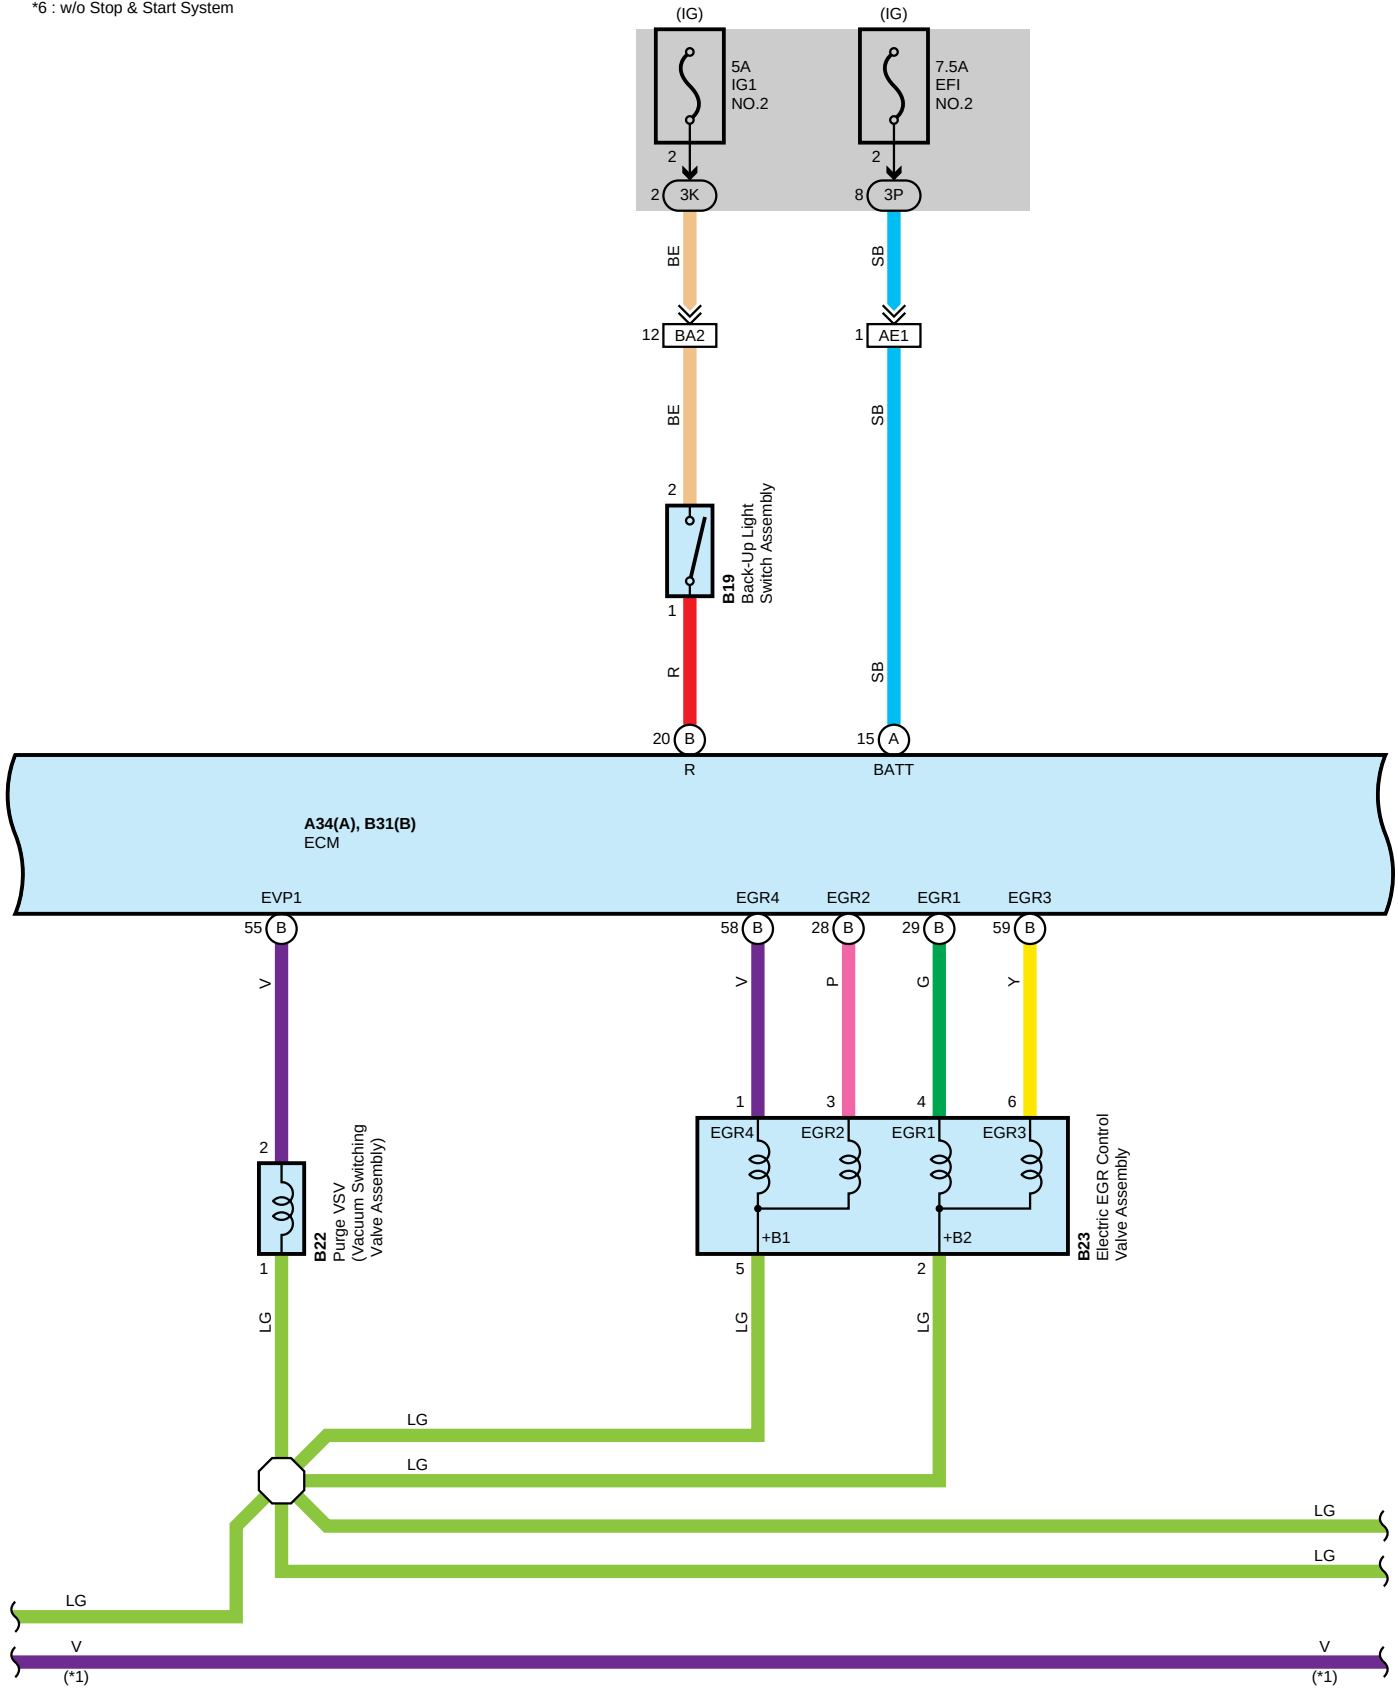

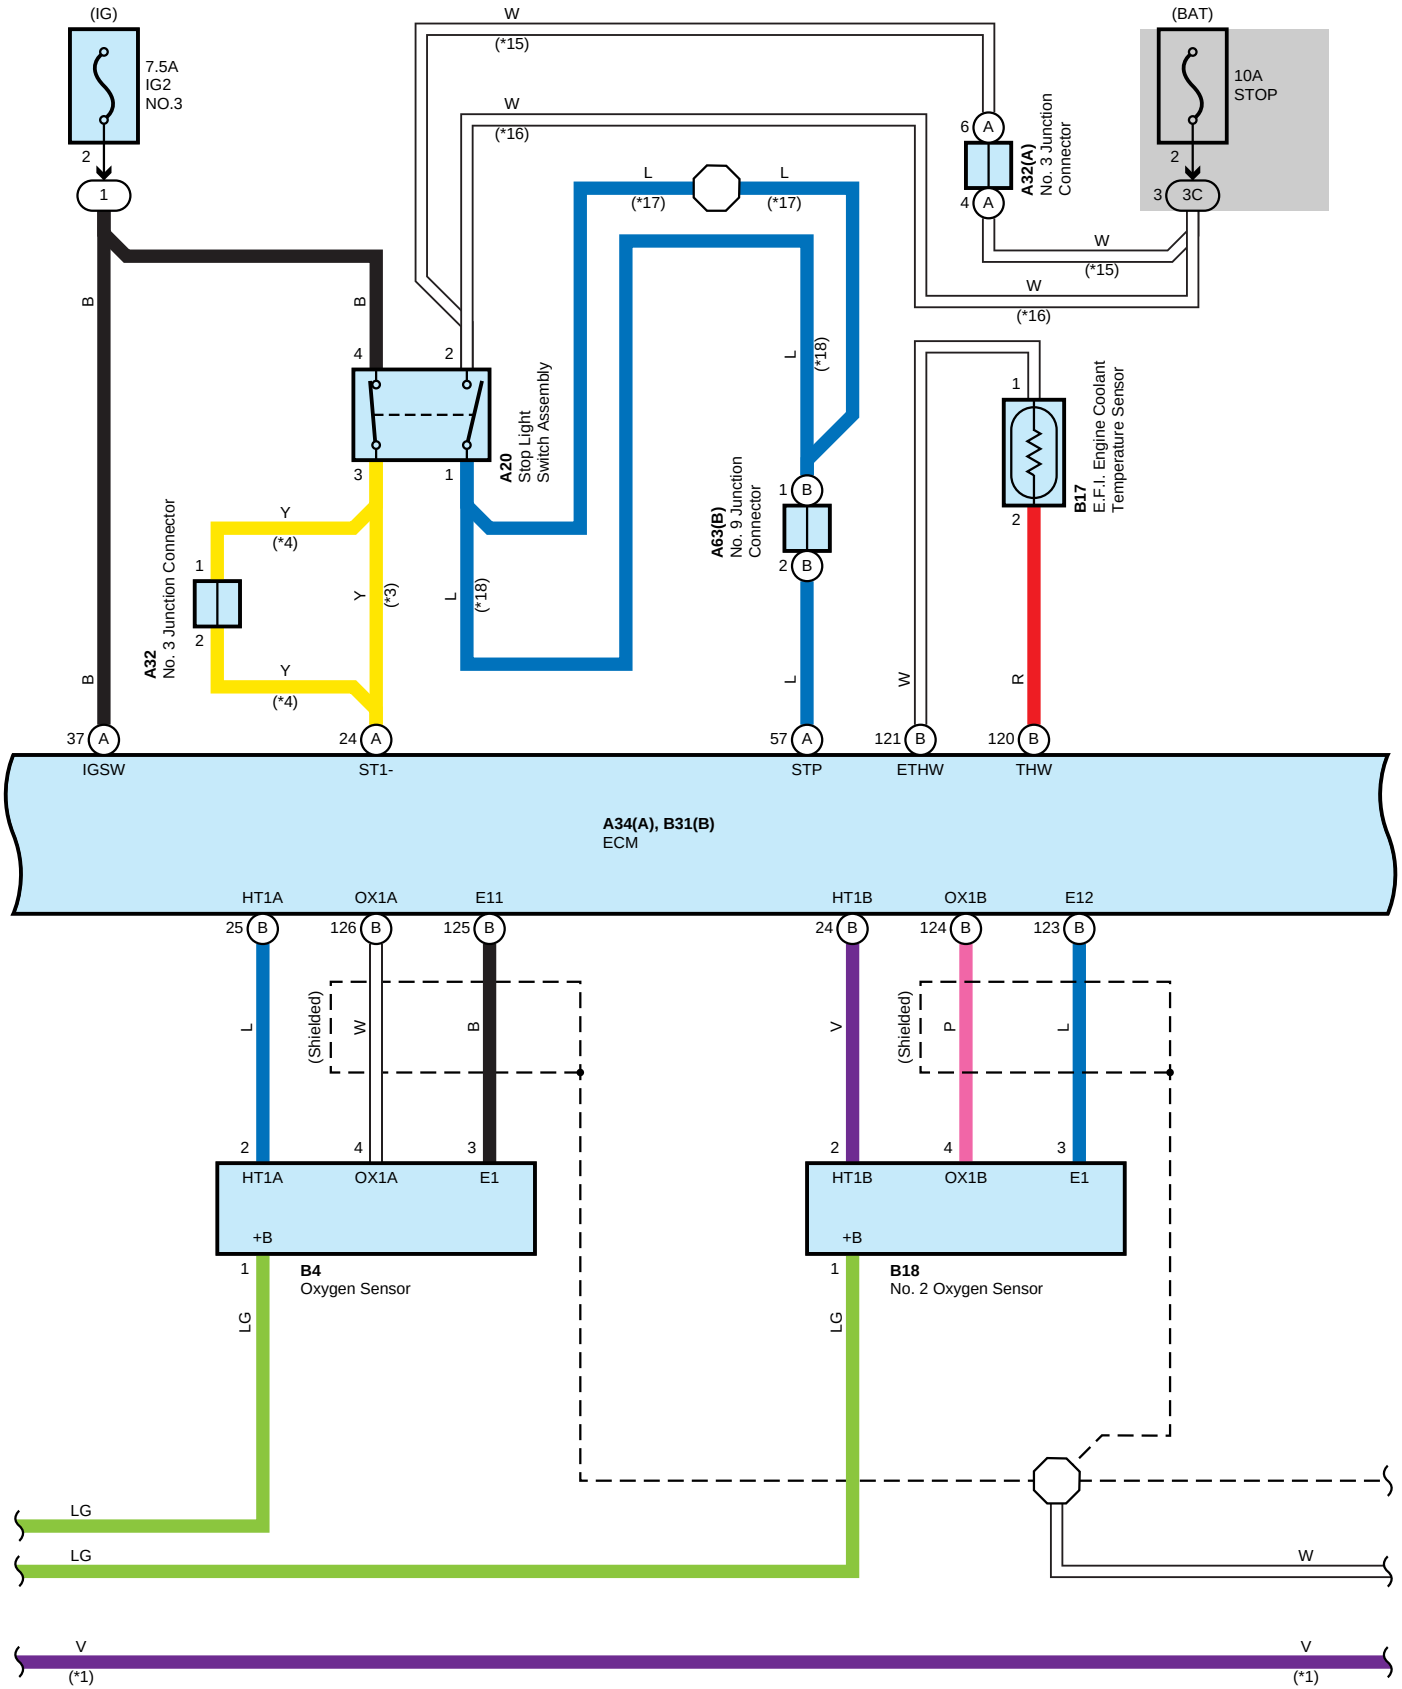

- *1 : w/ Entry & Start System
- *2 : w/o Entry & Start System
- *3 : M/T
- *4 : MMT
- *5 : w/ Stop & Start System
- *6 : w/o Stop & Start System
- *15 : w/ STOP LP Relay
- *16 : w/o STOP LP Relay
- *17 : *5 *10 *14
- *18 : Except *17

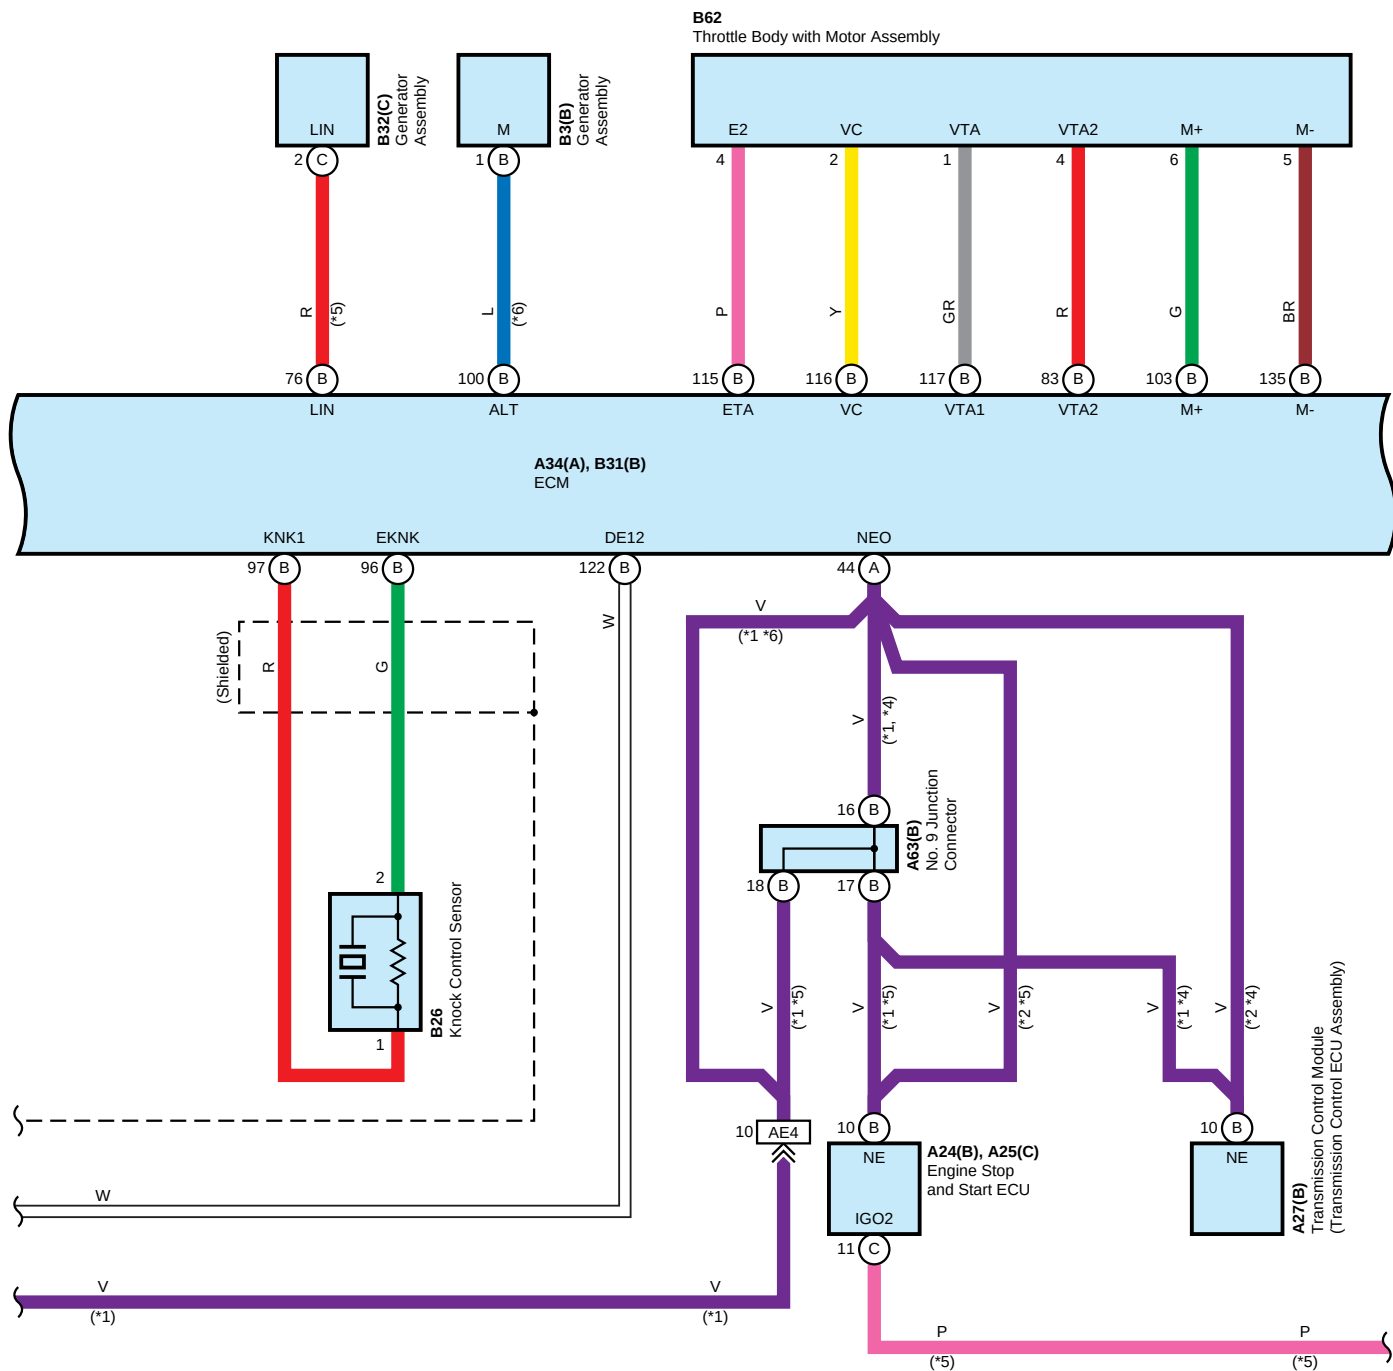

*5 : w/ Stop & Start System
 *6 : w/o Stop & Start System
 *9 : w/ Adjustable Speed Limiter

