



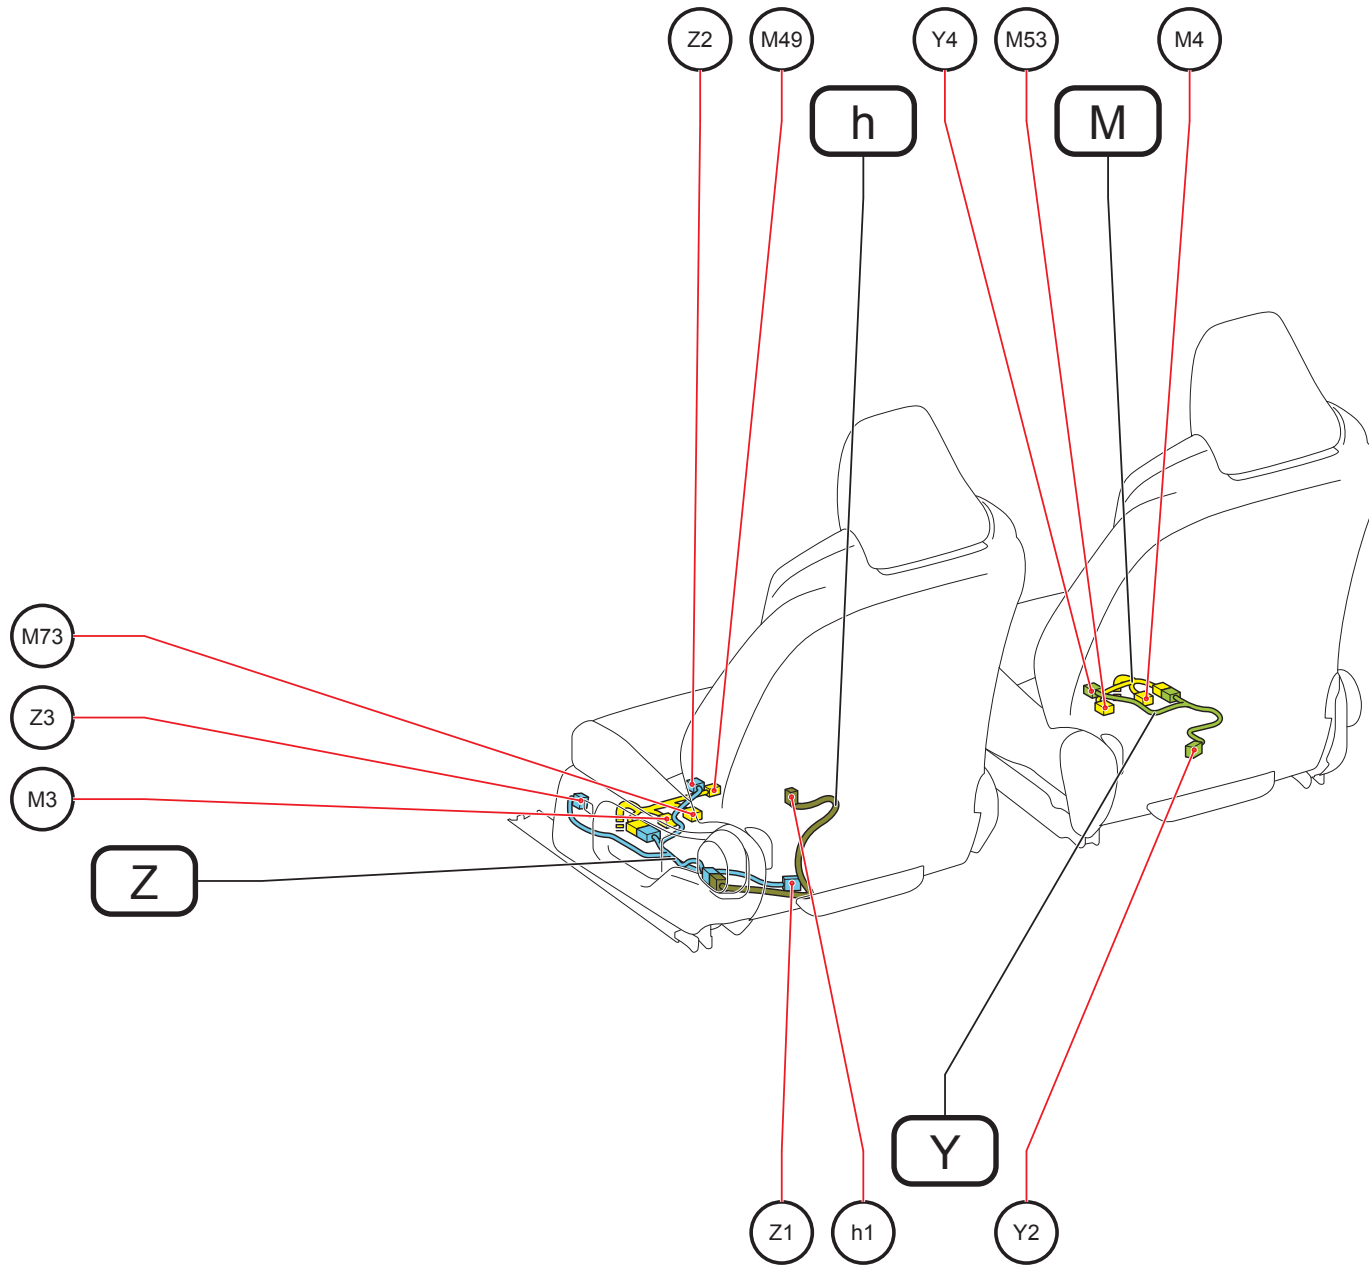


Position of Parts in Seat (LHD)

M3	Front Seat Airbag Assembly LH
M4	Front Seat Airbag Assembly RH
M49	Seat Position Airbag Sensor
M53	Front Seat Inner Belt Assembly RH
M73	Front Seat Inner Belt Assembly LH
Y2	Front Seat Cushion Heater Assembly RH
Y4	Seat Heater Control Sub-Assembly RH
Z1	Front Seat Cushion Heater Assembly LH
Z2	Seat Heater Control Sub-Assembly LH
Z3	Front Lumbar Power Switch
h1	Lumbar Support Adjuster Assembly LH


Position of Parts in Seat (LHD)

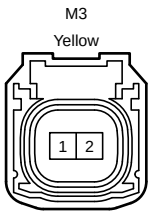


90980-12698

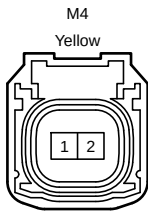


90980-12698

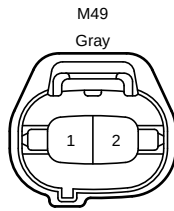


90980-11156

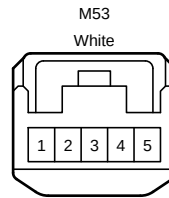


90980-12366

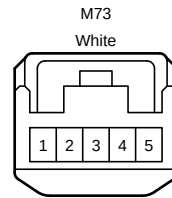


90980-12366

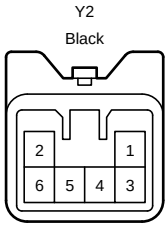


90980-10796

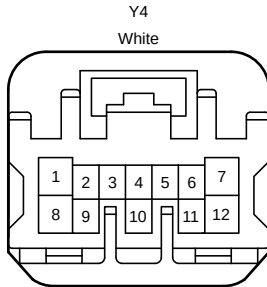


90980-12812

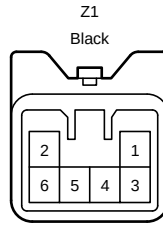


90980-10796

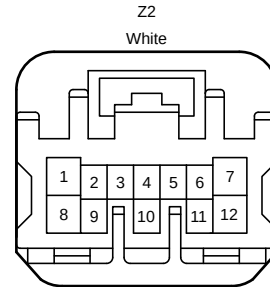

90980-12812

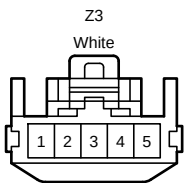

90980-12348

 

90980-12341