



Position of Parts in Seat (RHD)

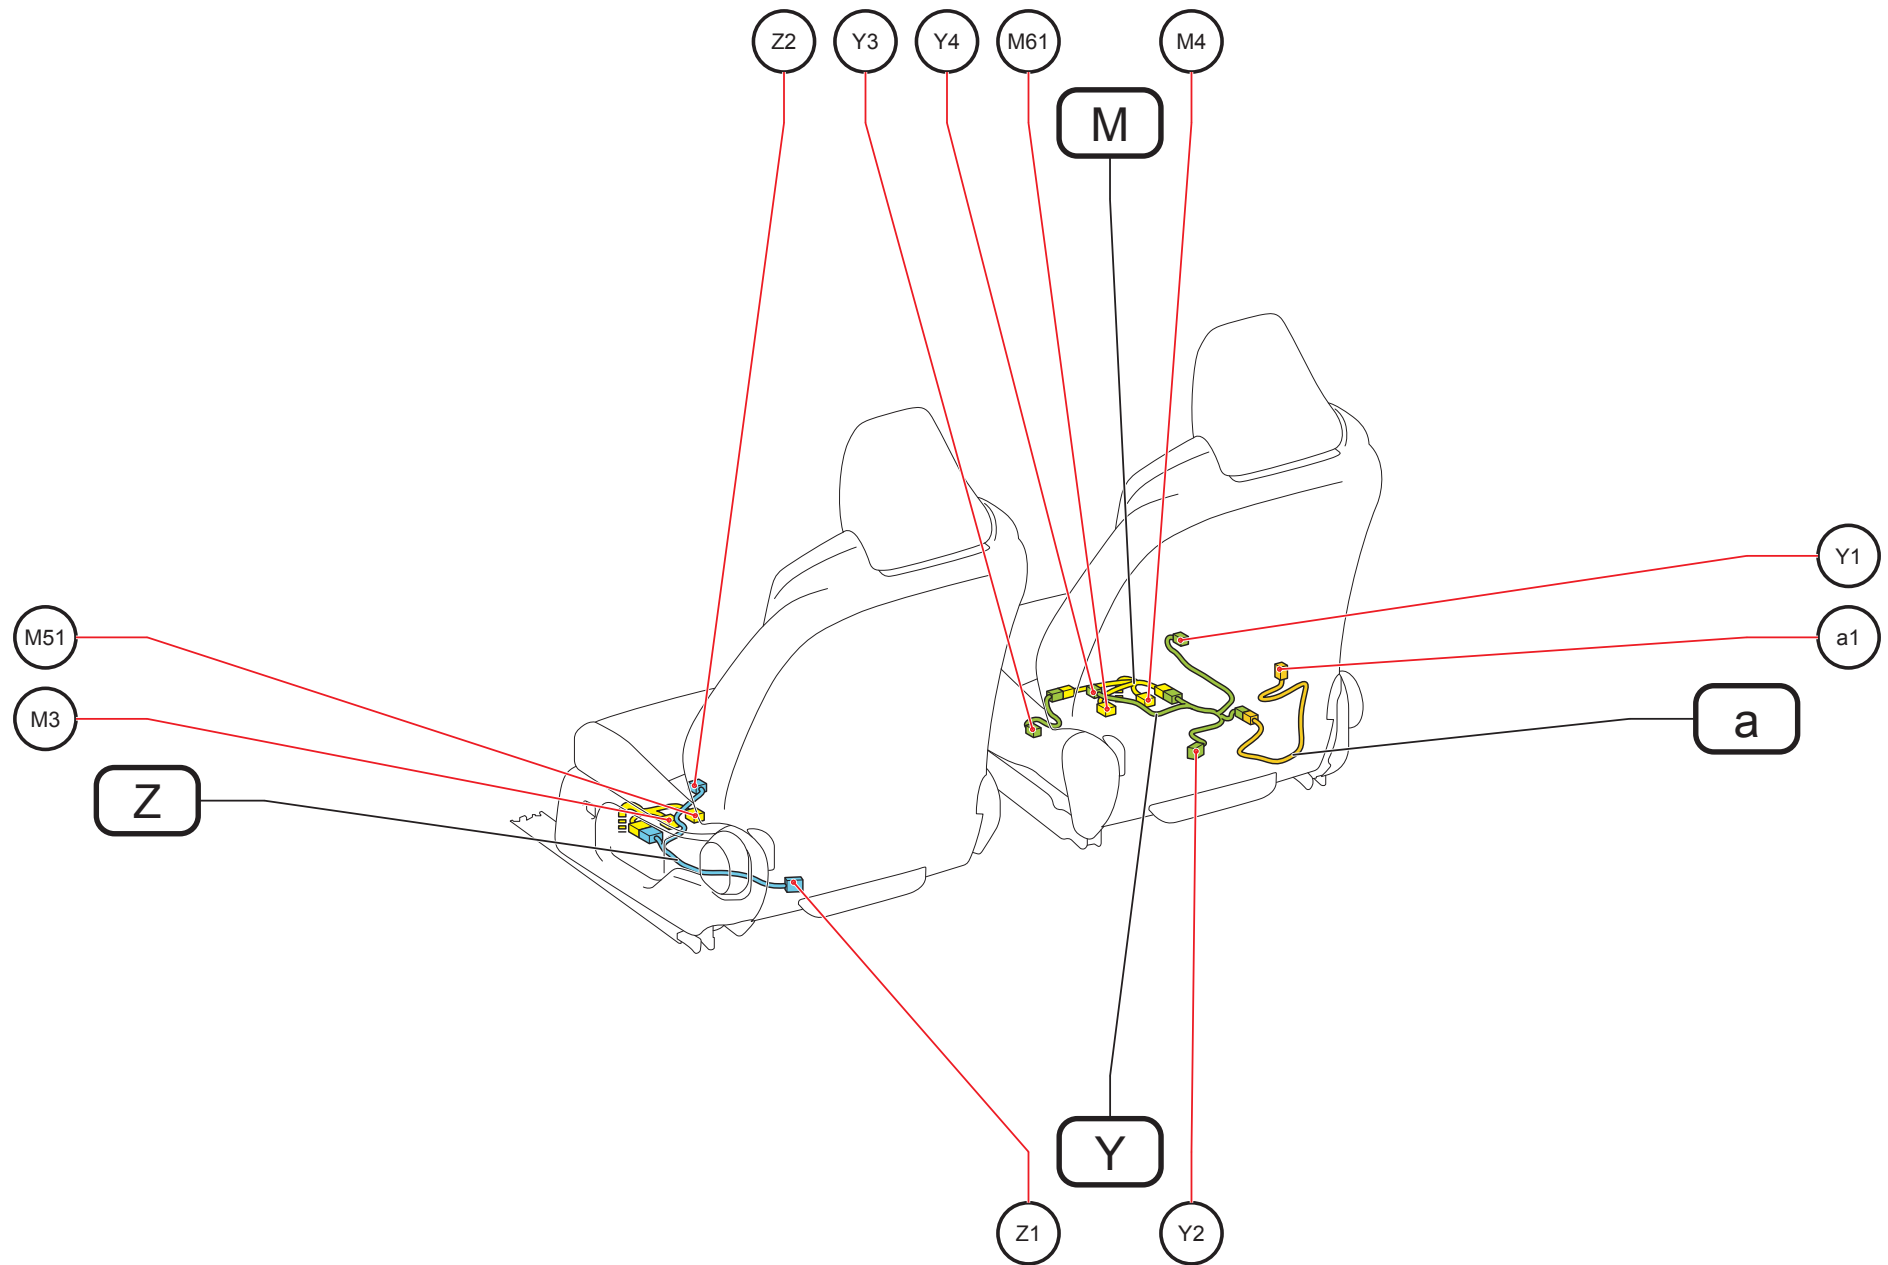


Position of Parts in Seat (RHD)

M3	Front Seat Airbag Assembly LH
M4	Front Seat Airbag Assembly RH
M51	Front Seat Inner Belt Assembly LH
M61	Front Seat Inner Belt Assembly RH
Y1	Front Lumbar Power Switch
Y2	Front Seat Cushion Heater Assembly RH
Y3	Seat Position Airbag Sensor
Y4	Seat Heater Control Sub-Assembly RH
Z1	Front Seat Cushion Heater Assembly LH
Z2	Seat Heater Control Sub-Assembly LH
a1	Lumbar Support Adjuster Assembly RH


Position of Parts in Seat (RHD)

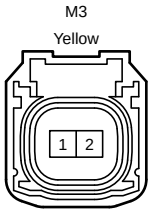


90980-12698

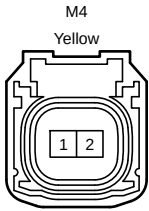


90980-12698

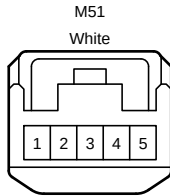


90980-12366

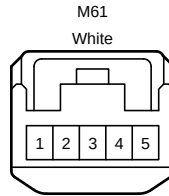


90980-12366

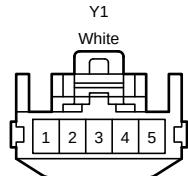


90980-12348

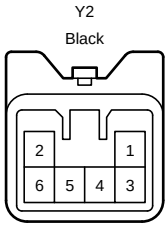


90980-10796

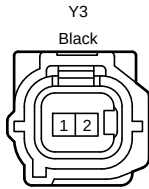


90980-12416

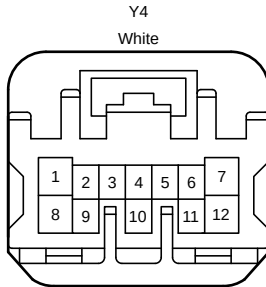


90980-12812

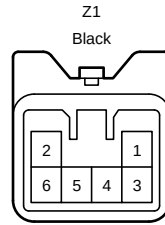

90980-10796

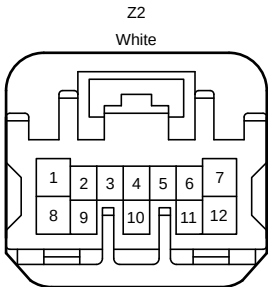

90980-12812

 

90980-12341