 
 
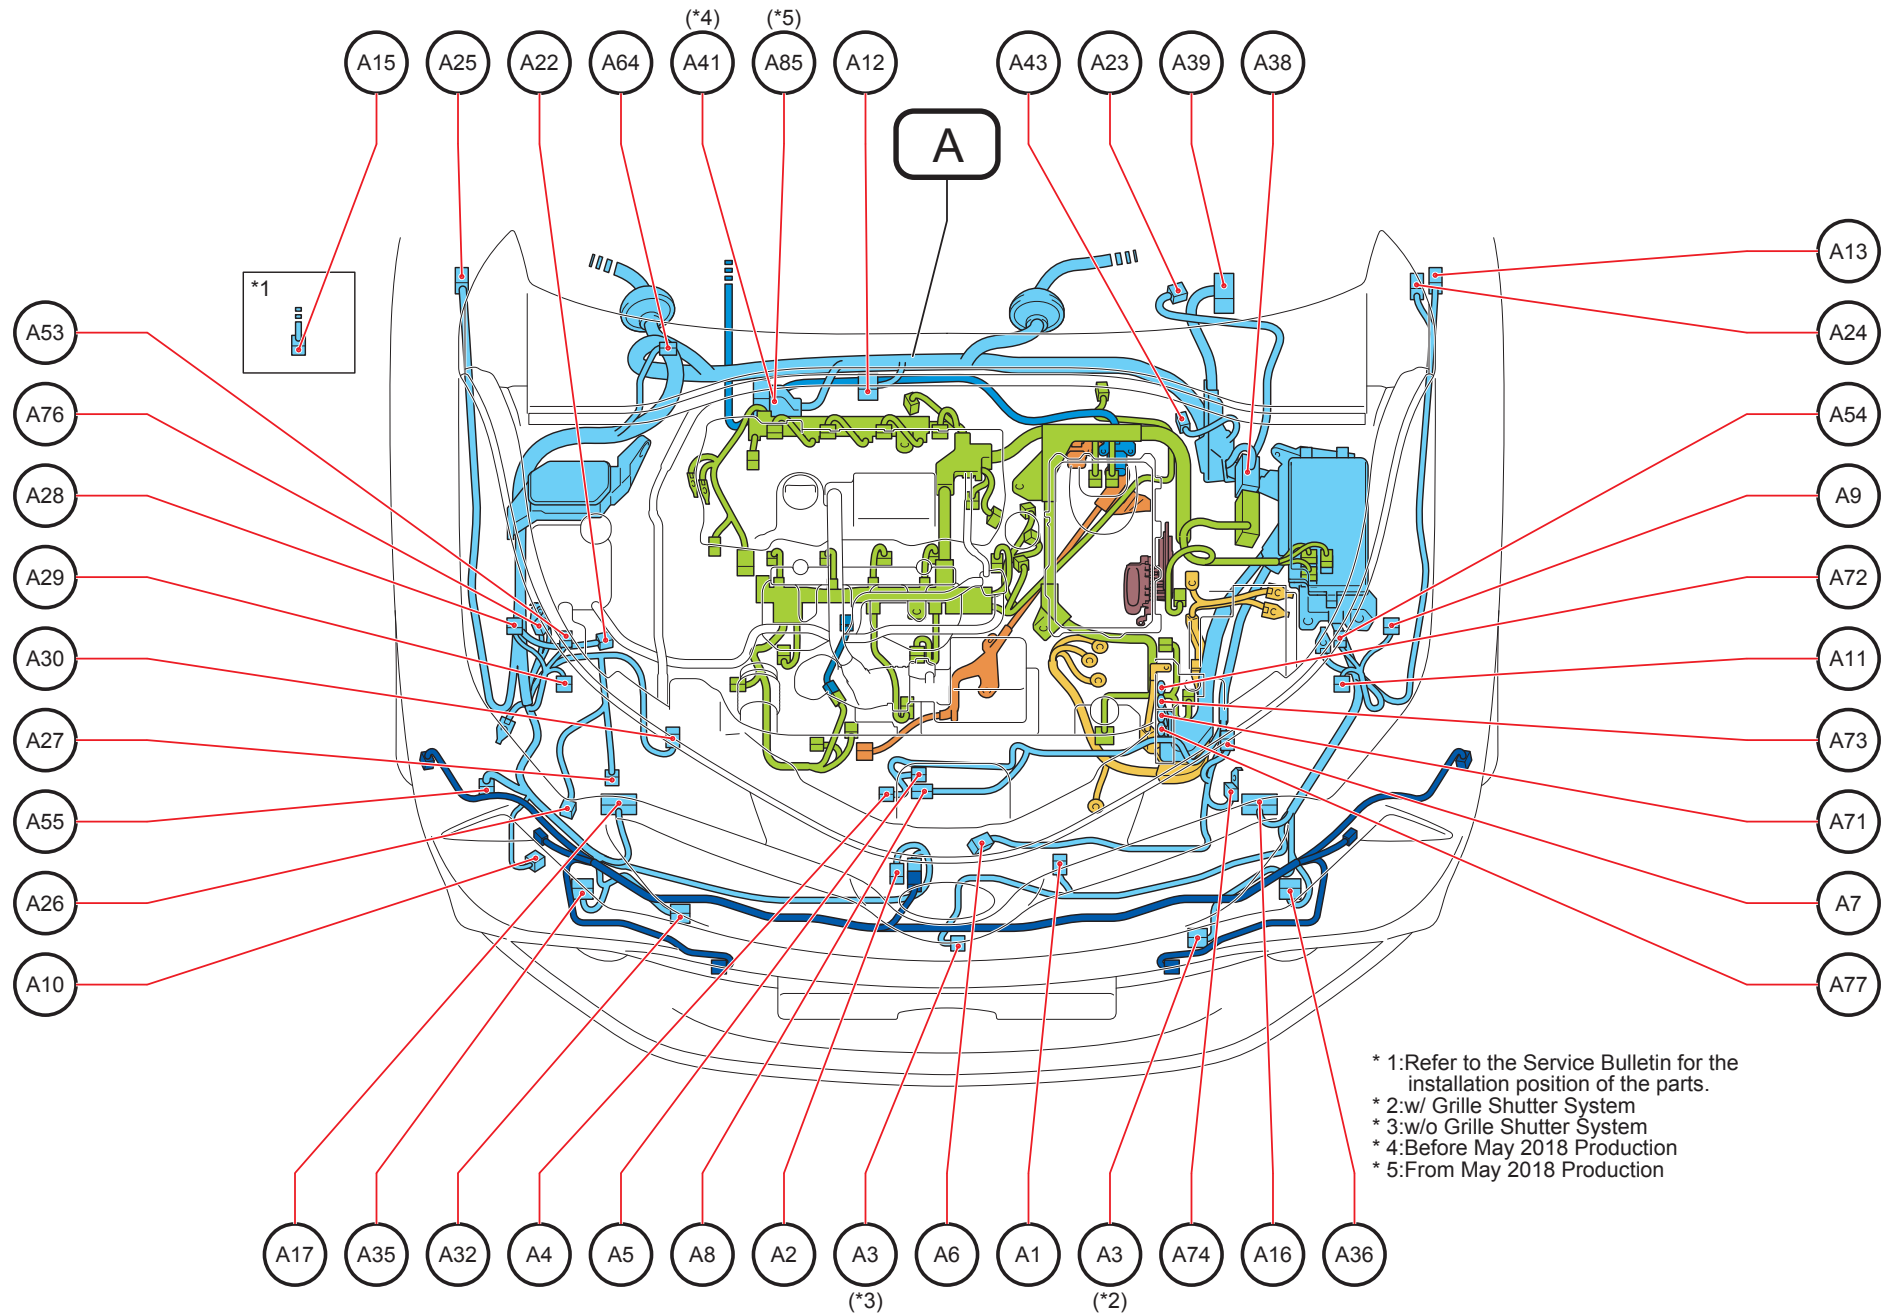 
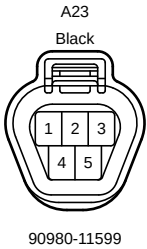 
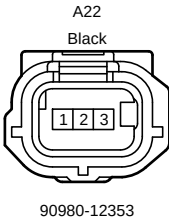 
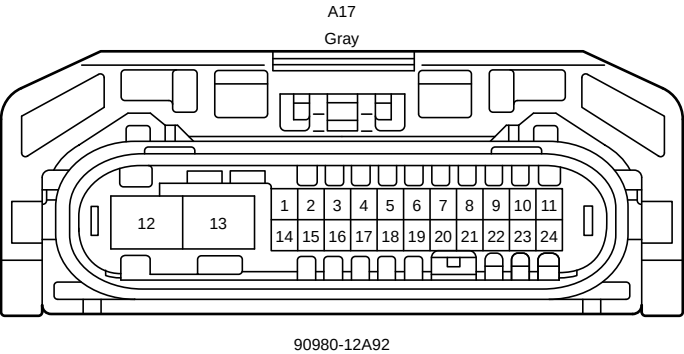 
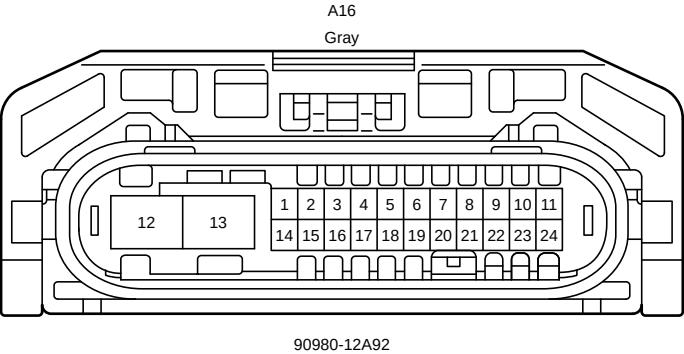 
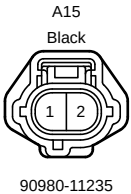 
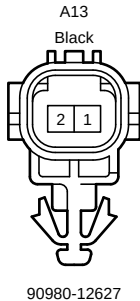 
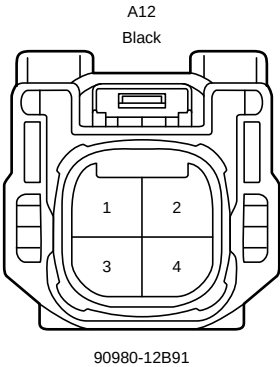 
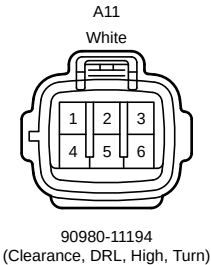 
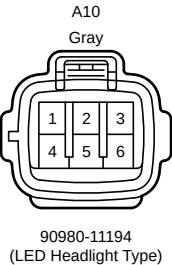 
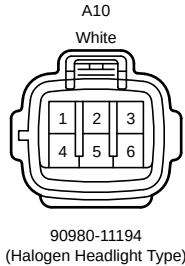 
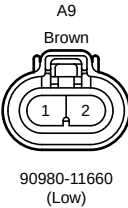 
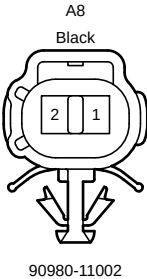 
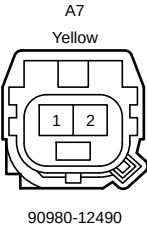 
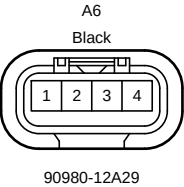 
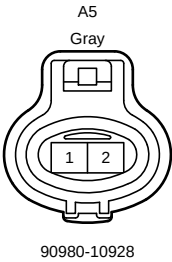 
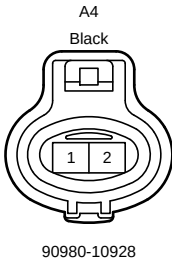 
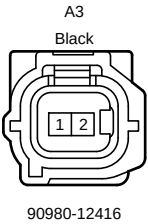 


Position of Parts in Engine Compartment (LHD)












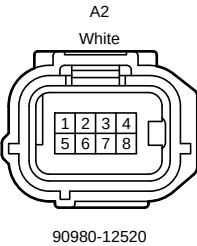


A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	Ambient Temperature Sensor (Thermistor Assembly)
A4	Cooling Fan Motor RH
A5	Cooling Fan Motor LH
A6	Inverter Water Pump Assembly (with Motor)
A7	Front Airbag Sensor LH
A8	Hood Courtesy Switch (Hood Lock Assembly)
A9	Headlight Assembly LH
A10	Headlight Cleaner Control Relay
A11	Headlight Assembly LH
A12	Brake Booster Pump Assembly
A13	Front Speed Sensor LH
A15	Security Horn Assembly
A16	Headlight ECU Sub-Assembly LH
A17	Headlight ECU Sub-Assembly RH
A22	A/C Pressure Sensor
A23	Windshield Wiper Motor Assembly
A24	Wireless Door Lock Buzzer
A25	Front Speed Sensor RH
A26	Level Warning Switch Assembly
A27	Windshield Washer Motor and Pump Assembly
A28	Headlight Assembly RH
A29	Headlight Assembly RH
A30	Front Airbag Sensor RH
A32	Radiator Shutter Sub-Assembly
A35	Fog Light Assembly RH
A36	Fog Light Assembly LH
A38	ECM
A39	Brake Booster with Master Cylinder Assembly
A41	Brake Actuator Assembly
A43	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A53	Headlight Assembly RH
A54	Headlight Assembly LH
A55	Headlight Cleaner Motor and Pump Assembly
A64	Windshield Deicer (Windshield Glass)
A71	Fusible Link Block Assembly
A72	Fusible Link Block Assembly
A73	Fusible Link Block Assembly
A74	No. 1 Ground Junction Connector
A76	No. 3 Ground Junction Connector
A77	Fusible Link Block Assembly
A85	Brake Actuator Assembly












Position of Parts in Engine Compartment (LHD)



            Position of Parts in Engine Compartment (LHD)

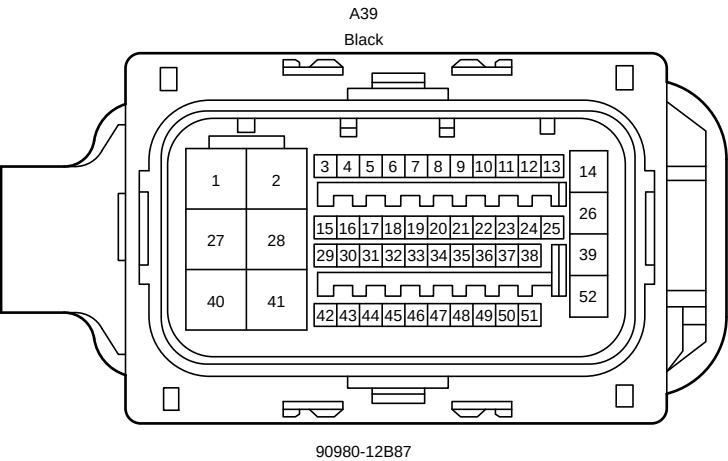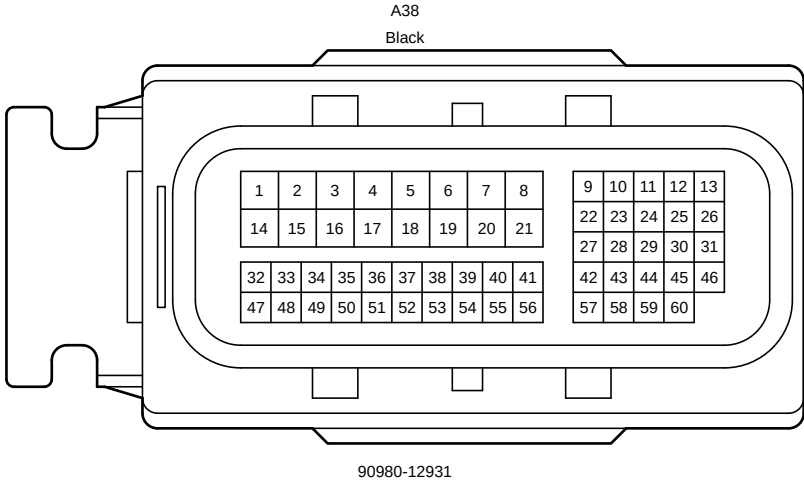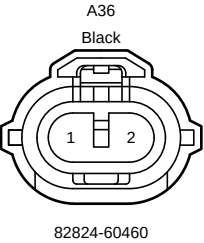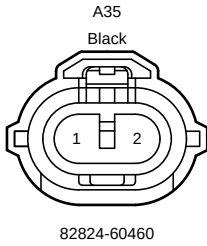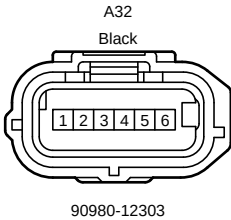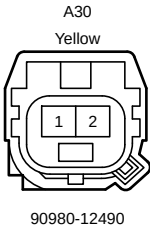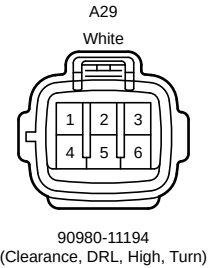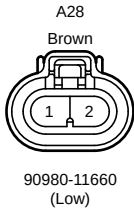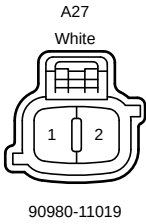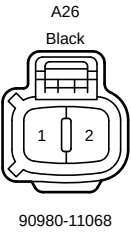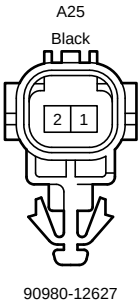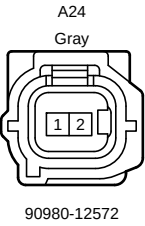


           Position of Parts in Engine Compartment (LHD)

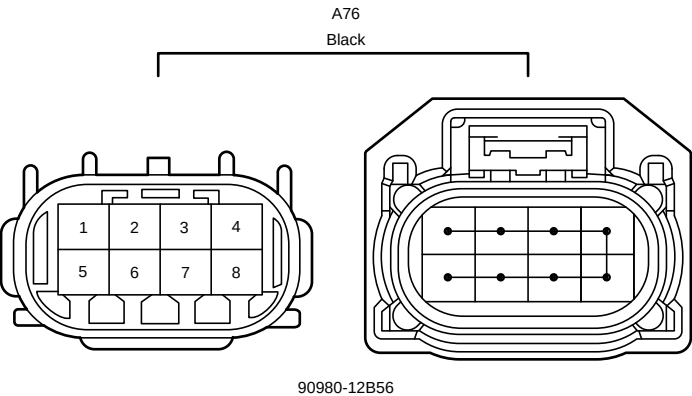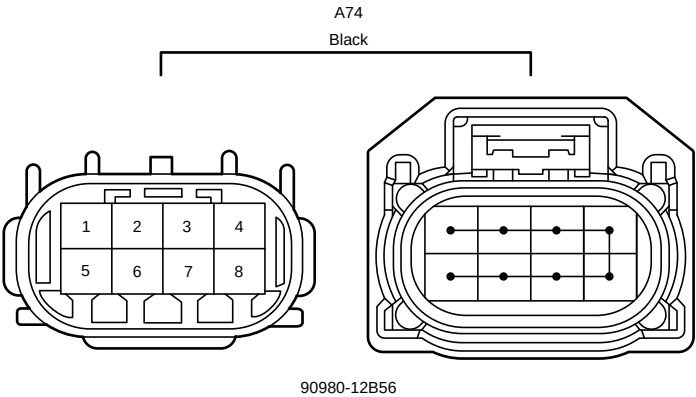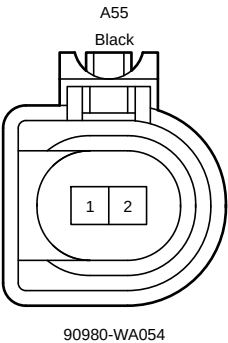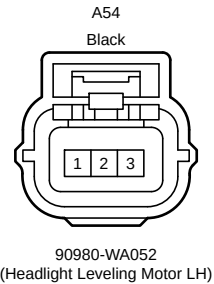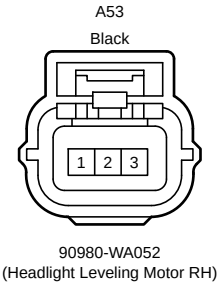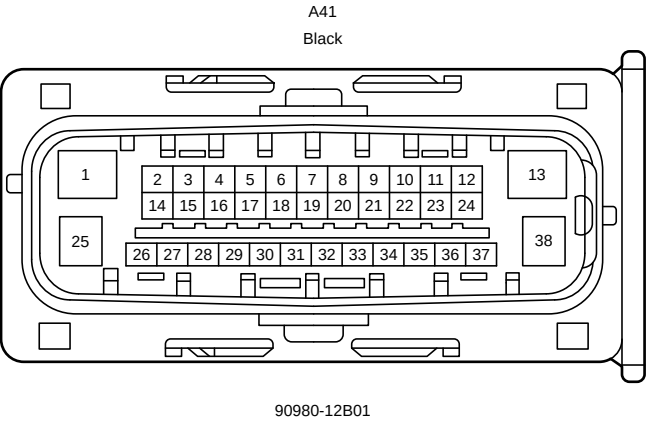

Position of Parts in Engine Compartment (LHD)

 A85
Black

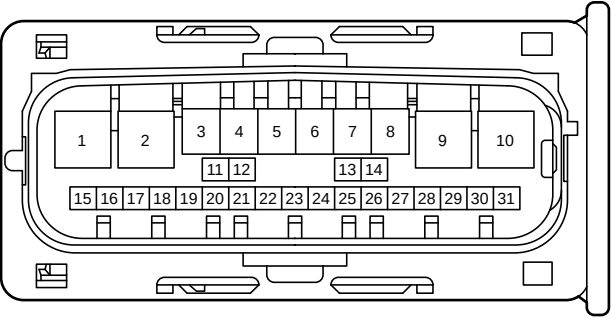

82824-12690