


Position of Parts in Instrument Panel (LHD)

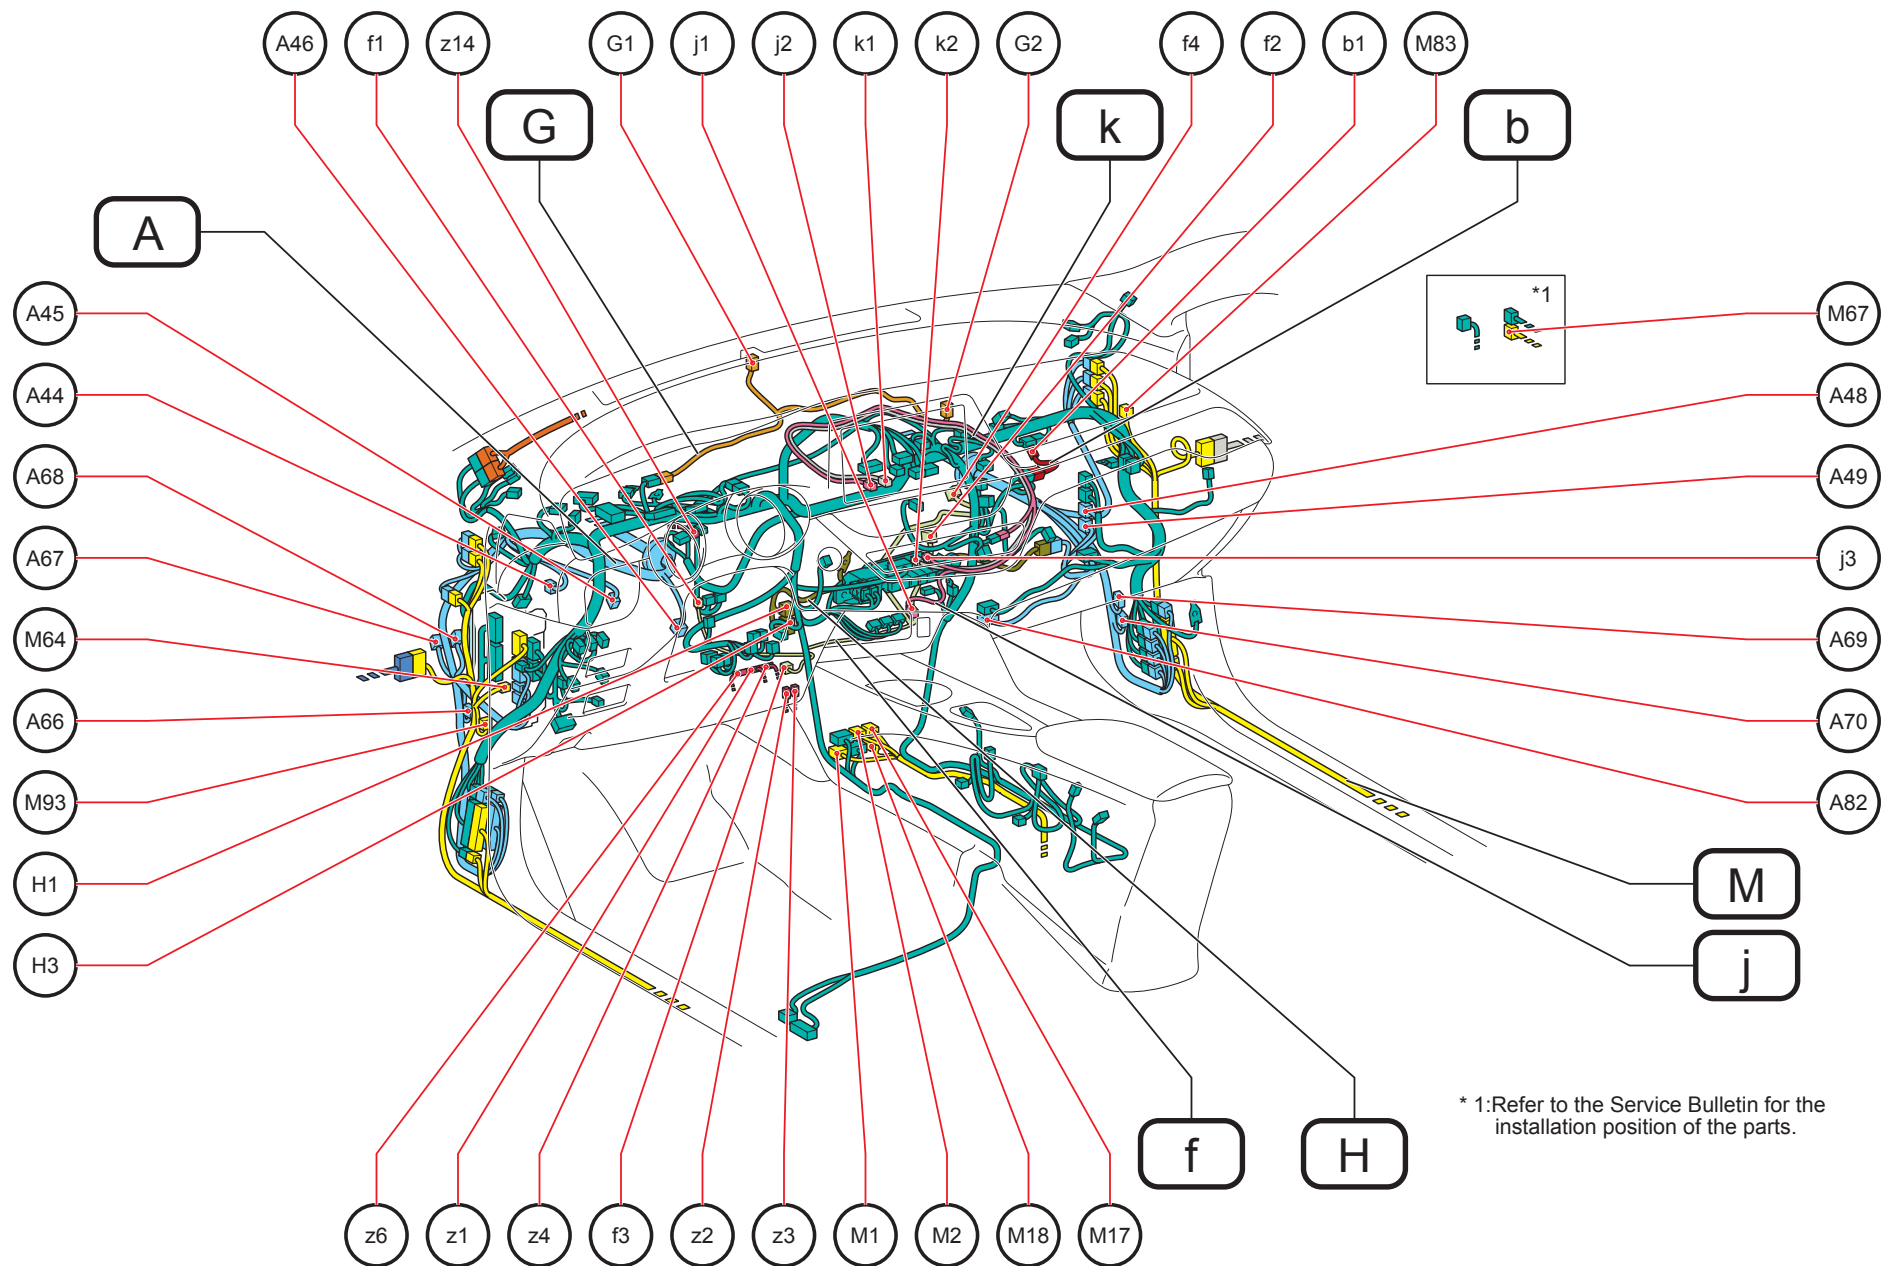


Position of Parts in Instrument Panel (LHD)

A44	Brake Pedal Stroke Sensor Assembly
A45	Stop Light Switch Assembly
A46	Accelerator Pedal Sensor Assembly
A48	Hybrid Vehicle Control ECU
A49	Hybrid Vehicle Control ECU
A66	No. 1 Junction Connector
A67	No. 2 Junction Connector
A68	No. 3 Junction Connector
A69	No. 4 Junction Connector
A70	No. 5 Junction Connector
A82	Blower Motor with Fan Sub-Assembly
G1	Automatic Light Control Sensor
G2	Ion Generator Sub-Assembly
H1	Quick Heater Assembly
H3	Quick Heater Assembly
M1	Airbag Sensor Assembly
M2	Airbag Sensor Assembly
M17	Airbag Sensor Assembly
M18	Airbag Sensor Assembly
M64	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M67	Certification ECU
M83	No. 27 Junction Connector
M93	No. 28 Junction Connector
b1	Instrument Panel Passenger without Door Airbag Assembly
f1	A/C Amplifier Assembly
f2	No. 1 A/C Radiator Damper Servo Sub-Assembly
f3	No. 1 Cooler Thermistor
f4	No. 2 A/C Radiator Damper Servo Sub-Assembly
j1	No. 1 Stereo Jack Adapter Assembly
j2	Radio & Display Receiver Assembly
j3	Navigation ECU
k1	Radio & Display Receiver Assembly
k2	Navigation ECU
z1	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly
z2	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z4	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly
z6	Steering Heater Switch , Spiral Cable with Sensor Sub-Assembly
z14	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly

Position of Parts in Instrument Panel (LHD)

A44


Black

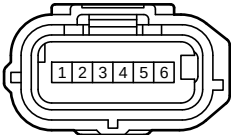

90980-12303

A45


Black

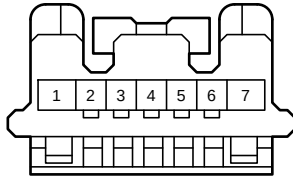

90980-12092

A46


Black

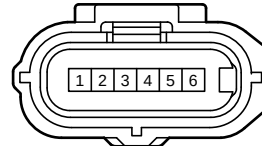

90980-12831

A48


Gray

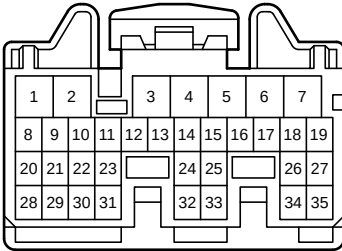

90980-12428

A49


Gray

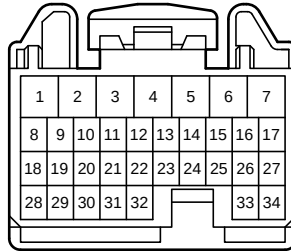

90980-12430

A66


Black

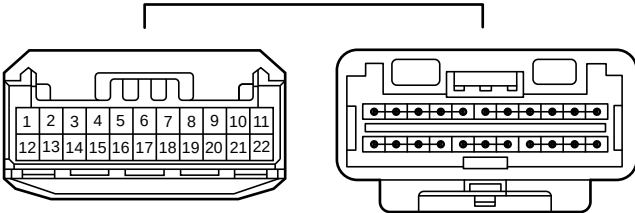

90980-12B54

A67


Black

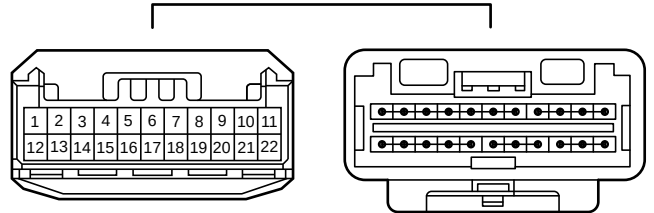

90980-12B54

A68


Black

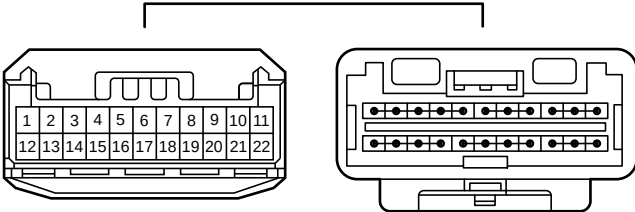

90980-12B54

A69


Black

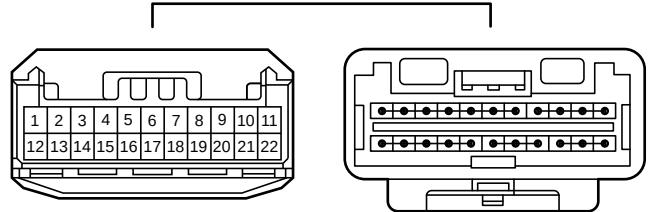

90980-12B54

A70


Black

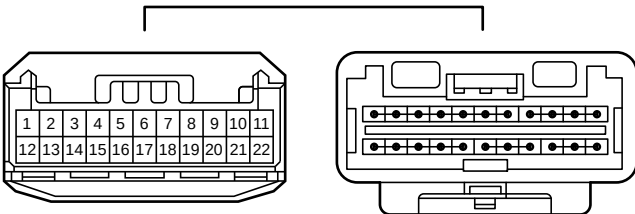

90980-12B54

A82


Black

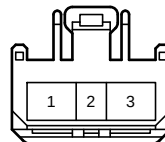

90980-11667


G1

White

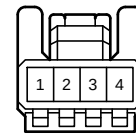


82824-50130


Position of Parts in Instrument Panel (LHD)

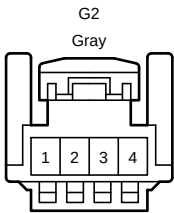


90980-12876

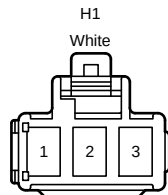


90980-10956

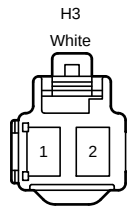


90980-10903

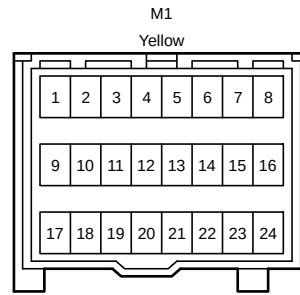


90980-12392

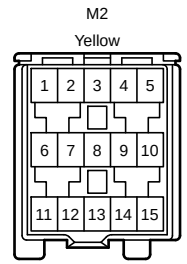


90980-12449

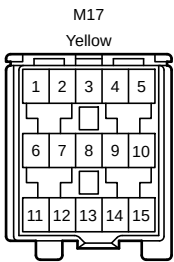


90980-12450

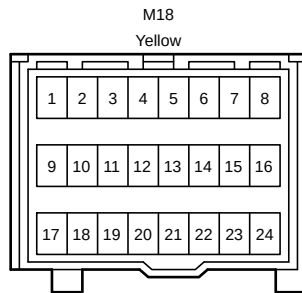


90980-12390

 


90980-11142

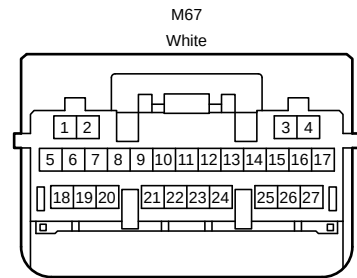


90980-12B77

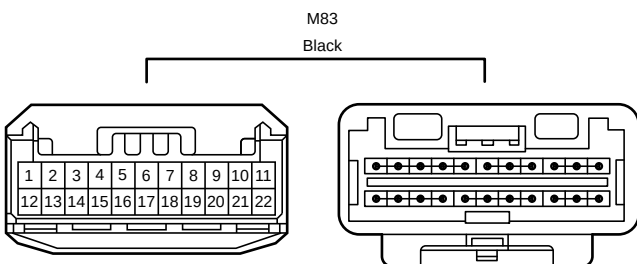


90980-12B54

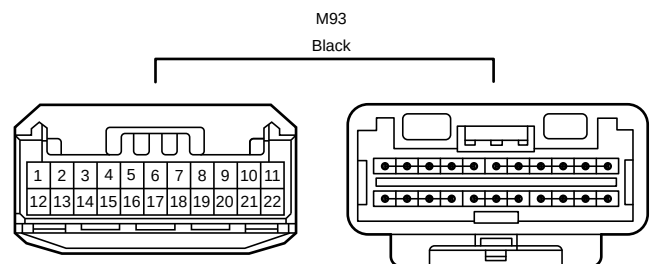


90980-12B54

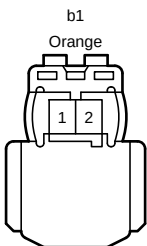


90980-12576

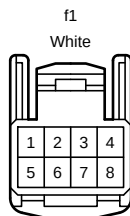


90980-12221

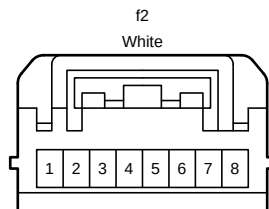


90980-12550

 


90980-12937

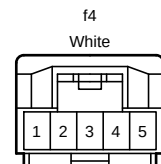


90980-11909

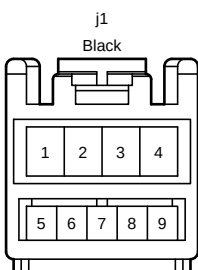


90980-12849

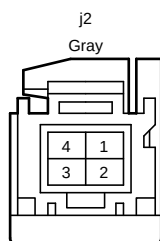


90980-12A52

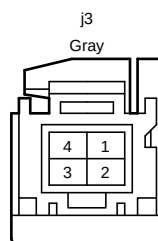

90980-12A52

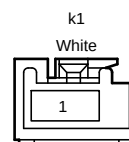

90980-12960

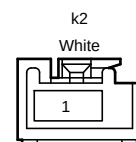

90980-12960

Position of Parts in Instrument Panel (LHD)

