



Engine Control (8NR-FTS)


* 4 : 2WD
* 5 : 4WD

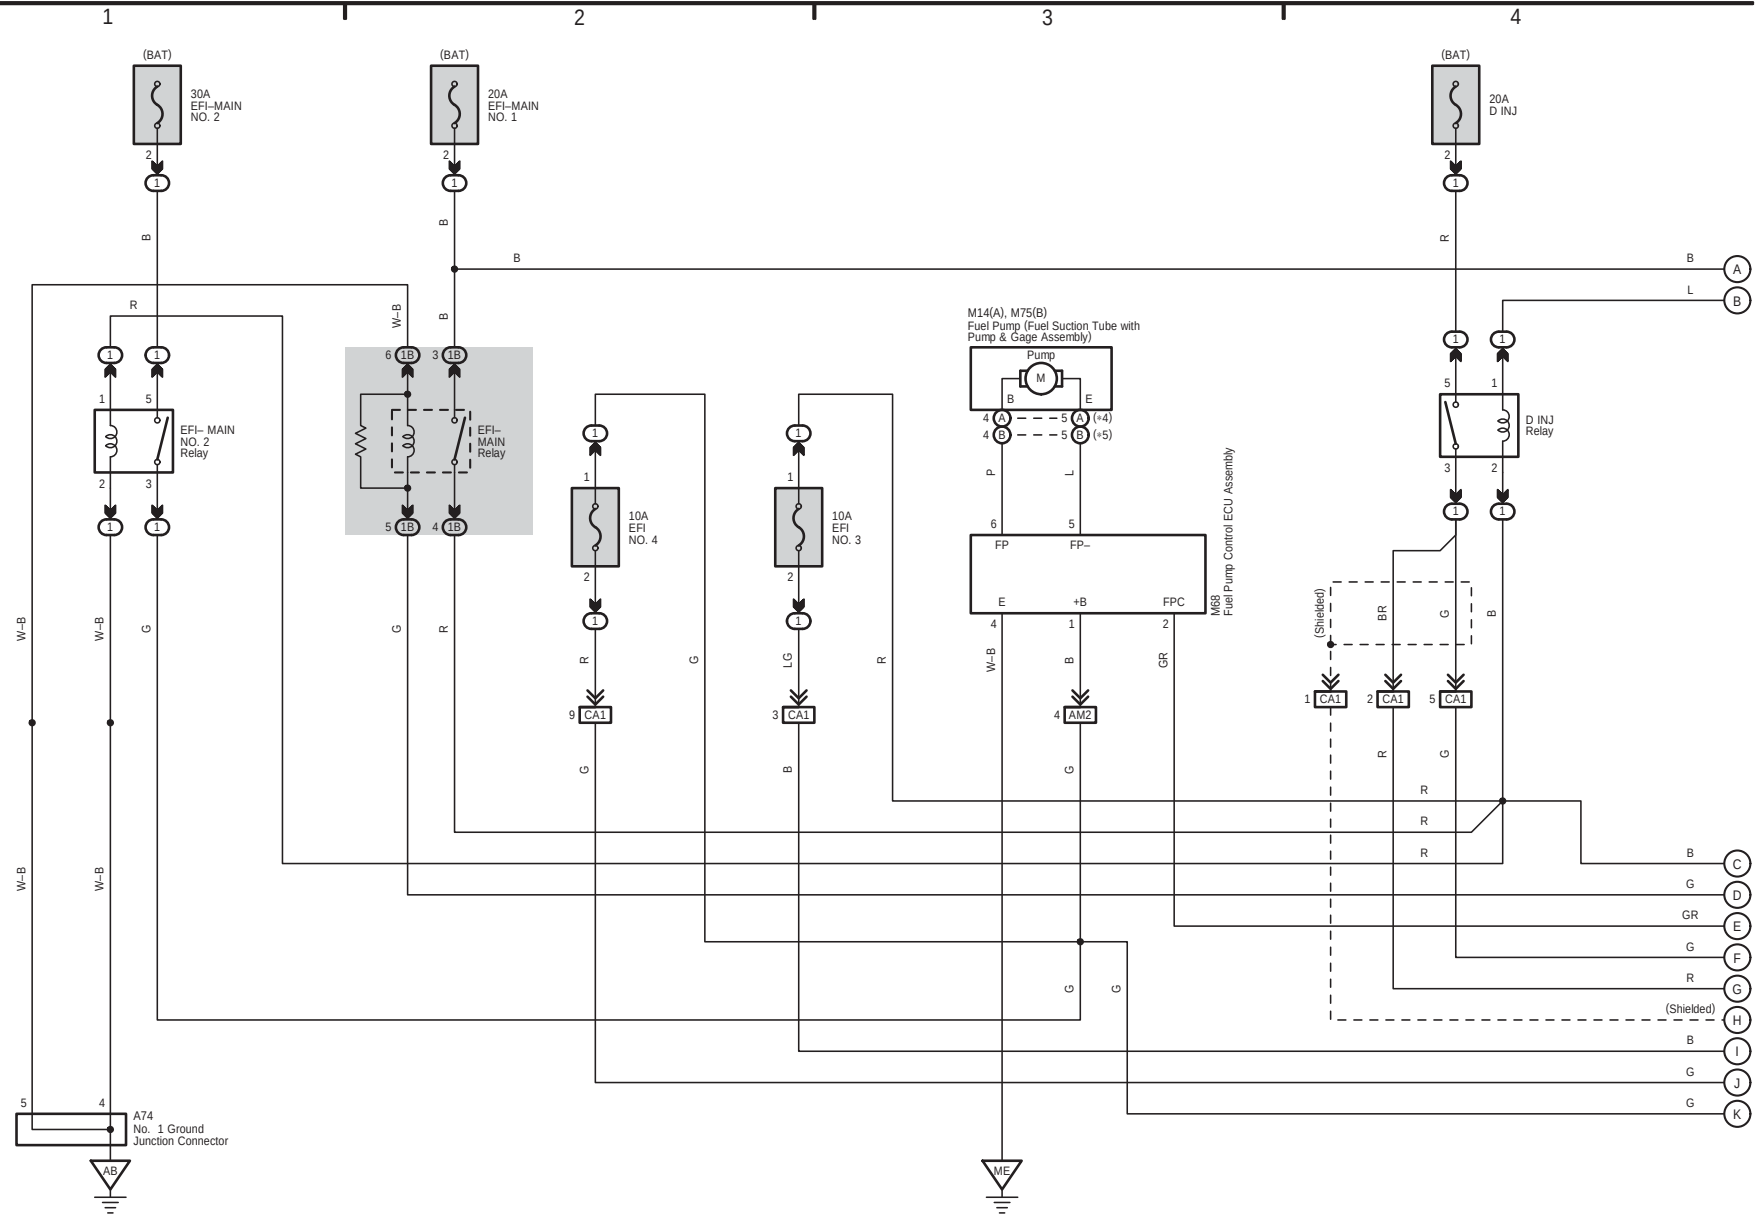

Engine Control (8NR-FTS)

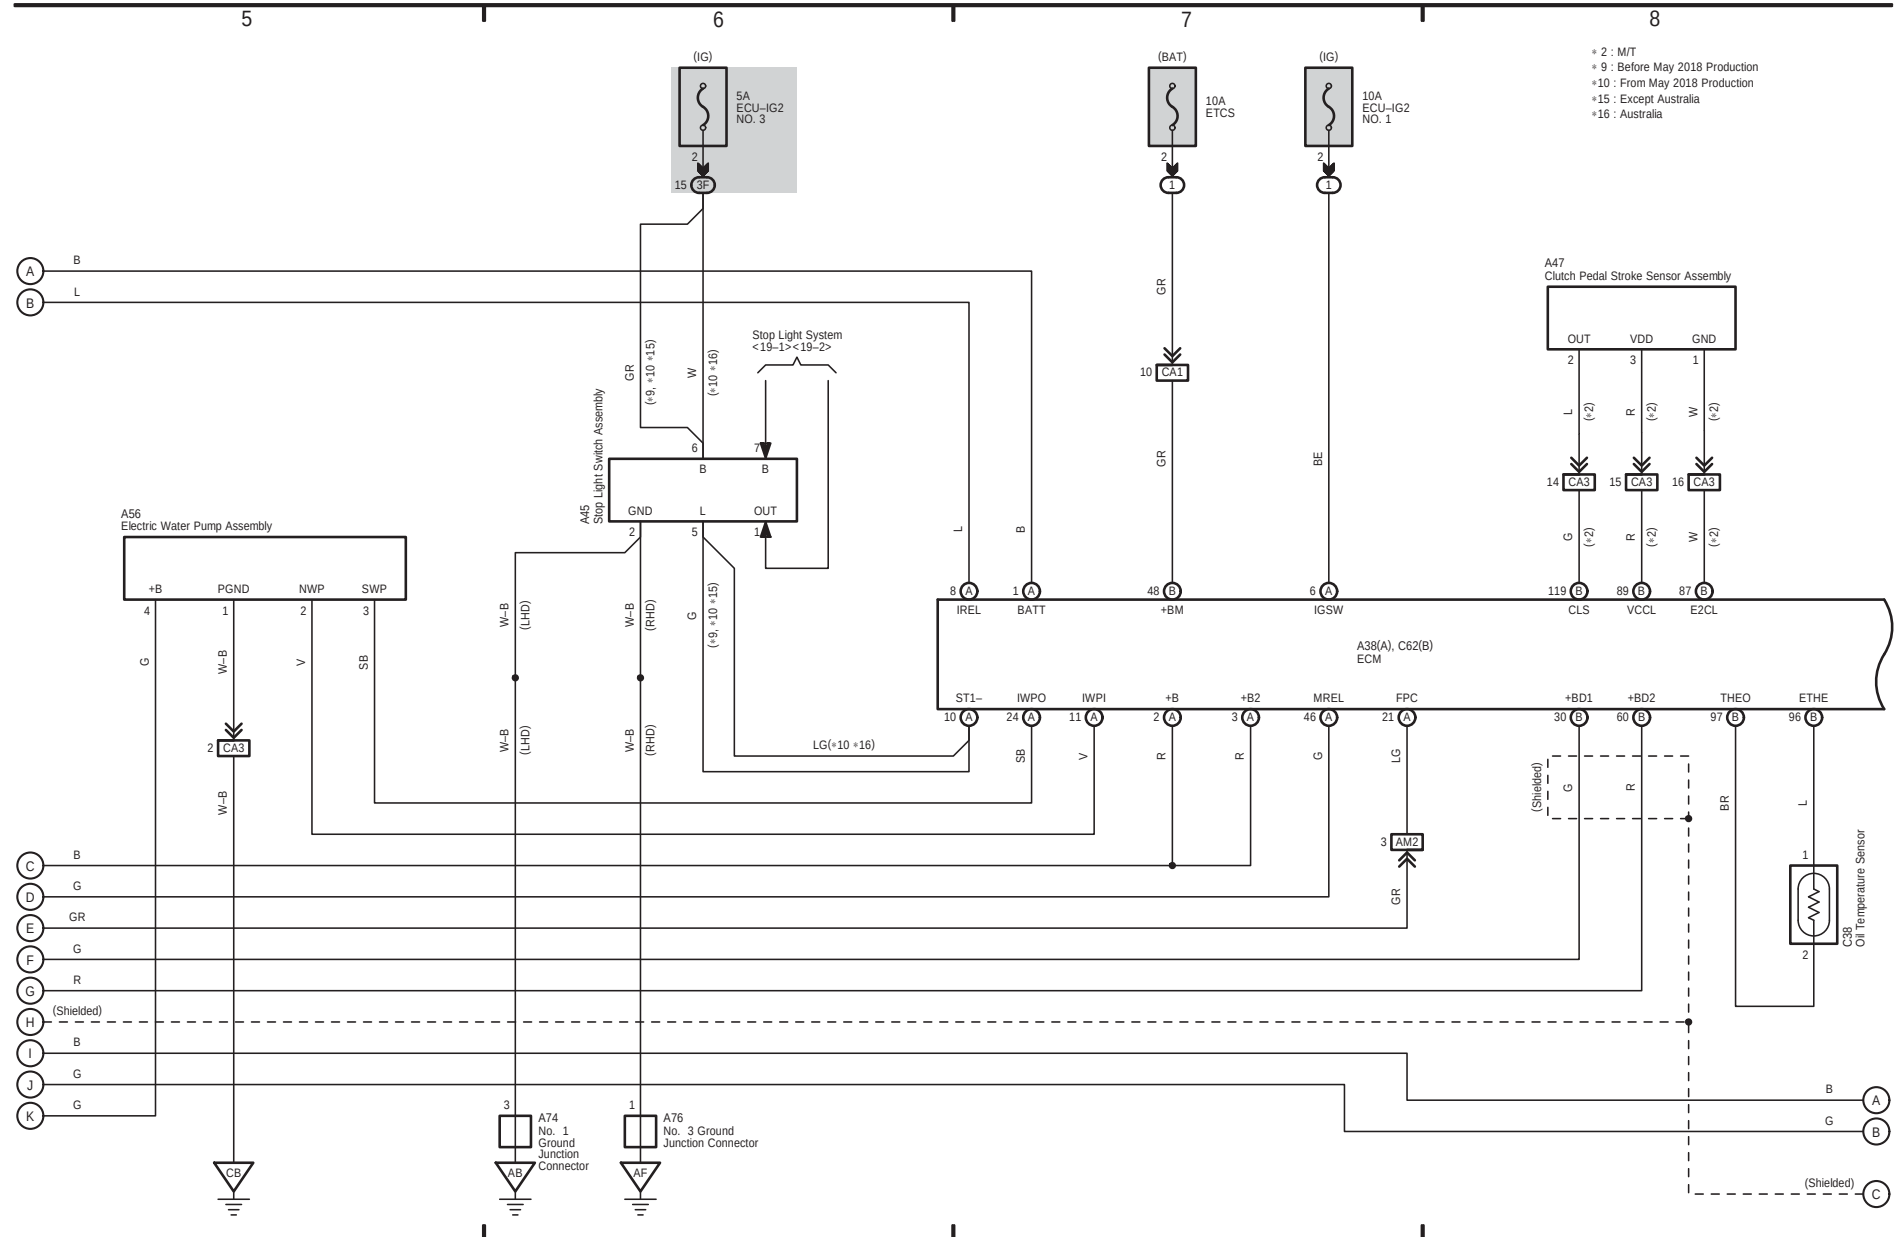

Engine Control (8NR-FTS)

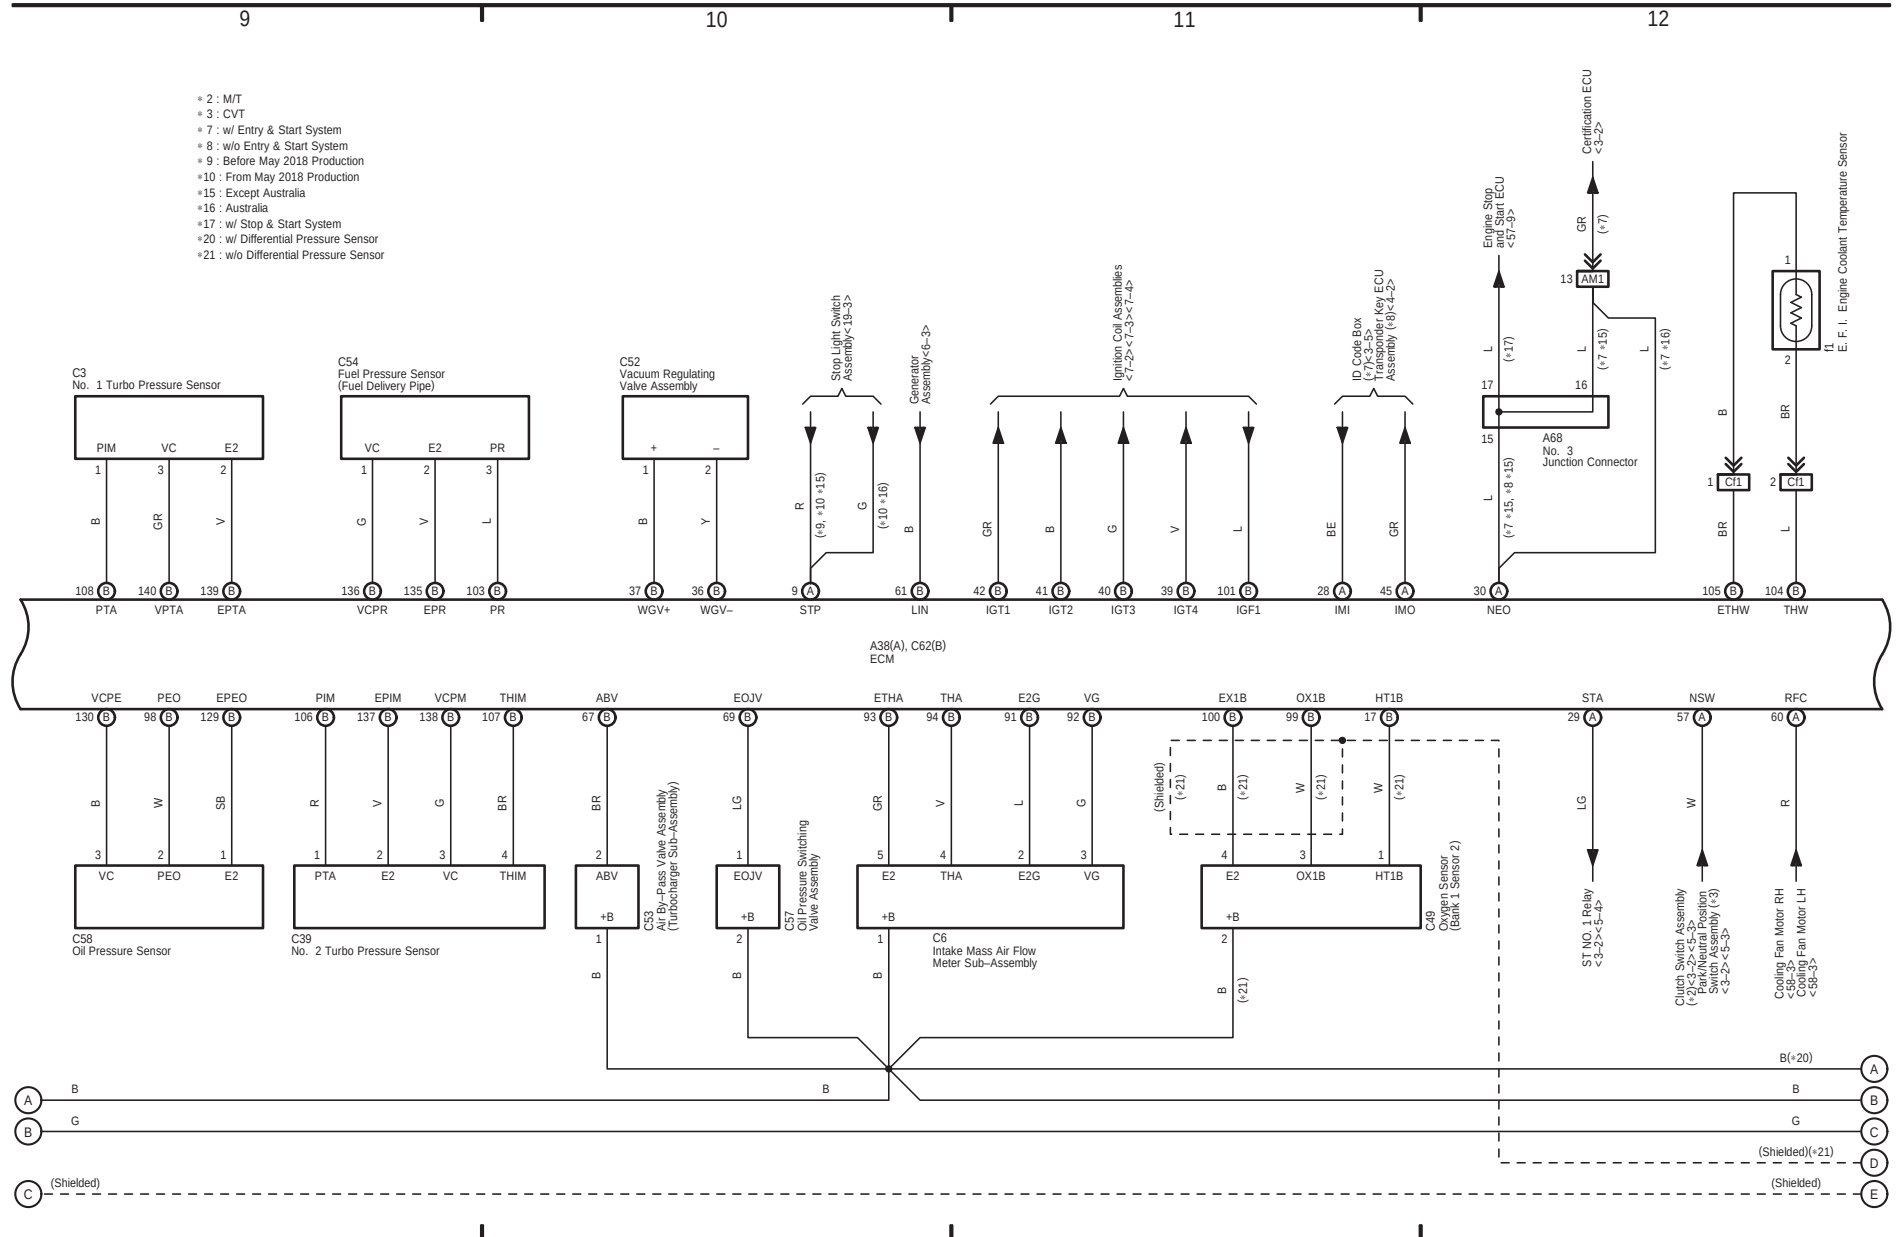

Engine Control (8NR-FTS)


*20 : w/ Differential Pressure Sensor
*21 : w/o Differential Pressure Sensor

13


14

15

16

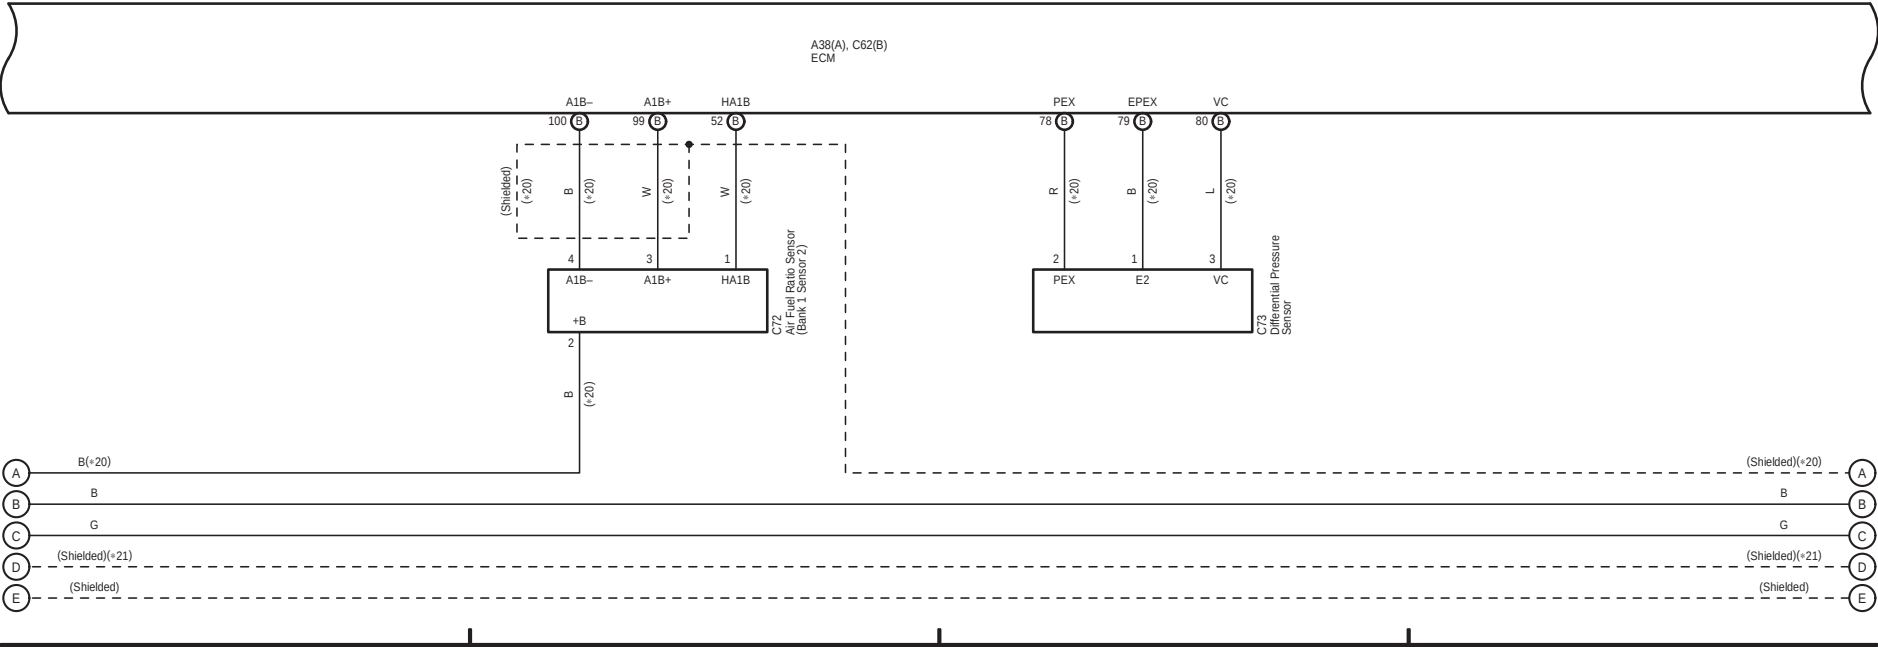


Engine Control (8NR-FTS)

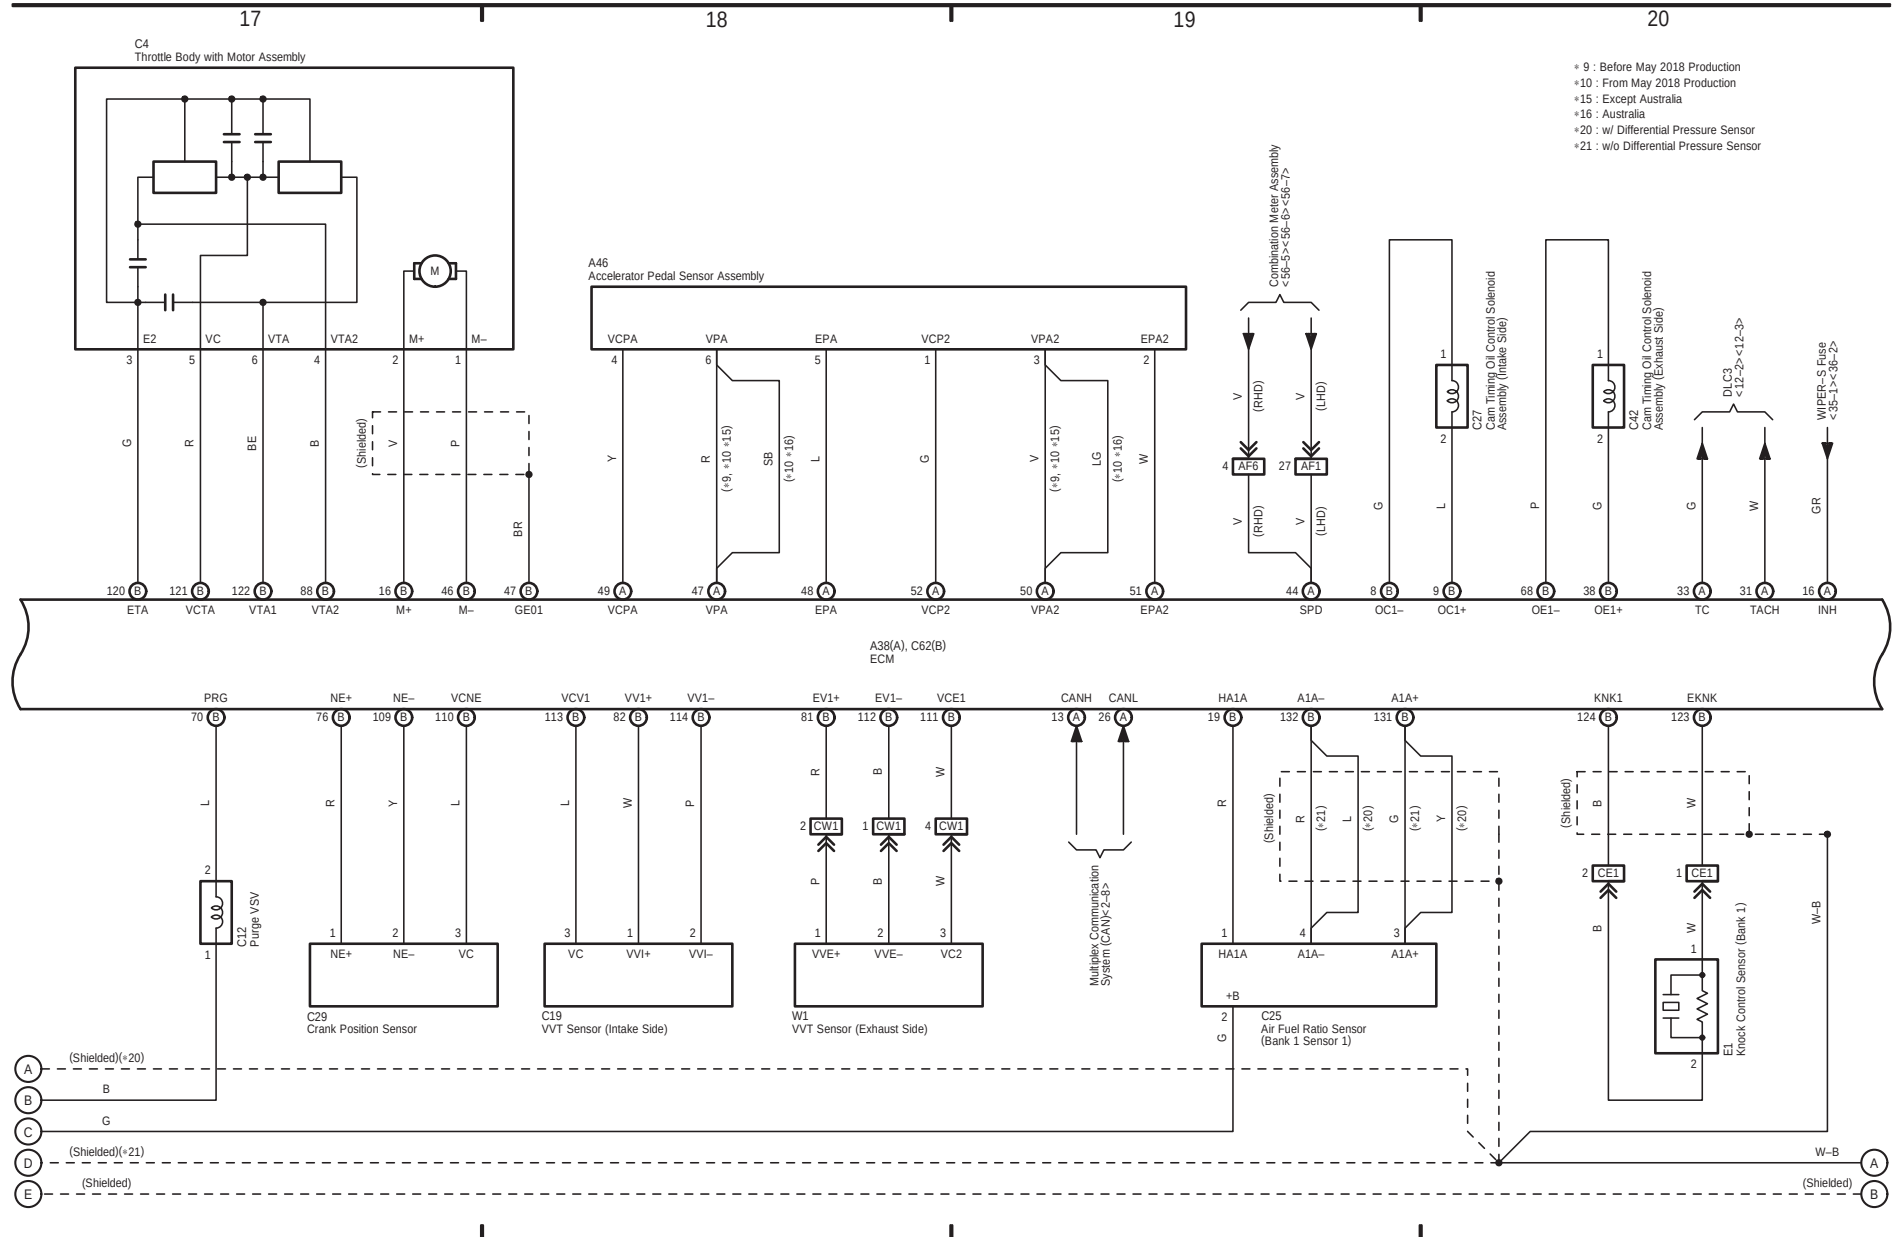


Engine Control (8NR-FTS)

* 2 : M/T
 *15 : Except Australia
 *16 : Australia

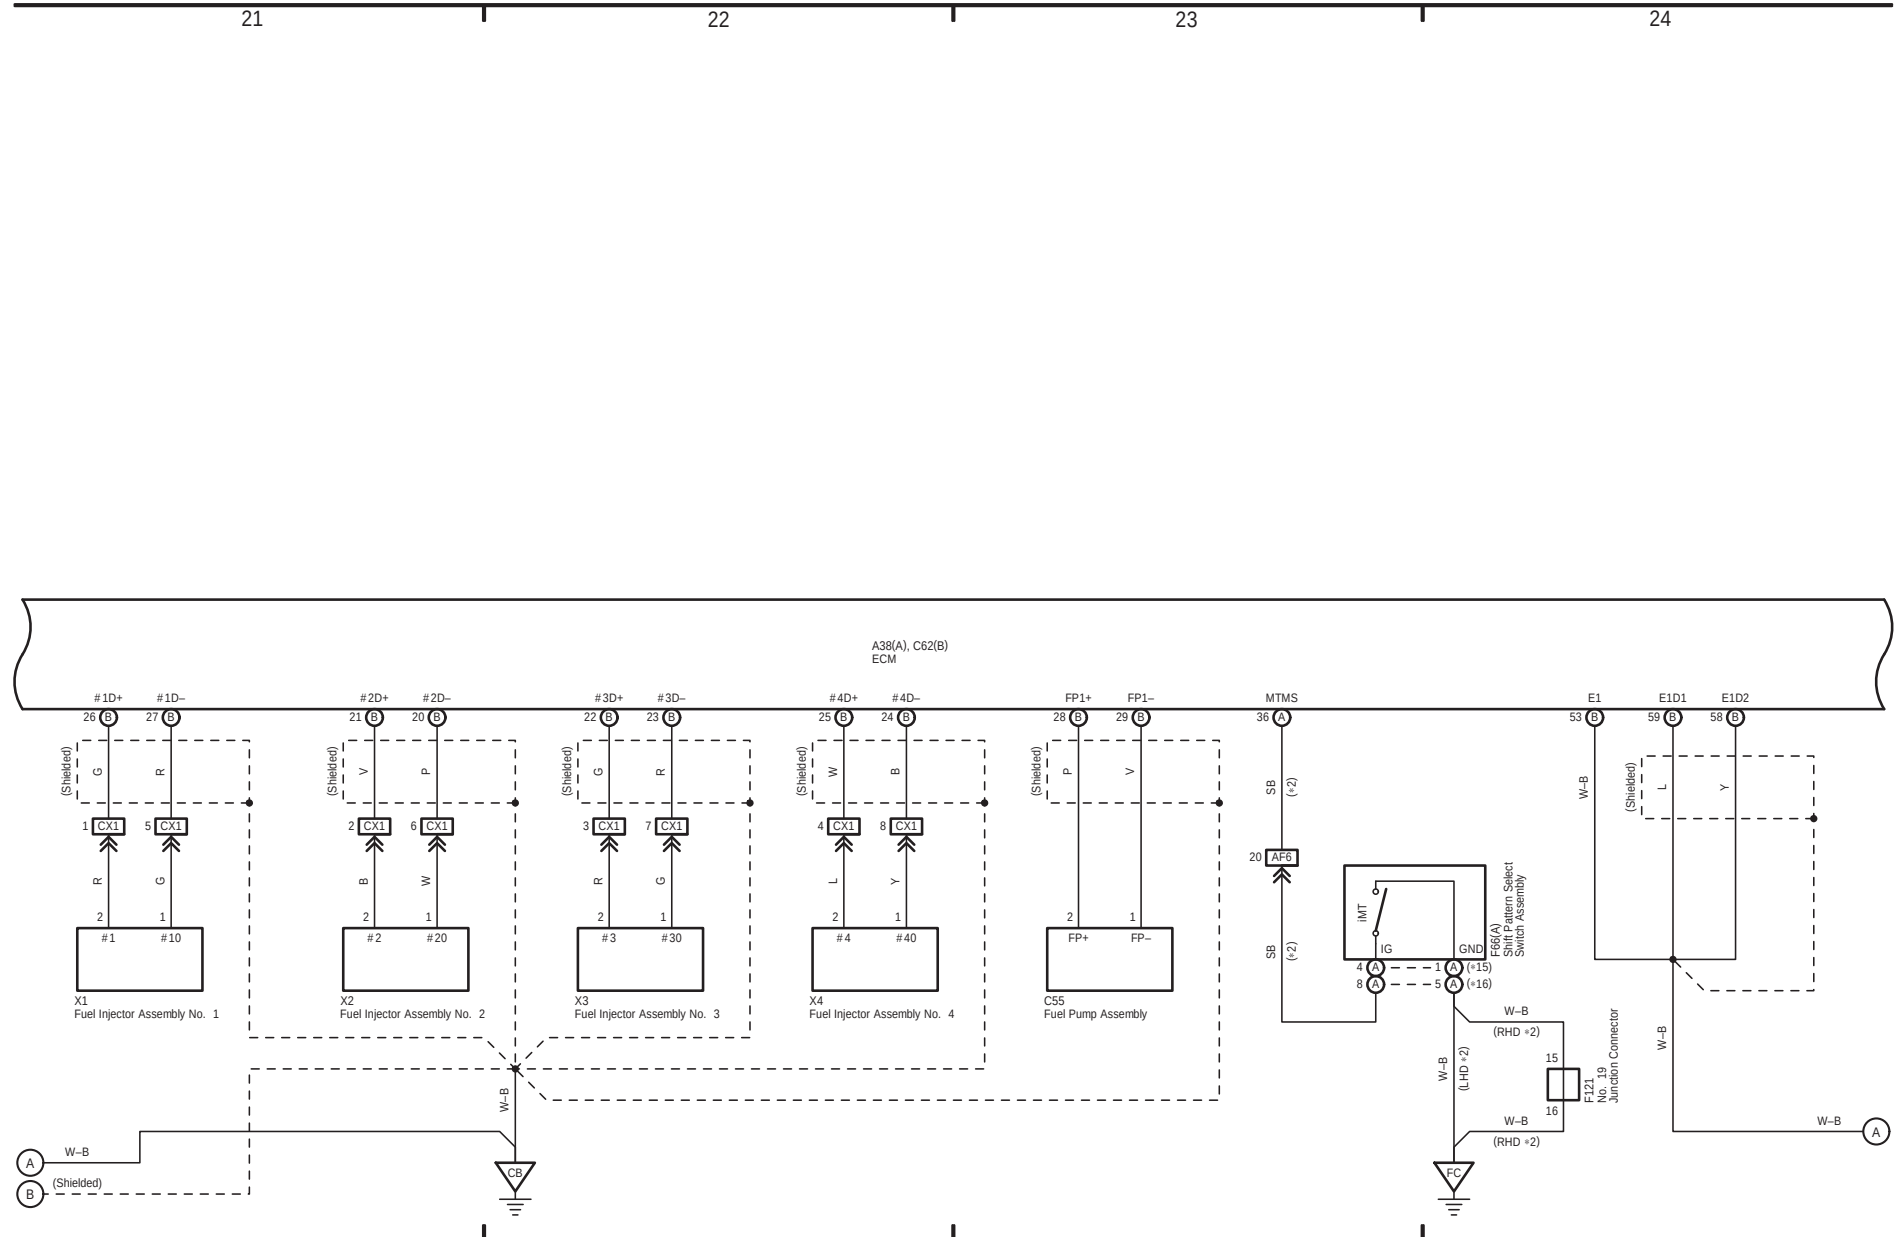

Cruise Control (8NR-FTS), CVT and Shift Indicator (8NR-FTS)

* 2 : M/T
* 3 : CVT

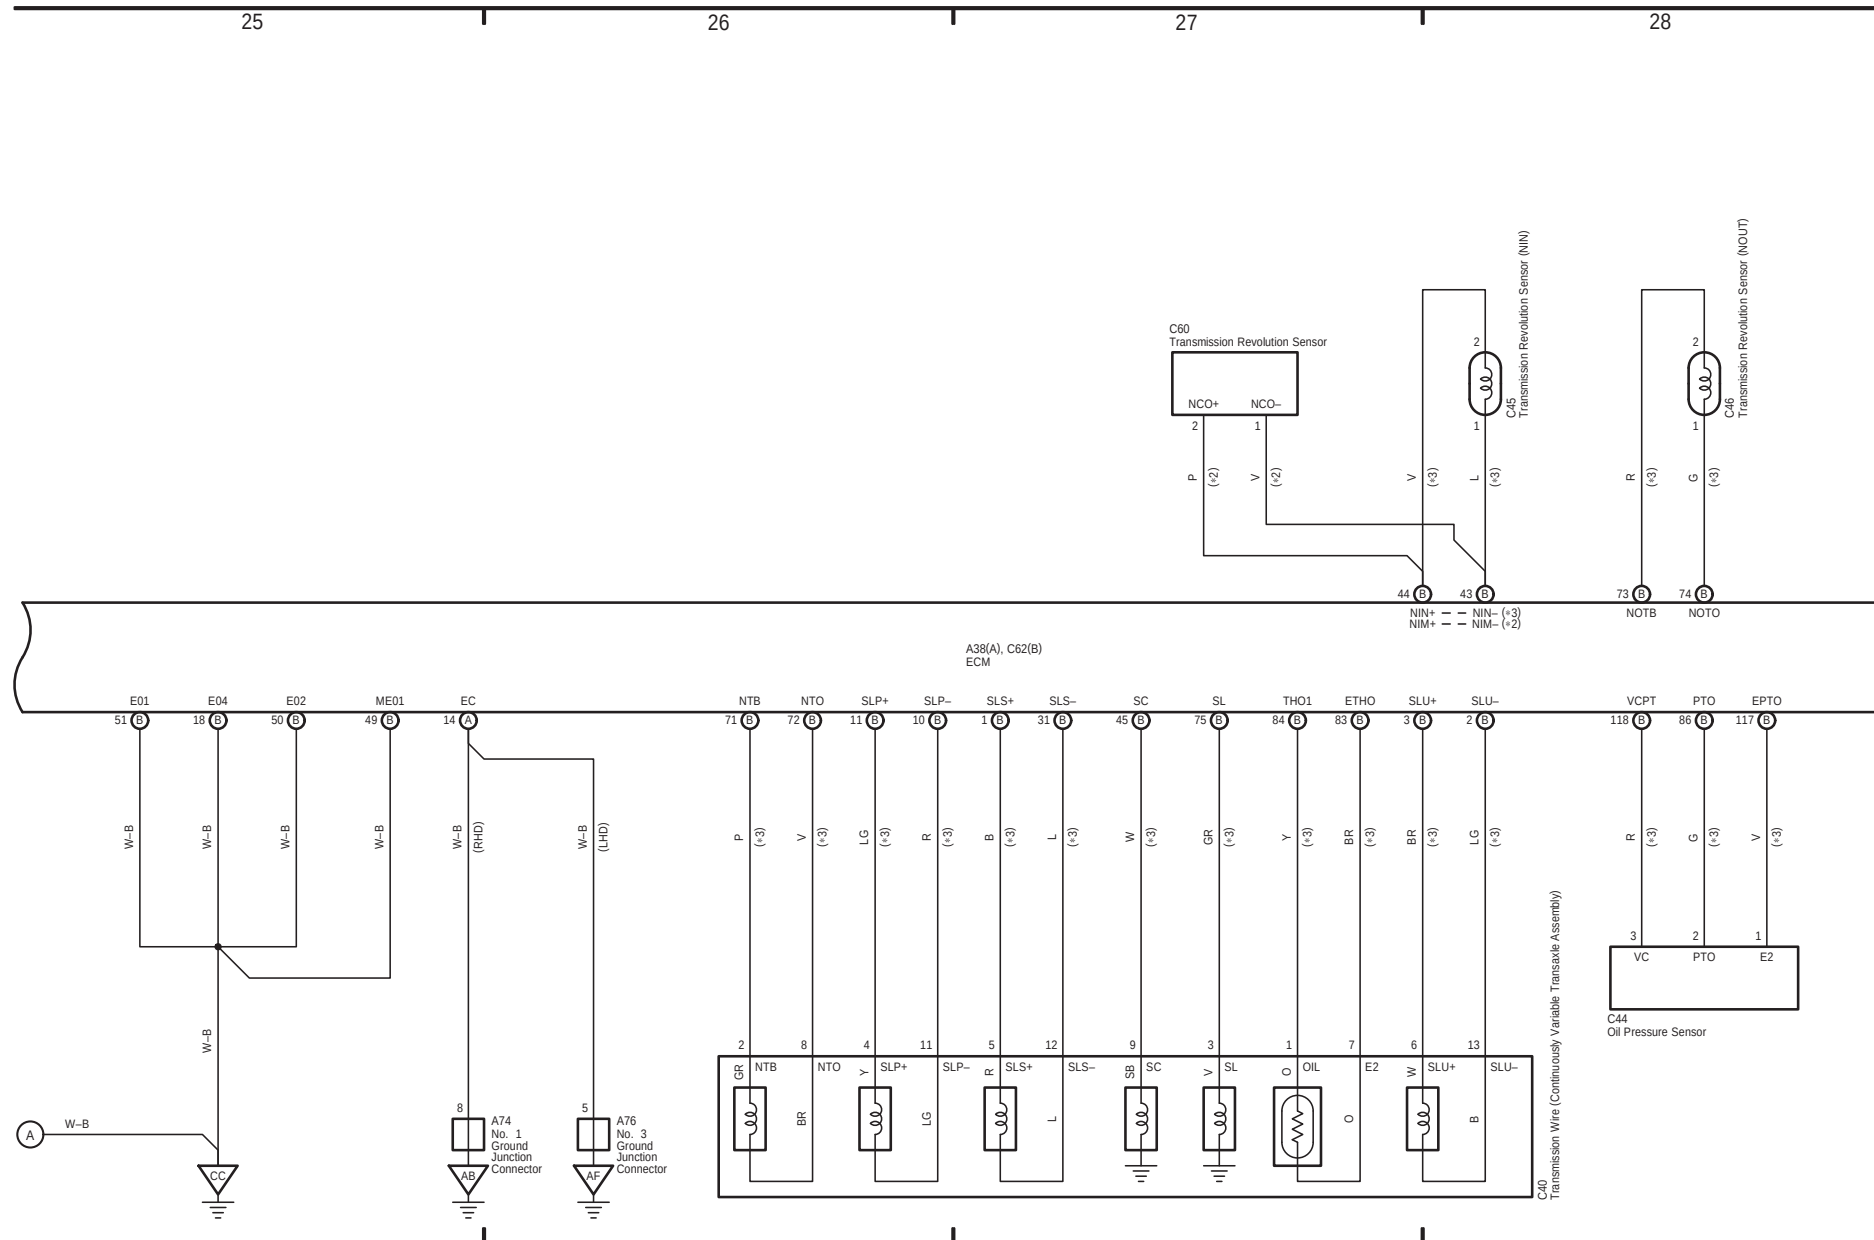

Cruise Control (8NR-FTS), CVT and Shift Indicator (8NR-FTS)


29

30


31

32


- * 1 : w/ Cruise Control
- * 2 : M/T
- * 3 : CVT
- * 7 : w/ Entry & Start System
- * 8 : w/o Entry & Start System
- * 19 : w/ Adjustable Speed Limiter
- * 20 : w/ Differential Pressure Sensor
- * 21 : w/o Differential Pressure Sensor

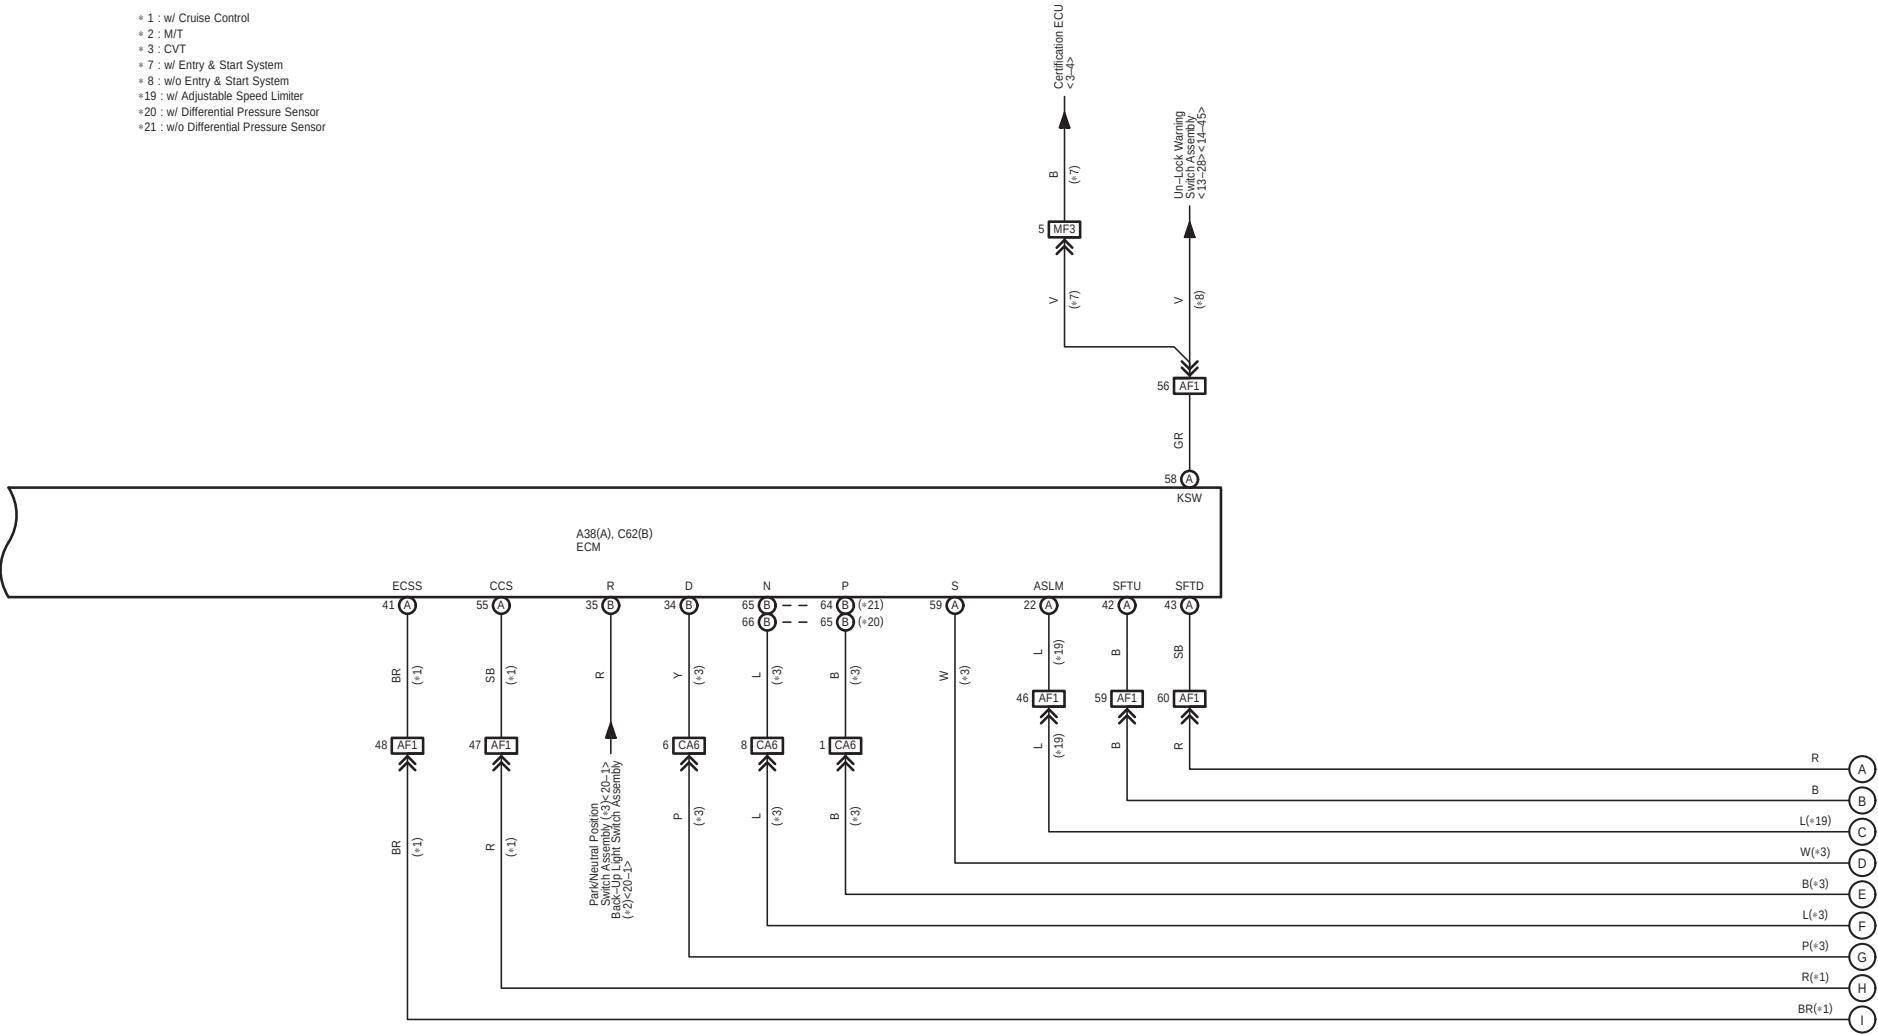

Cruise Control (8NR-FTS), CVT and Shift Indicator (8NR-FTS)

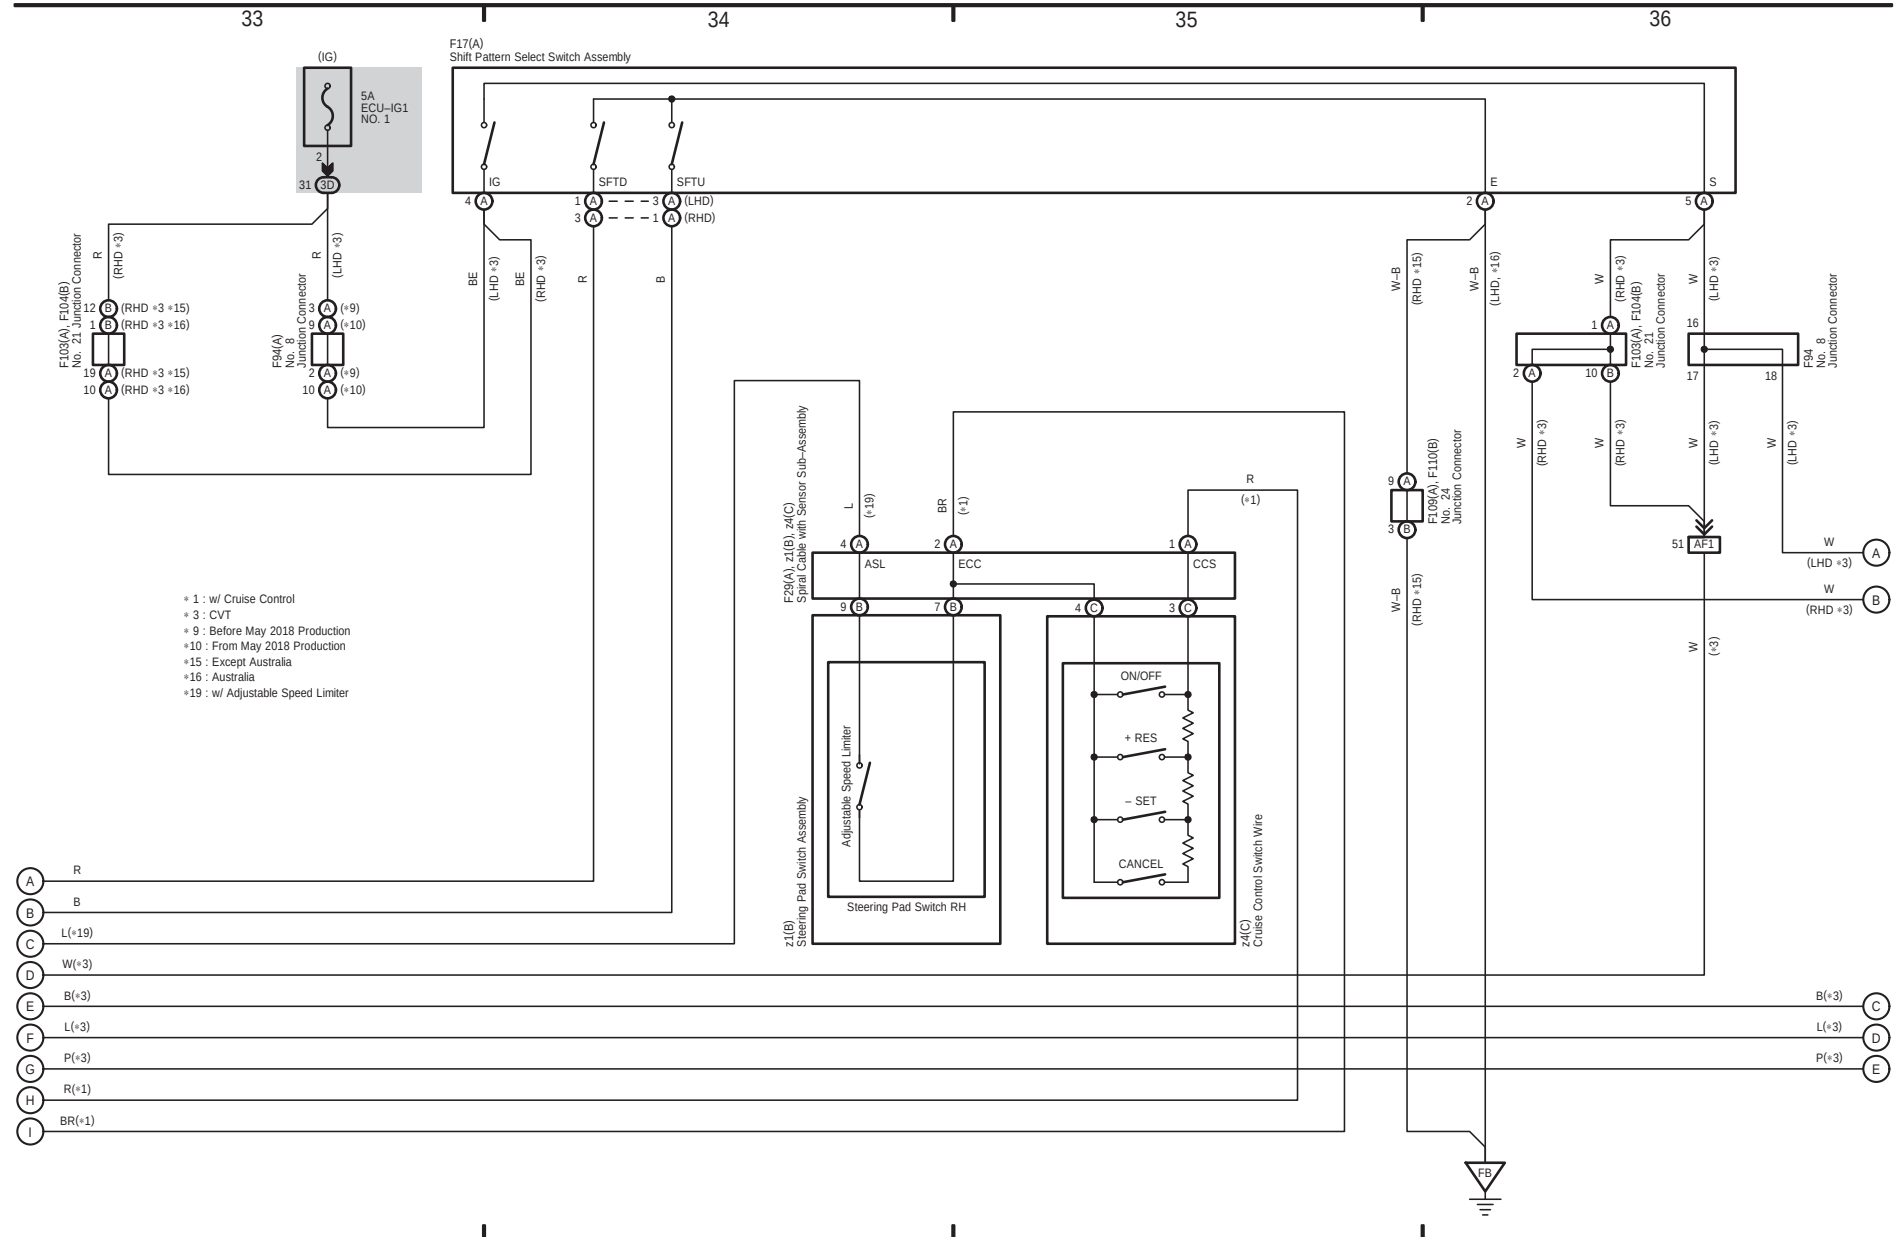

- * 3 : CVT
- *15 : Except Australia
- *16 : Australia

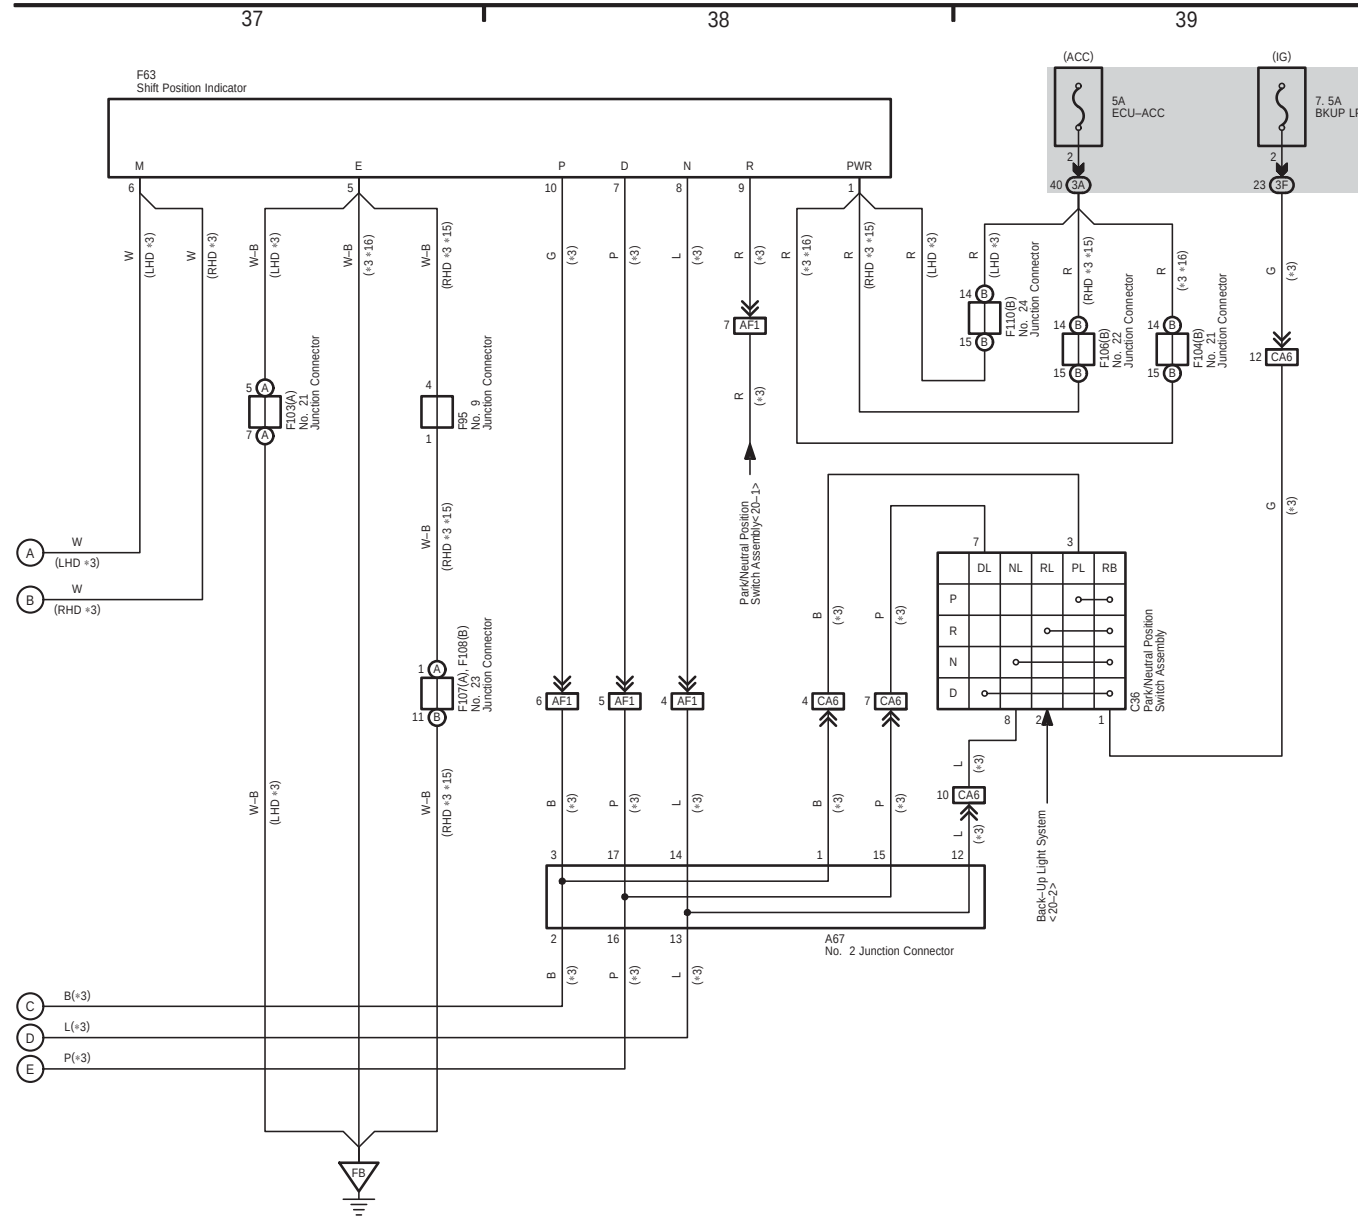


Cruise Control (8NR-FTS), CVT and Shift Indicator (8NR-FTS)

41

42

43

44

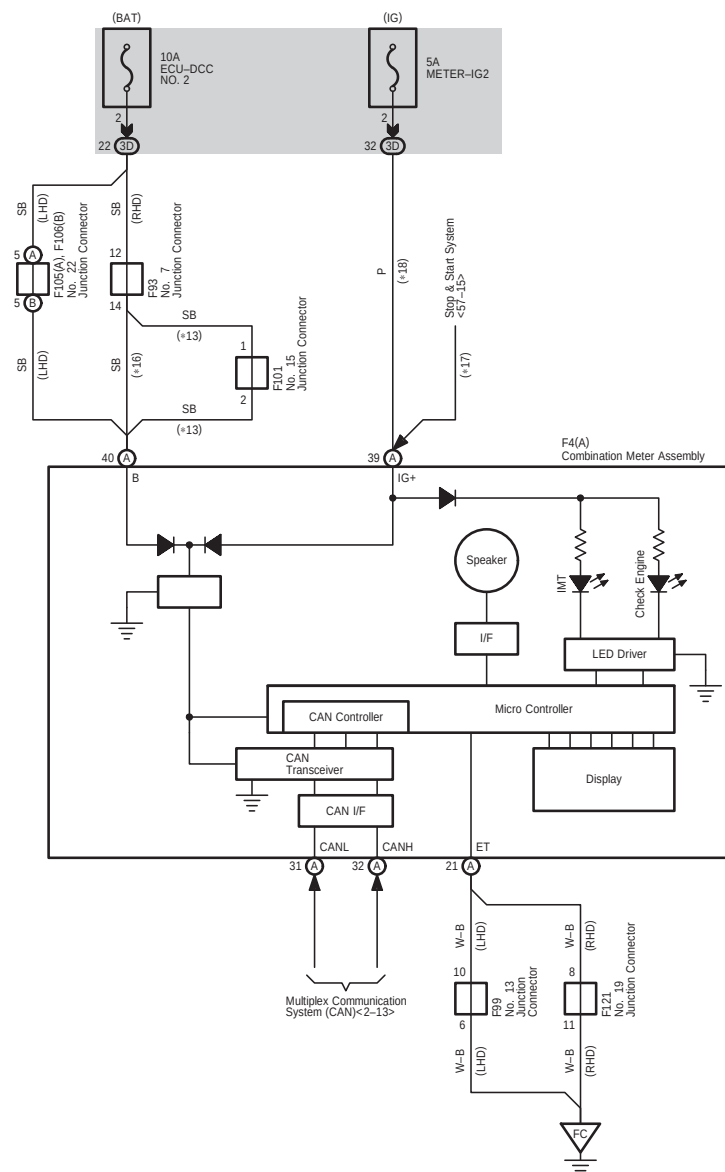

*13 : RHD Except Australia
 *16 : Australia
 *17 : w/ Stop & Start System
 *18 : w/o Stop & Start System