



① : Engine Room R/B No. 1	Front Fender Apron LH
○ : Engine Room J/B No. 1	

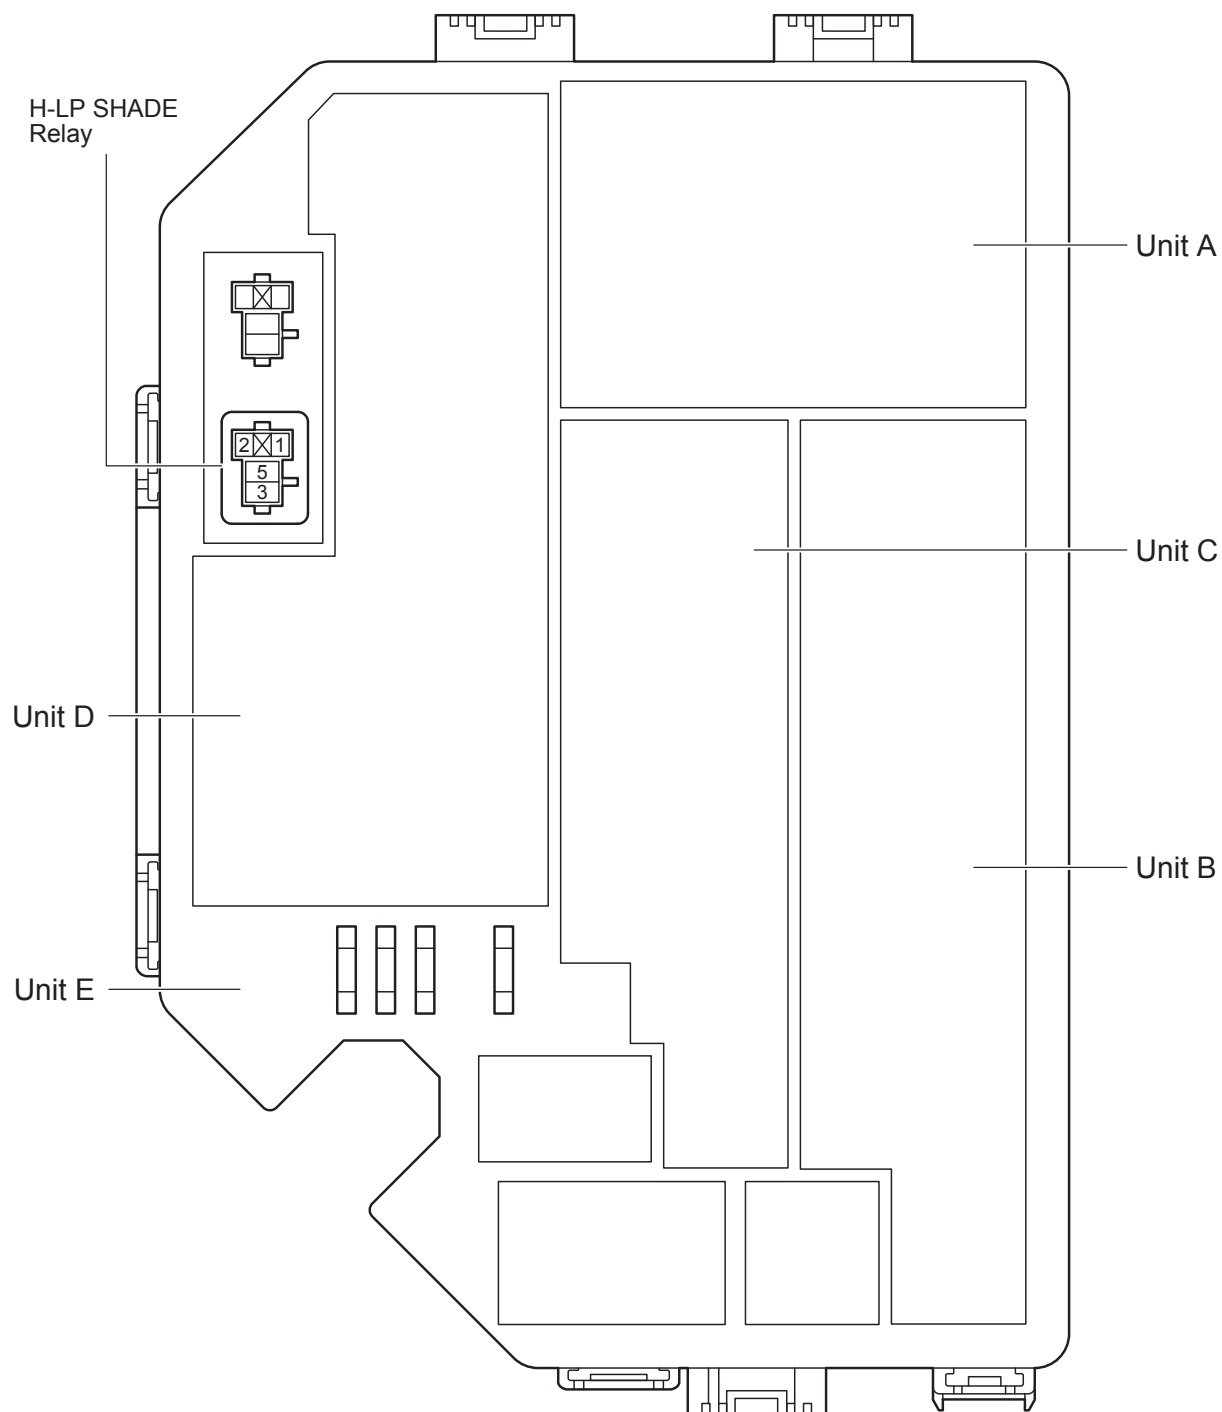


Unit A

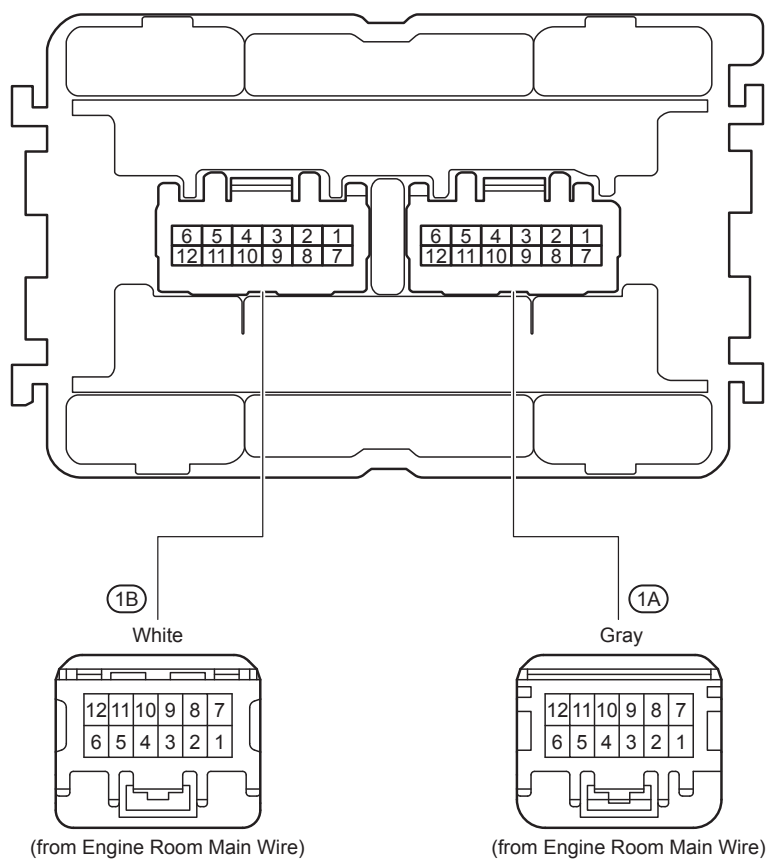

① : Engine Room R/B No. 1	Front Fender Apron LH
○ : Engine Room J/B No. 1	


Unit B

- * 1:40A HTR (Australia)
- 50A HTR (8NR-FTS Except Australia)
- * 2:30A PTC HTR NO.3
- * 3:30A PTC HTR NO.2
- * 4:30A FAN NO.2
- * 5:50A PTC HTR NO.1
- * 6:30A FAN NO.1
- * 7:50A DEF
- * 8:50A HTR (3ZR-FAE)

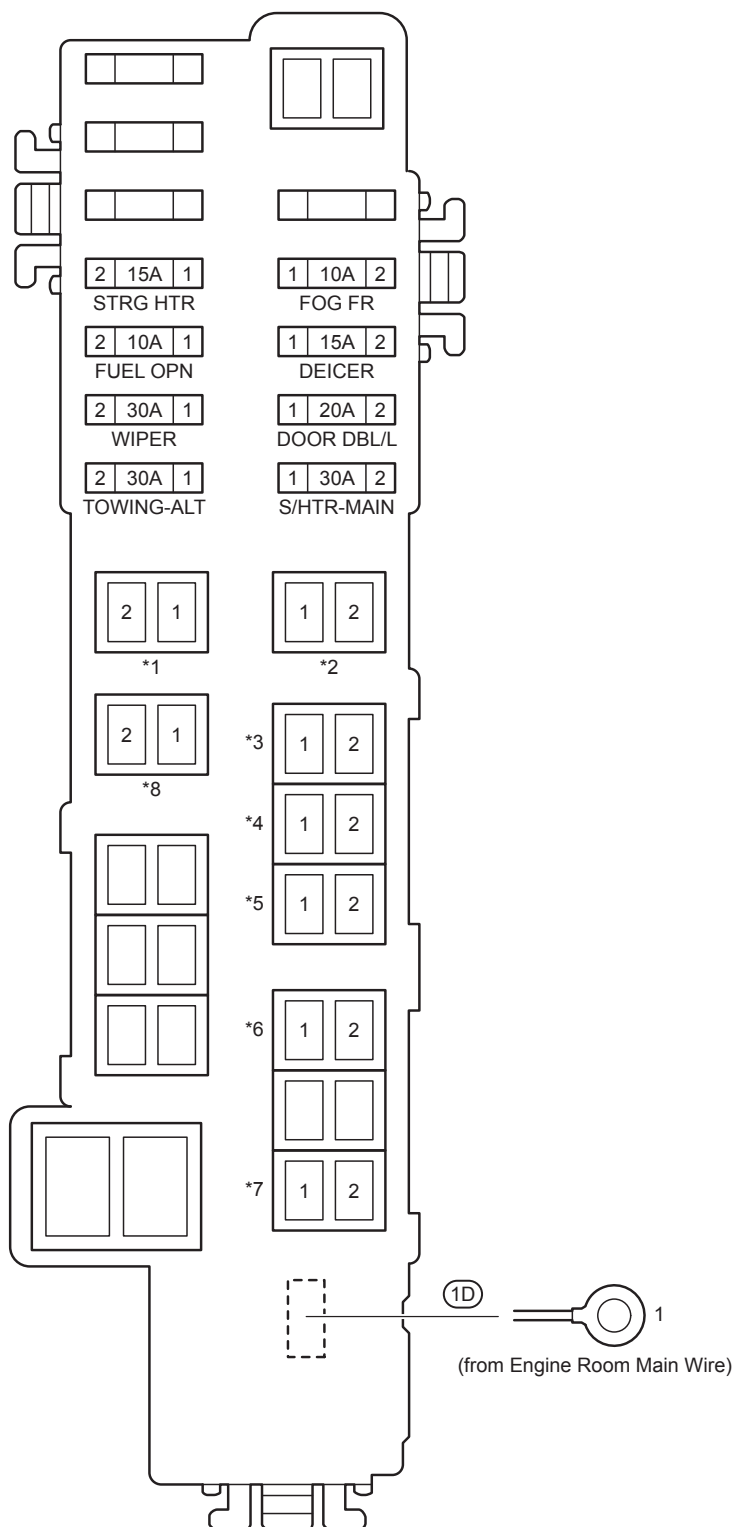

Unit C

* 1:10A (8NR-FTS)
15A (3ZR-FAE)

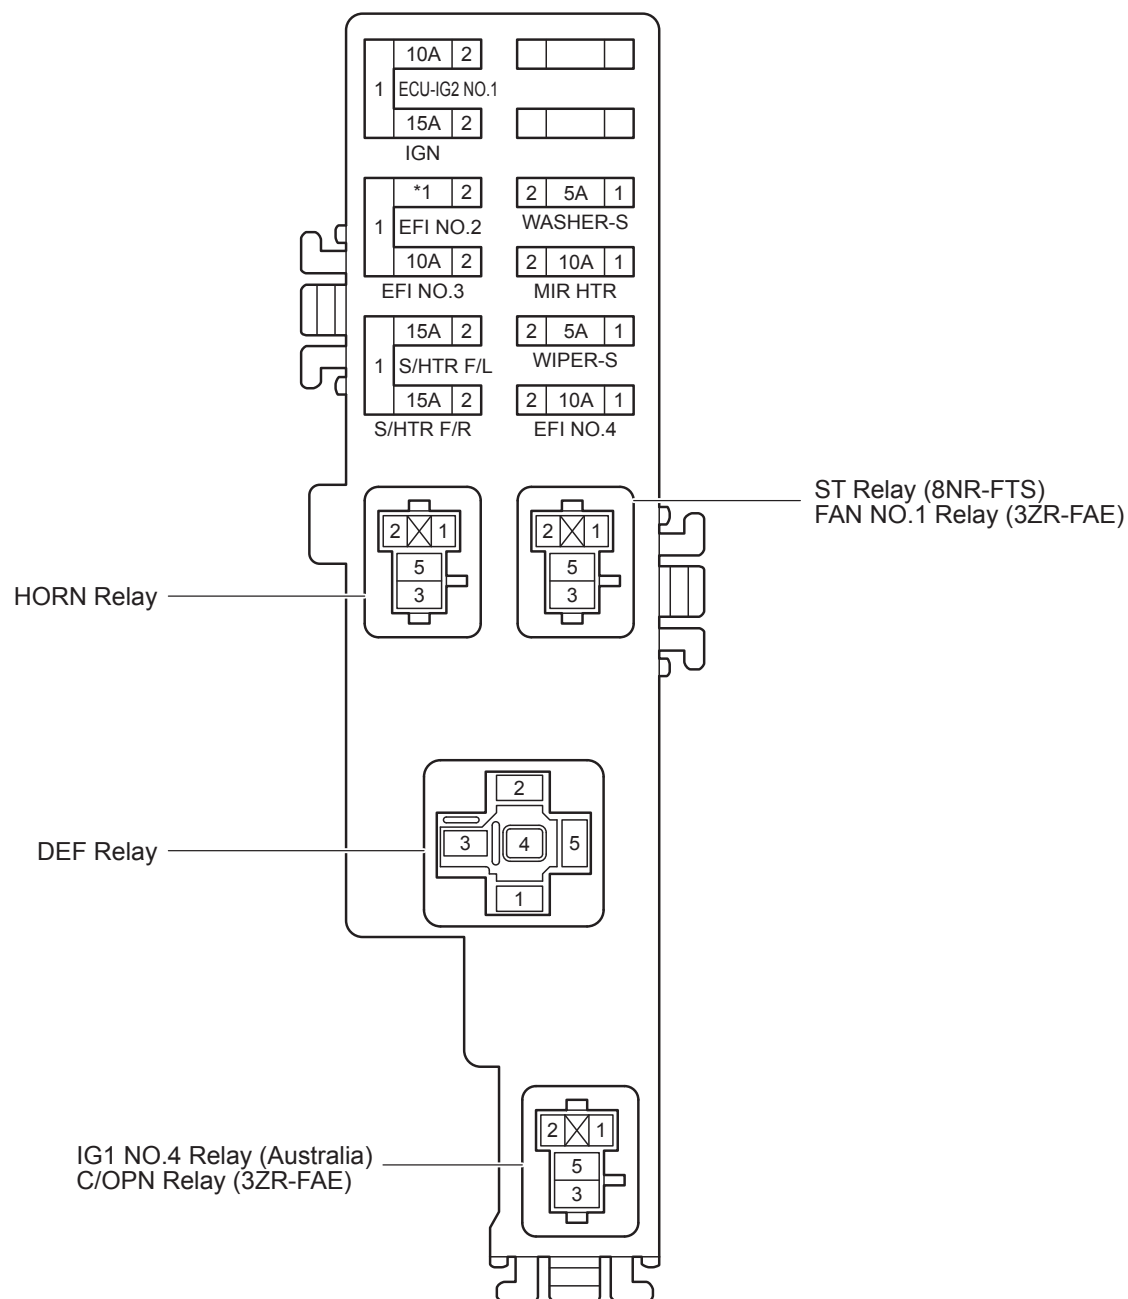

① : Engine Room R/B No. 1

○ : Engine Room J/B No. 1

Front Fender Apron LH

Unit D

- * 1:30A ABS-MAIN
- * 2:50A ABS MTR NO.1
- * 3:30A BBC NO.2
- * 4:30A BBC NO.1
- * 5:20A D INJ (8NR-FTS)
- 20A IGN/INJ (3ZR-FAE)
- * 6:10A H-LP LH (Halogen Headlight Type)
- 20A H-LP LH (LED Headlight Type)
- * 7:10A H-LP RH (Halogen Headlight Type)
- 20A H-LP RH (LED Headlight Type)
- * 8:20A EFI-MAIN NO.1 (8NR-FTS)
- 30A EFI-MAIN NO.1 (3ZR-FAE)
- * 9:50A J/B-B
- * 10:30A H-LP CLN
- * 11:30A VLMATIC
- * 12:80A EPS

EFI-MAIN NO.2 Relay
(8NR-FTS)
ST Relay
(3ZR-FAE)

D INJ Relay
(8NR-FTS)
EFI-MAIN NO.1 Relay
(3ZR-FAE)

