



Position of Parts in Engine Compartment (3ZR-FAE)

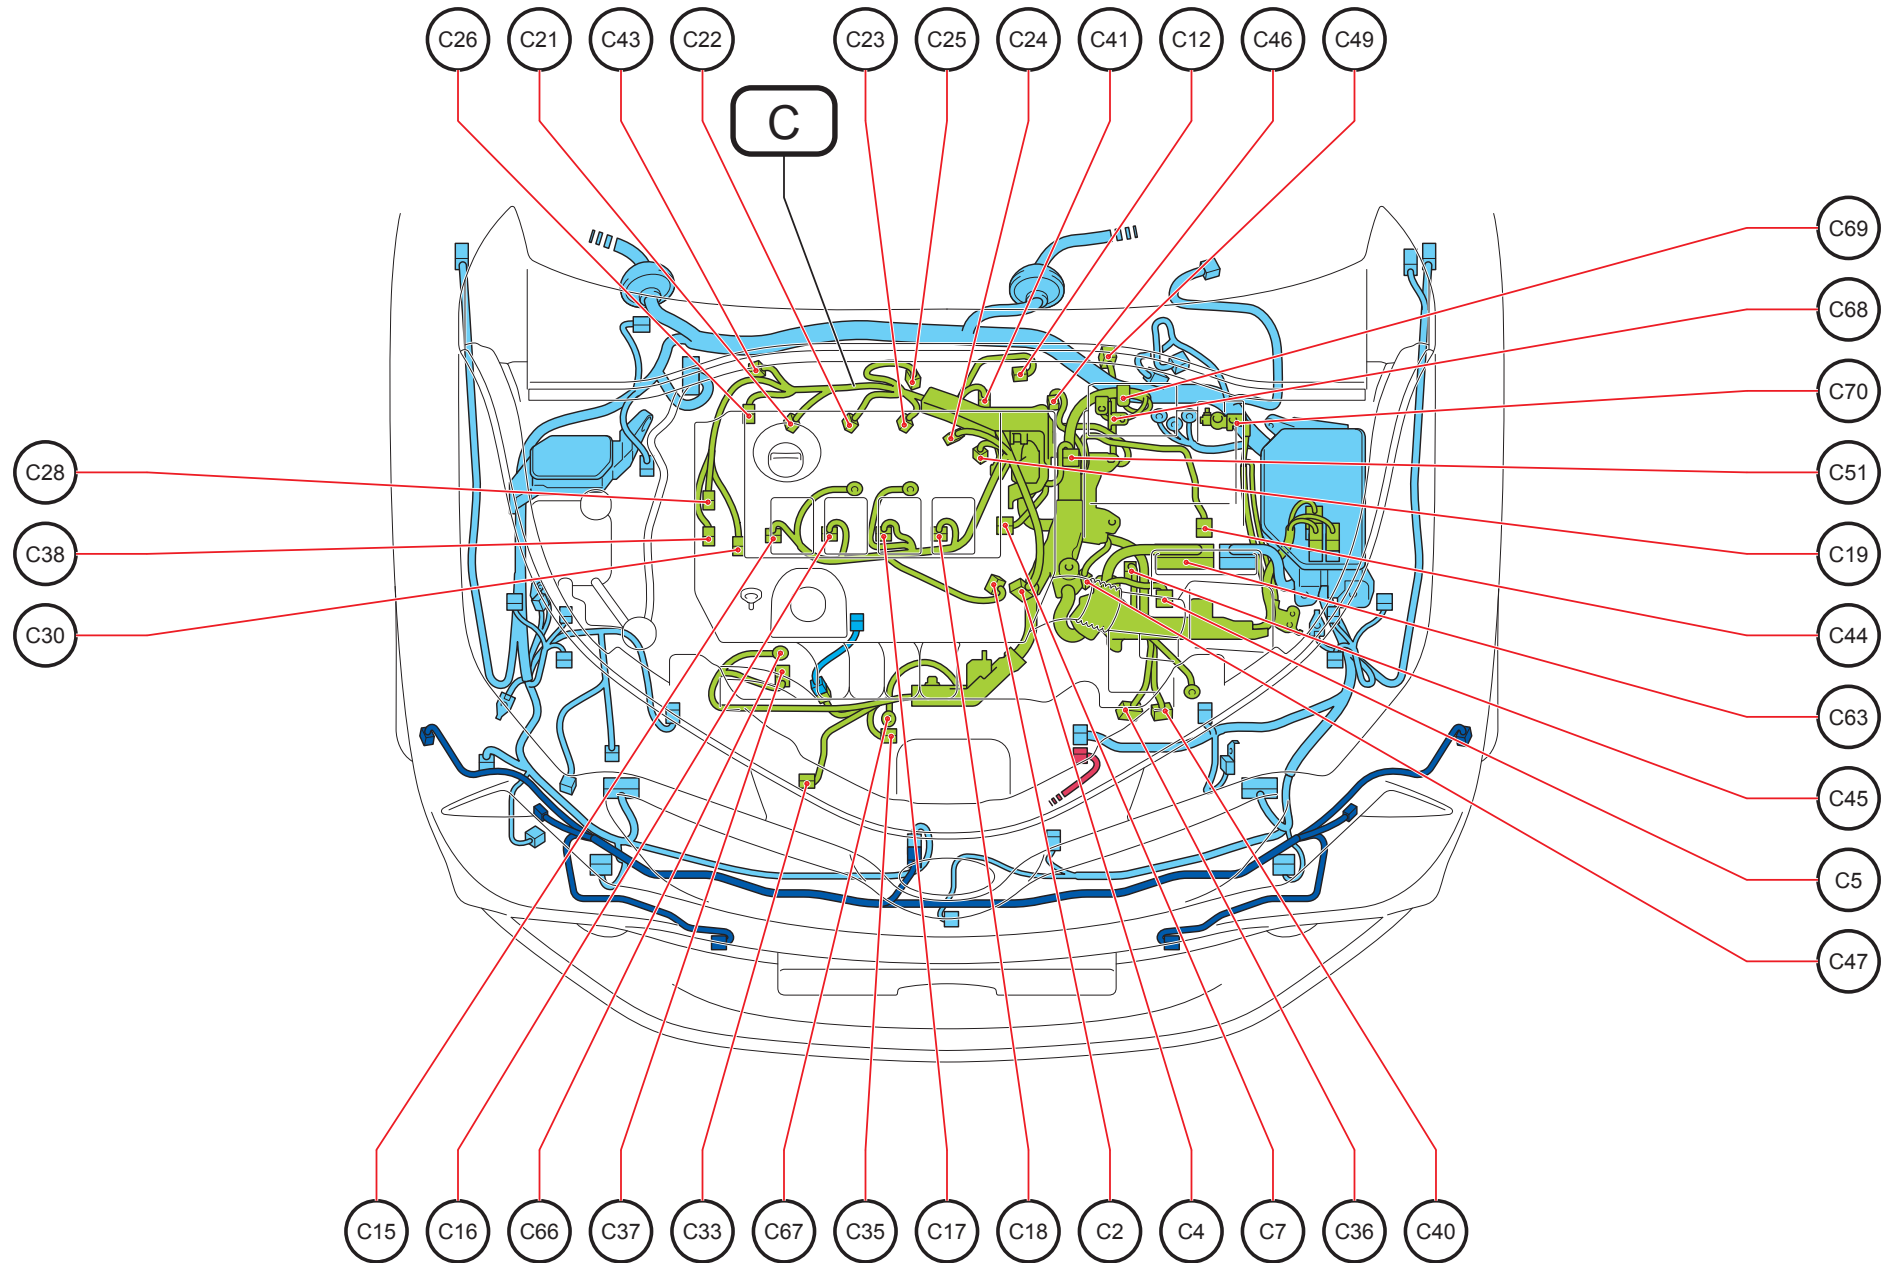


C2	E.F.I. Vacuum Sensor Assembly
C4	Throttle Body with Motor Assembly
C5	Intake Mass Air Flow Meter Sub-Assembly
C7	E.F.I. Engine Coolant Temperature Sensor
C12	Purge VSV
C15	Fuel Injector Assembly No. 1
C16	Fuel Injector Assembly No. 2
C17	Fuel Injector Assembly No. 3
C18	Fuel Injector Assembly No. 4
C19	VVT Sensor (Intake Side)
C21	Ignition Coil Assembly No. 1
C22	Ignition Coil Assembly No. 2
C23	Ignition Coil Assembly No. 3
C24	Ignition Coil Assembly No. 4
C25	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C26	Camshaft Timing Oil Control Valve Assembly (Intake Side)
C28	Engine Oil Pressure Switch Assembly
C30	Crank Position Sensor
C33	Compressor with Pulley Assembly
C35	Starter Assembly
C36	Park/Neutral Position Switch Assembly
C37	Generator Assembly
C38	Oil Temperature Sensor
C40	Transmission Wire (Continuously Variable Transaxle Assembly)
C41	VVT Sensor (Exhaust Side)
C43	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
C44	Oil Pressure Sensor
C45	Transmission Revolution Sensor (NIN)
C46	Transmission Revolution Sensor (NOUT)
C47	Transmission Revolution Sensor (NT)
C49	Oxygen Sensor (Bank 1 Sensor 2)
C51	Valve Lift Control Driver
C63	ECM
C66	Generator Assembly
C67	Starter Assembly
C68	Battery
C69	Fusible Link Block Assembly
C70	Battery


Position of Parts in Engine Compartment (3ZR-FAE)

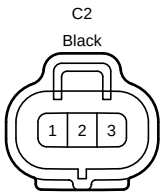

90980-10845

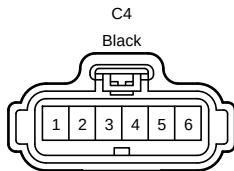


90980-11858

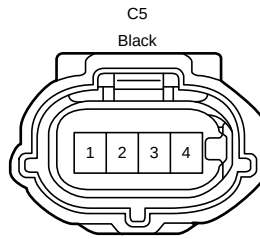


90980-12A85




90980-10735

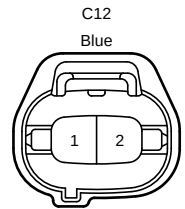


90980-11156
(3ZR-FAE)

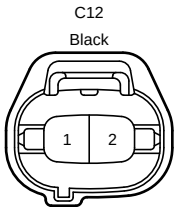


90980-11156
(8NR-FTS)

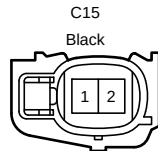


90980-11875

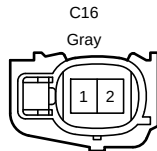


90980-11875

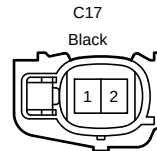


90980-11875

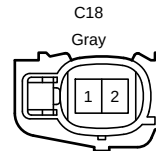


90980-11875

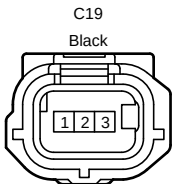


90980-12353
(8NR-FTS)

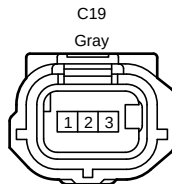


90980-12353
(3ZR-FAE)

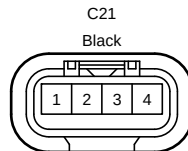


90980-12A29

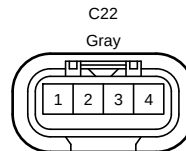

90980-12A29

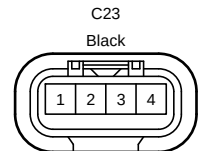

90980-12A29

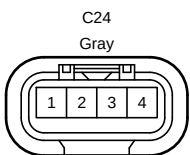


90980-12A29




90980-10869




90980-11162

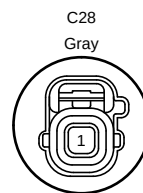


90980-11363

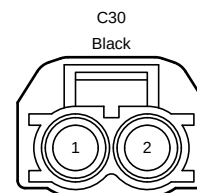


90980-12611

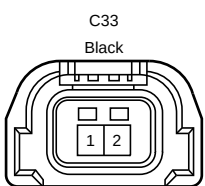


82824-10100

 


90980-11400

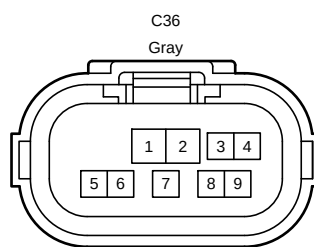


90980-12362

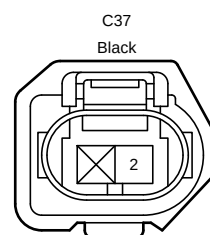


90980-12A88

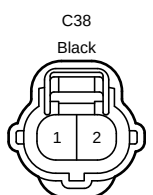

90980-11025

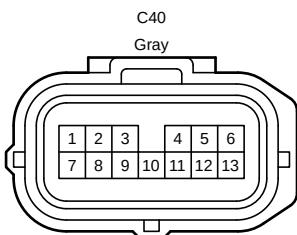


90980-12326

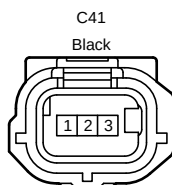


90980-12353



90980-11162

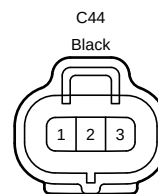


90980-10845

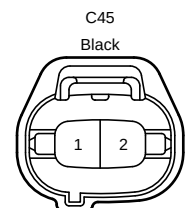


90980-11156

Position of Parts in Engine Compartment (3ZR-FAE)

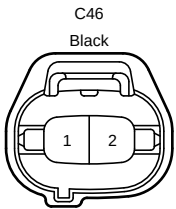


90980-11156

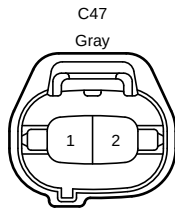


90980-11156



90980-11930

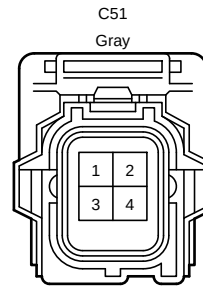

90980-12654

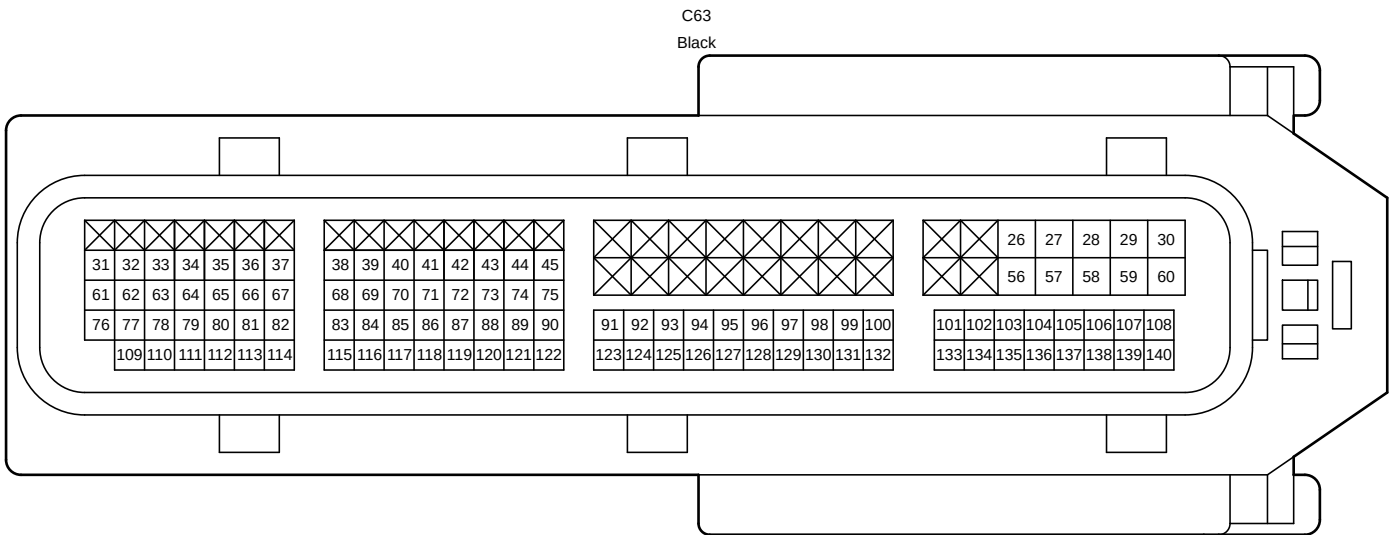

90980-12A39

