
 
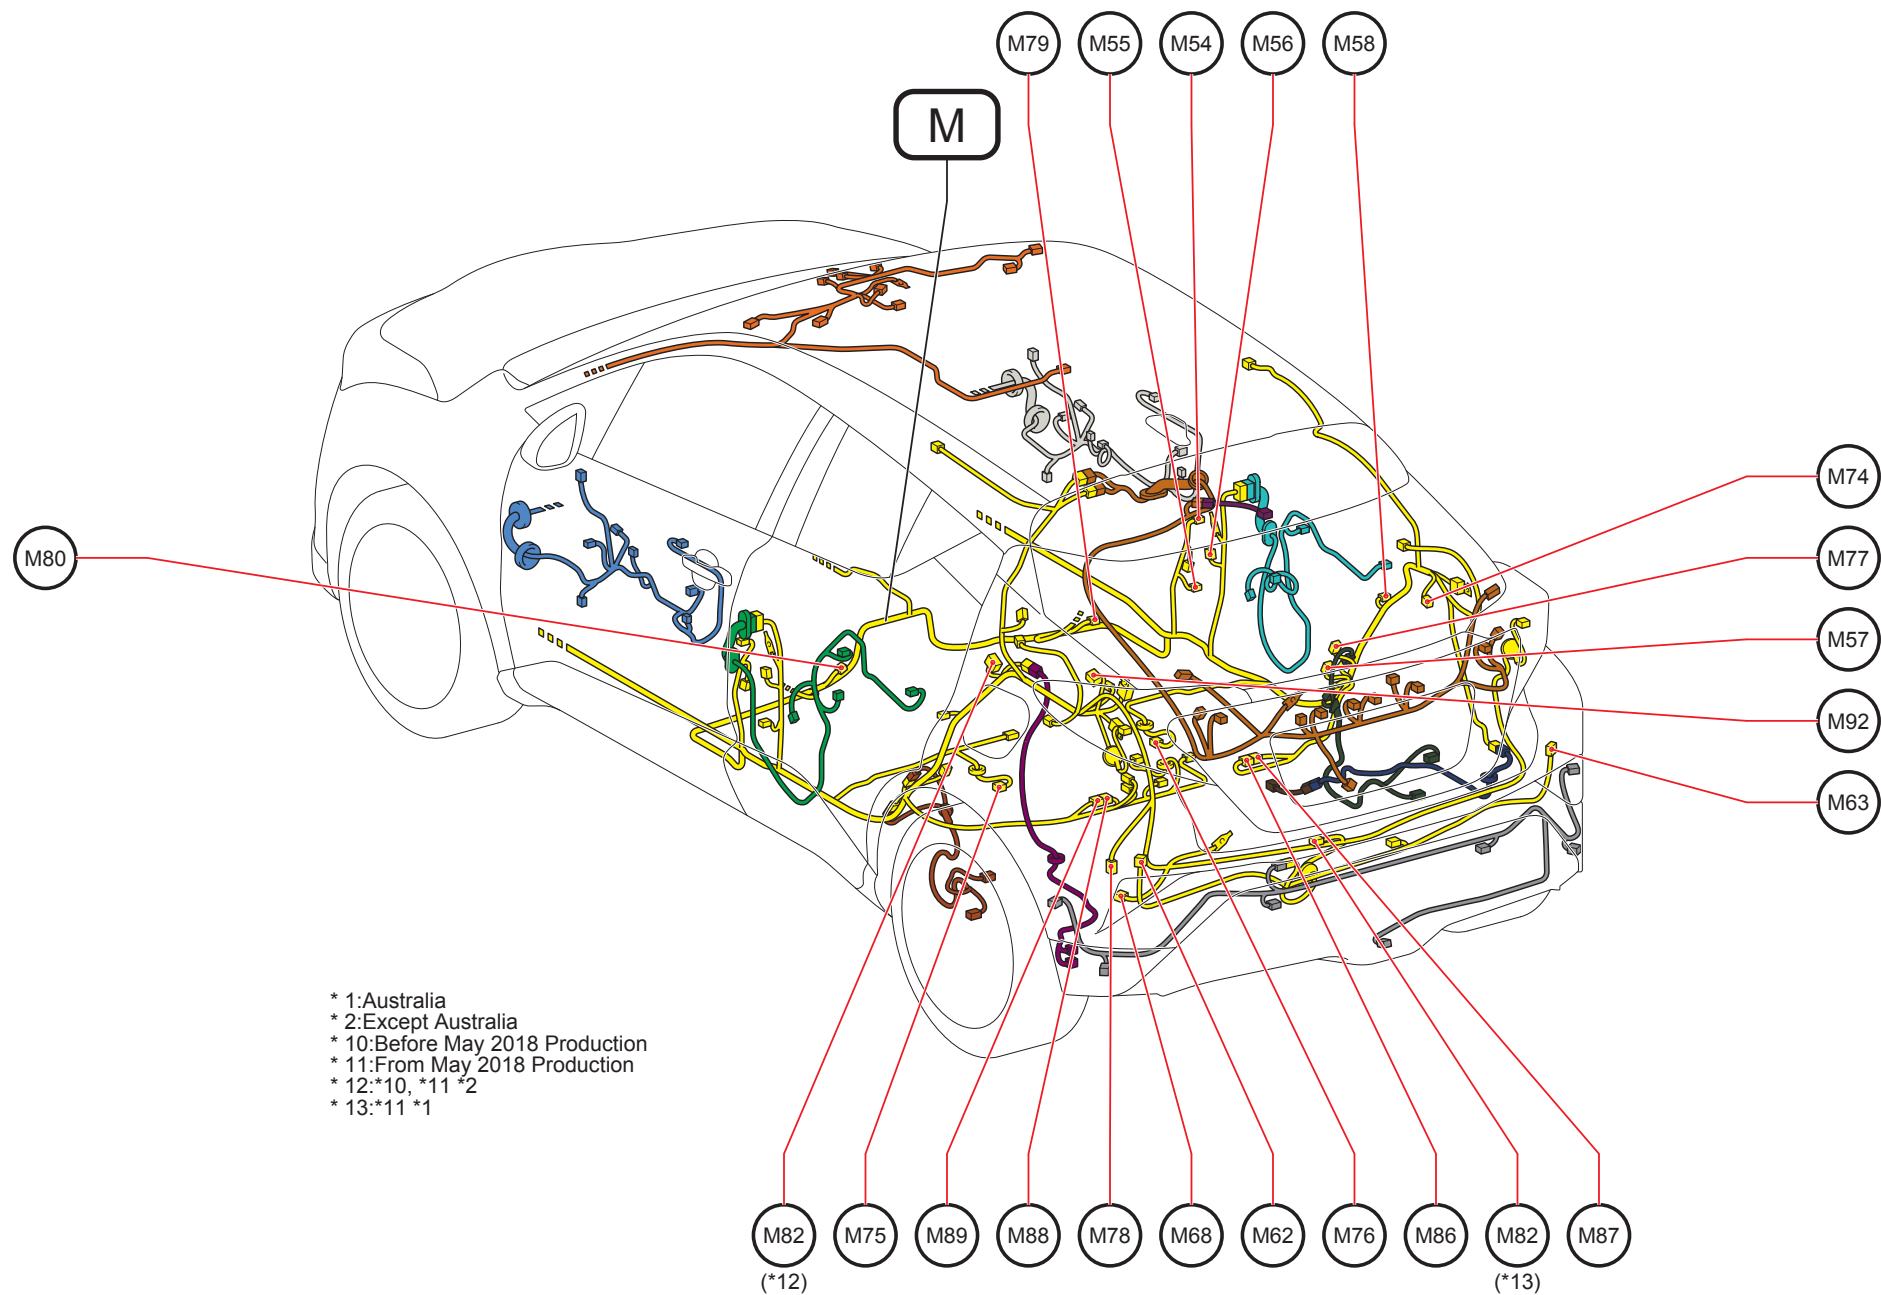

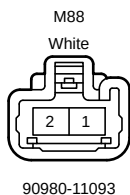
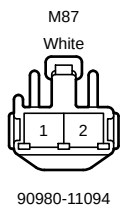
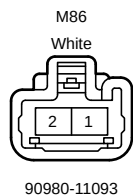
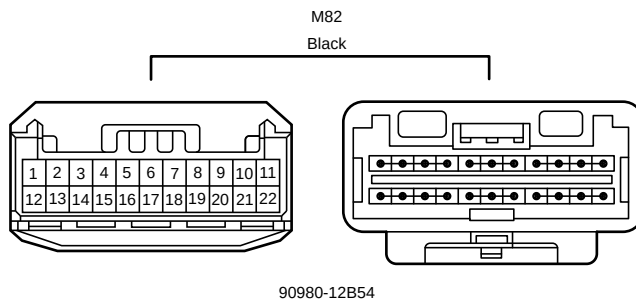
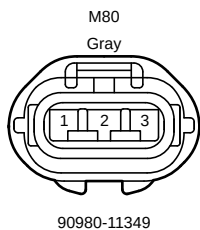
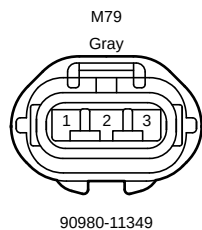
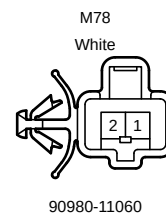
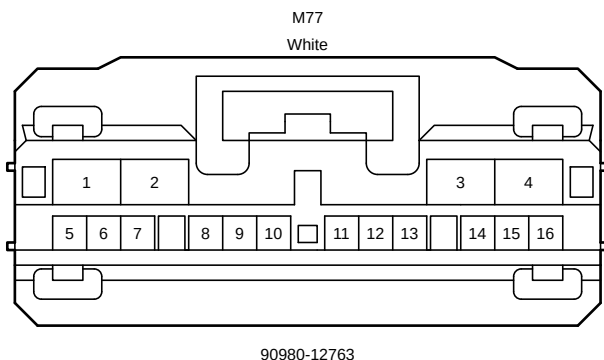
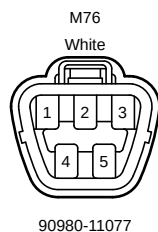
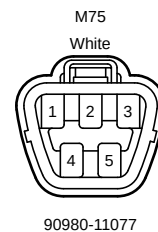
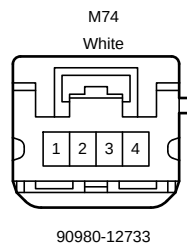
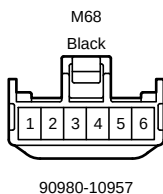
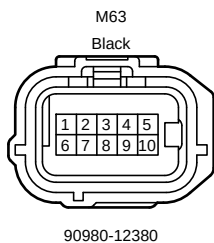
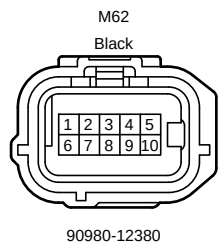
 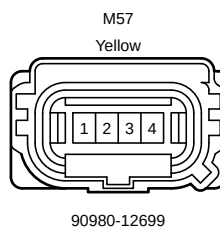



Position of Parts in Body (RHD)

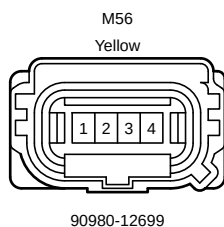

M54	Front Door Courtesy Light Switch Assembly RH
M55	Front Seat Outer Belt Assembly RH
M56	No. 1 Side Airbag Sensor RH
M57	No. 2 Side Airbag Sensor RH
M58	Rear Door Courtesy Light Switch Assembly RH
M62	Blind Spot Monitor Sensor LH
M63	Blind Spot Monitor Sensor RH
M68	Fuel Pump Control ECU Assembly
M74	No. 1 Speaker with Box Assembly
M75	Fuel Pump (Fuel Suction Tube with Pump & Gage Assembly)
M76	Fuel Tank Vent Tube Assembly
M77	4WD ECU Assembly
M78	Option Connector (Trailer Towing)
M79	Option Connector
M80	Option Connector
M82	No. 26 Junction Connector
M86	Short Connector
M87	Short Connector
M88	Short Connector
M89	Short Connector
M92	No. 6 CAN Junction Connector

Position of Parts in Body (RHD)



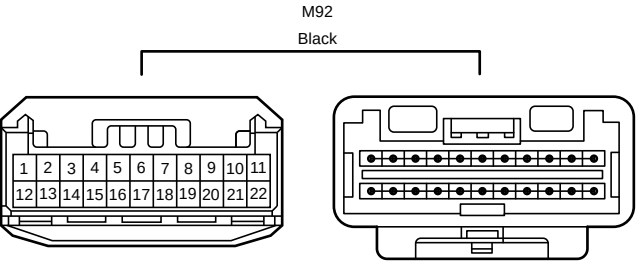

90980-12B54