



Position of Parts in Instrument Panel (RHD)

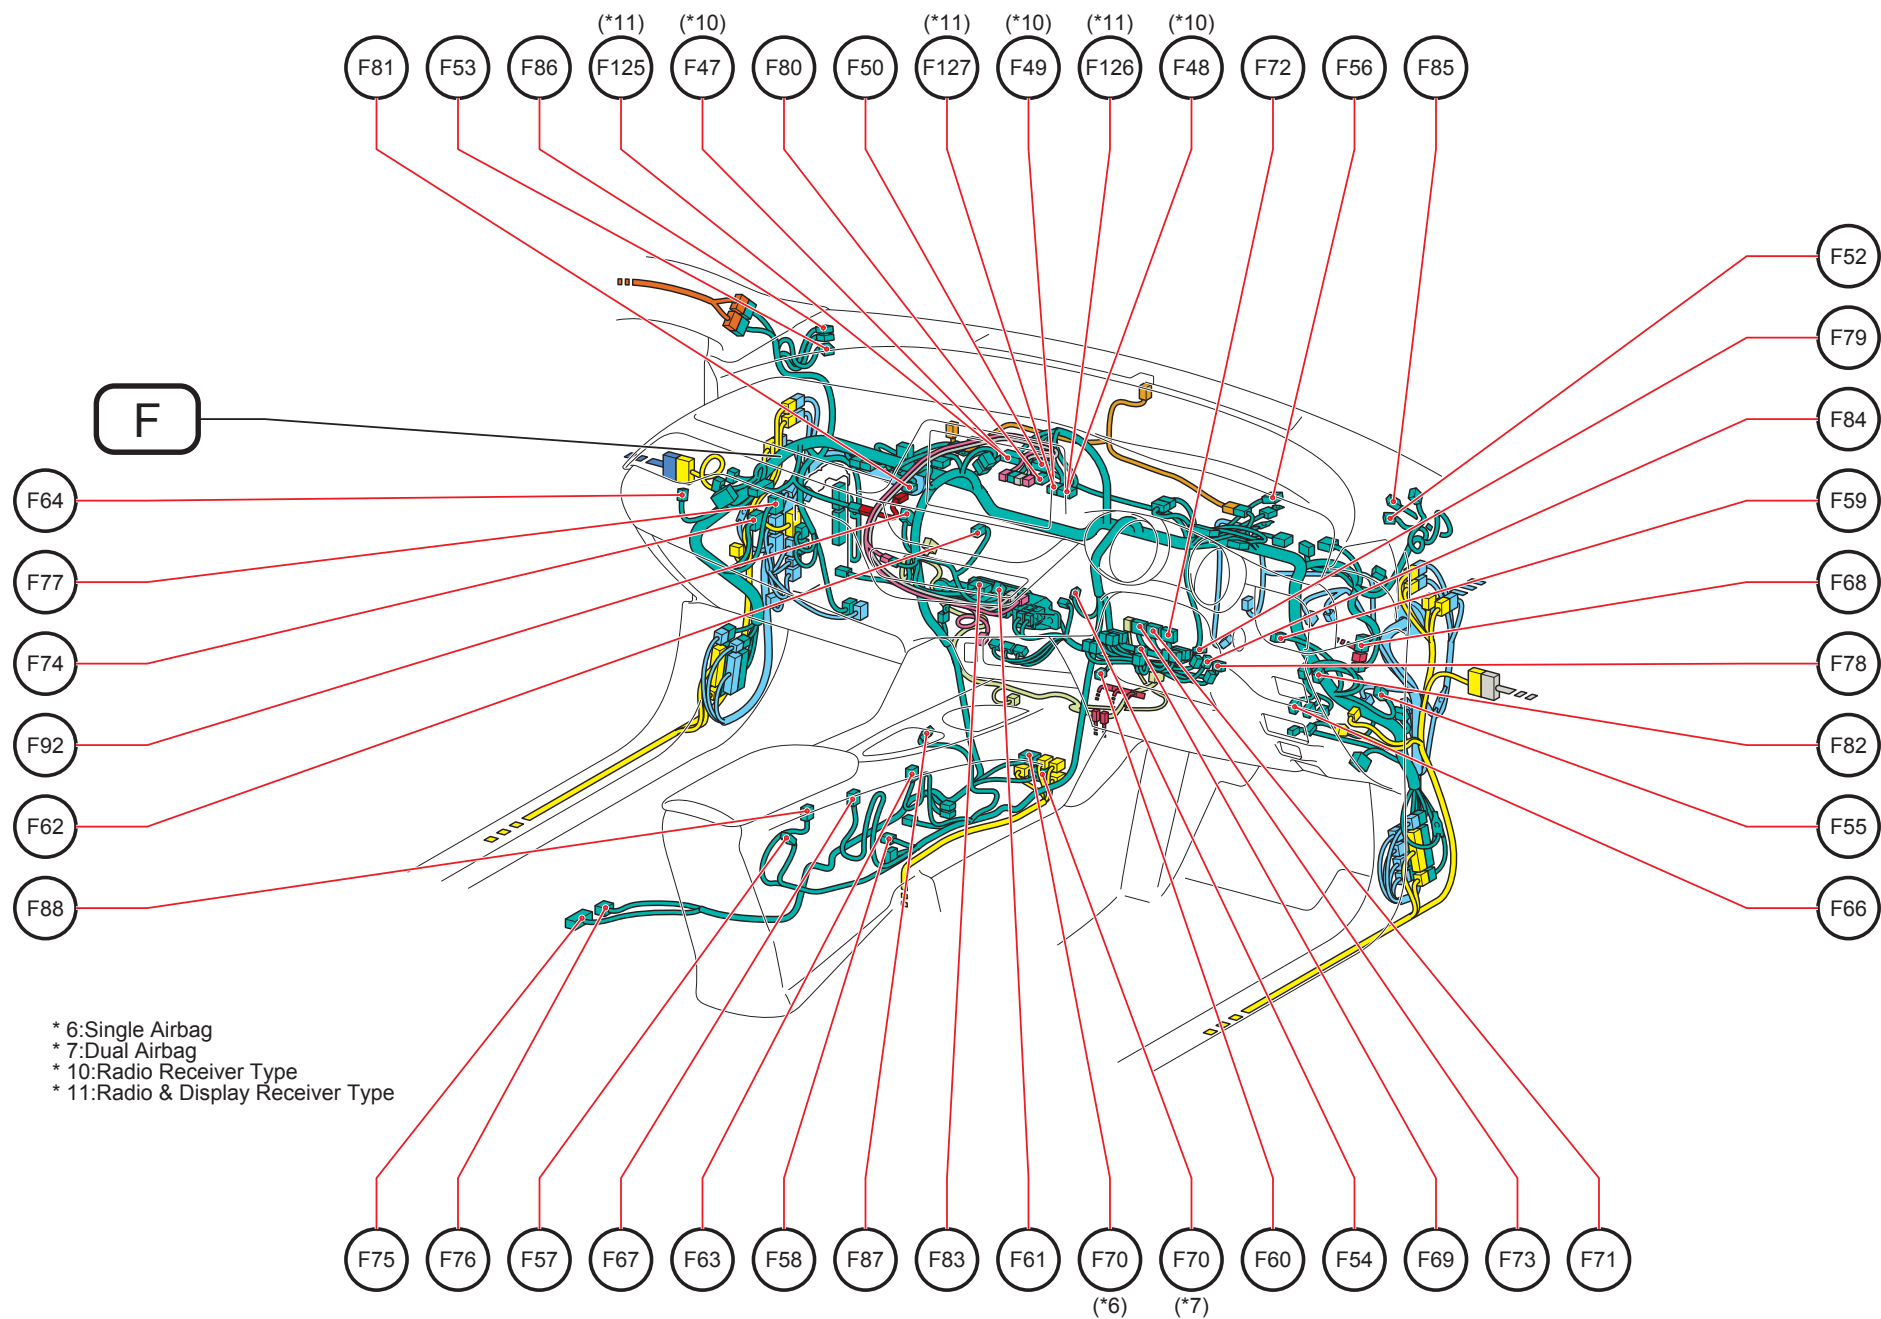


F47	Radio Receiver Assembly
F48	Radio Receiver Assembly
F49	Radio Receiver Assembly
F50	Radio & Display Receiver Assembly
F52	Front No. 2 Speaker Assembly RH
F53	Front No. 2 Speaker Assembly LH
F54	Pre-Collision City Buzzer
F55	No. 2 Clearance Warning Buzzer
F56	Windshield Wiper Relay Assembly
F57	No. 1 Power Outlet Socket Assembly
F58	No. 1 Indoor Electrical Key Antenna Assembly
F59	Engine Switch
F60	Cooler (Room Temperature Sensor) Thermistor
F61	A/C Control Assembly
F62	Hazard Warning Signal Switch Assembly
F63	Shift Position Indicator
F64	Airbag Cut Off Switch Cylinder Sub-Assembly
F66	Shift Pattern Select Switch Assembly
F67	Electric Parking Brake Switch Assembly
F68	Power Steering ECU Assembly
F69	Steering Sensor
F70	Airbag Sensor Assembly
F71	A/C Amplifier Assembly
F72	A/C Unit Assembly
F73	A/C Amplifier Assembly
F74	Network Gateway ECU
F75	Stereo Component Amplifier Assembly
F76	Stereo Component Amplifier Assembly
F77	Engine Stop and Start ECU
F78	Steering Lock Actuator Assembly (Steering Lock Actuator or Upper Bracket Assembly)
F79	Transponder Key Coil
F80	Radio & Display Receiver Assembly
F81	Clock Assembly
F82	Headlight Leveling Switch
F83	Navigation ECU
F84	Key Inter Lock Solenoid
F85	Front No. 2 Speaker Assembly RH
F86	Front No. 2 Speaker Assembly LH
F87	Front Instrument Cluster Finish Panel Garnish Center
F88	Rear Instrument Cluster Finish Panel Garnish Center
F92	No. 6 Junction Connector
F125	Radio & Display Receiver Assembly
F126	Radio & Display Receiver Assembly
F127	Radio & Display Receiver Assembly


Position of Parts in Instrument Panel (RHD)

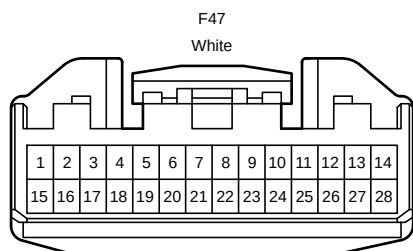


90980-12555

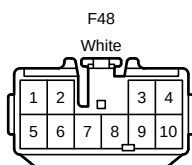


90980-10997

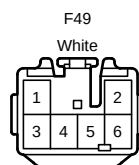


90980-10996

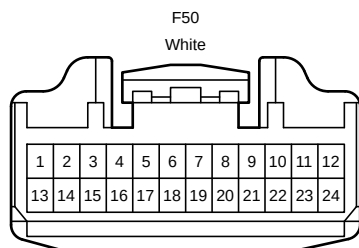


90980-12554

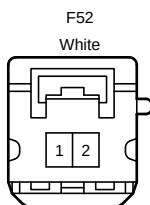


90980-12808

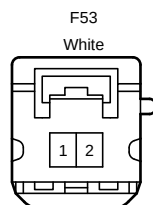


90980-12808

 


90980-10860

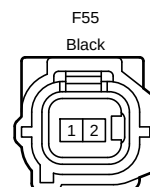


90980-12572

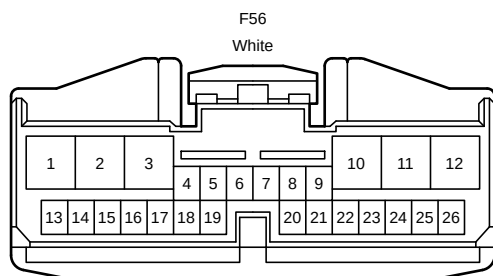


90980-12444

 


90980-12498

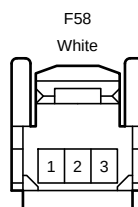


90980-12795

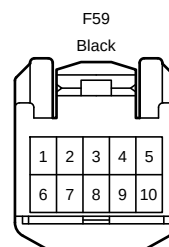


90980-12361
(Except Australia)

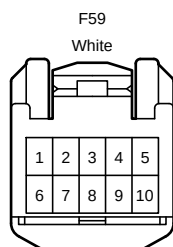


90980-12361
(Australia)

 


90980-11918

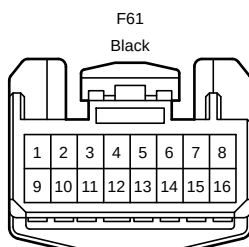


82824-33470

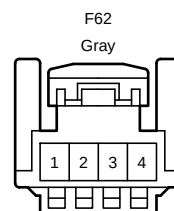


90980-12876

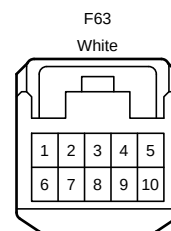


90980-12368

 


90980-12063

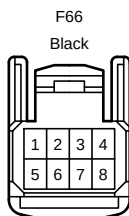


90980-12551

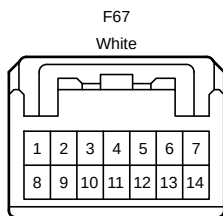

90980-12370

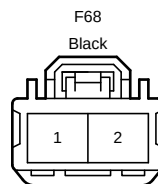


90980-12900

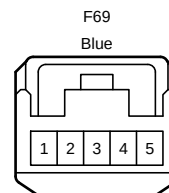


90980-12366


Position of Parts in Instrument Panel (RHD)

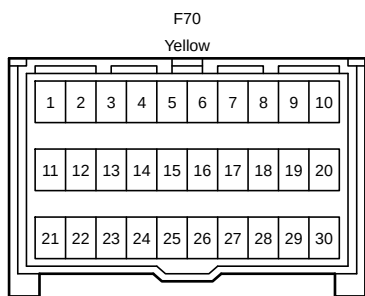


90980-12391

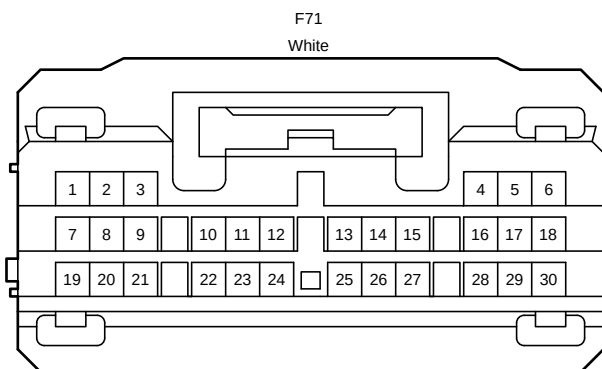


90980-12761

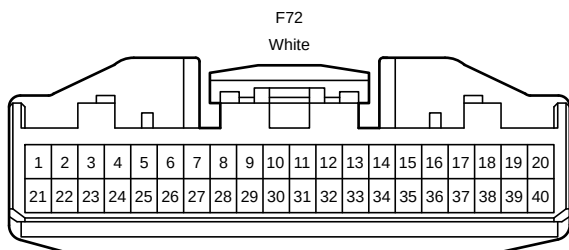


90980-12557

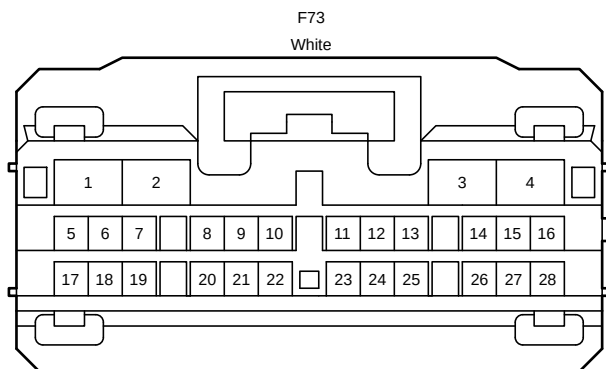


90980-12760

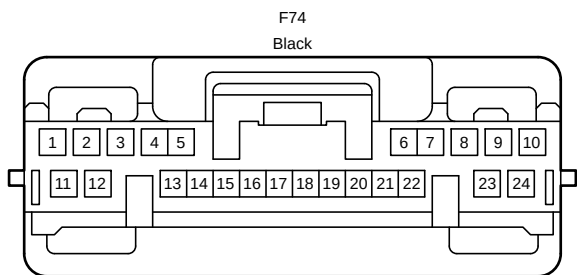


90980-12912

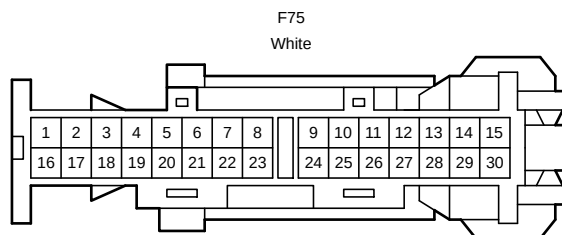


90980-12979

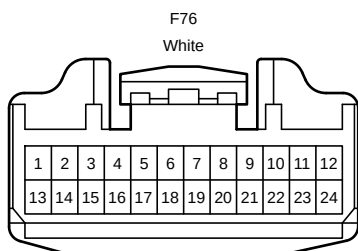

90980-12554

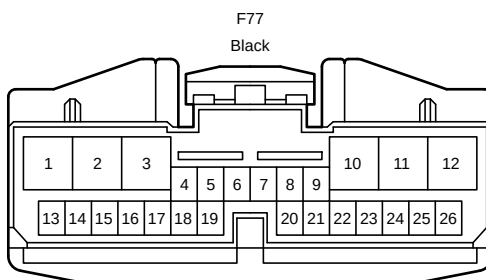


82824-12510

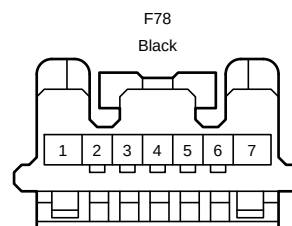


90980-12092


Position of Parts in Instrument Panel (RHD)

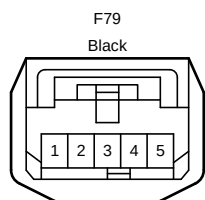


90980-12954

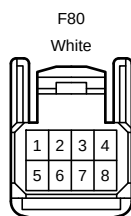


90980-12551

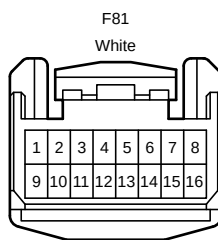


90980-12553
(Except Australia)

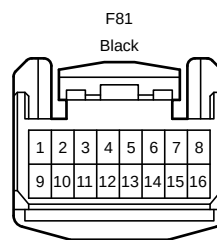


90980-12553
(Australia)

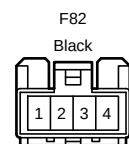


90980-11950
(Except Australia)

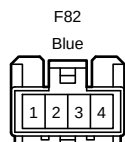


90980-11950
(Australia)

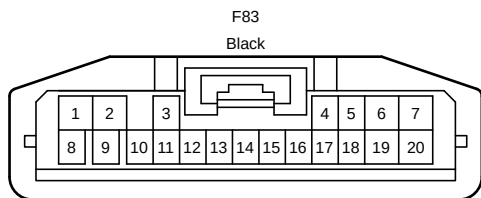


90980-12976

 


90980-12063

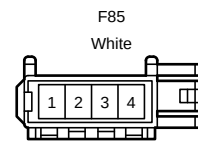


90980-12304

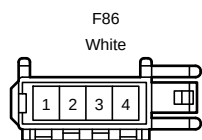


90980-12304

 


90980-11918

 


90980-11918

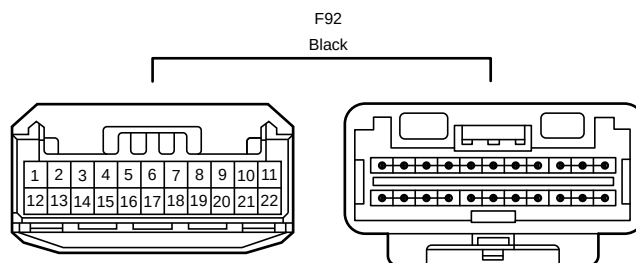


90980-12B54

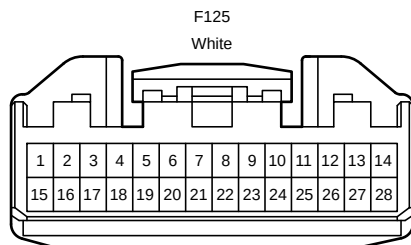

90980-12555

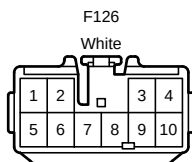

90980-10997

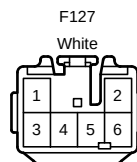

90980-10996