

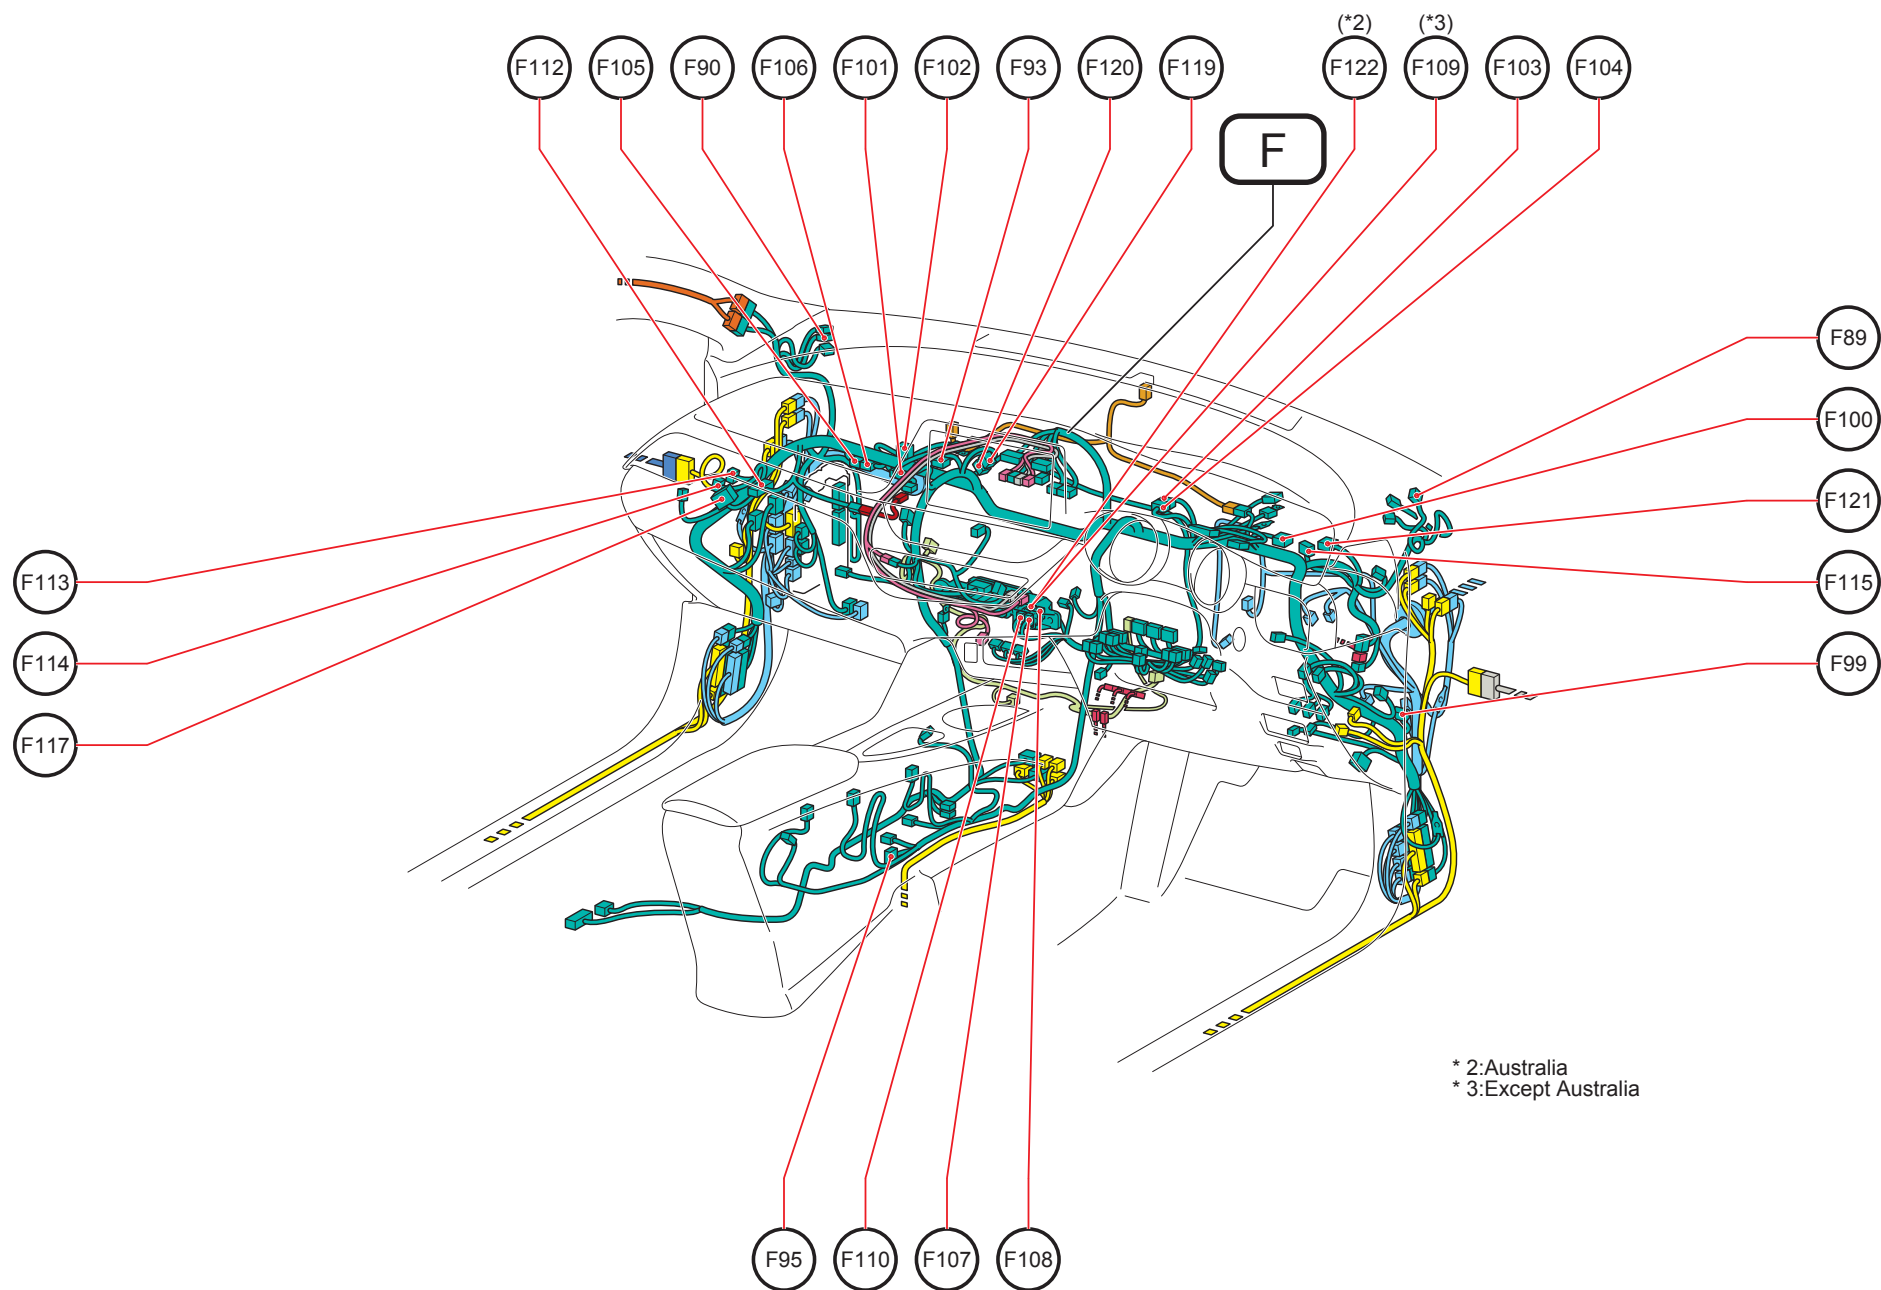
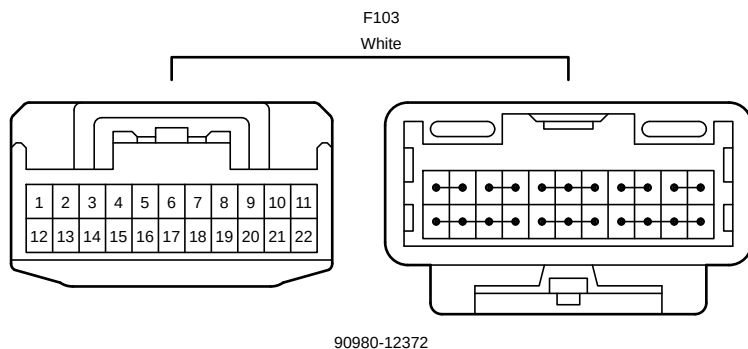
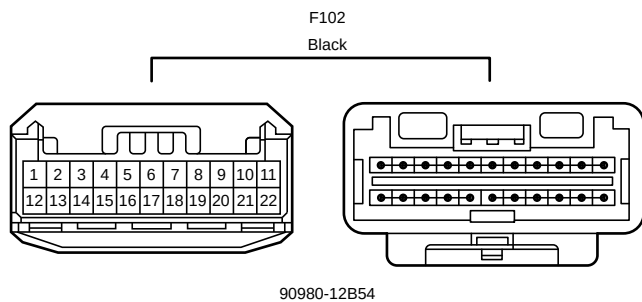
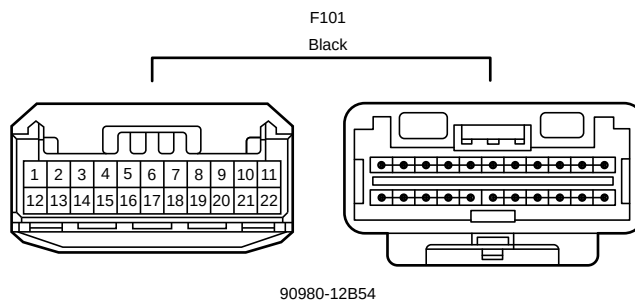
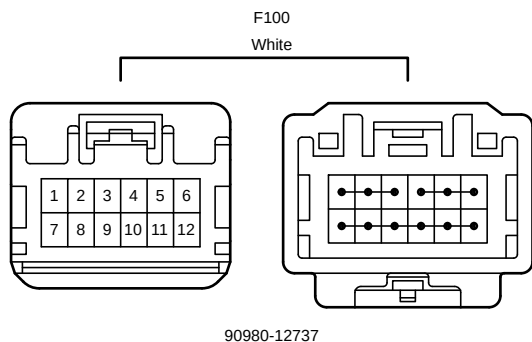
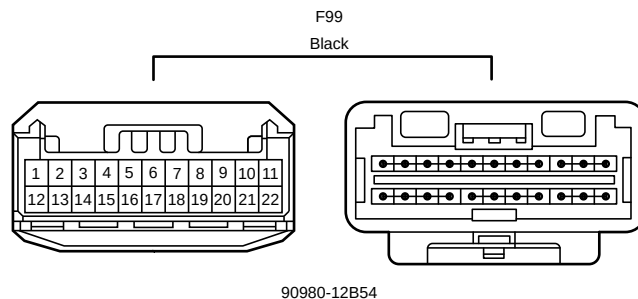
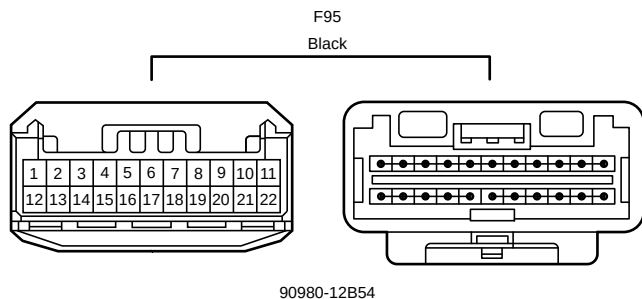
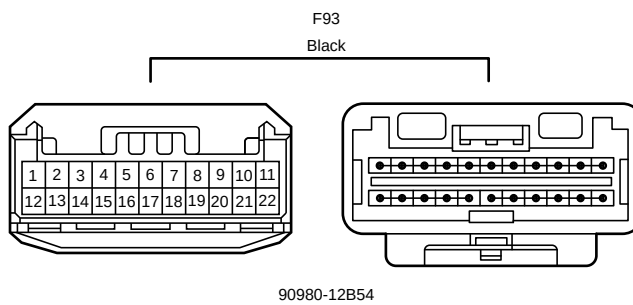


Position of Parts in Instrument Panel (RHD)

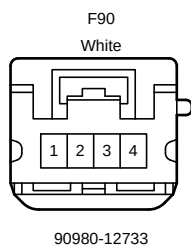


F89	Front No. 3 Speaker Assembly RH
F90	Front No. 3 Speaker Assembly LH
F93	No. 7 Junction Connector
F95	No. 9 Junction Connector
F99	No. 13 Junction Connector
F100	No. 14 Junction Connector
F101	No. 15 Junction Connector
F102	No. 16 Junction Connector
F103	No. 21 Junction Connector
F104	No. 21 Junction Connector
F105	No. 22 Junction Connector
F106	No. 22 Junction Connector
F107	No. 23 Junction Connector
F108	No. 23 Junction Connector
F109	No. 24 Junction Connector
F110	No. 24 Junction Connector
F112	No. 1 CAN Junction Connector
F113	No. 2 CAN Junction Connector
F114	No. 3 CAN Junction Connector
F115	No. 4 CAN Junction Connector
F117	No. 5 CAN Junction Connector
F119	No. 17 Junction Connector
F120	No. 18 Junction Connector
F121	No. 19 Junction Connector
F122	No. 20 Junction Connector

Position of Parts in Instrument Panel (RHD)

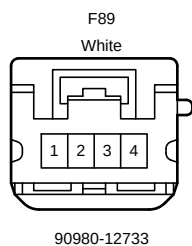


Position of Parts in Instrument Panel (RHD)

F104
White

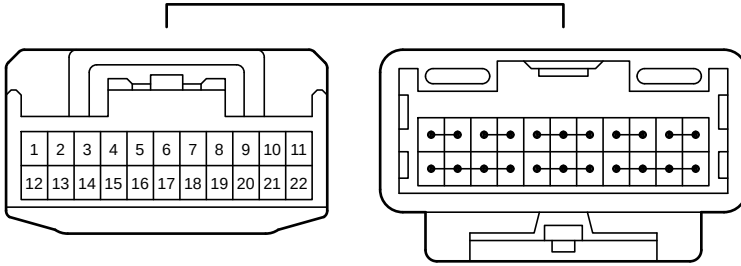


90980-12372

F105
White

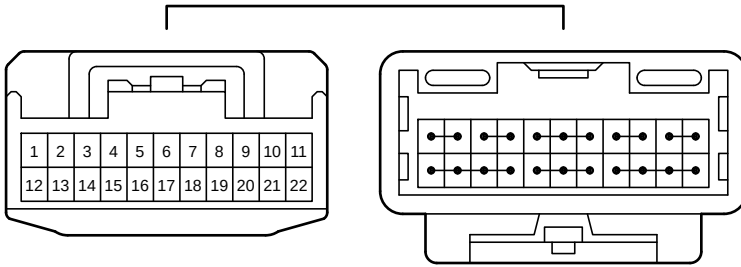


90980-12372

F106
White

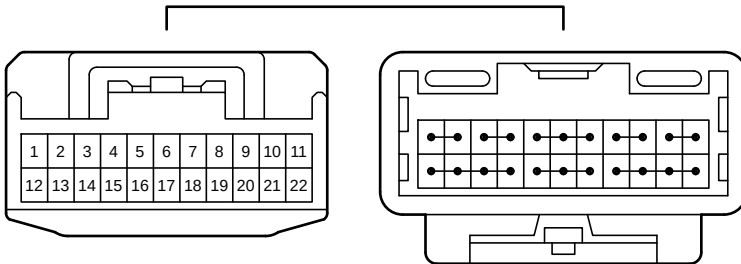

90980-12372


F107
White

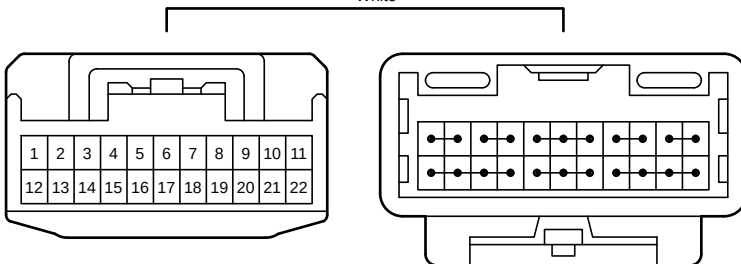

90980-12372


Position of Parts in Instrument Panel (RHD)

F108
White

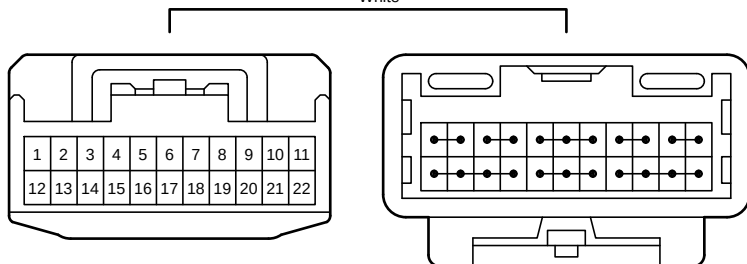


90980-12372

F109
Black

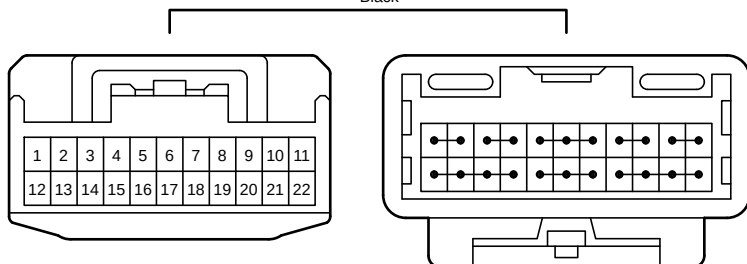


90980-12372

F110
Black

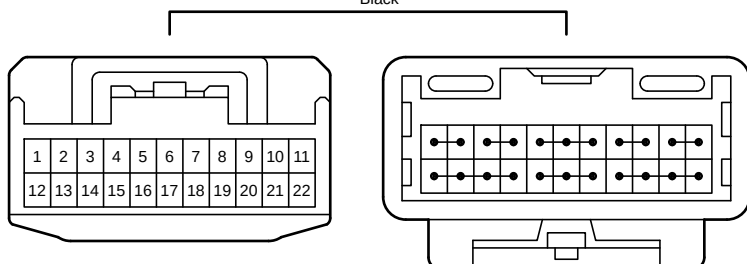


90980-12372

F112
Black

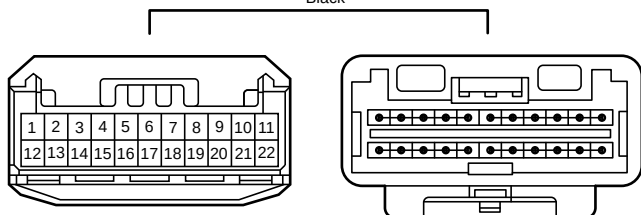


90980-12B54

F113
Black

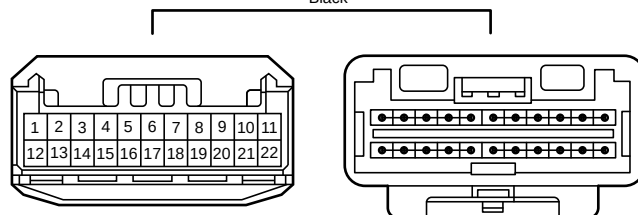


90980-12B54

F114
Black

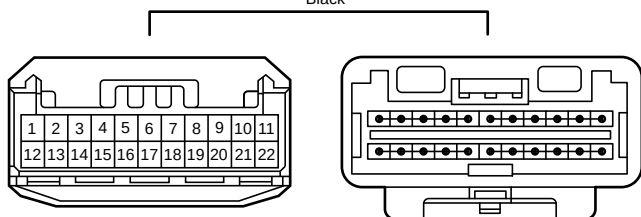

90980-12B54


F115
Black

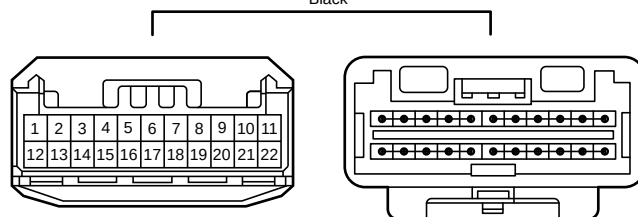

90980-12B54


Position of Parts in Instrument Panel (RHD)

F117
Black

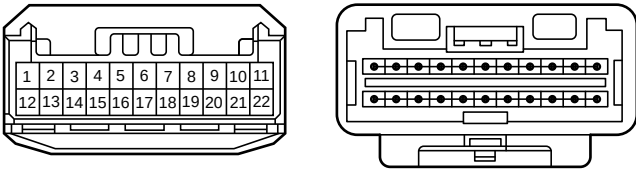


90980-12B54

F119
Black

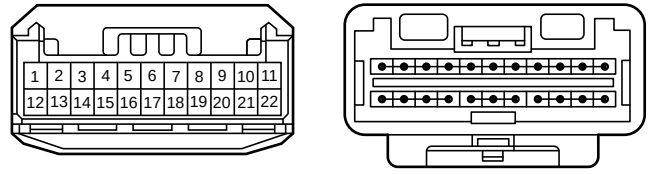


90980-12B54

F120
Black

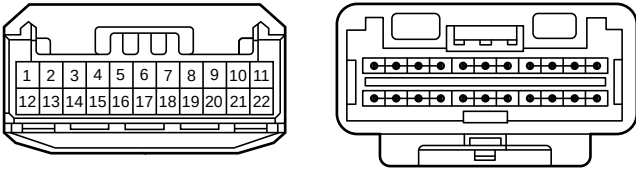


90980-12B54

F121
Black

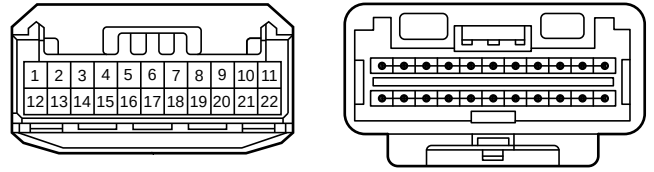

90980-12B54

F122
Black

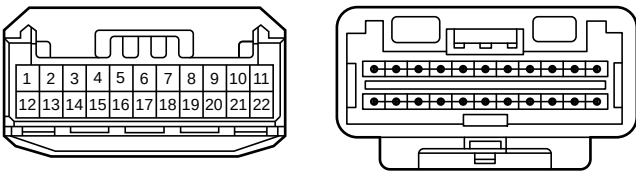

90980-12B54