 
 


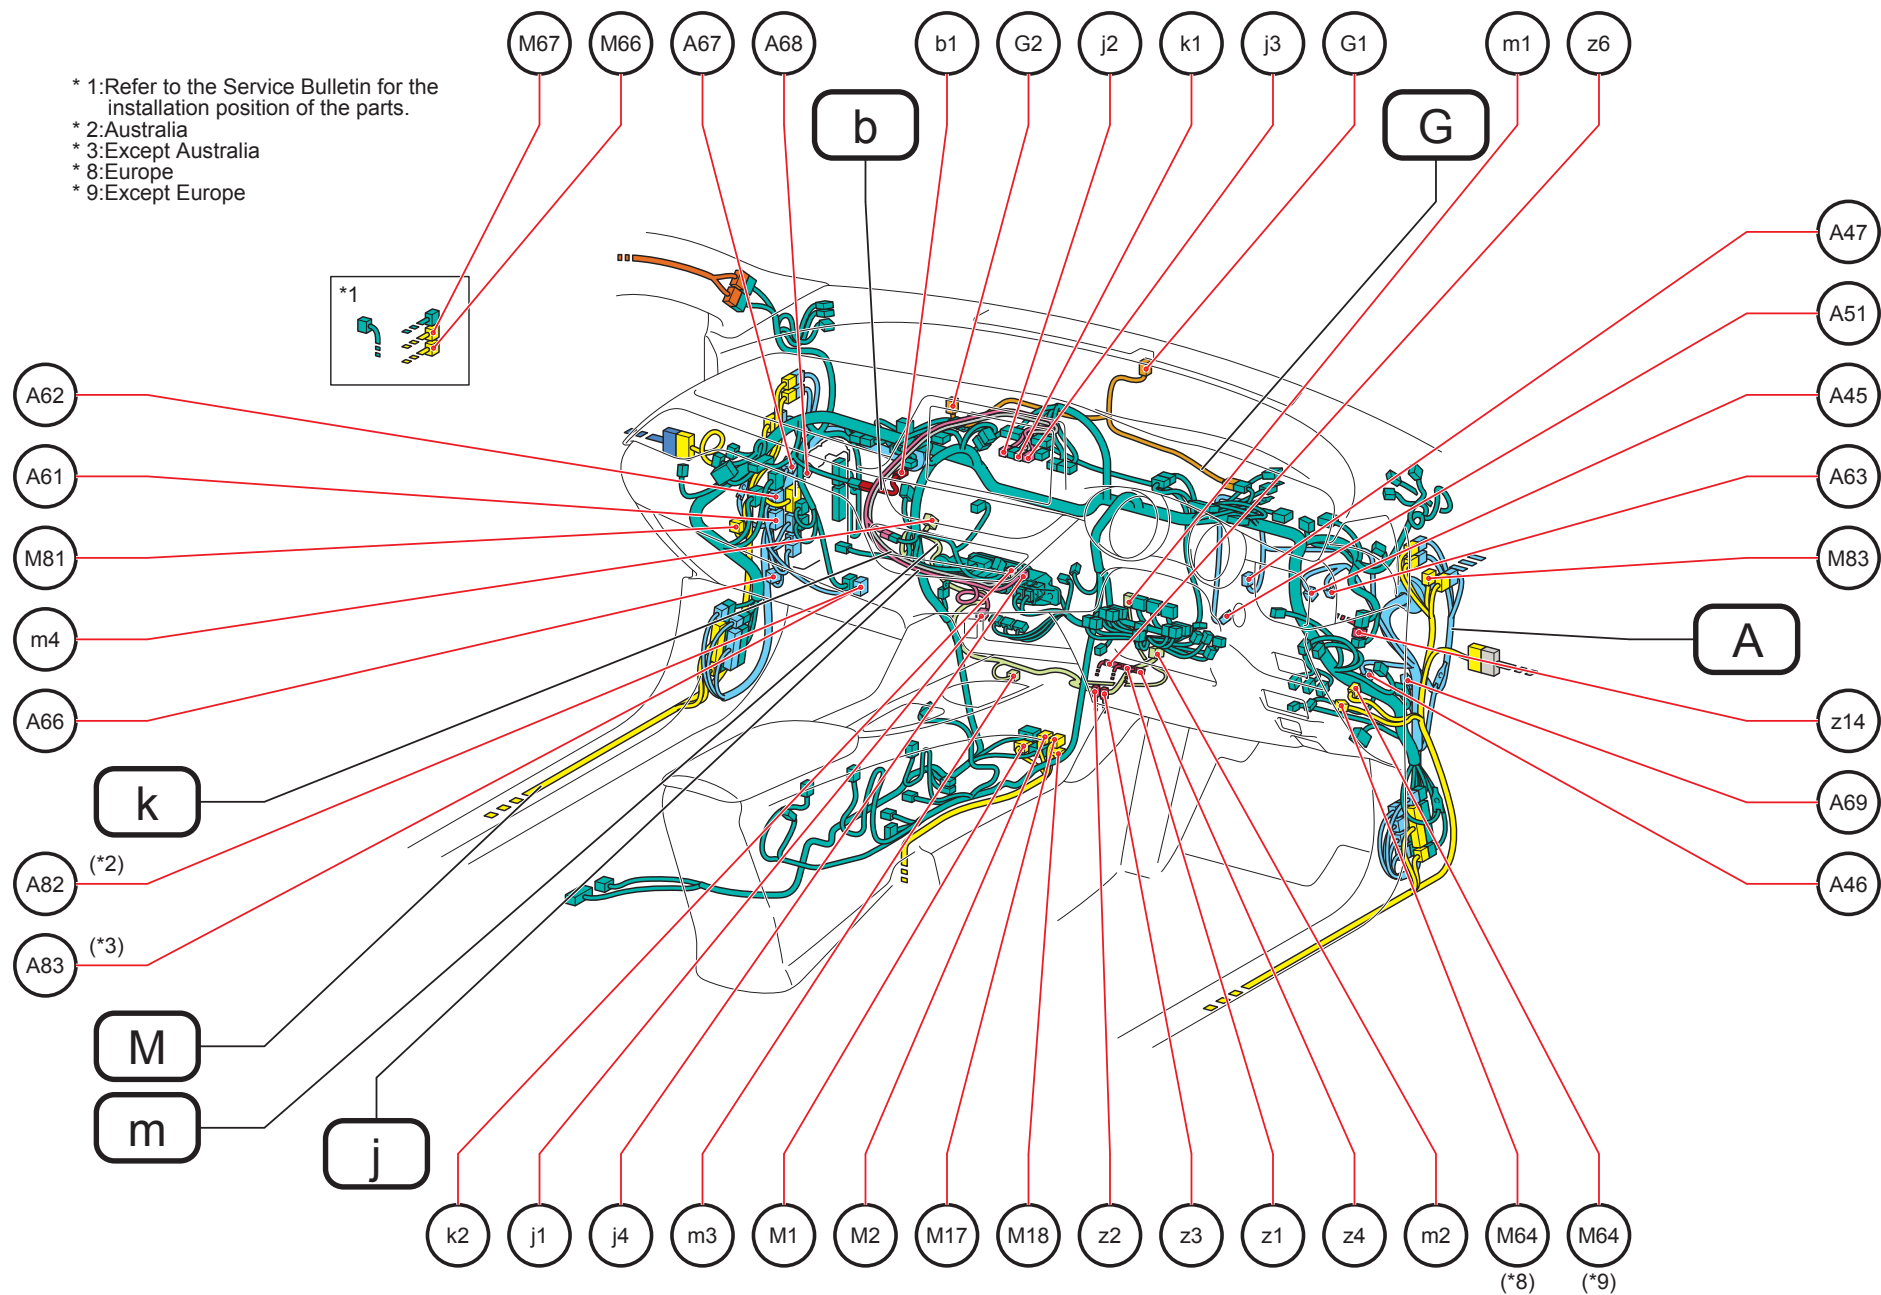


A45	Stop Light Switch Assembly
A46	Accelerator Pedal Sensor Assembly
A47	Clutch Pedal Stroke Sensor Assembly
A51	Clutch Switch Assembly
A61	Engine Stop and Start ECU
A62	Engine Stop and Start ECU
A63	Brake Pedal Road Sensing Switch (Brake Pedal Support Assembly)
A66	No. 1 Junction Connector
A67	No. 2 Junction Connector
A68	No. 3 Junction Connector
A69	No. 4 Junction Connector
A82	Blower Motor with Fan Sub-Assembly
A83	A/C Unit Assembly
G1	Automatic Light Control Sensor
G2	Ion Generator Sub-Assembly
M1	Airbag Sensor Assembly
M2	Airbag Sensor Assembly
M17	Airbag Sensor Assembly
M18	Airbag Sensor Assembly
M64	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M66	Certification ECU
M67	Certification ECU
M81	No. 25 Junction Connector
M83	No. 27 Junction Connector
b1	Instrument Panel Passenger without Door Airbag Assembly
j1	No. 1 Stereo Jack Adapter Assembly
j2	Radio & Display Receiver Assembly
j3	Radio Receiver Assembly
j4	Navigation ECU
k1	Radio & Display Receiver Assembly
k2	Navigation ECU
m1	A/C Amplifier Assembly
m2	No. 1 A/C Radiator Damper Servo Sub-Assembly
m3	No. 1 Cooler Thermistor
m4	No. 2 A/C Radiator Damper Servo Sub-Assembly
z1	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly
z2	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z4	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly
z6	Steering Wheel Assembly , Spiral Cable with Sensor Sub-Assembly
z14	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly


Position of Parts in Instrument Panel (RHD)

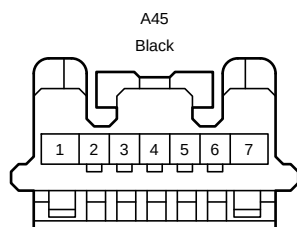

 
90980-12092

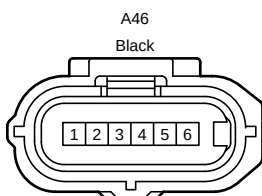


90980-12831

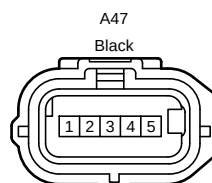 


90980-12292

 


90980-10906

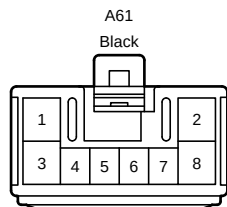 


90980-11362

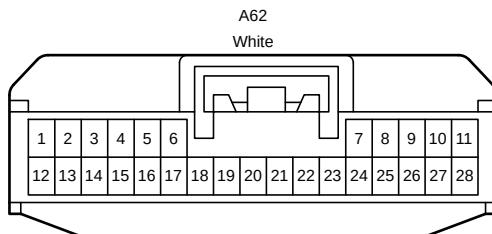 


90980-12566

 


90980-10860

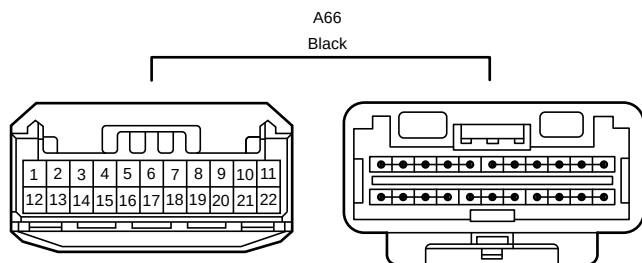 


90980-12B54

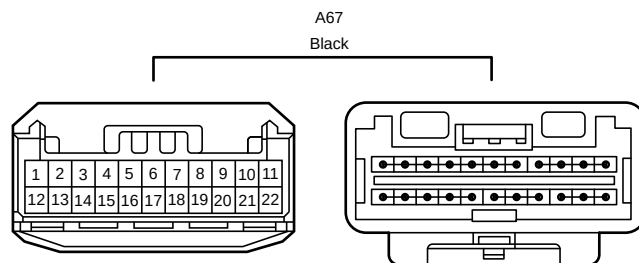 


90980-12B54

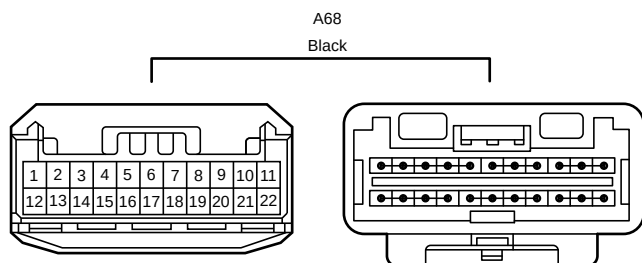 


90980-12B54

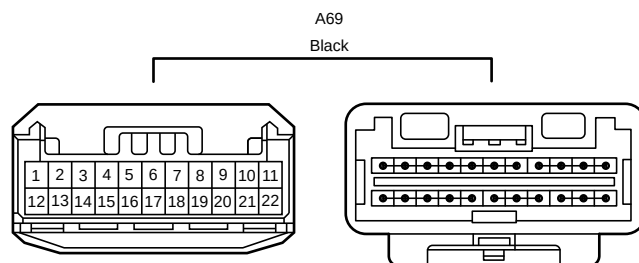 


90980-12B54

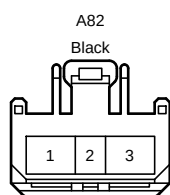 


90980-11667

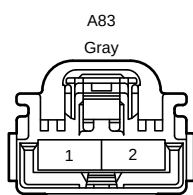 


90980-WC001

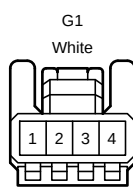 

82824-50130

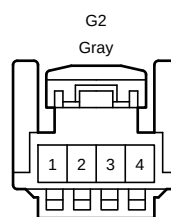 


90980-12876

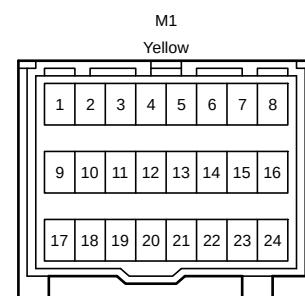 


90980-12392

 
Position of Parts in Instrument Panel (RHD)

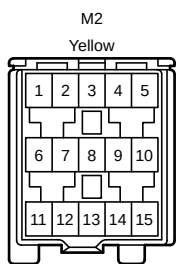


90980-12449

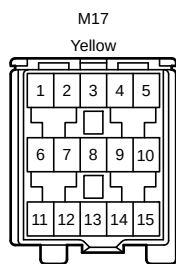 


90980-12450

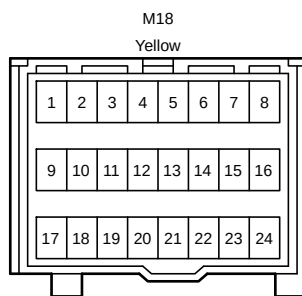 


90980-12390

 


90980-11142

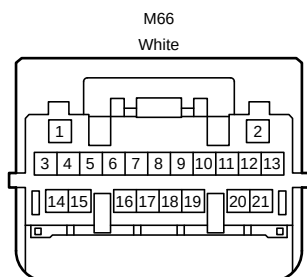 



90980-12B76

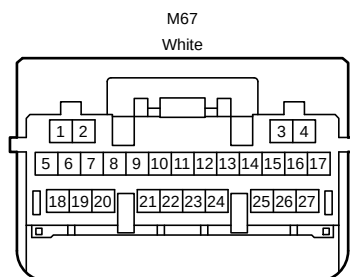 



90980-12B77

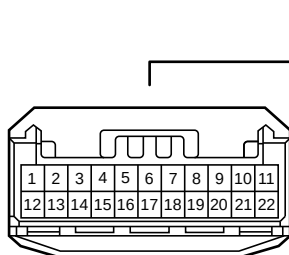 


90980-12B54

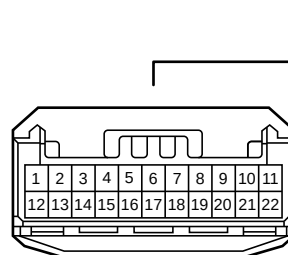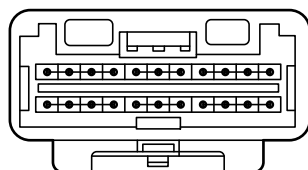  


90980-12B54

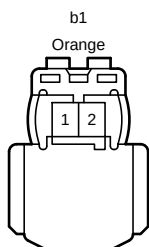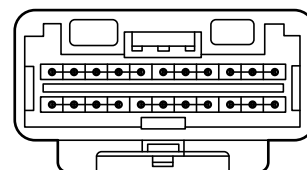  


90980-12576

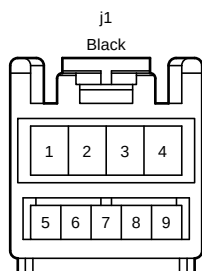 


90980-12849

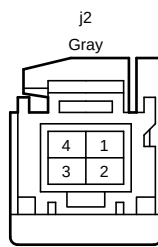 


90980-12A52

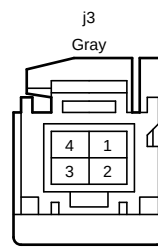 


90980-12A52

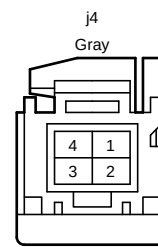 


90980-12A52

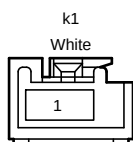 


90980-12960

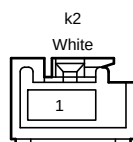 


90980-12960

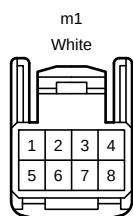 

90980-12221

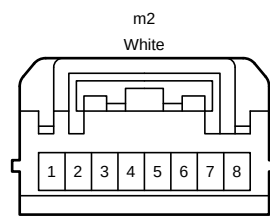 

90980-12550

 

90980-12937

Position of Parts in Instrument Panel (RHD)

