 
 
 


Wireless Door Lock Control (RHD w/o Entry & Start System)

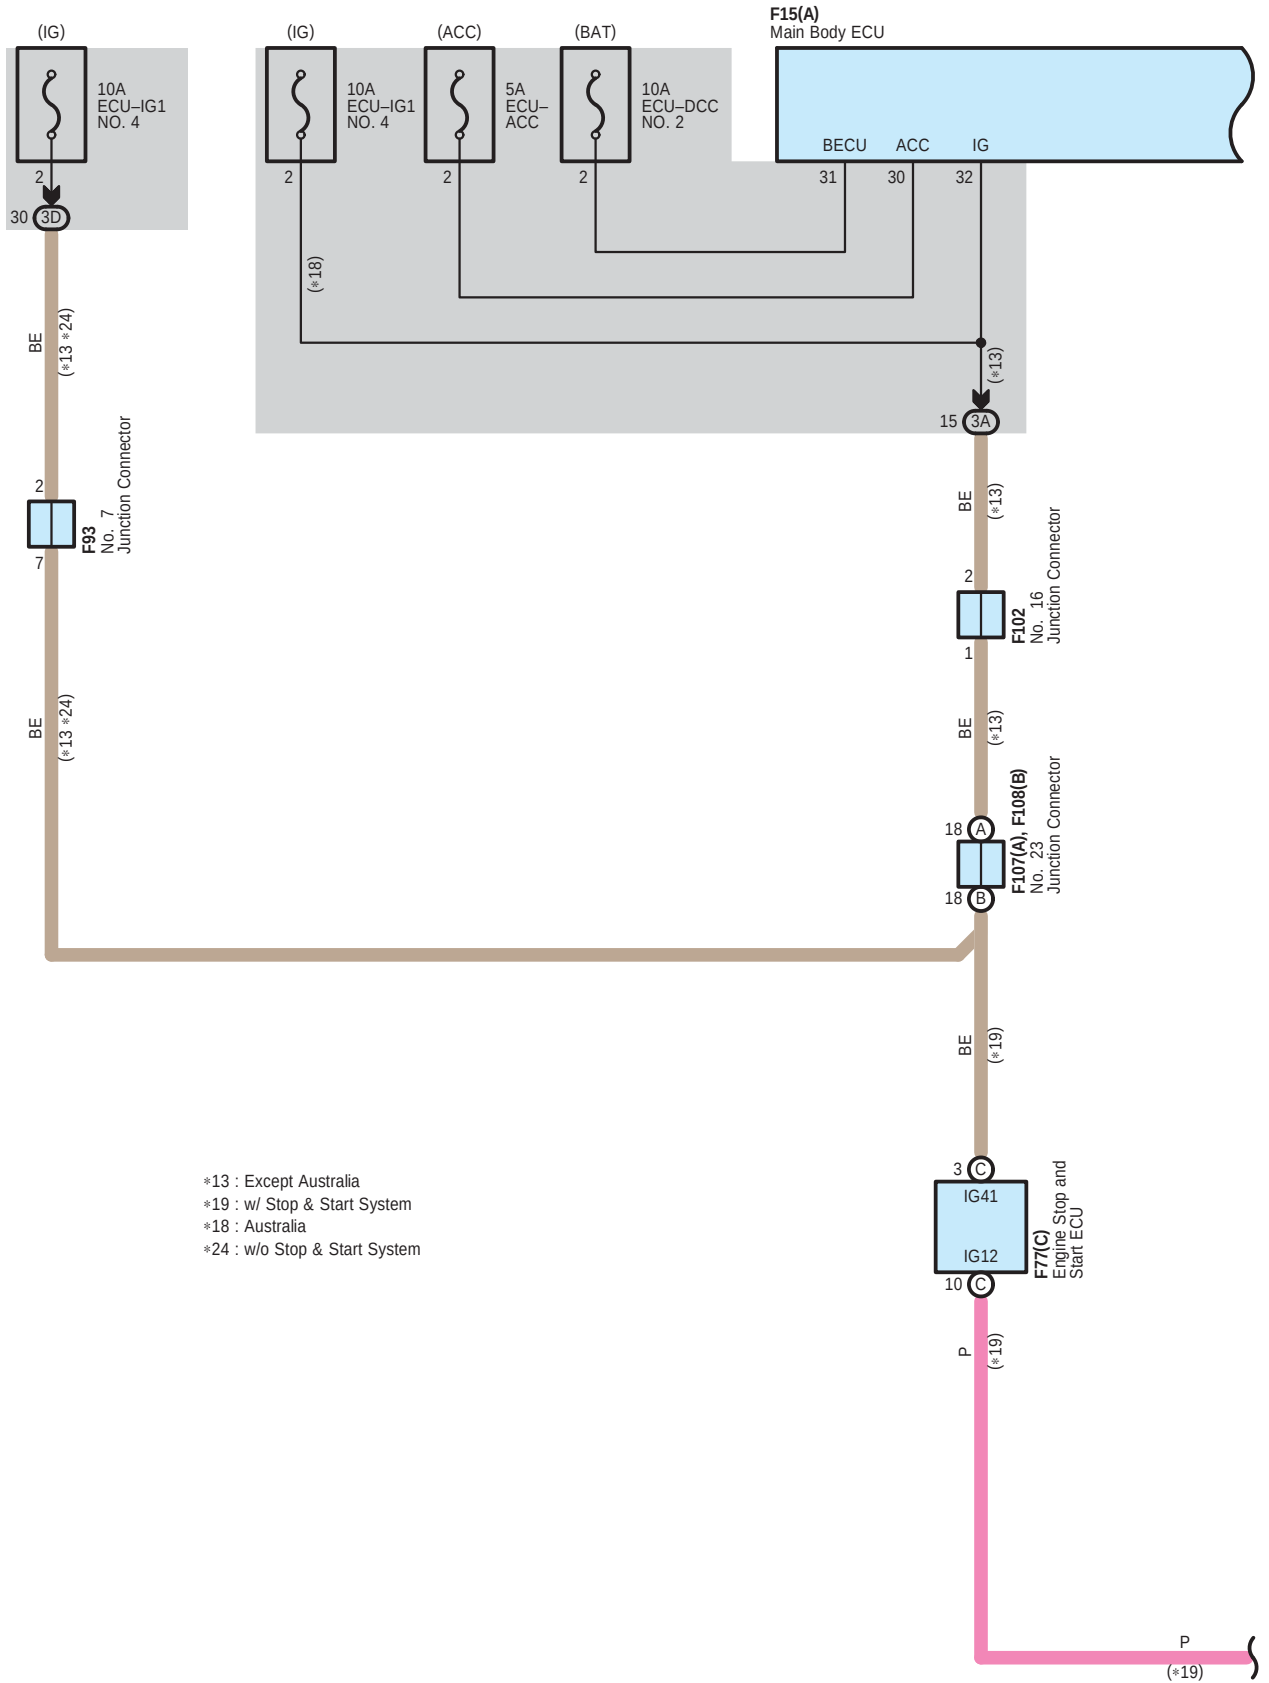 


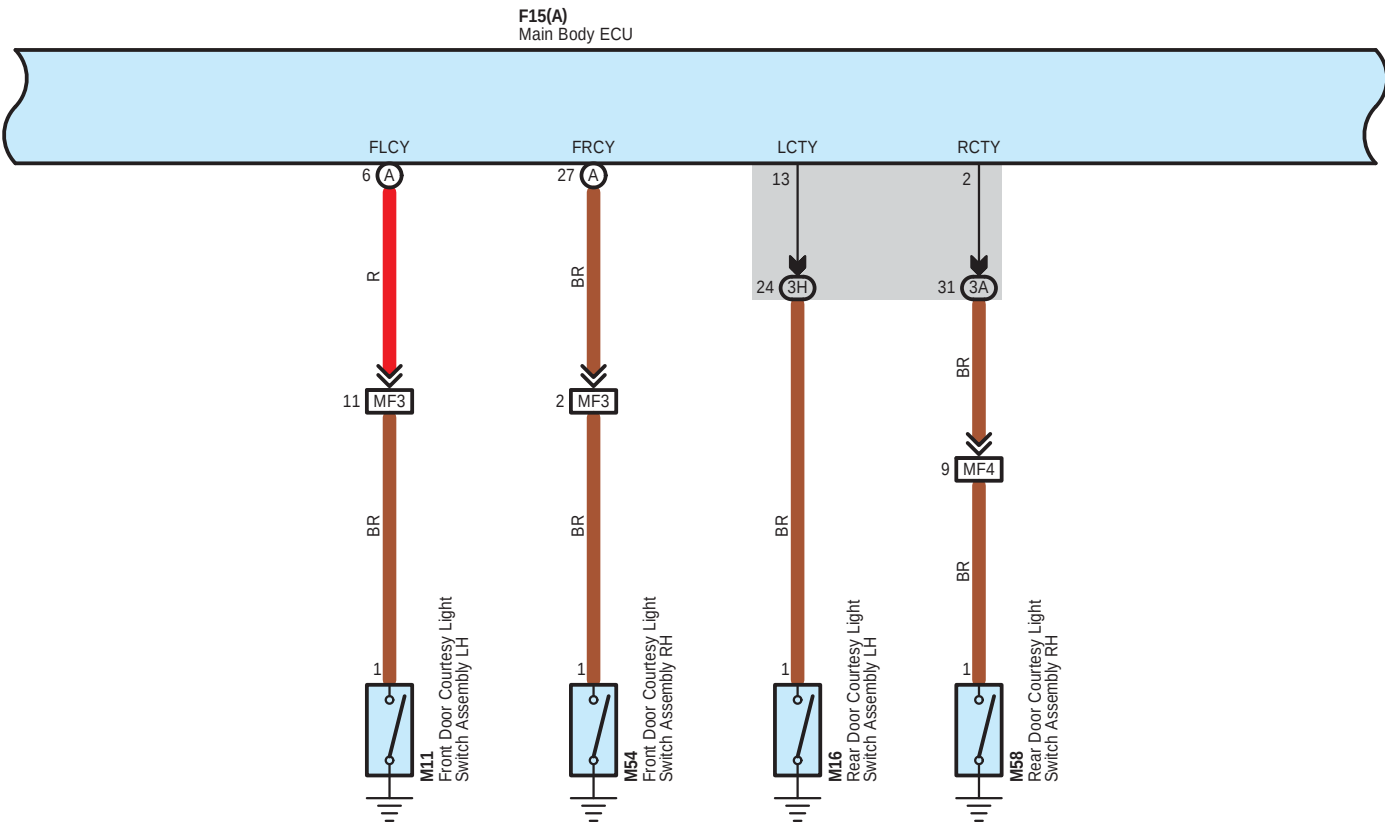


Wireless Door Lock Control (RHD w/o Entry & Start System)

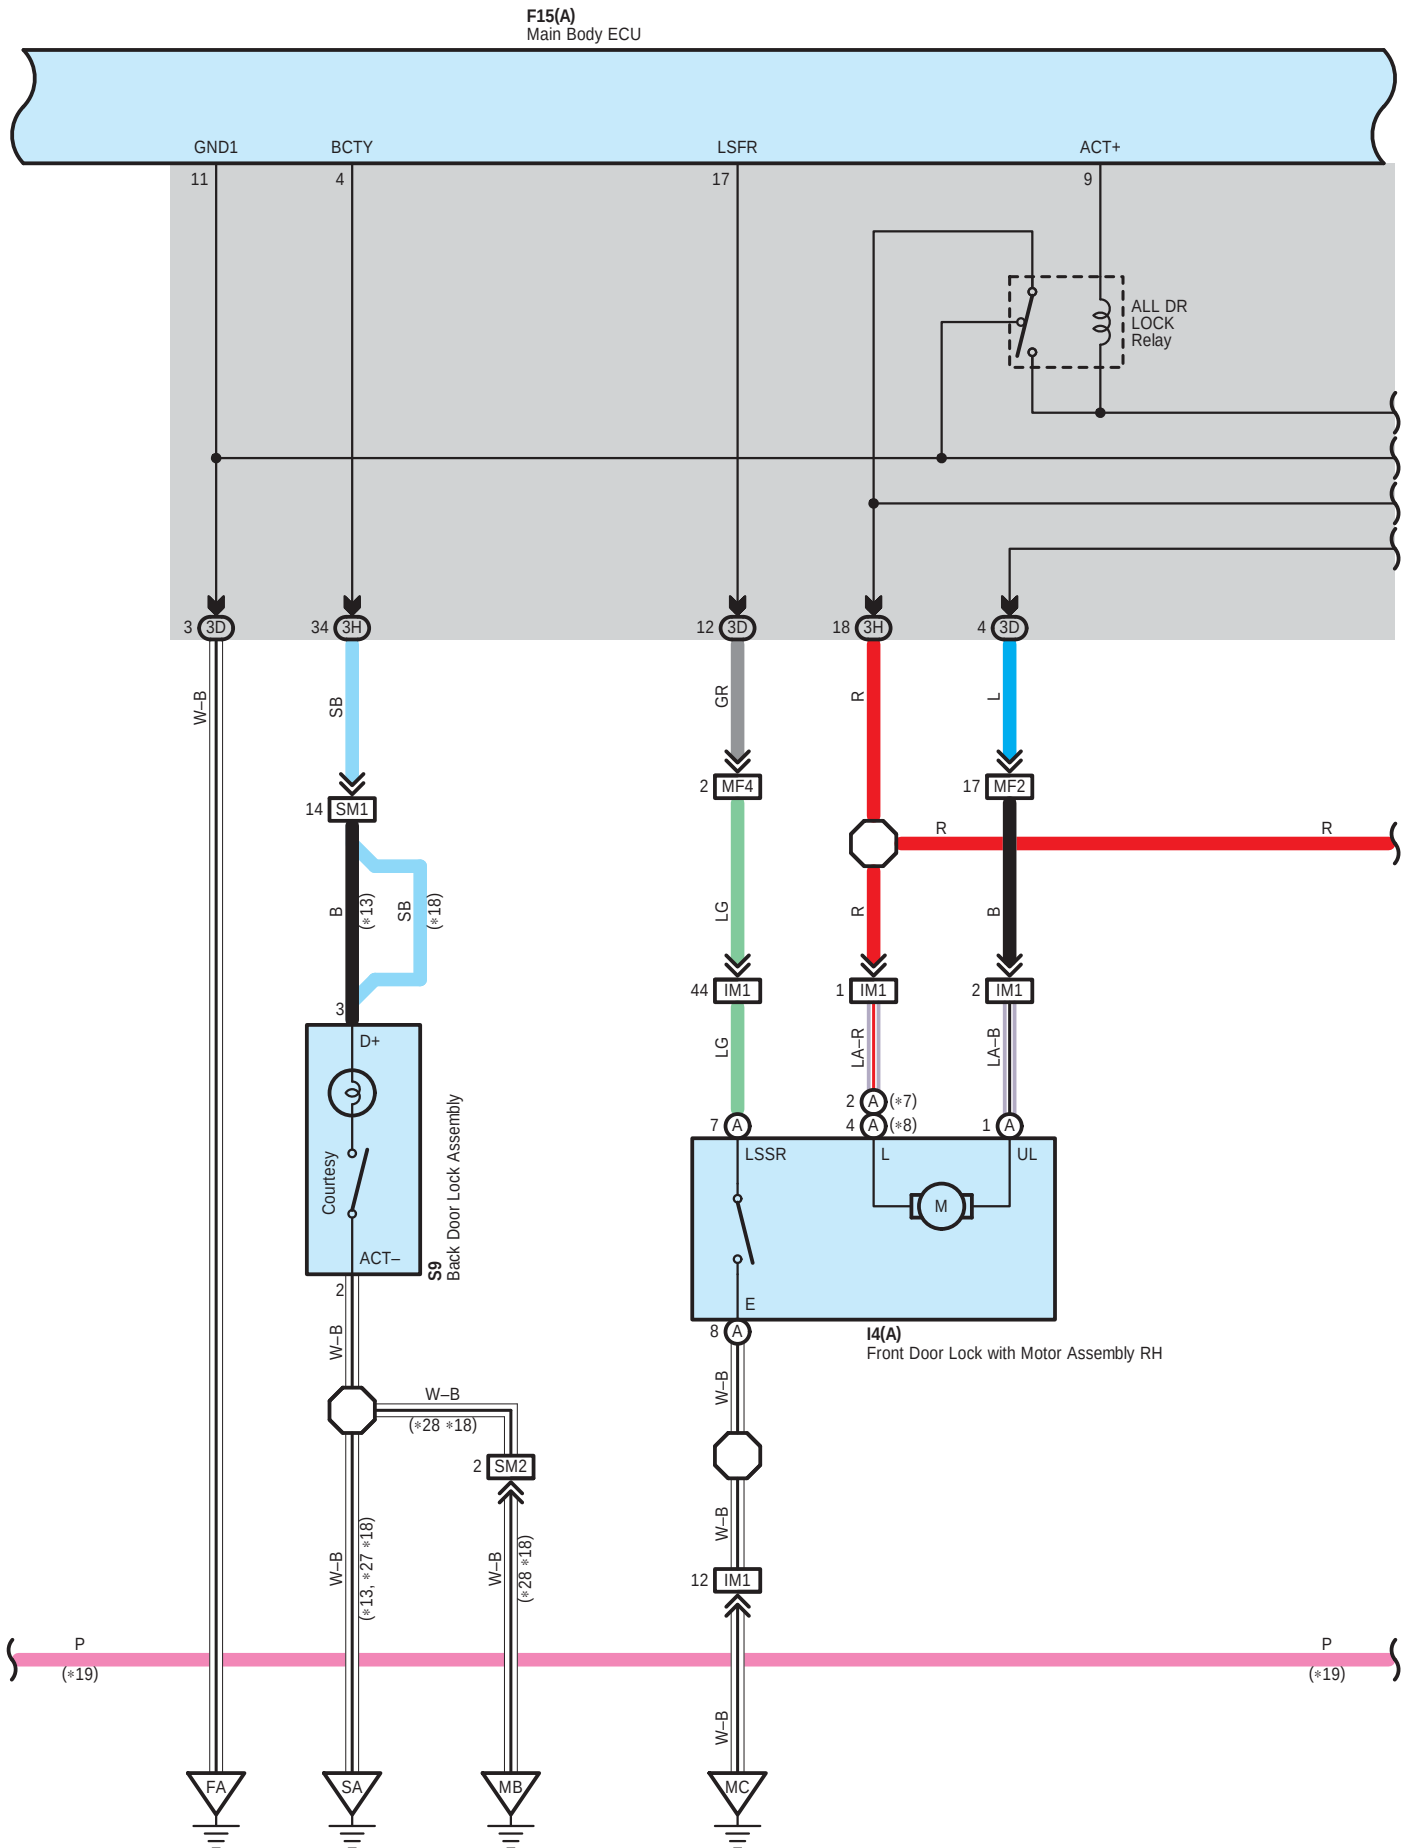


Wireless Door Lock Control (RHD w/o Entry & Start System)

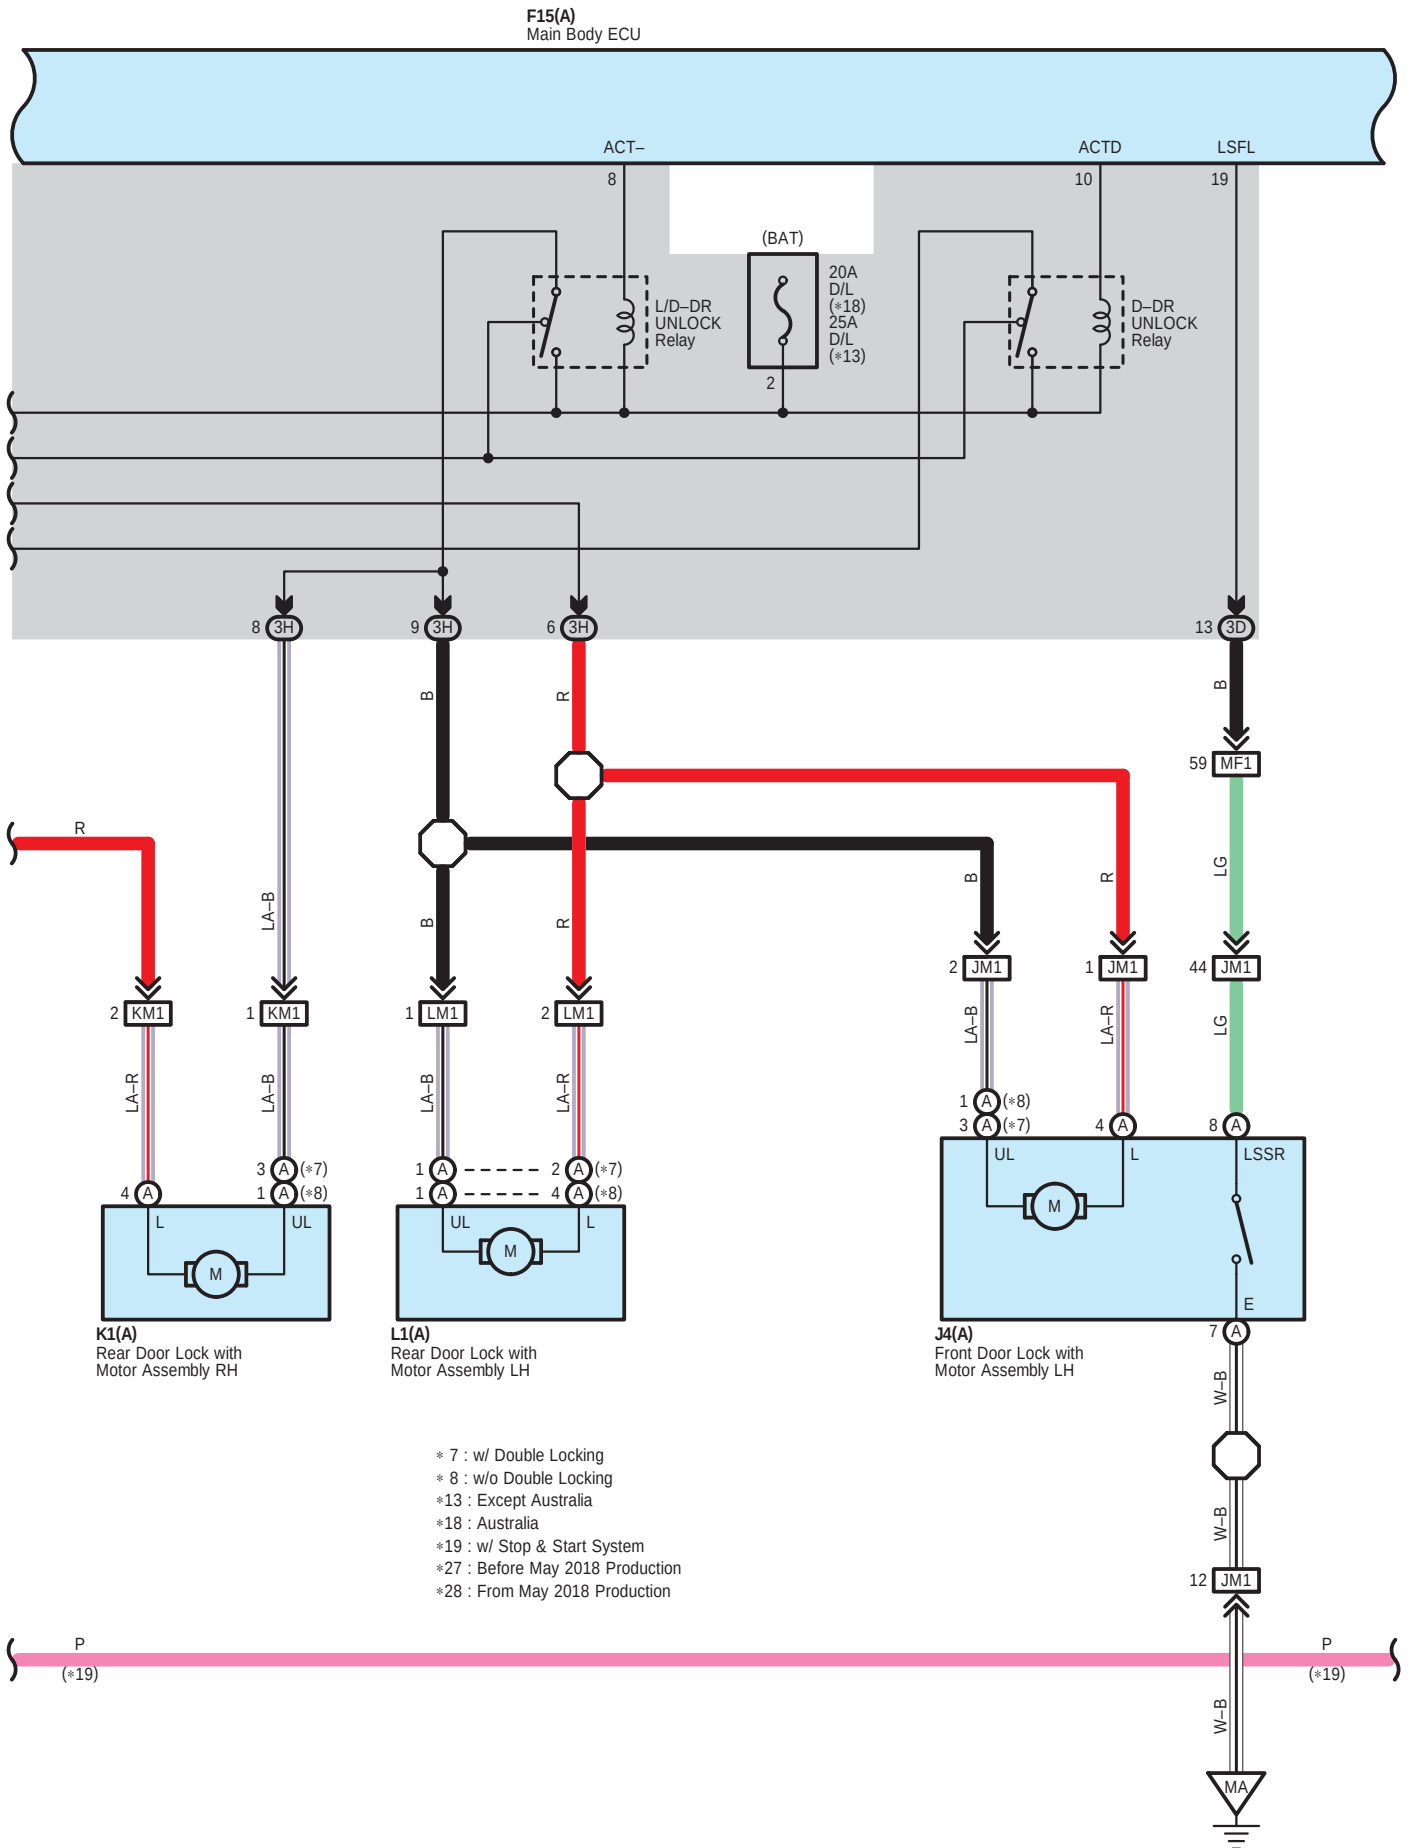

 
Wireless Door Lock Control (RHD w/o Entry & Start System)

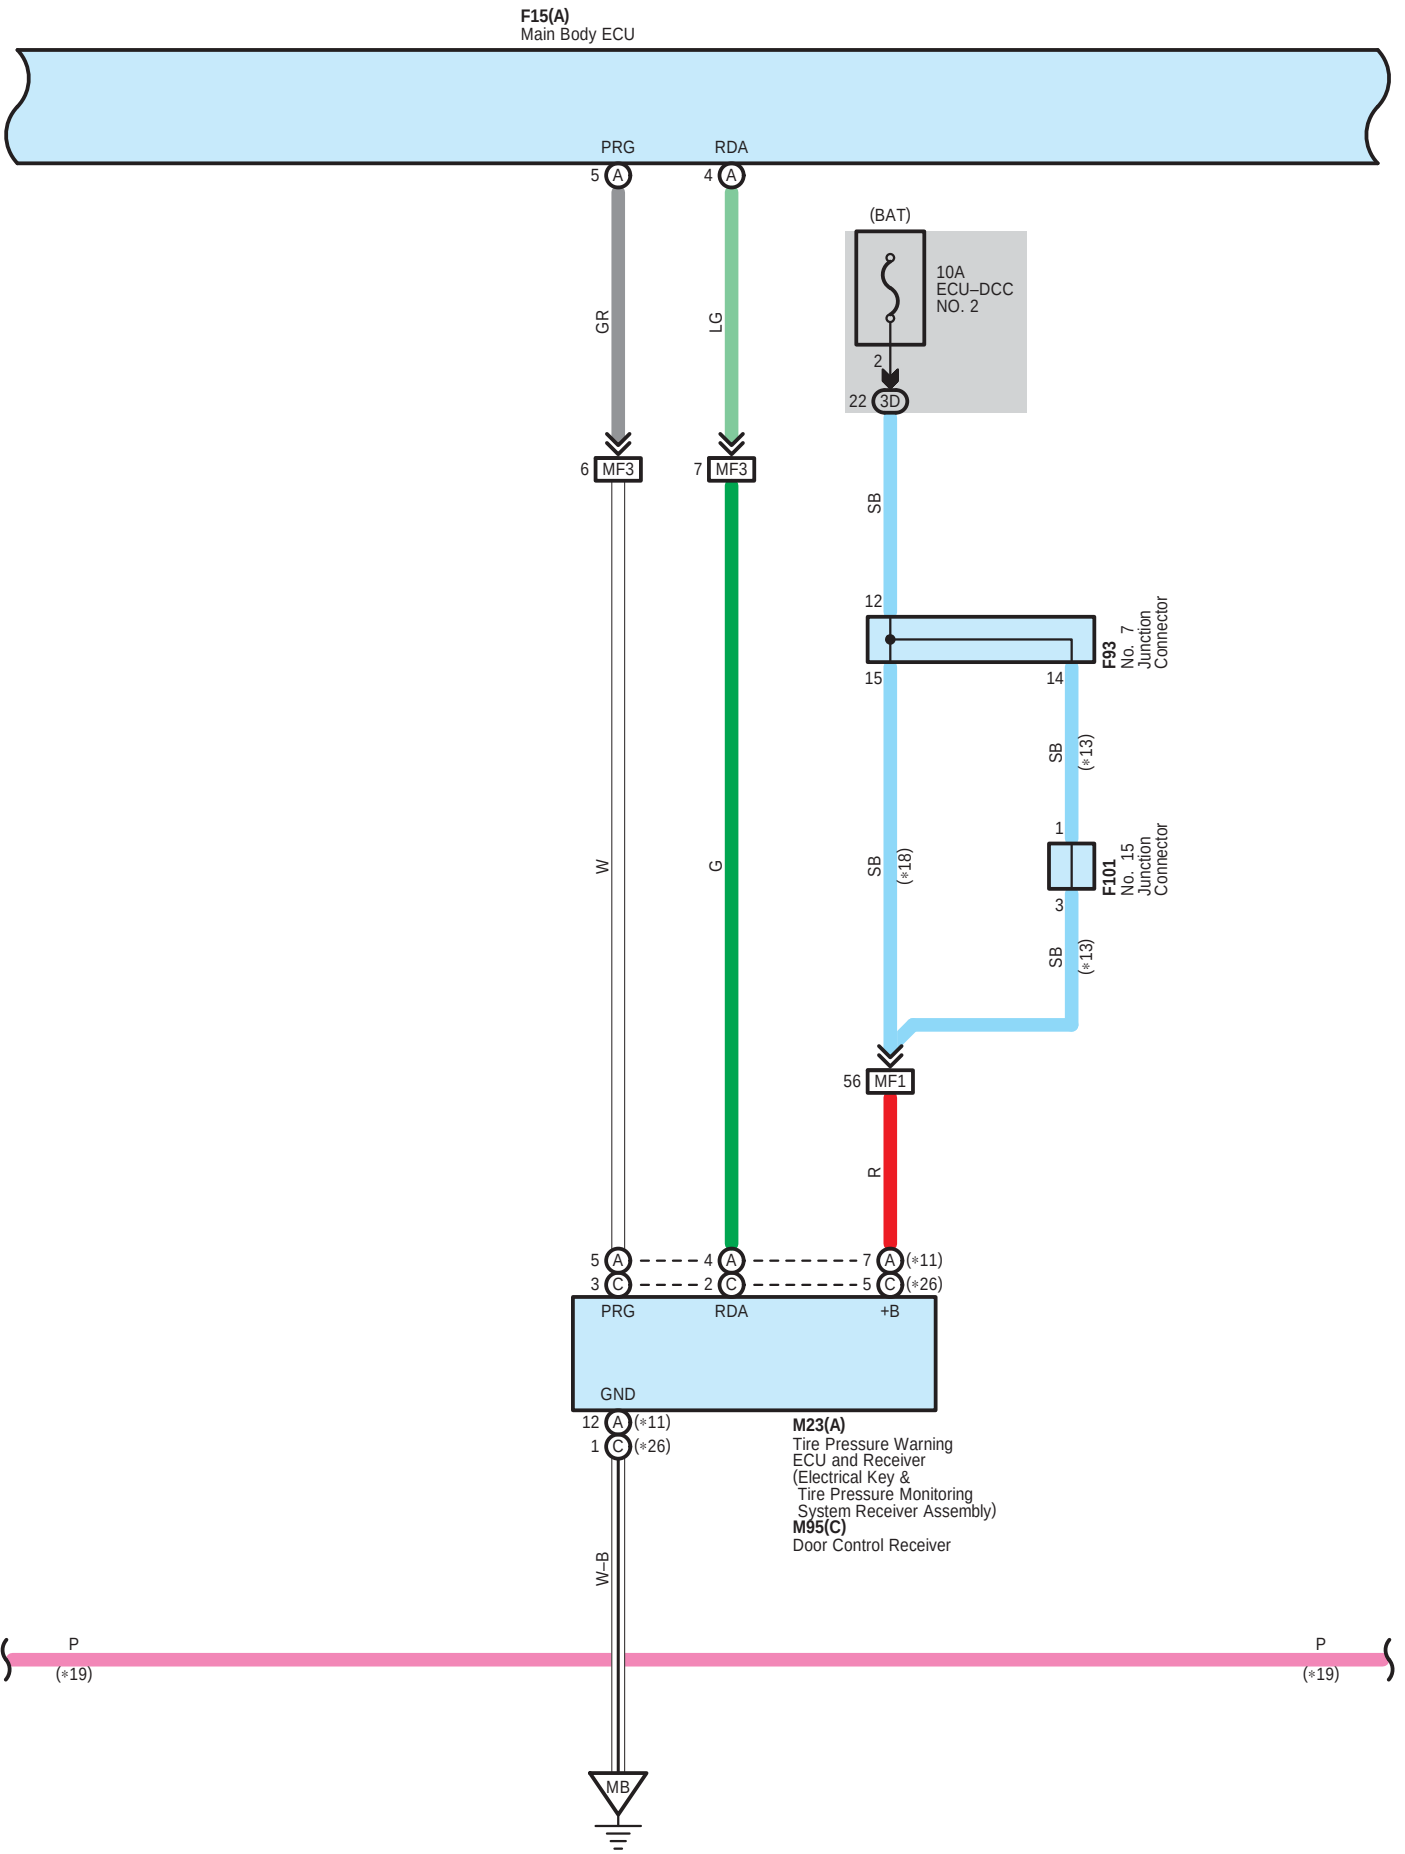

 
Wireless Door Lock Control (RHD w/o Entry & Start System)

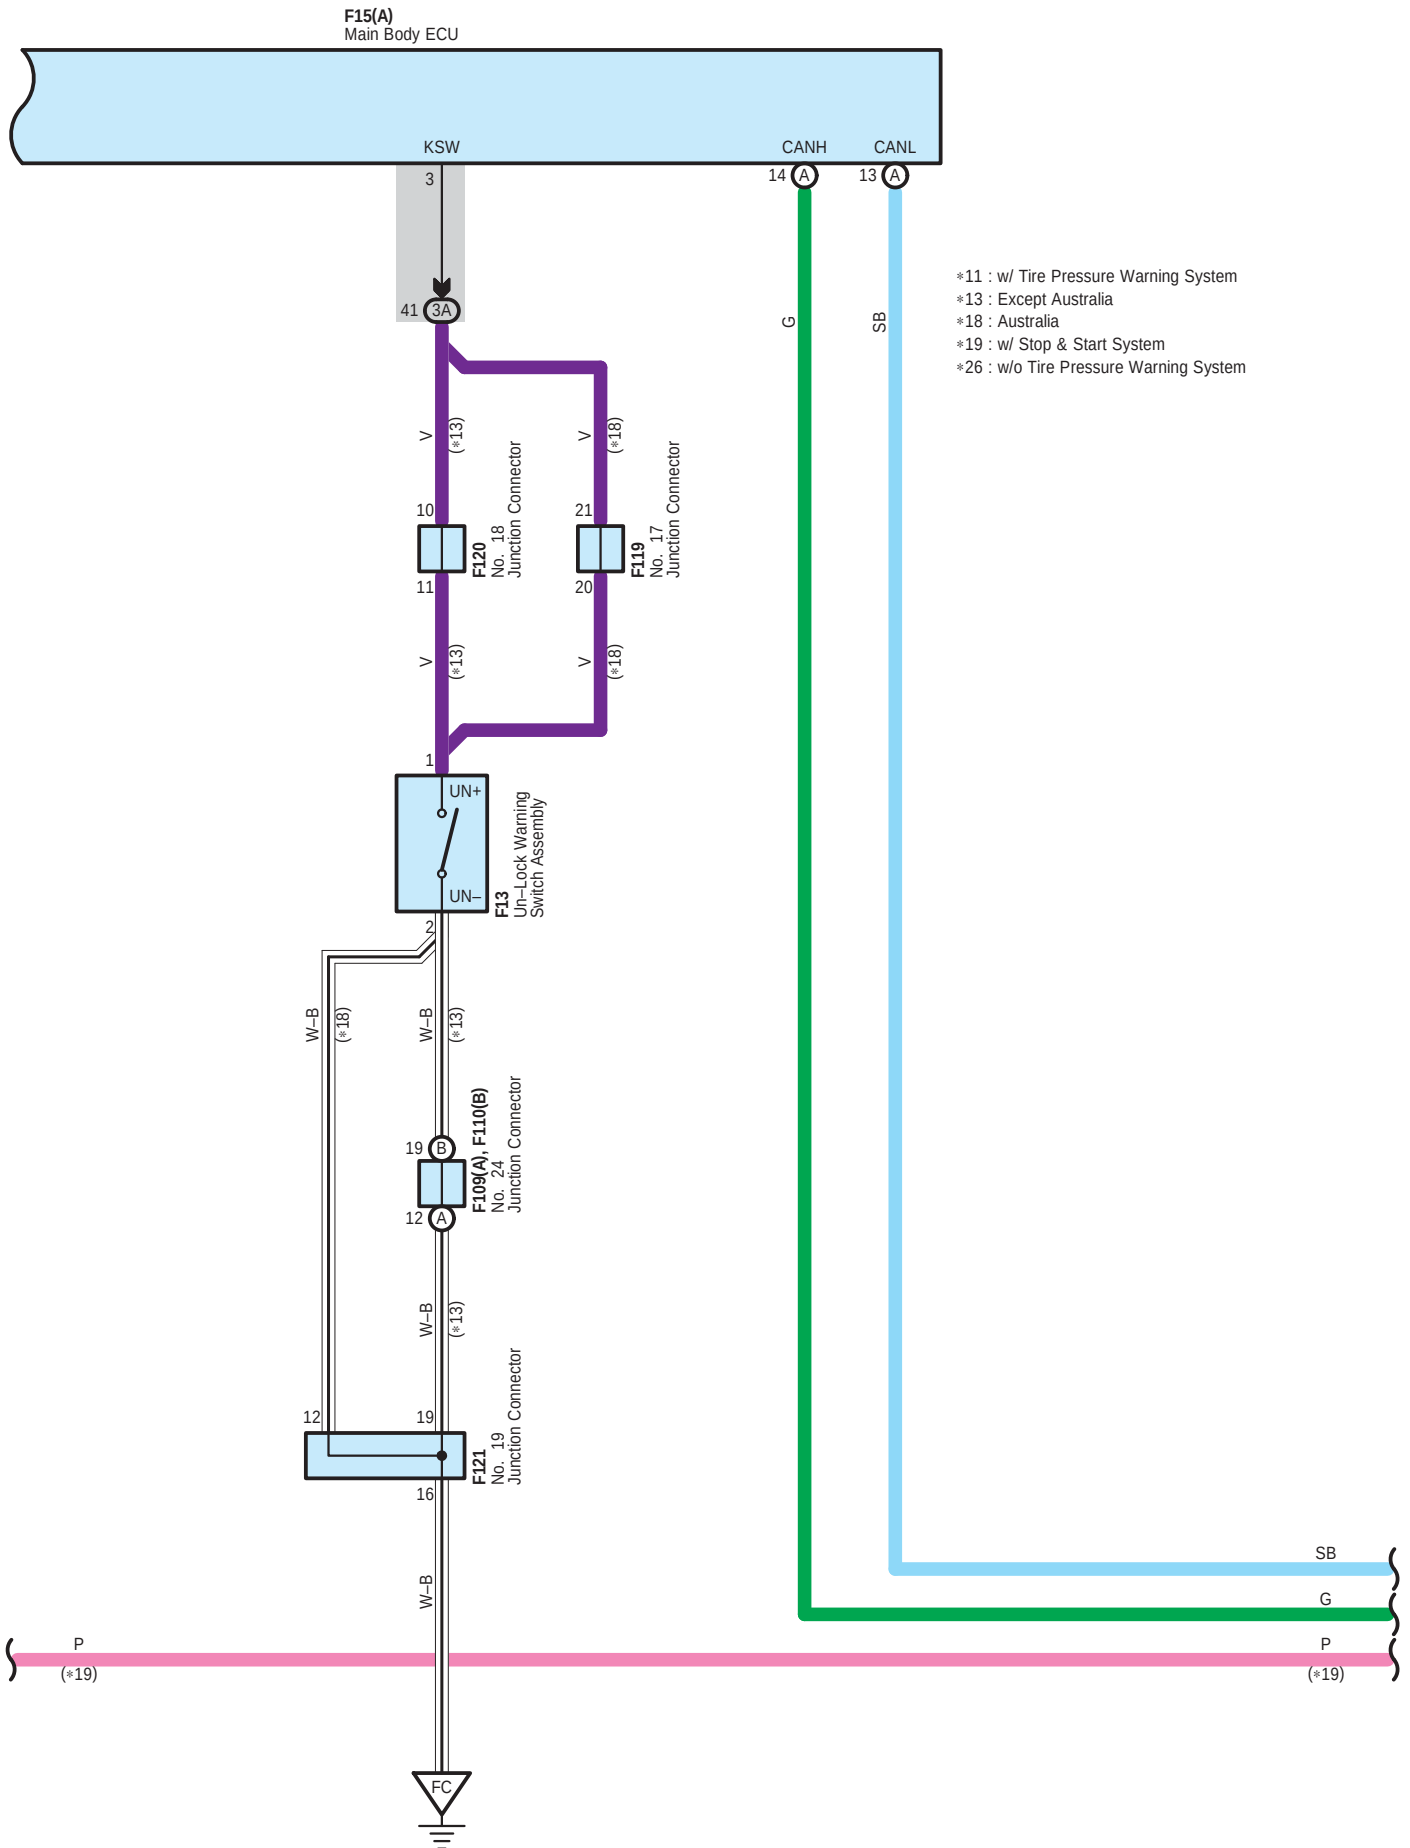

 Wireless Door Lock Control (RHD w/o Entry & Start System)

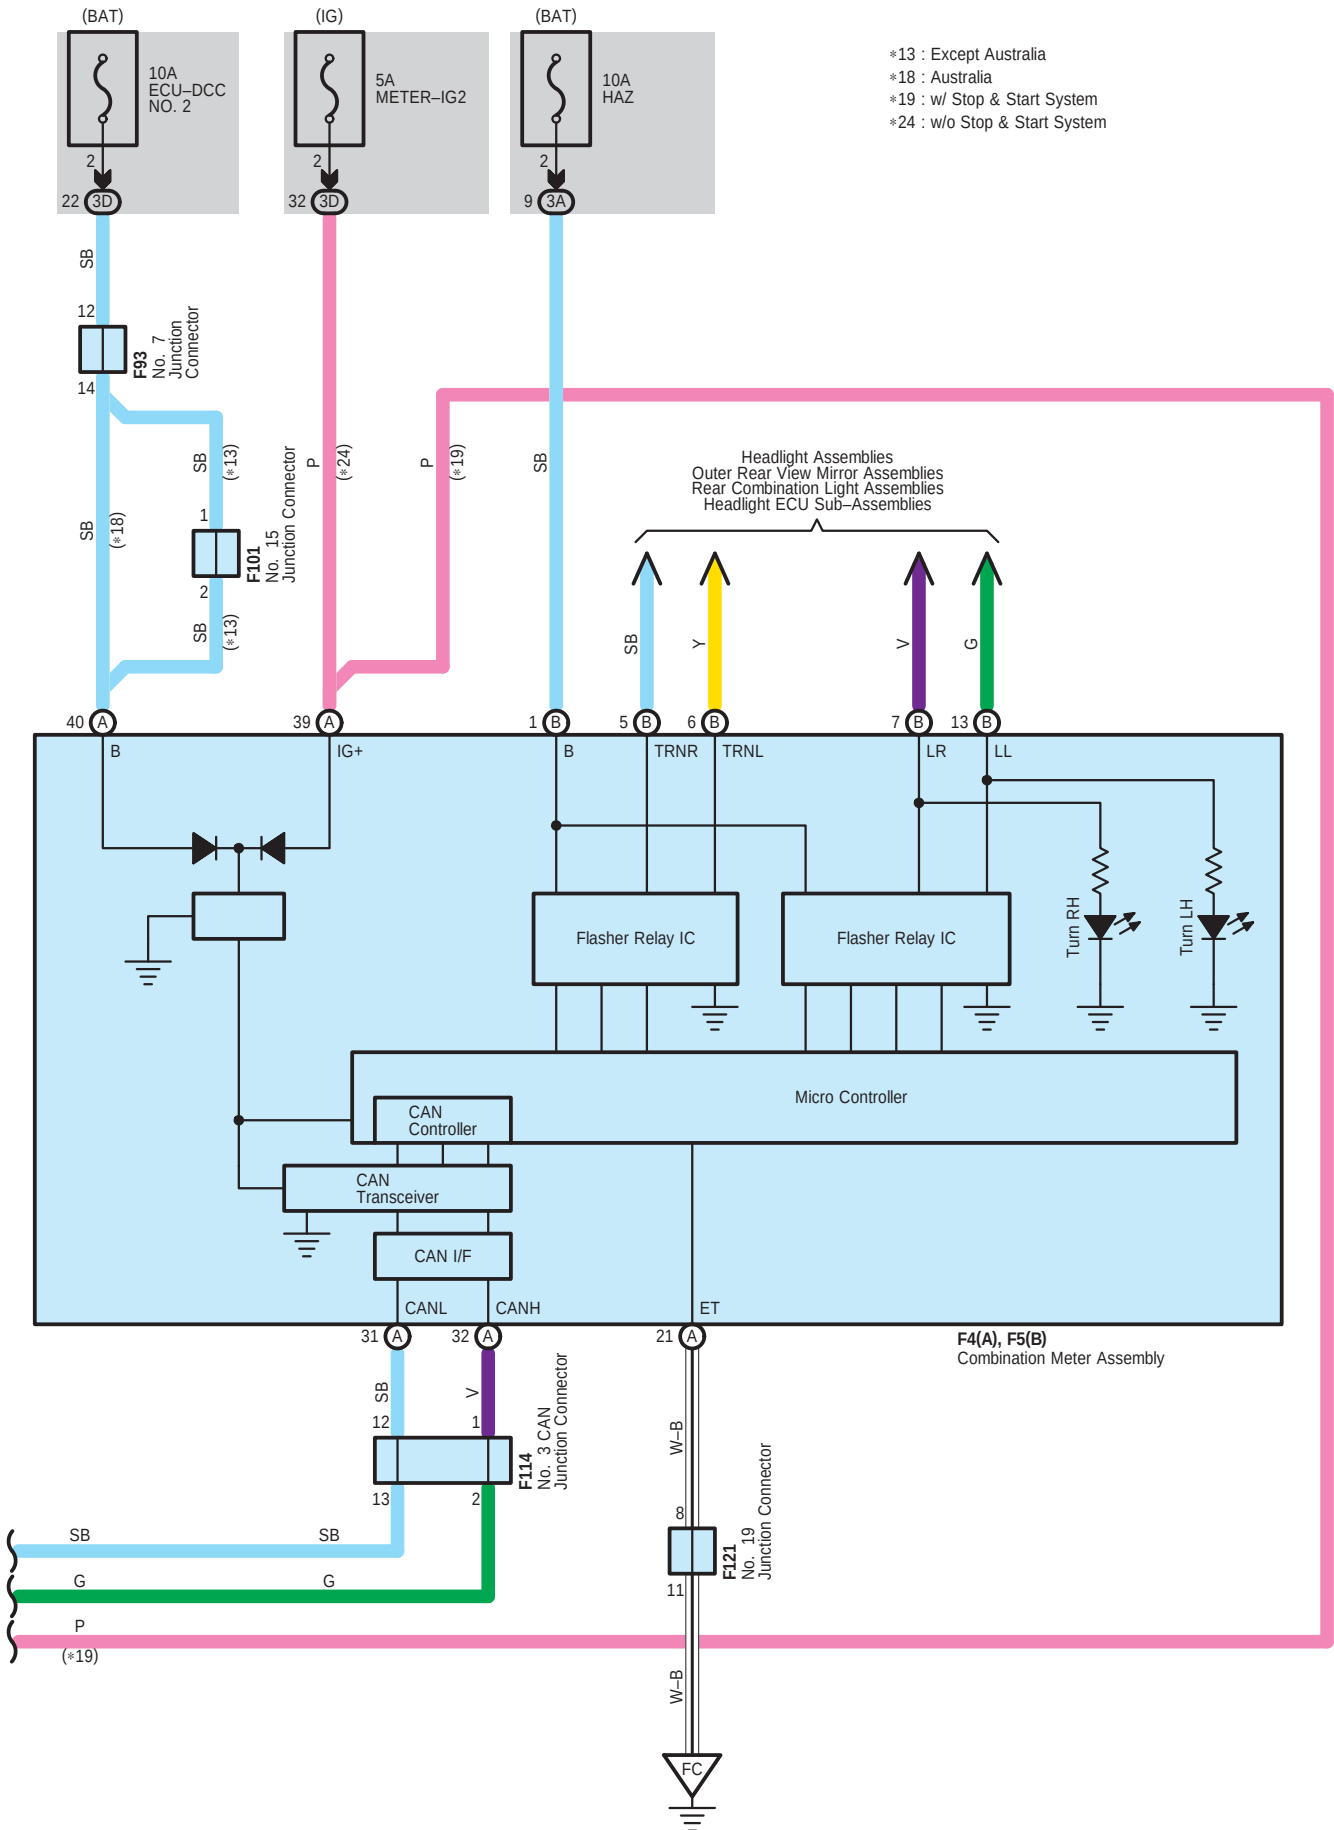


F4
Black

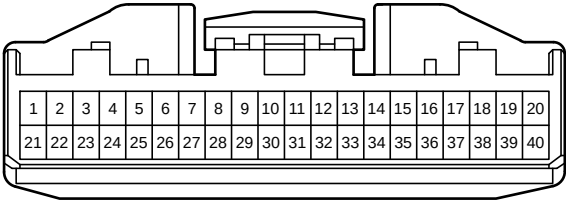 

90980-12557

 F5
Black

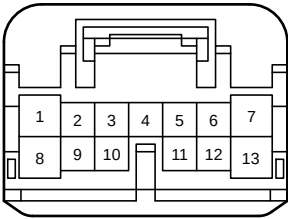


90980-12767

F13
White




90980-12063

 F15
White

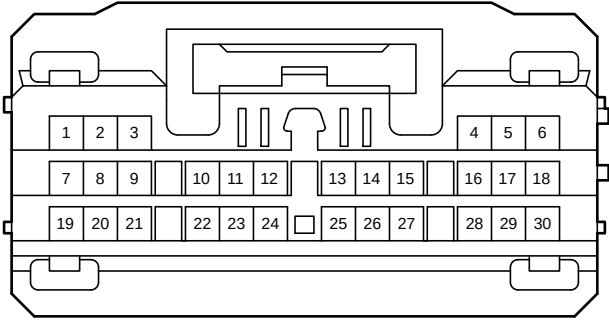


90980-12909

 F77
Black

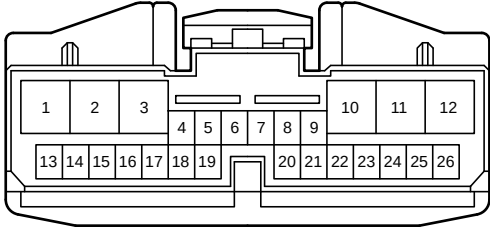


82824-12510

 F93
Black

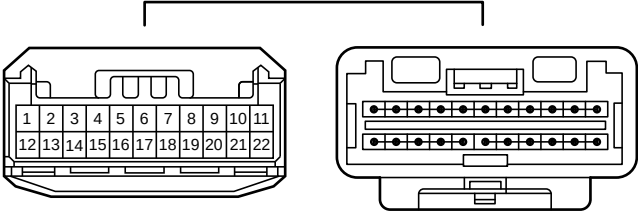


90980-12B54

 F101
Black




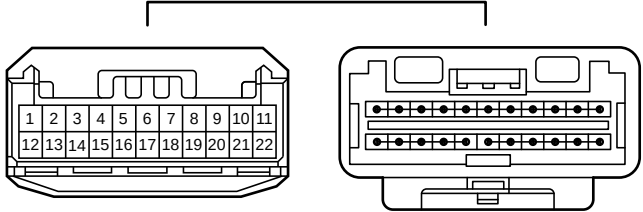


90980-12B54

 
F102
Black




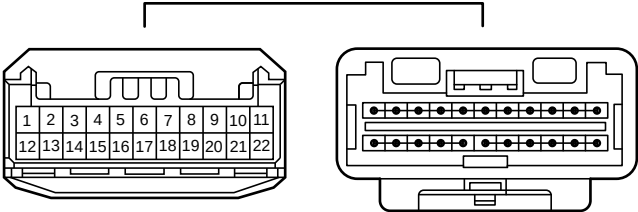


90980-12B54

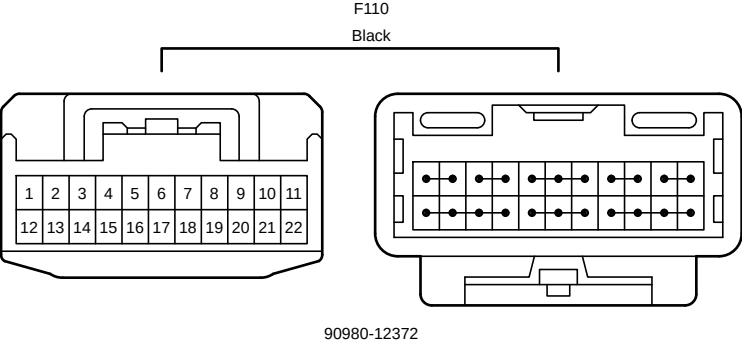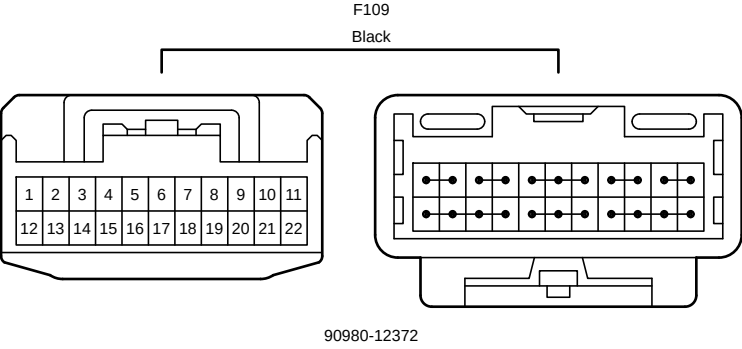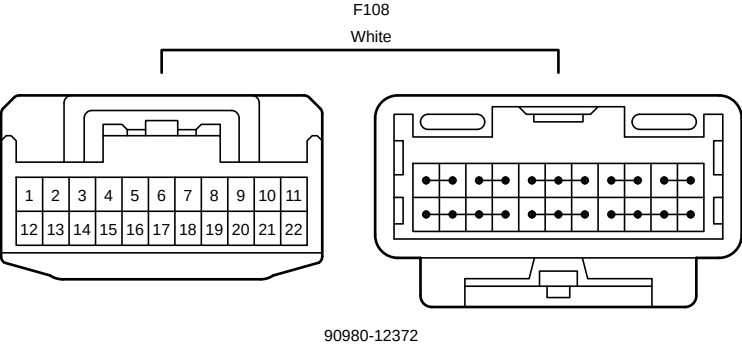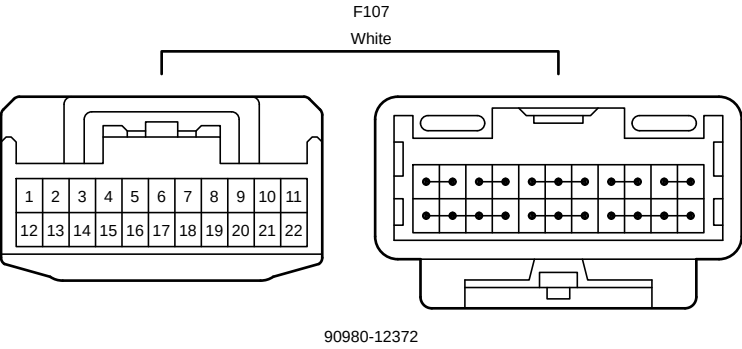    

     
Wireless Door Lock Control (RHD w/o Entry & Start System)

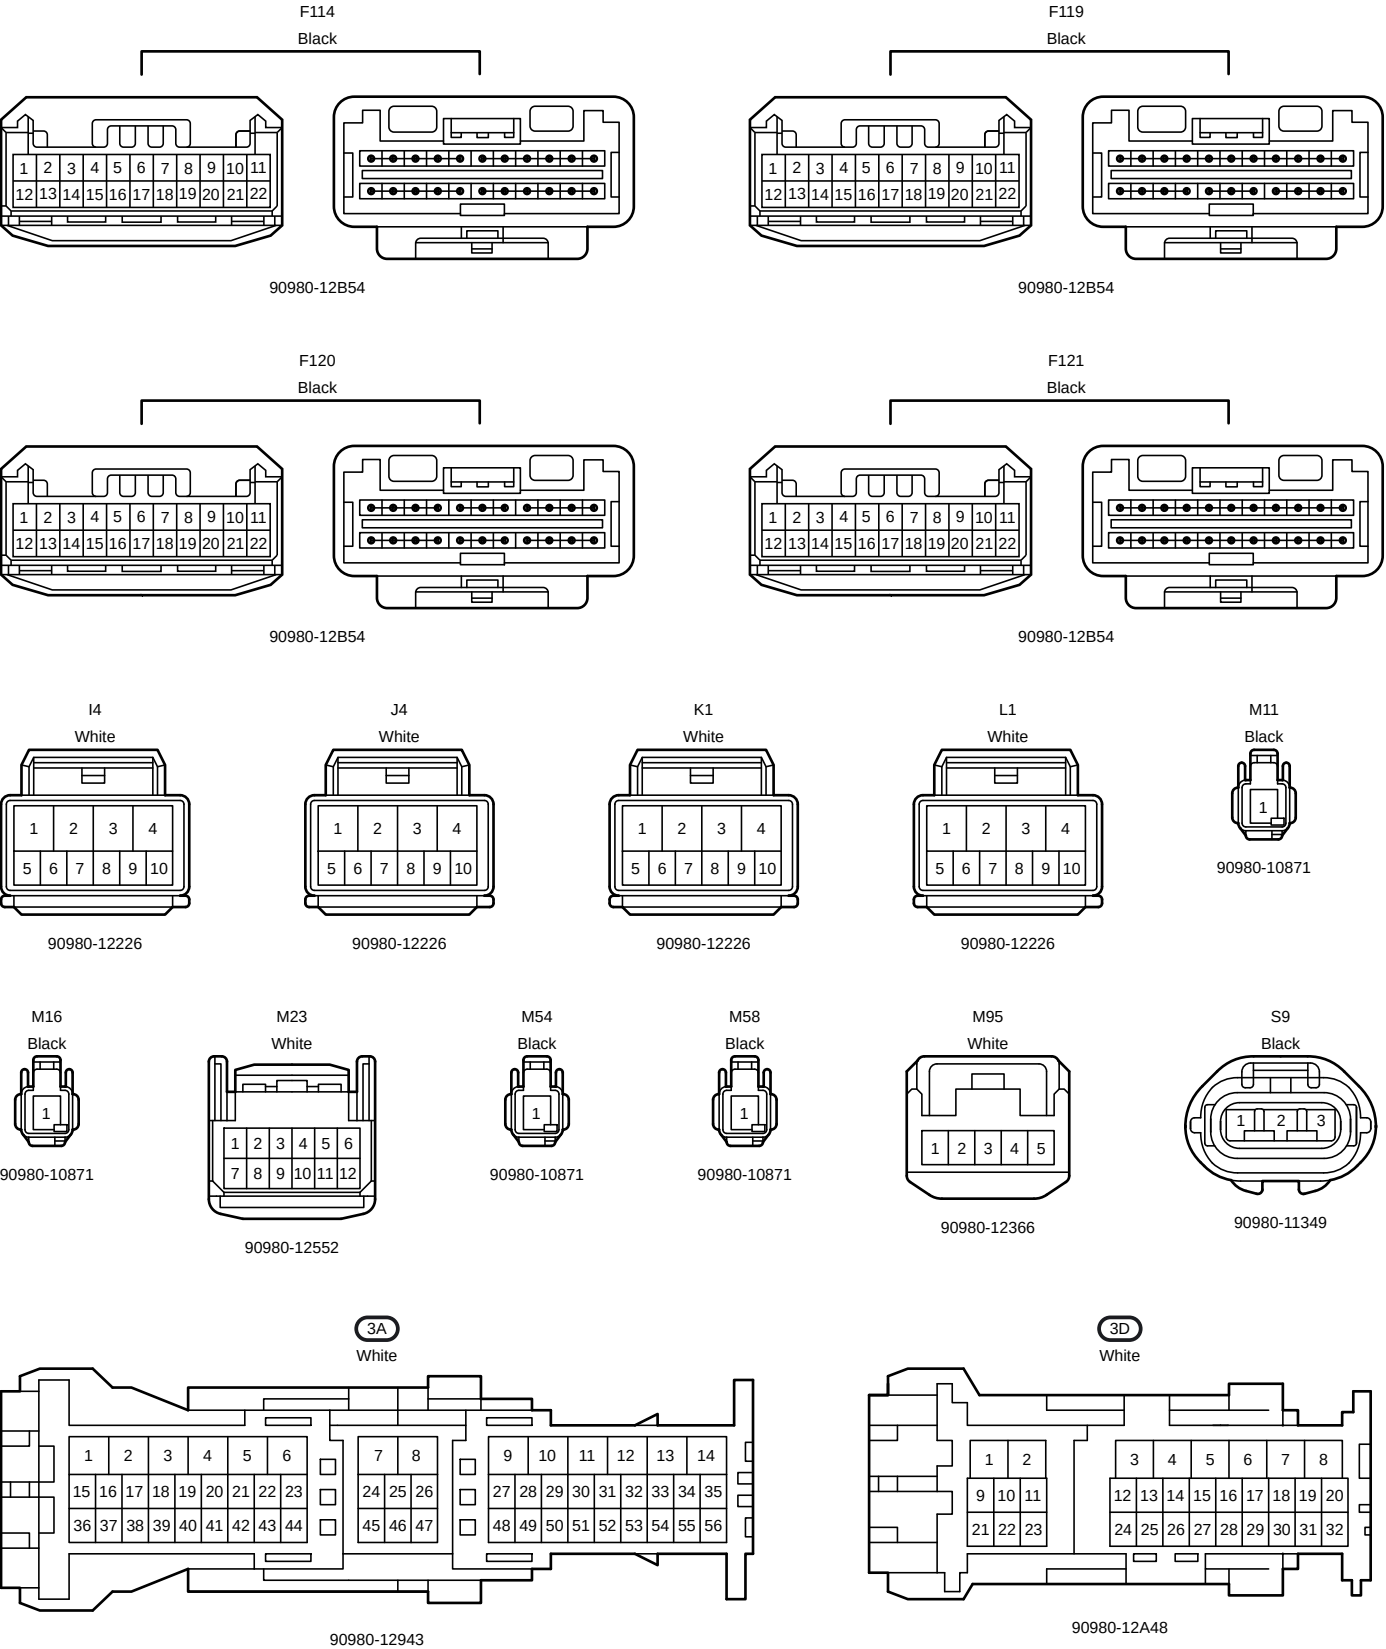

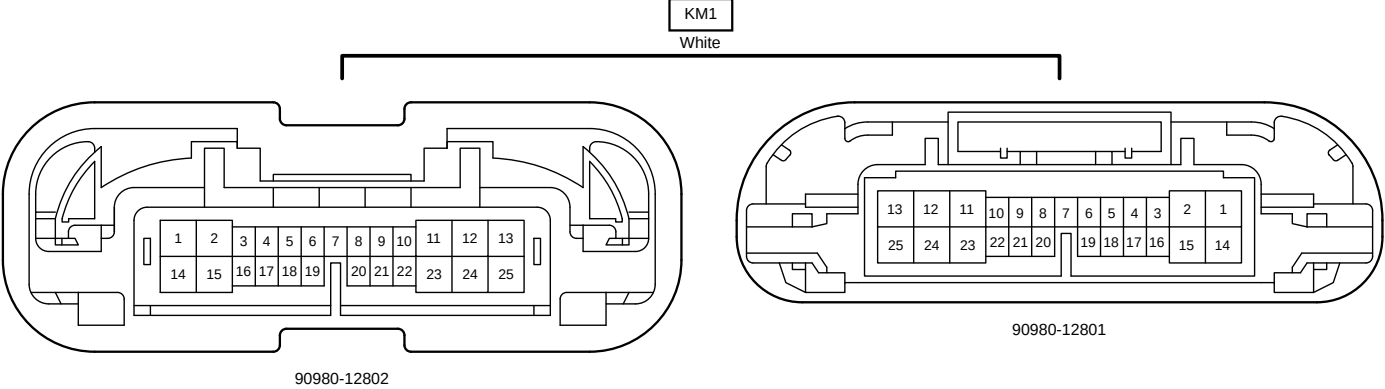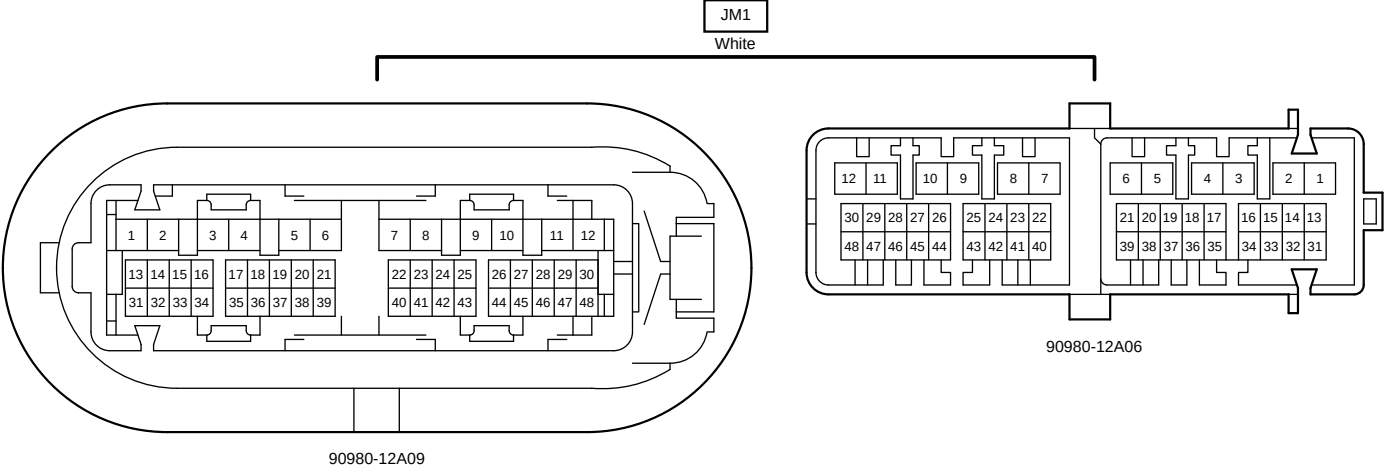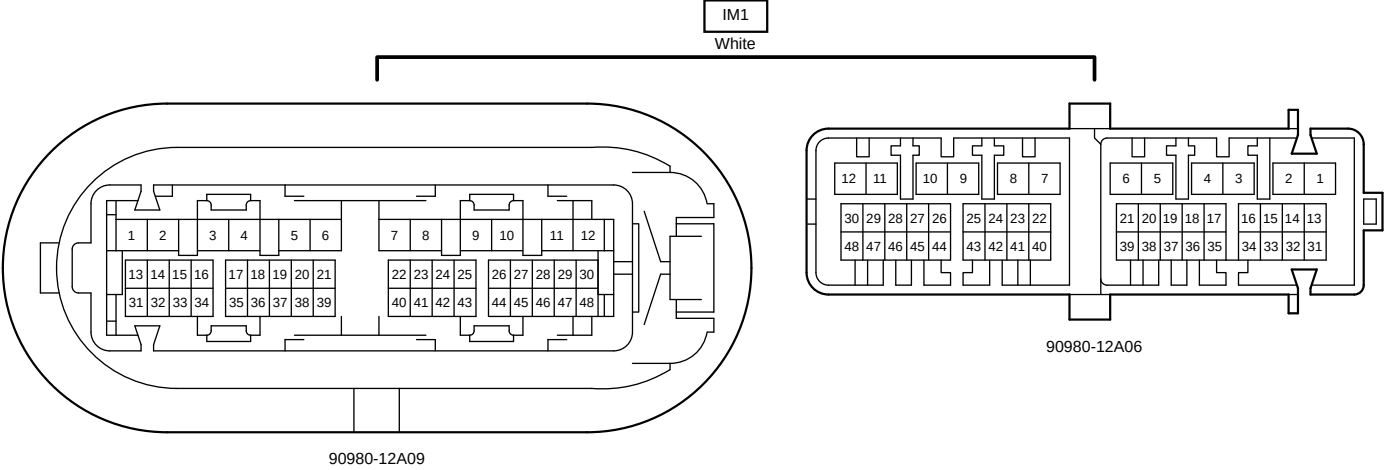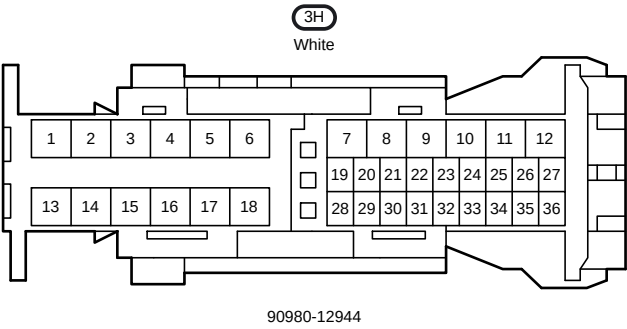


Wireless Door Lock Control (RHD w/o Entry & Start System)

 LM1
White

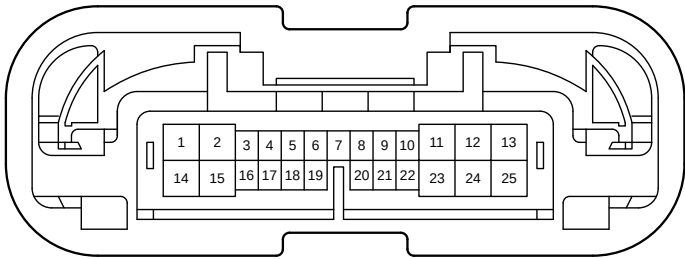


90980-12802

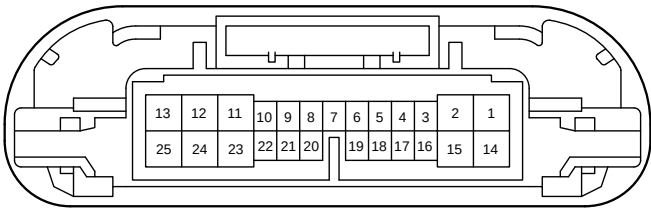 


90980-12801

 MF1
White

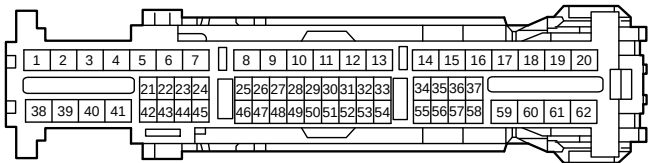


90980-12B22

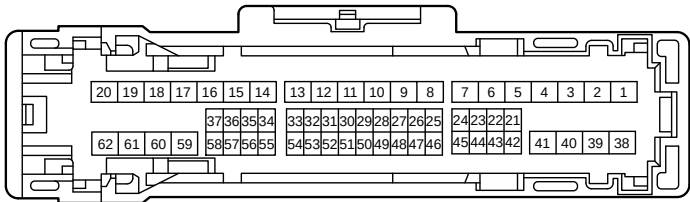 


90980-12B21

 MF2
White

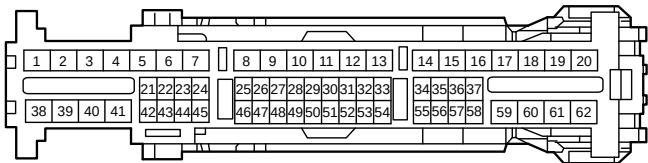


90980-12B22

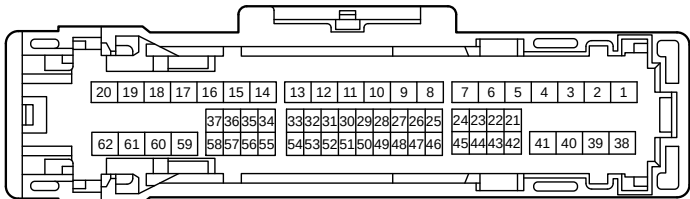 


90980-12B21

 MF3
White

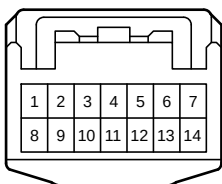


90980-12370

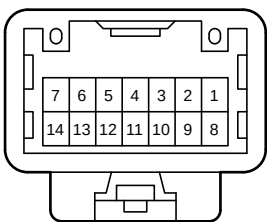 


90980-12369

 MF4
White

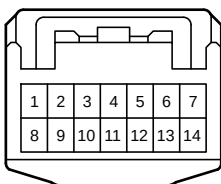

90980-12370

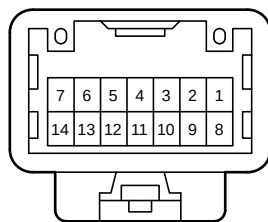 

90980-12369

