



Position of Parts in Engine Compartment <LHD 1AZ-FE>

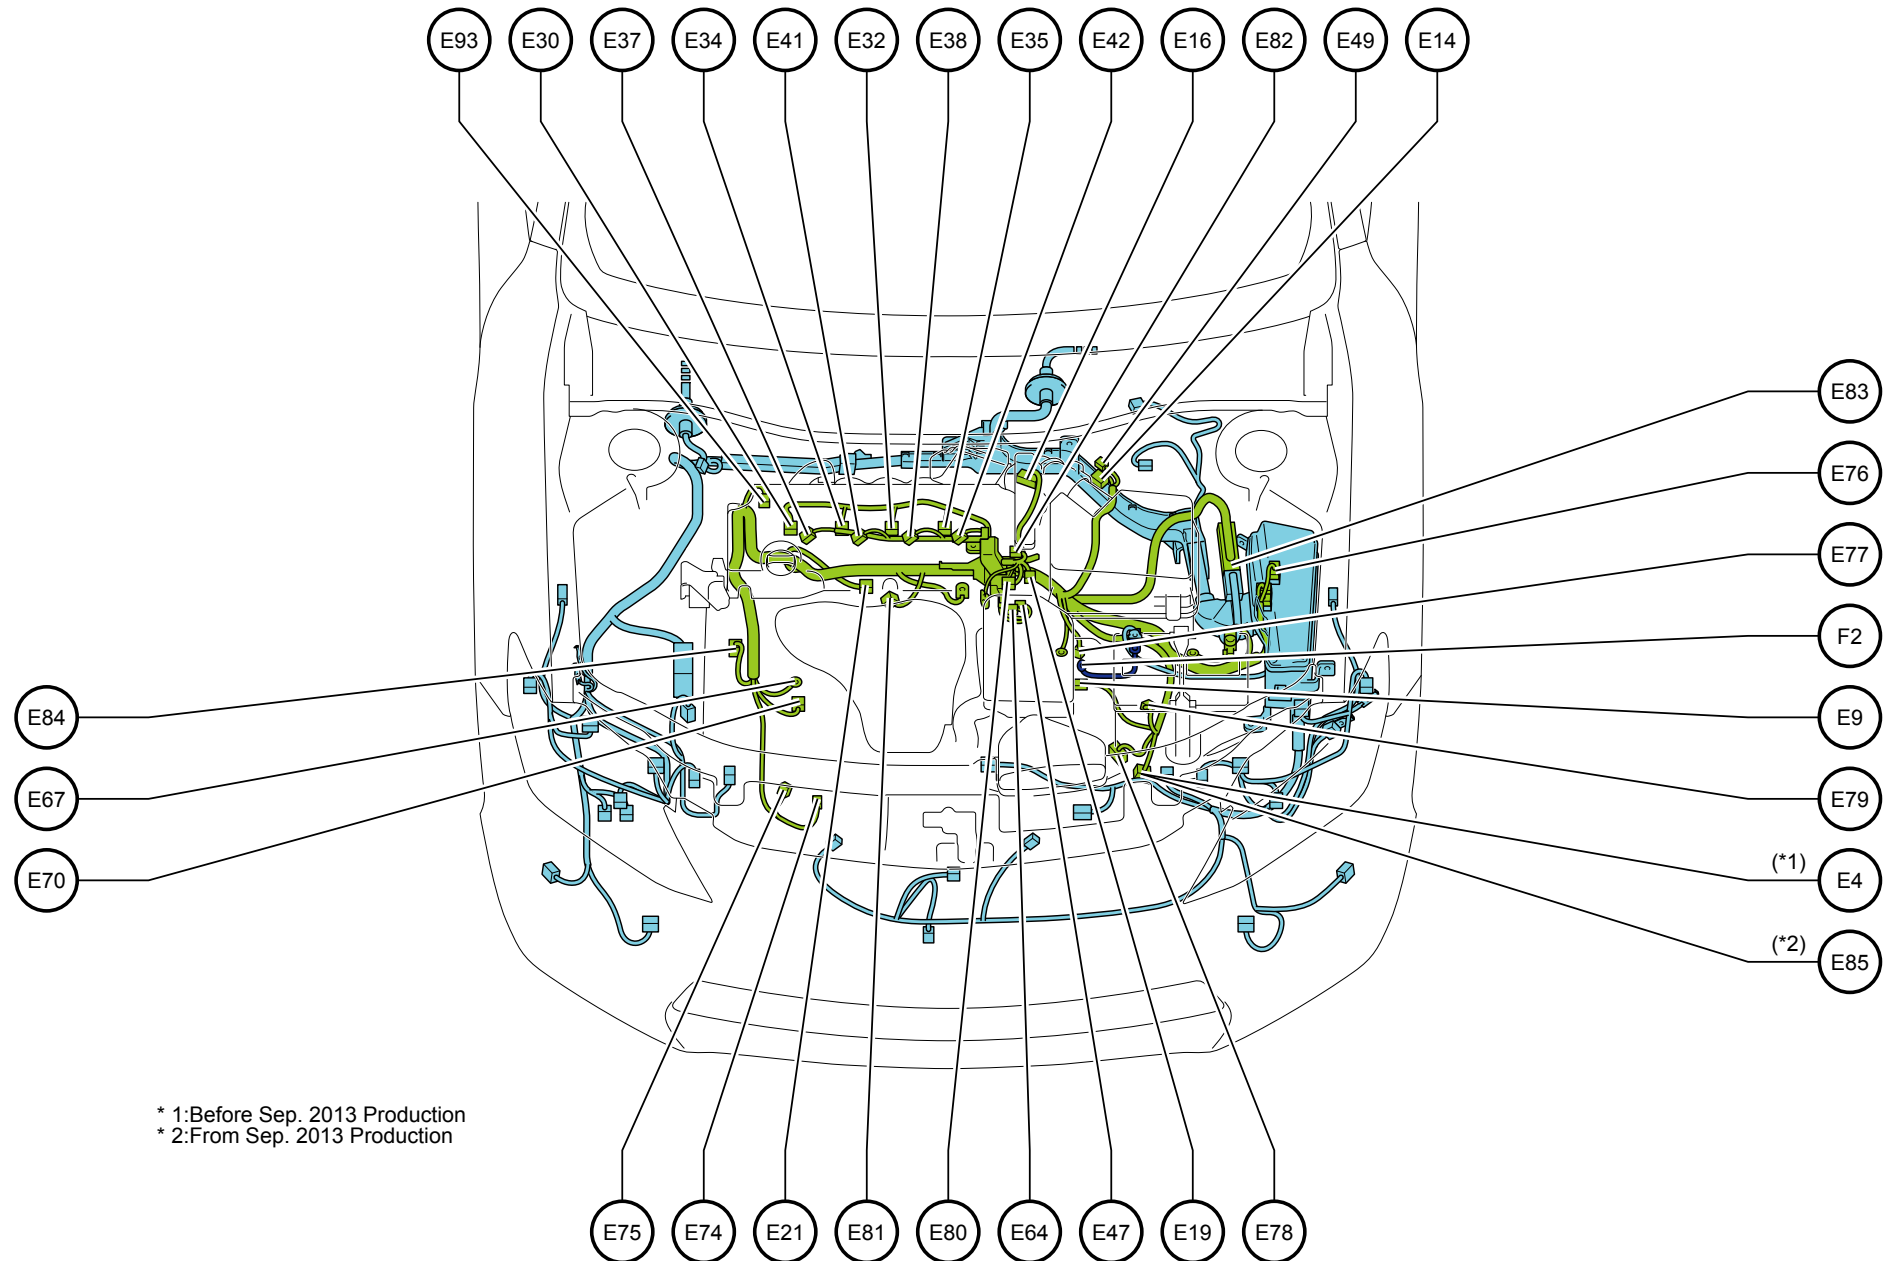

- E 4 Park/Neutral Position Switch Assembly
 - E 9 Starter Assembly
 - E 14 Intake Mass Air Flow Meter Sub-Assembly
 - E 16 Throttle Body Assembly with Motor
 - E 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
 - E 21 Oxygen Sensor (Bank 1 Sensor 2)
 - E 30 Fuel Injector Assembly No. 1
 - E 32 Fuel Injector Assembly No. 3
 - E 34 Fuel Injector Assembly No. 2
 - E 35 Fuel Injector Assembly No. 4
 - E 37 Ignition Coil Assembly No. 1
 - E 38 Ignition Coil Assembly No. 3
 - E 41 Ignition Coil Assembly No. 2
 - E 42 Ignition Coil Assembly No. 4
 - E 47 E.F.I. Engine Coolant Temperature Sensor
 - E 49 Purge VSV
 - E 64 Engine Oil Pressure Switch Assembly
 - E 67 Generator Assembly
 - E 70 Generator Assembly
 - E 74 Cooler Compressor Assembly
 - E 75 Cooler Compressor Assembly
 - E 76 Junction Connector
 - E 77 Transmission Revolution Sensor (Counter Gear)
 - E 78 ECT Solenoid (Transmission Wire)
 - E 79 Transmission Revolution Sensor (Turbine)
 - E 80 Radio Setting Condenser (Ignition)
 - E 81 Knock Control Sensor (Bank 1)
 - E 82 Camshaft Position Sensor
 - E 83 ECM
 - E 84 Crank Position Sensor
 - E 85 Park/Neutral Position Switch Assembly
 - E 93 Camshaft Timing Oil Control Valve Assembly (Intake Side)
-
- F 2 Starter Assembly

Position of Parts in Engine Compartment <LHD 1AZ-FE>

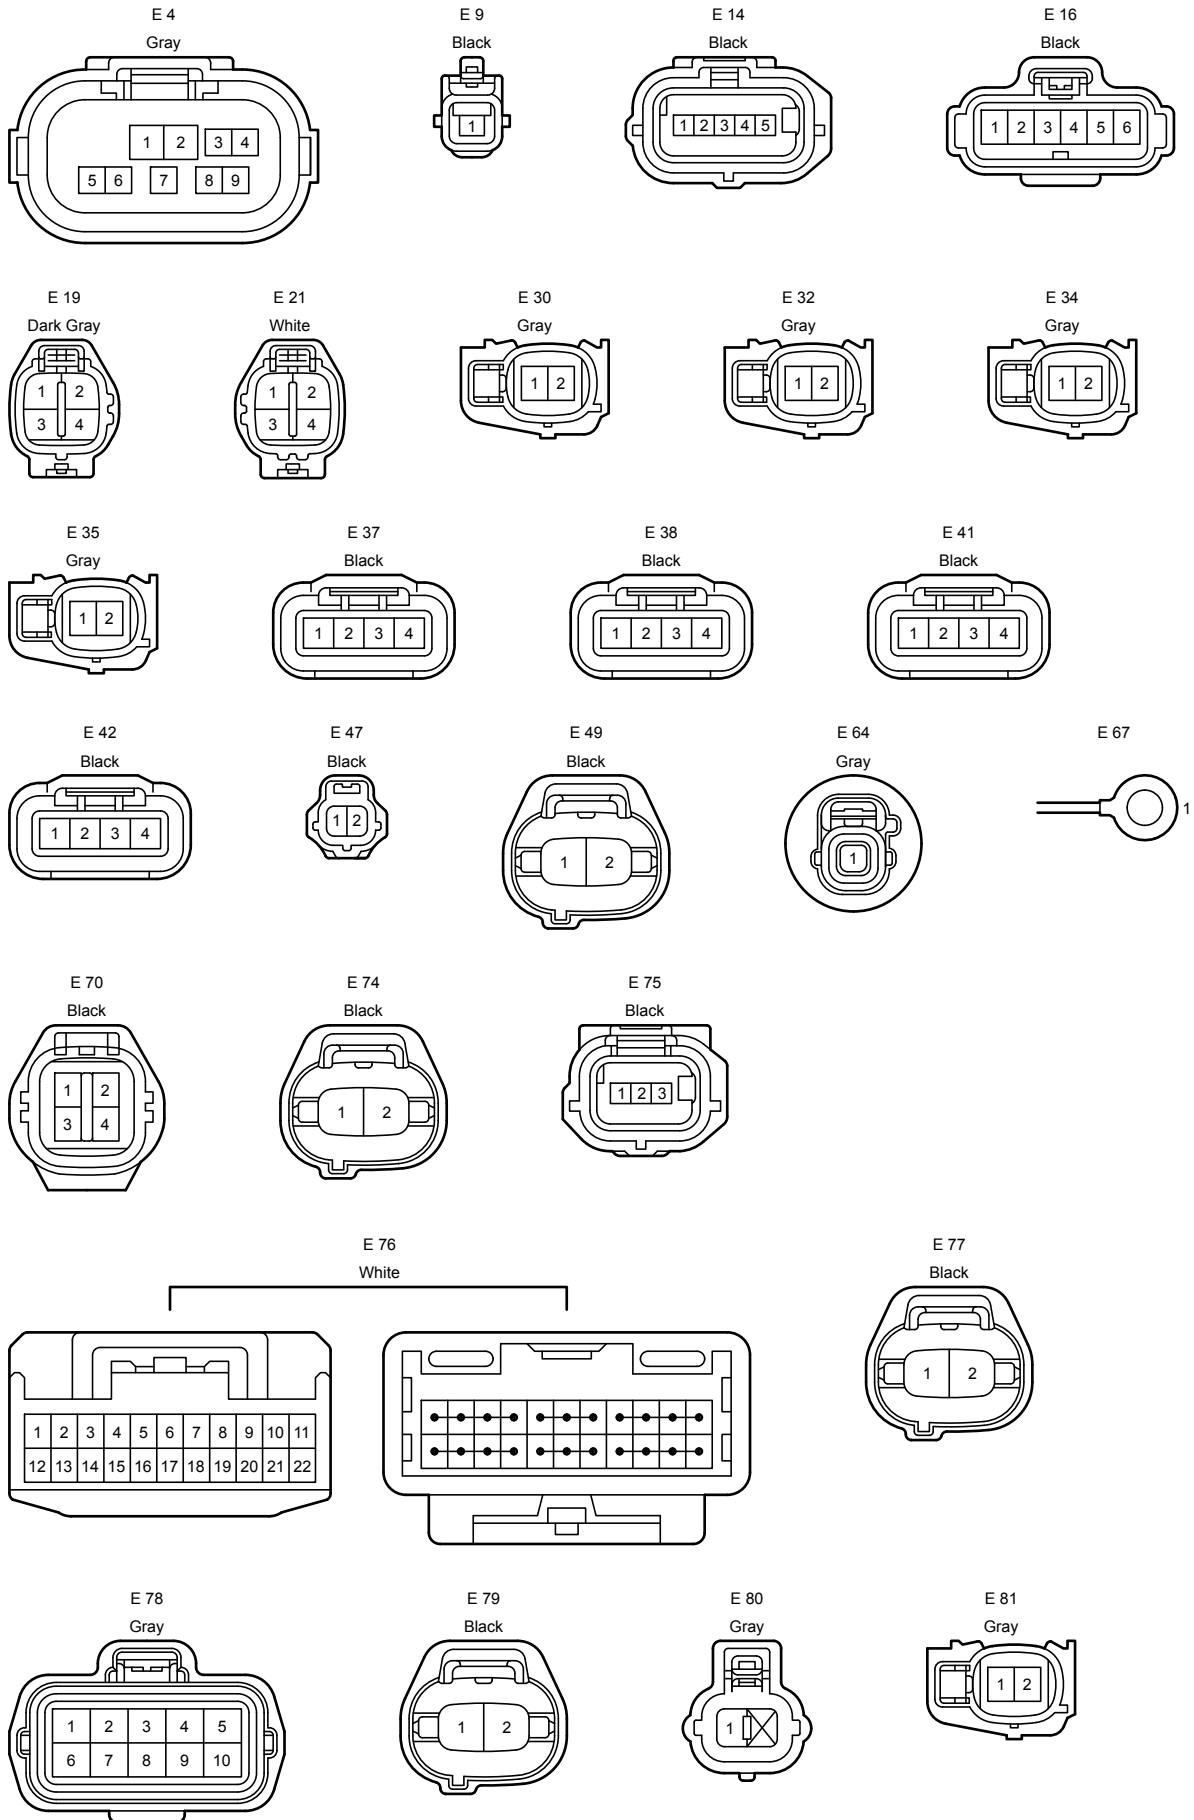


E 82

Black



E 83

Black

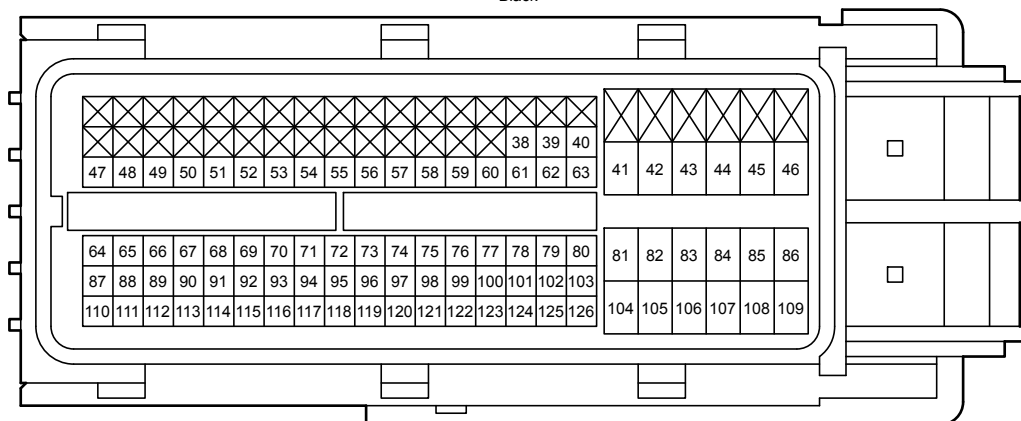


E 84

Black



E 85

Gray

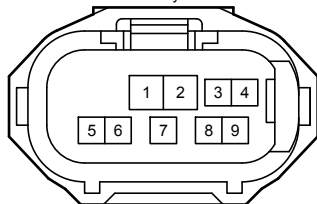

E 93

Black



F 2

