


Position of Parts in Engine Compartment <LHD 2AR-FE>

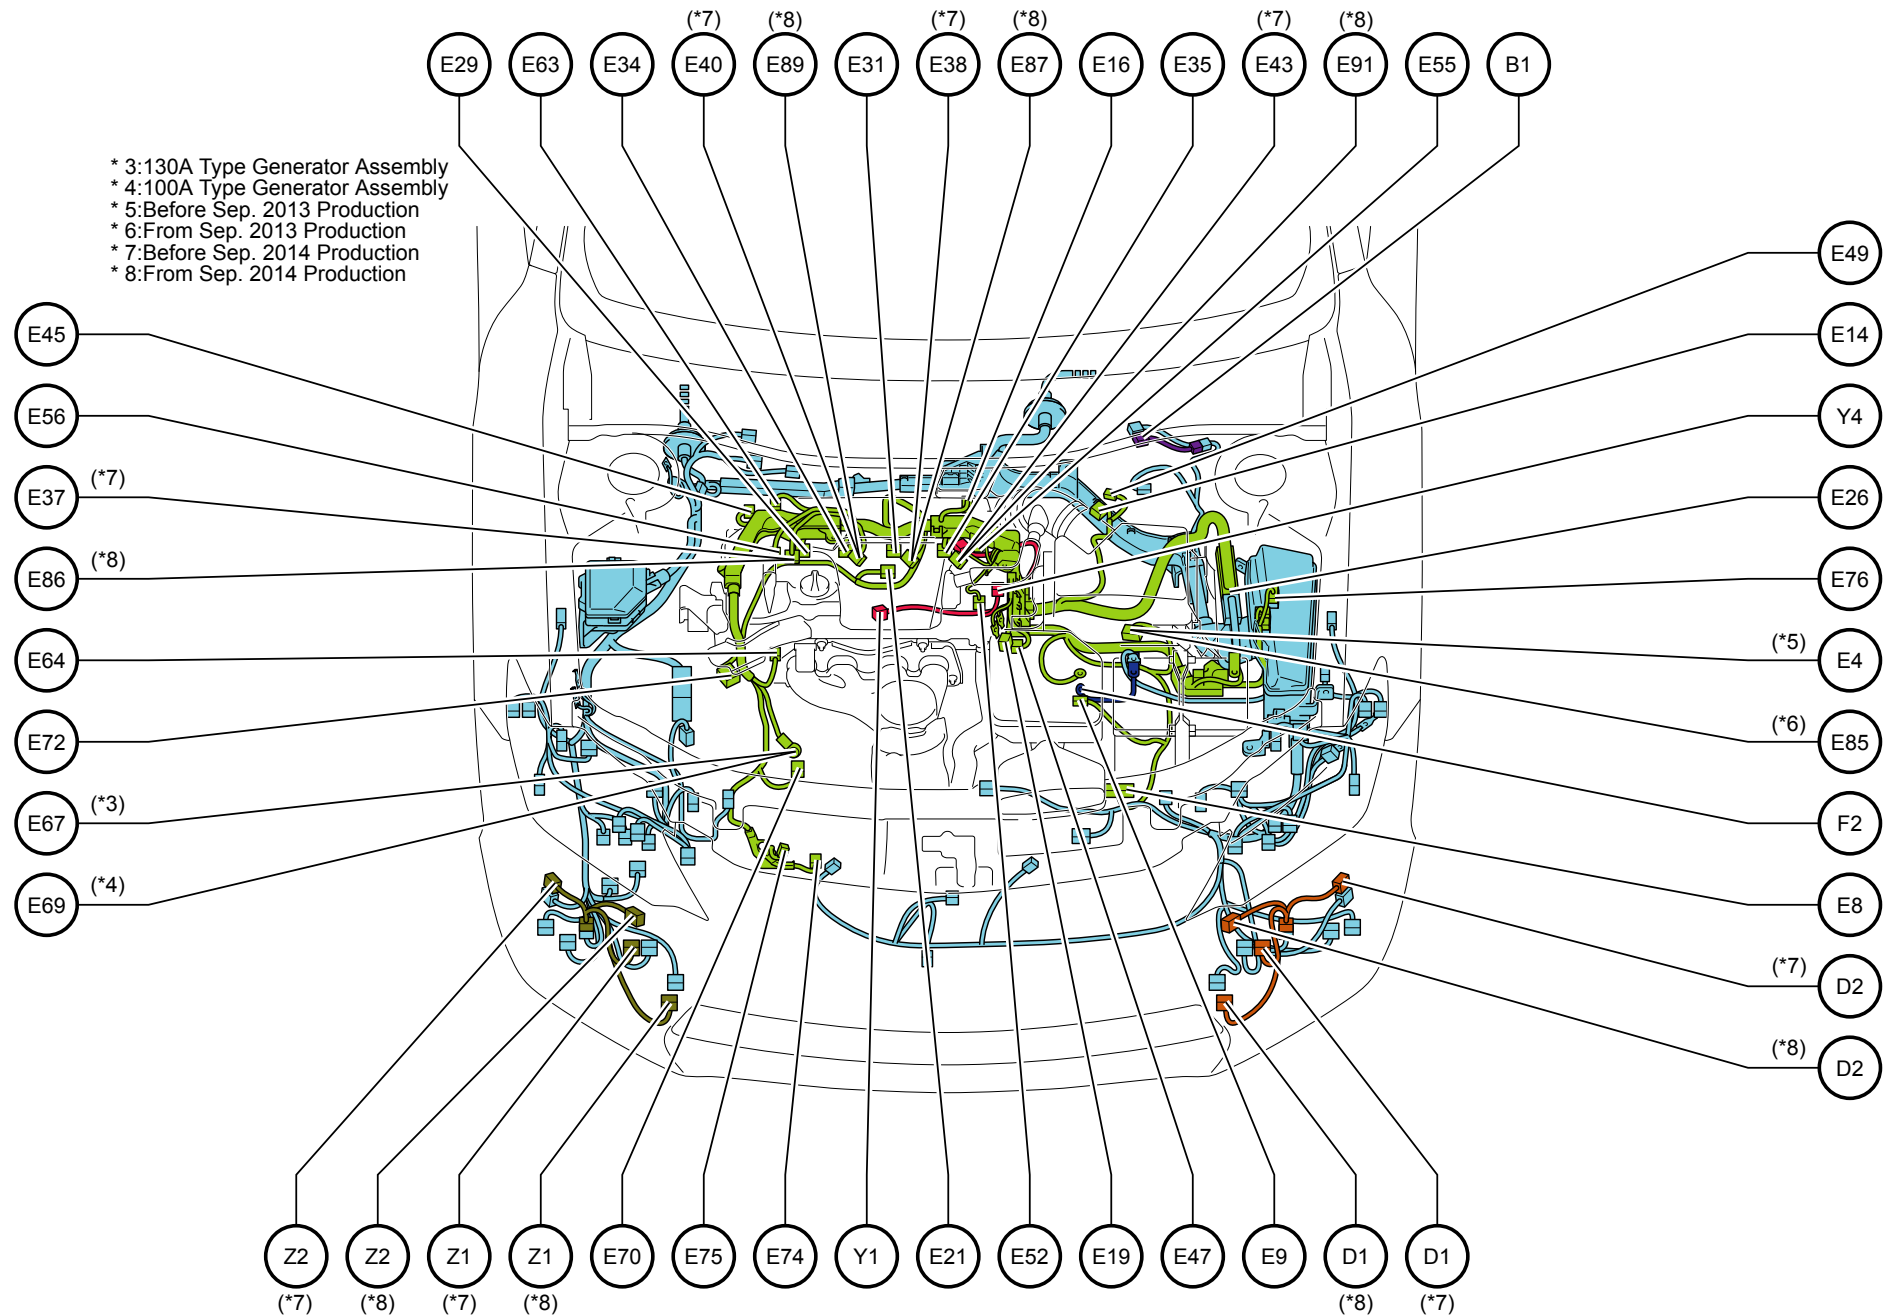

- B 1 Windshield Wiper Motor Assembly

- D 1 Fog Light Assembly LH
- D 2 Front No. 1 Ultrasonic Sensor LH


- E 4 Park/Neutral Position Switch Assembly
- E 8 ECT Solenoid (Transmission Wire)
- E 9 Starter Assembly
- E 14 Intake Mass Air Flow Meter Sub-Assembly
- E 16 Throttle Body Assembly with Motor
- E 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 21 Oxygen Sensor (Bank 1 Sensor 2)
- E 26 ECM
- E 29 Fuel Injector Assembly No. 1
- E 31 Fuel Injector Assembly No. 3
- E 34 Fuel Injector Assembly No. 2
- E 35 Fuel Injector Assembly No. 4
- E 37 Ignition Coil Assembly No. 1
- E 38 Ignition Coil Assembly No. 3
- E 40 Ignition Coil Assembly No. 2
- E 43 Ignition Coil Assembly No. 4
- E 45 VSV (ACIS)
- E 47 E.F.I. Engine Coolant Temperature Sensor
- E 49 Purge VSV
- E 52 VVT Sensor (Bank 1 Exhaust Side)
- E 55 VVT Sensor (Bank 1 Intake Side)
- E 56 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
- E 63 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- E 64 Engine Oil Pressure Switch Assembly
- E 67 Generator Assembly
- E 69 Generator Assembly
- E 70 Generator Assembly
- E 72 Crank Position Sensor
- E 74 Cooler Compressor Assembly
- E 75 Cooler Compressor Assembly
- E 76 Junction Connector
- E 85 Park/Neutral Position Switch Assembly
- E 86 Ignition Coil Assembly No. 1
- E 87 Ignition Coil Assembly No. 3
- E 89 Ignition Coil Assembly No. 2
- E 91 Ignition Coil Assembly No. 4

- F 2 Starter Assembly


- Y 1 Knock Control Sensor (Bank 1)
- Y 4 Intake Air Control Valve Actuator

- Z 1 Fog Light Assembly RH
- Z 2 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment <LHD 2AR-FE>

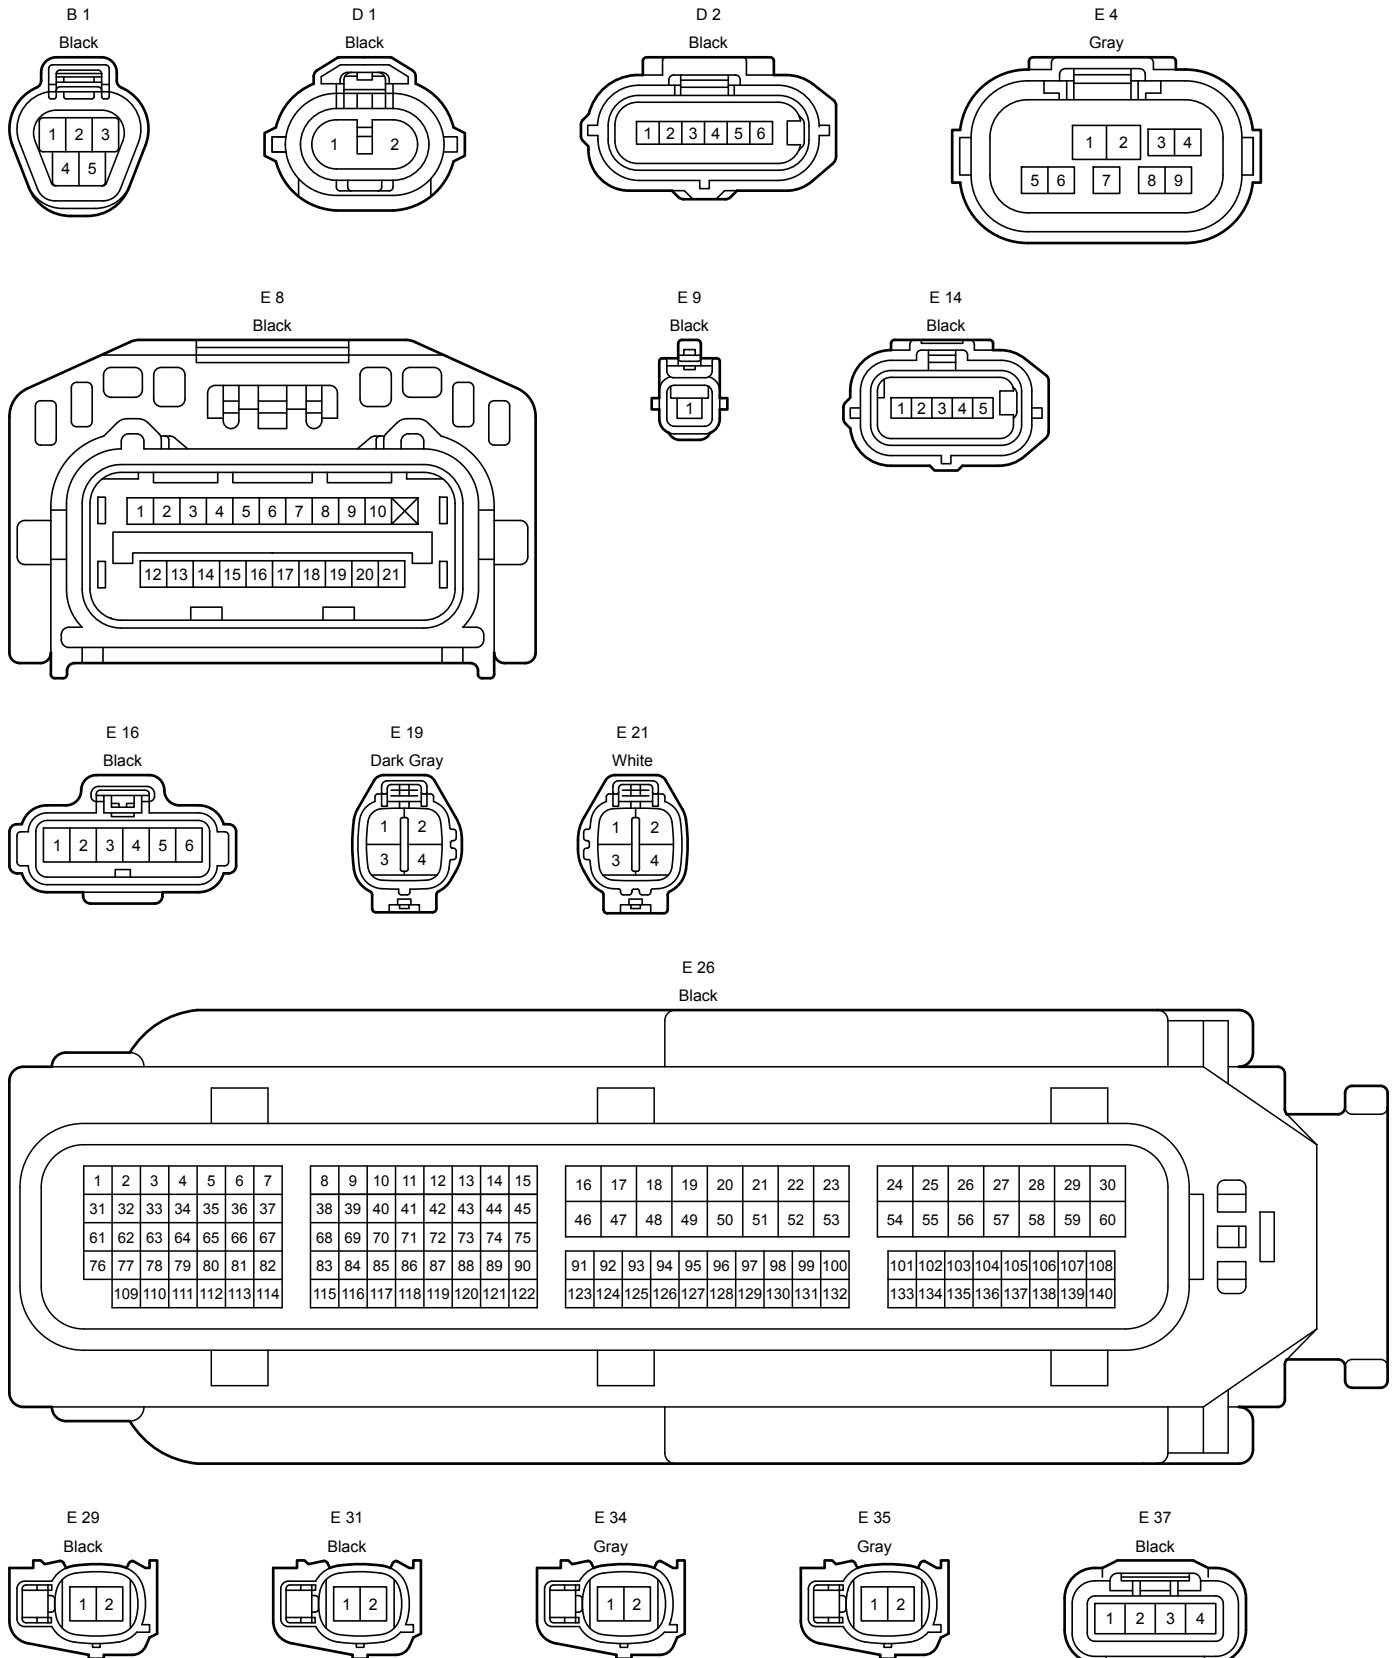

Position of Parts in Engine Compartment <LHD 2AR-FE>

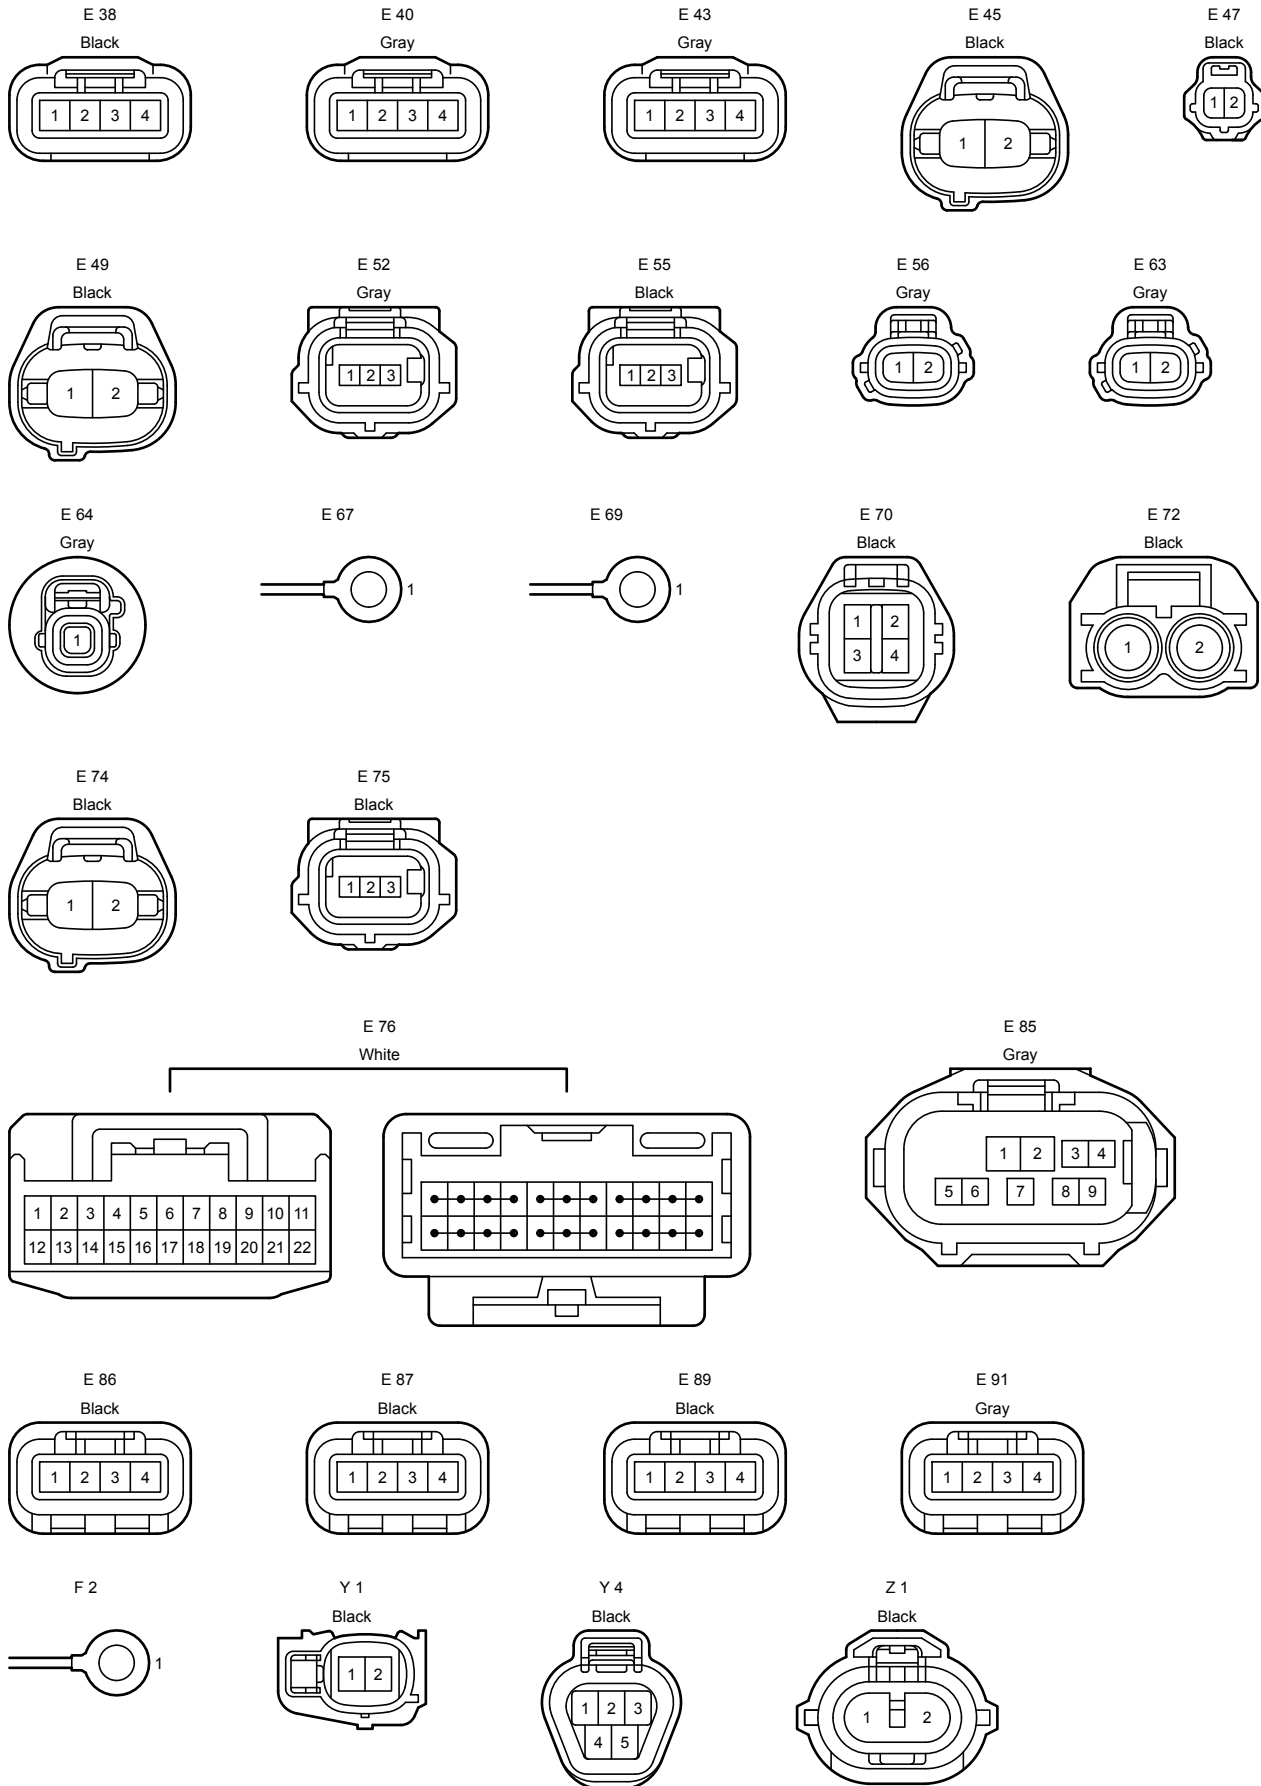

Z 2
Black

