

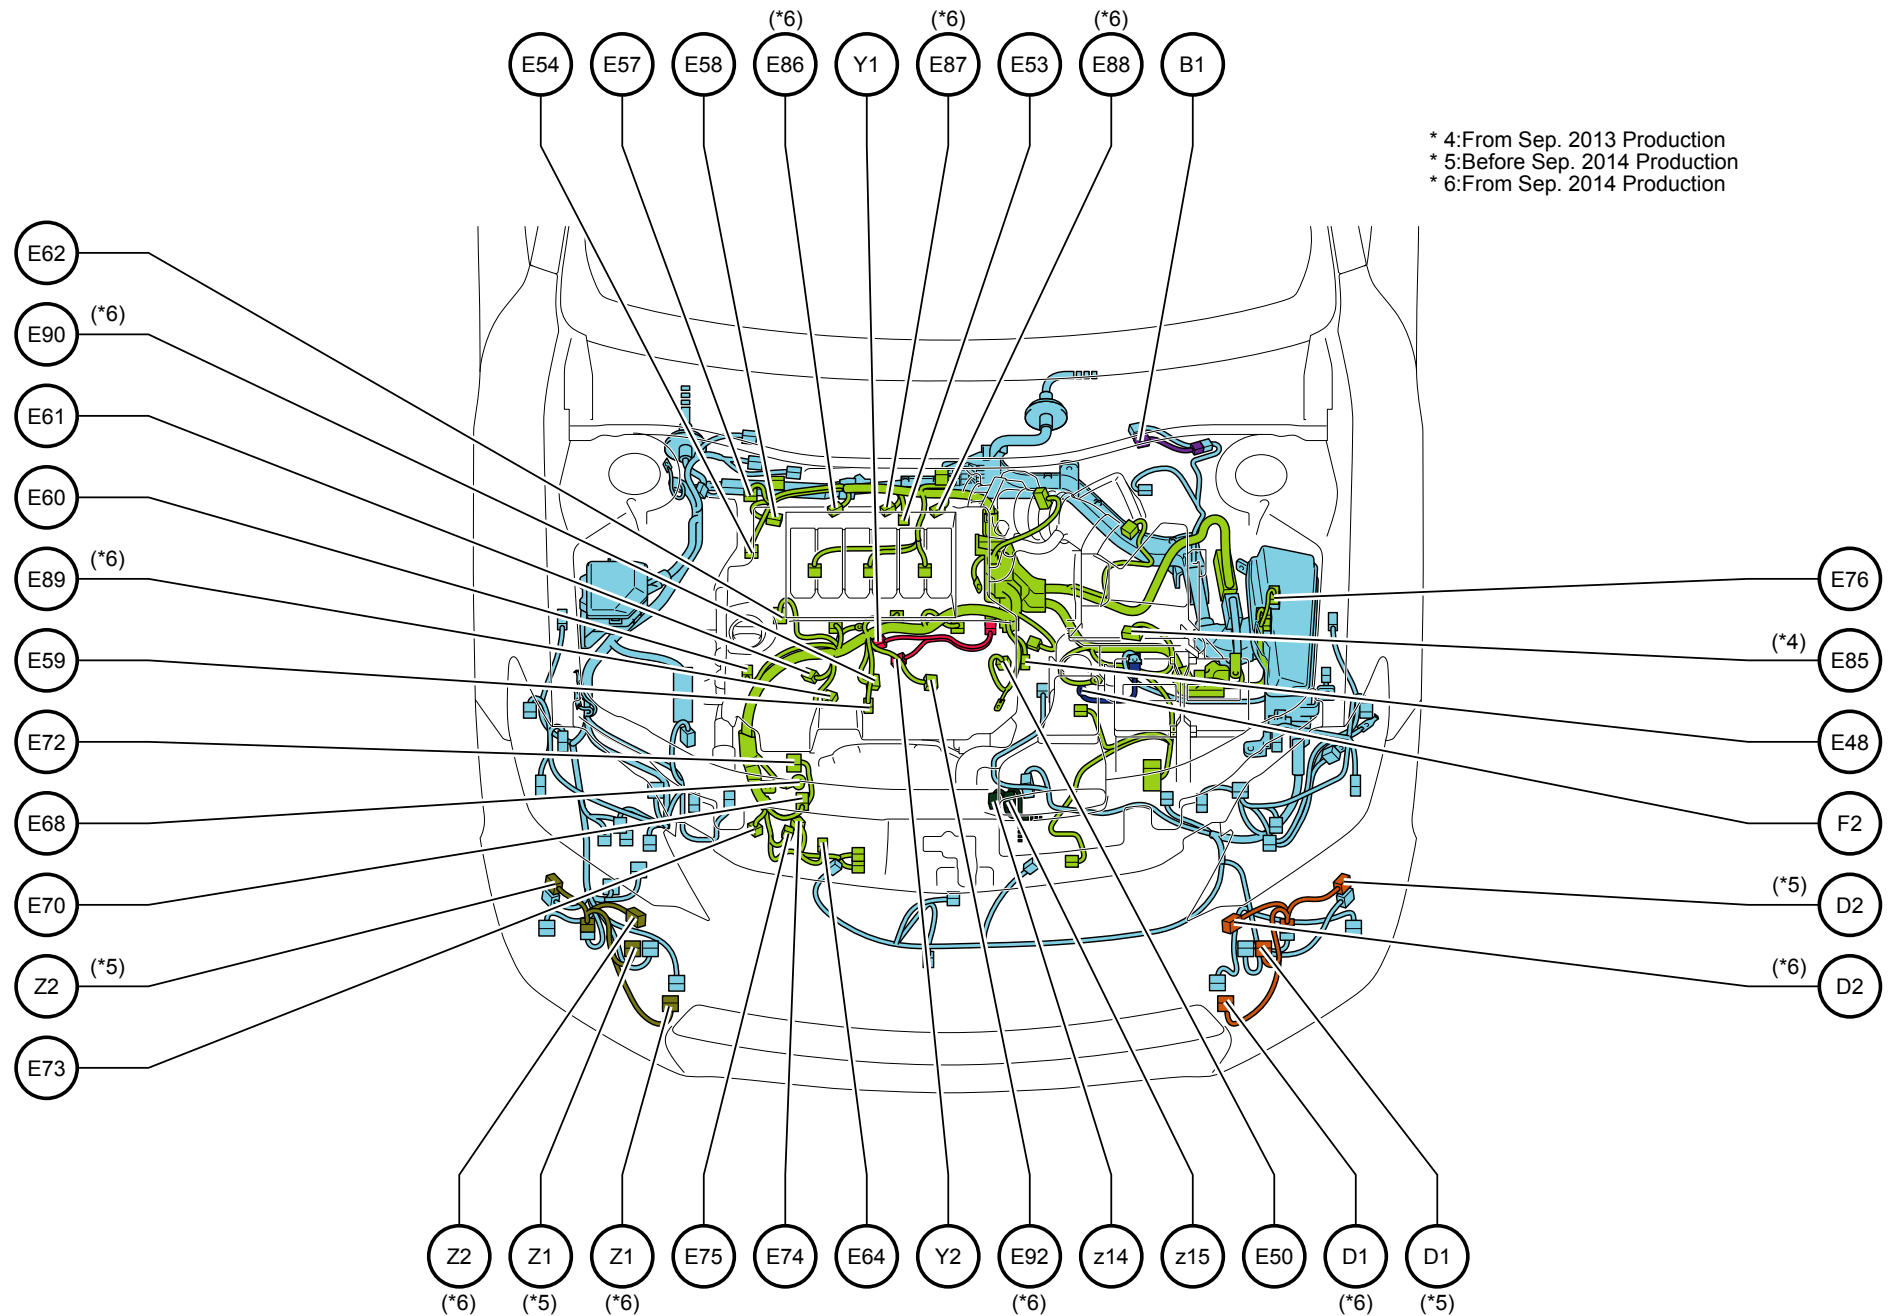
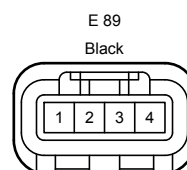
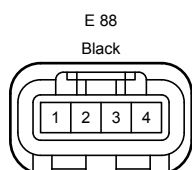
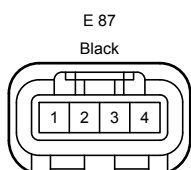
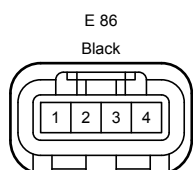
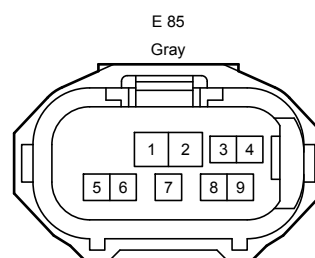
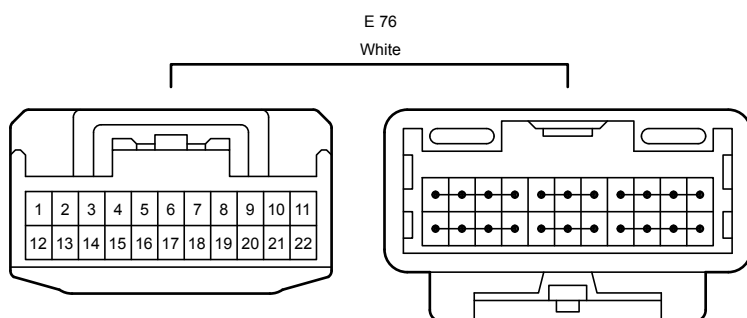
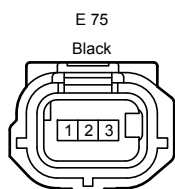
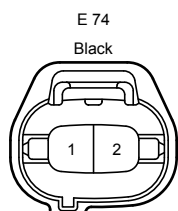
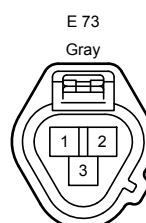
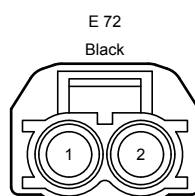
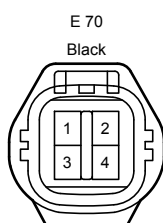
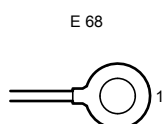
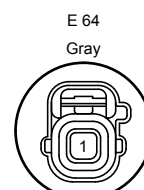
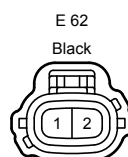
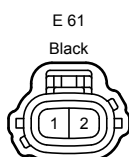
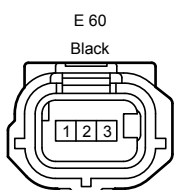
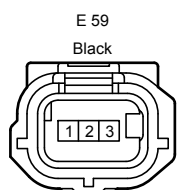
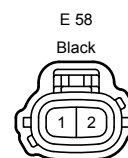
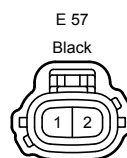
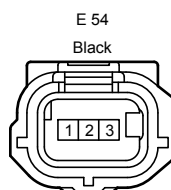
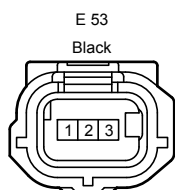
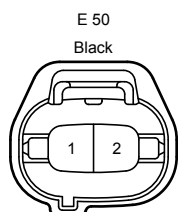
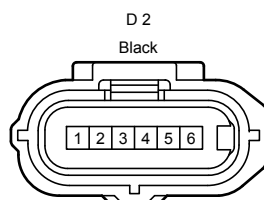


Position of Parts in Engine Compartment <LHD 2GR-FE>

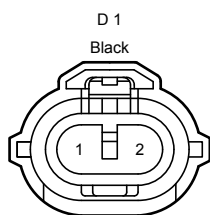

- B 1 Windshield Wiper Motor Assembly
  
- D 1 Fog Light Assembly LH
- D 2 Front No. 1 Ultrasonic Sensor LH
  
- E 48 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 50 Purge VSV
- E 53 VVT Sensor (Bank 1 Exhaust Side)
- E 54 VVT Sensor (Bank 1 Intake Side)
- E 57 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- E 58 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- E 59 VVT Sensor (Bank 2 Exhaust Side)
- E 60 VVT Sensor (Bank 2 Intake Side)
- E 61 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
- E 62 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- E 64 Engine Oil Pressure Switch Assembly
- E 68 Generator Assembly
- E 70 Generator Assembly
- E 72 Crank Position Sensor
- E 73 Cooler Compressor Assembly
- E 74 Cooler Compressor Assembly
- E 75 Cooler Compressor Assembly
- E 76 Junction Connector
- E 85 Park/Neutral Position Switch Assembly
- E 86 Ignition Coil Assembly No. 1
- E 87 Ignition Coil Assembly No. 3
- E 88 Ignition Coil Assembly No. 5
- E 89 Ignition Coil Assembly No. 2
- E 90 Ignition Coil Assembly No. 4
- E 92 Ignition Coil Assembly No. 6
  
- F 2 Starter Assembly
  
- Y 1 Knock Control Sensor (Bank 1)
- Y 2 Knock Control Sensor (Bank 2)
  
- Z 1 Fog Light Assembly RH
- Z 2 Front No. 1 Ultrasonic Sensor RH
  
- z 14 Cooling Fan ECU , Cooling Fan Motor
- z 15 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <LHD 2GR-FE>

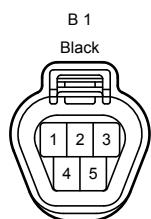

Position of Parts in Engine Compartment <LHD 2GR-FE>

