


Position of Parts in Engine Compartment <LHD 6AR-FSE>

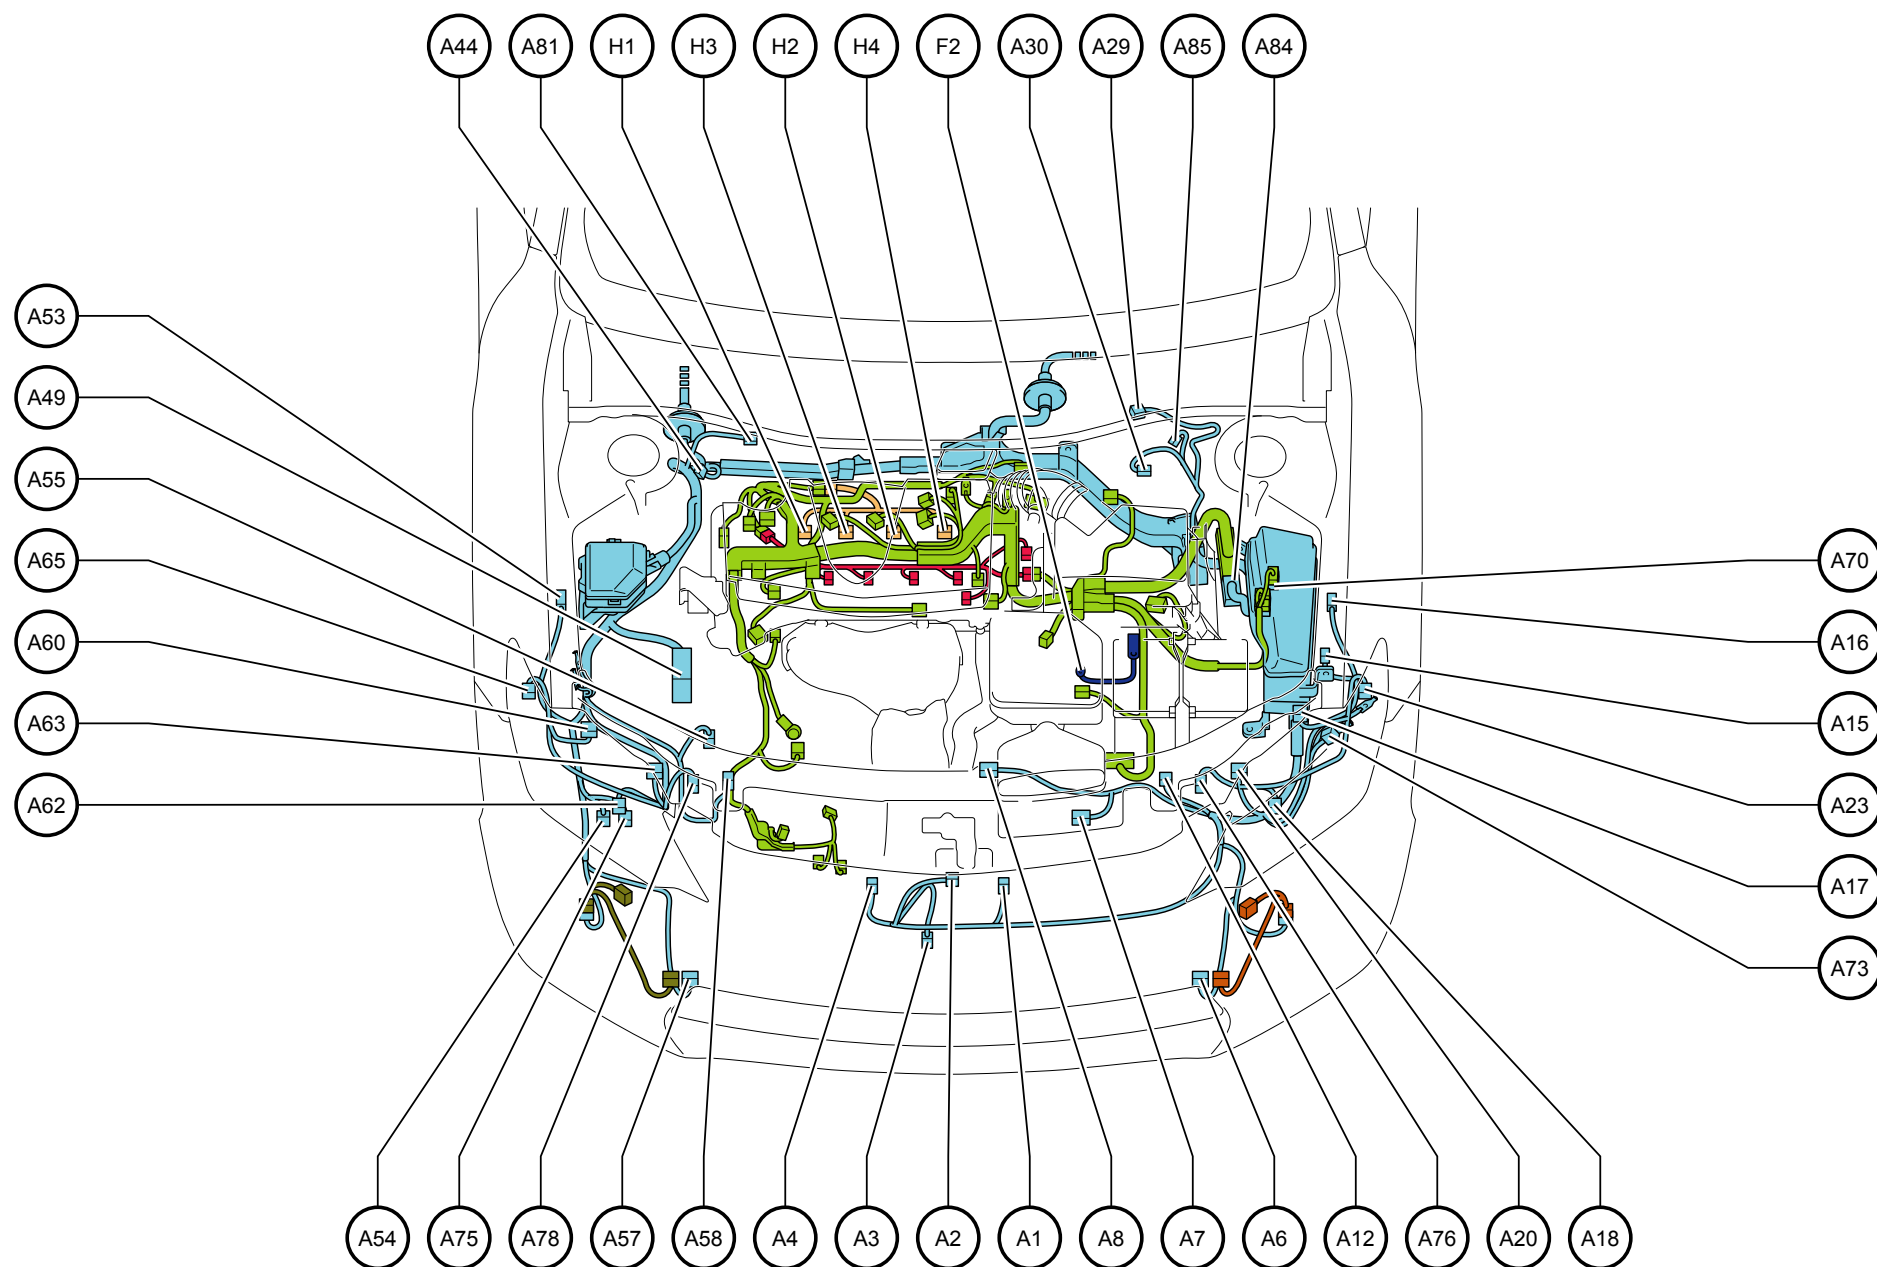


- A 1 Low Pitched Horn Assembly
- A 2 Engine Hood Courtesy Switch (Hood Lock Assembly)
- A 3 Ambient Temperature Sensor (Thermistor Assembly)
- A 4 High Pitched Horn Assembly
- A 6 Fog Light Assembly LH
- A 7 Cooling Fan Motor
- A 8 No. 2 Cooling Fan Motor
- A 12 Front Airbag Sensor LH
- A 15 Wireless Door Lock Buzzer
- A 16 Front Speed Sensor LH
- A 17 Headlight Assembly LH
- A 18 Headlight Assembly LH
- A 20 Headlight Assembly LH
- A 23 Headlight Assembly LH
- A 29 Windshield Wiper Motor Assembly
- A 30 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
- A 44 Security Horn Assembly
- A 49 Brake Actuator Assembly
- A 53 Front Speed Sensor RH
- A 54 Windshield Washer Motor and Pump Assembly
- A 55 A/C Pressure Sensor (A/C Tube & Accessory Assembly)
- A 57 Fog Light Assembly RH
- A 58 Front Airbag Sensor RH
- A 60 Headlight Assembly RH
- A 62 Headlight Assembly RH
- A 63 Headlight Assembly RH
- A 65 Headlight Assembly RH
- A 70 Junction Connector
- A 73 Junction Connector
- A 75 Level Warning Switch Assembly (Windshield Washer Motor and Pump Assembly)
- A 76 Headlight Assembly LH
- A 78 Headlight Assembly RH
- A 81 Front Wiper Deicer (Windshield Glass)
- A 84 ECM
- A 85 Vacuum Warning Switch Assembly

- F 2 Starter Assembly

- H 1 Fuel Injector Assembly No. 1 (for Port Injection)
- H 2 Fuel Injector Assembly No. 3 (for Port Injection)
- H 3 Fuel Injector Assembly No. 2 (for Port Injection)
- H 4 Fuel Injector Assembly No. 4 (for Port Injection)

Position of Parts in Engine Compartment <LHD 6AR-FSE>

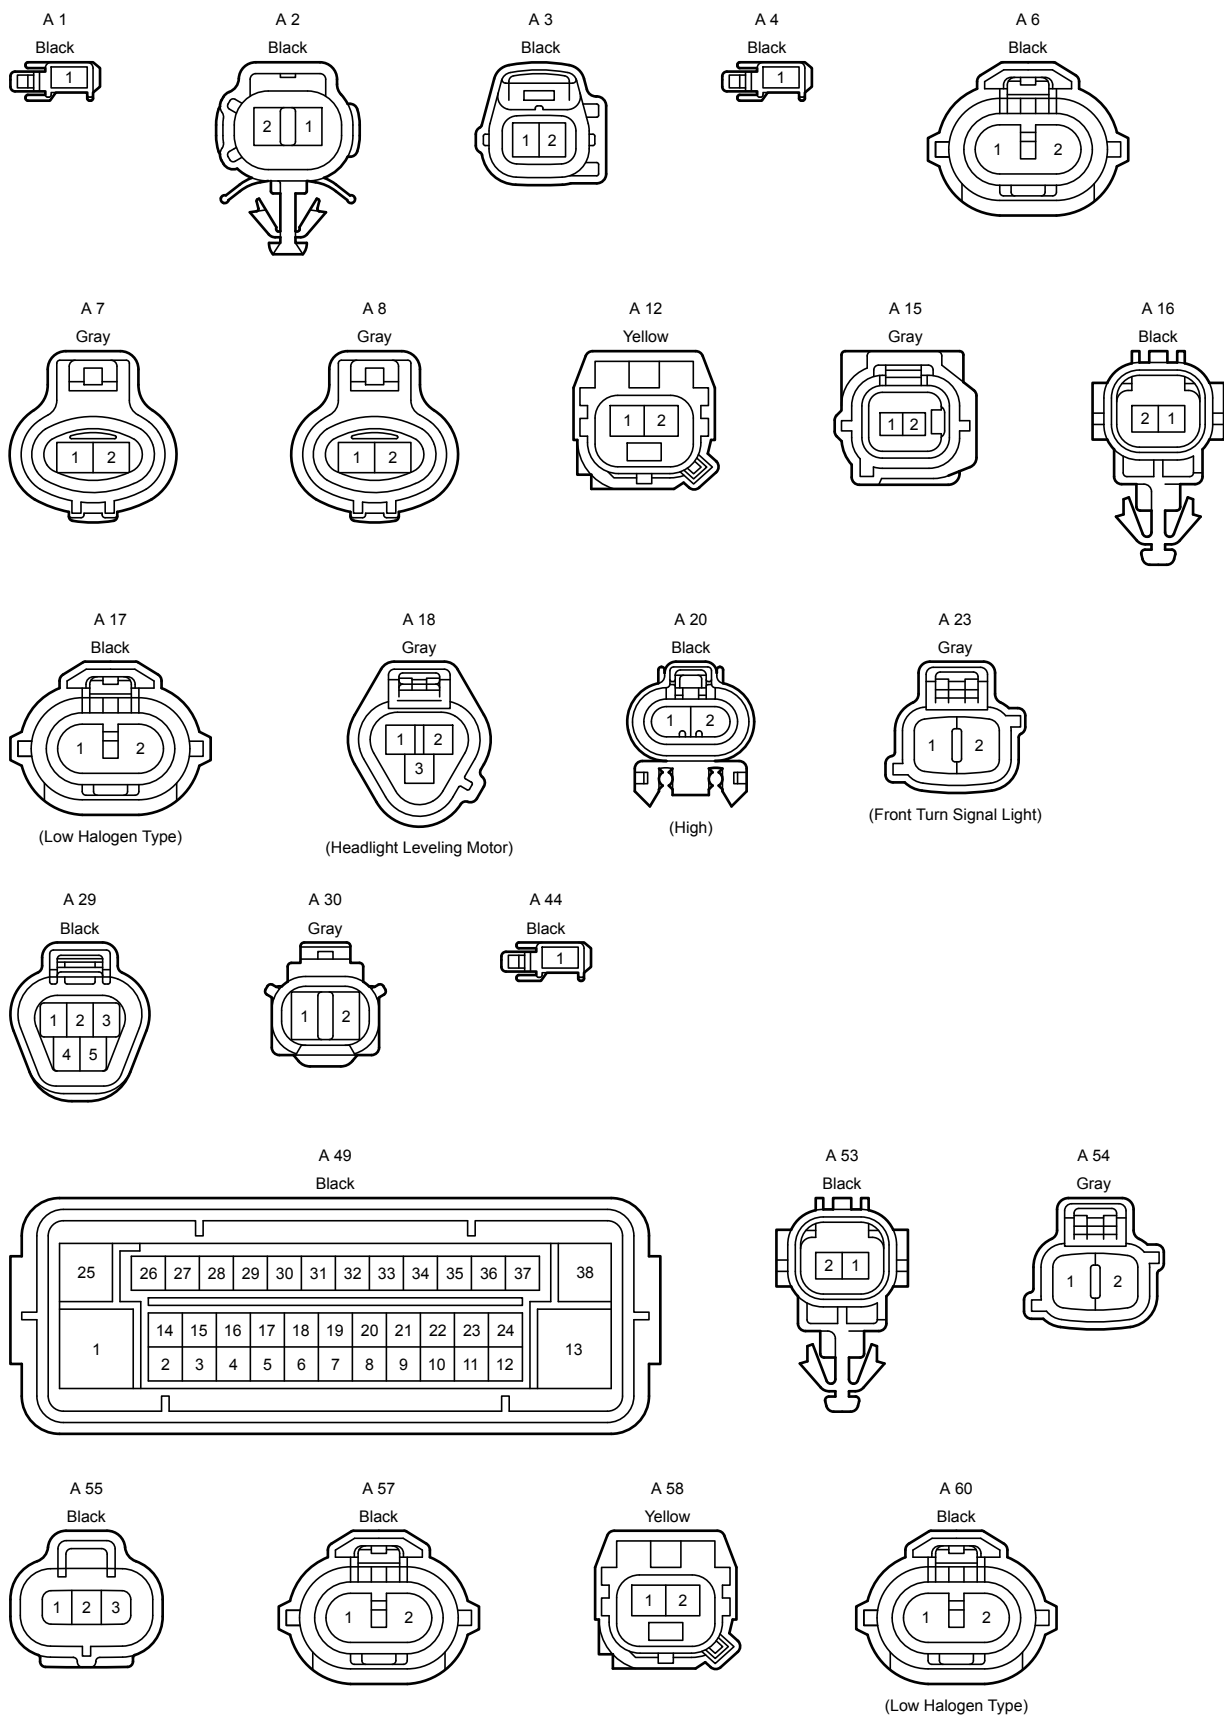

Position of Parts in Engine Compartment <LHD 6AR-FSE>

