


Position of Parts in Engine Compartment <LHD 6AR-FSE>

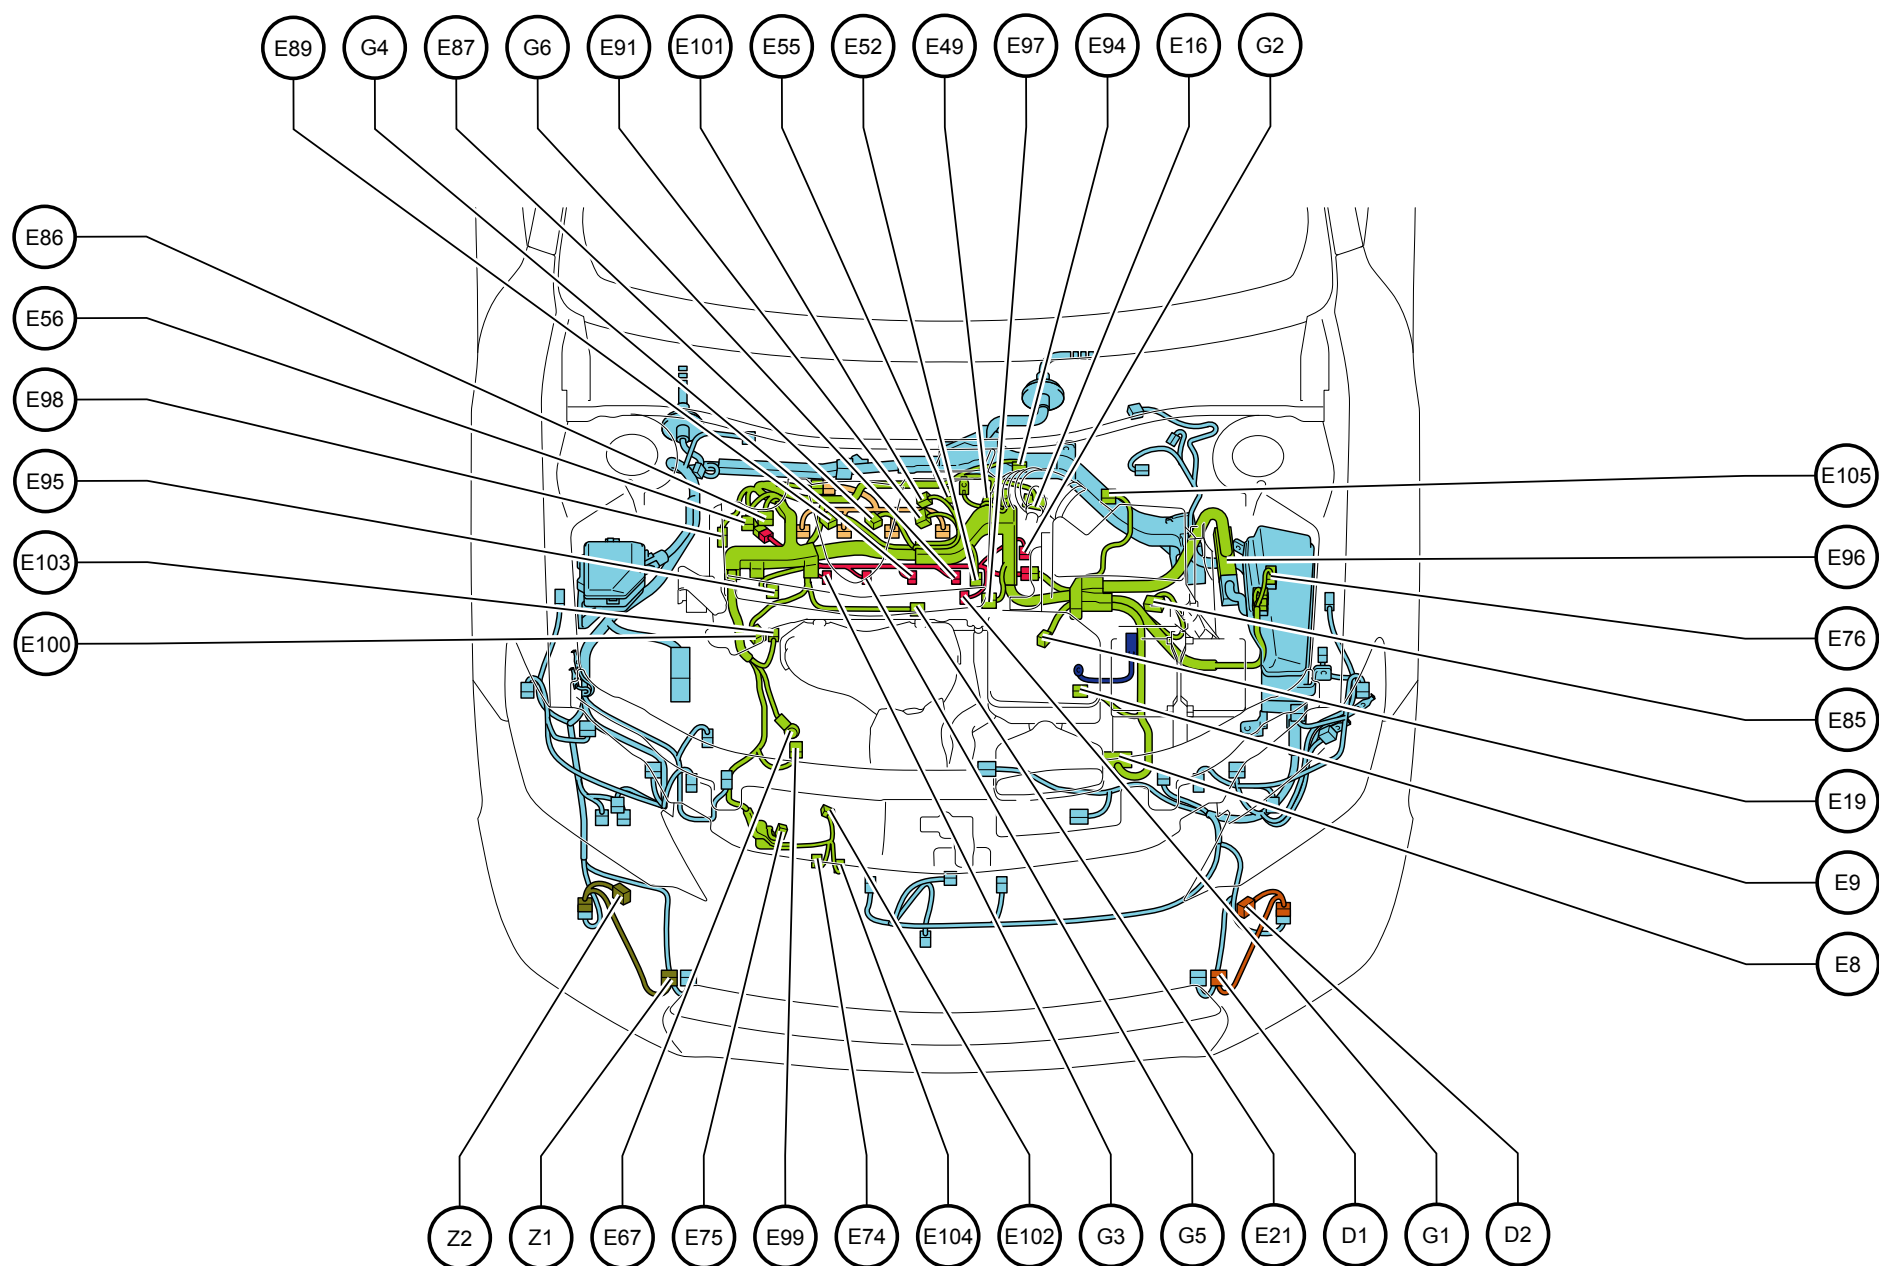


- D 1 Fog Light Assembly LH
- D 2 Front No. 1 Ultrasonic Sensor LH

- E 8 ECT Solenoid (Transmission Wire)
- E 9 Starter Assembly
- E 16 Throttle Body Assembly with Motor
- E 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 21 Oxygen Sensor (Bank 1 Sensor 2)
- E 49 Purge VSV
- E 52 VVT Sensor (Bank 1 Exhaust Side)
- E 55 VVT Sensor (Bank 1 Intake Side)
- E 56 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
- E 67 Generator Assembly
- E 74 Cooler Compressor Assembly
- E 75 Cooler Compressor Assembly
- E 76 Junction Connector
- E 85 Park/Neutral Position Switch Assembly
- E 86 Ignition Coil Assembly No. 1
- E 87 Ignition Coil Assembly No. 3
- E 89 Ignition Coil Assembly No. 2
- E 91 Ignition Coil Assembly No. 4
- E 94 EGR Valve Assembly
- E 95 E.F.I. Vacuum Sensor Assembly
- E 96 ECM
- E 97 E.F.I. Engine Coolant Temperature Sensor
- E 98 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- E 99 Generator Assembly
- E 100 Crankshaft Position Sensor
- E 101 Fuel Pump with Seal Sub-Assembly
- E 102 Engine Oil Temperature Sensor (Temperature Sensor)
- E 103 Oil Pressure Sender Gage Assembly
- E 104 Engine Oil Level Sensor
- E 105 Intake Mass Air Flow Meter Sub-Assembly

- G 1 Knock Control Sensor (Bank 1)
- G 2 Fuel Pressure Sensor
- G 3 Fuel Injector Assembly No. 1 (for Direct Injection)
- G 4 Fuel Injector Assembly No. 3 (for Direct Injection)
- G 5 Fuel Injector Assembly No. 2 (for Direct Injection)
- G 6 Fuel Injector Assembly No. 4 (for Direct Injection)

- Z 1 Fog Light Assembly RH
- Z 2 Front No. 1 Ultrasonic Sensor RH

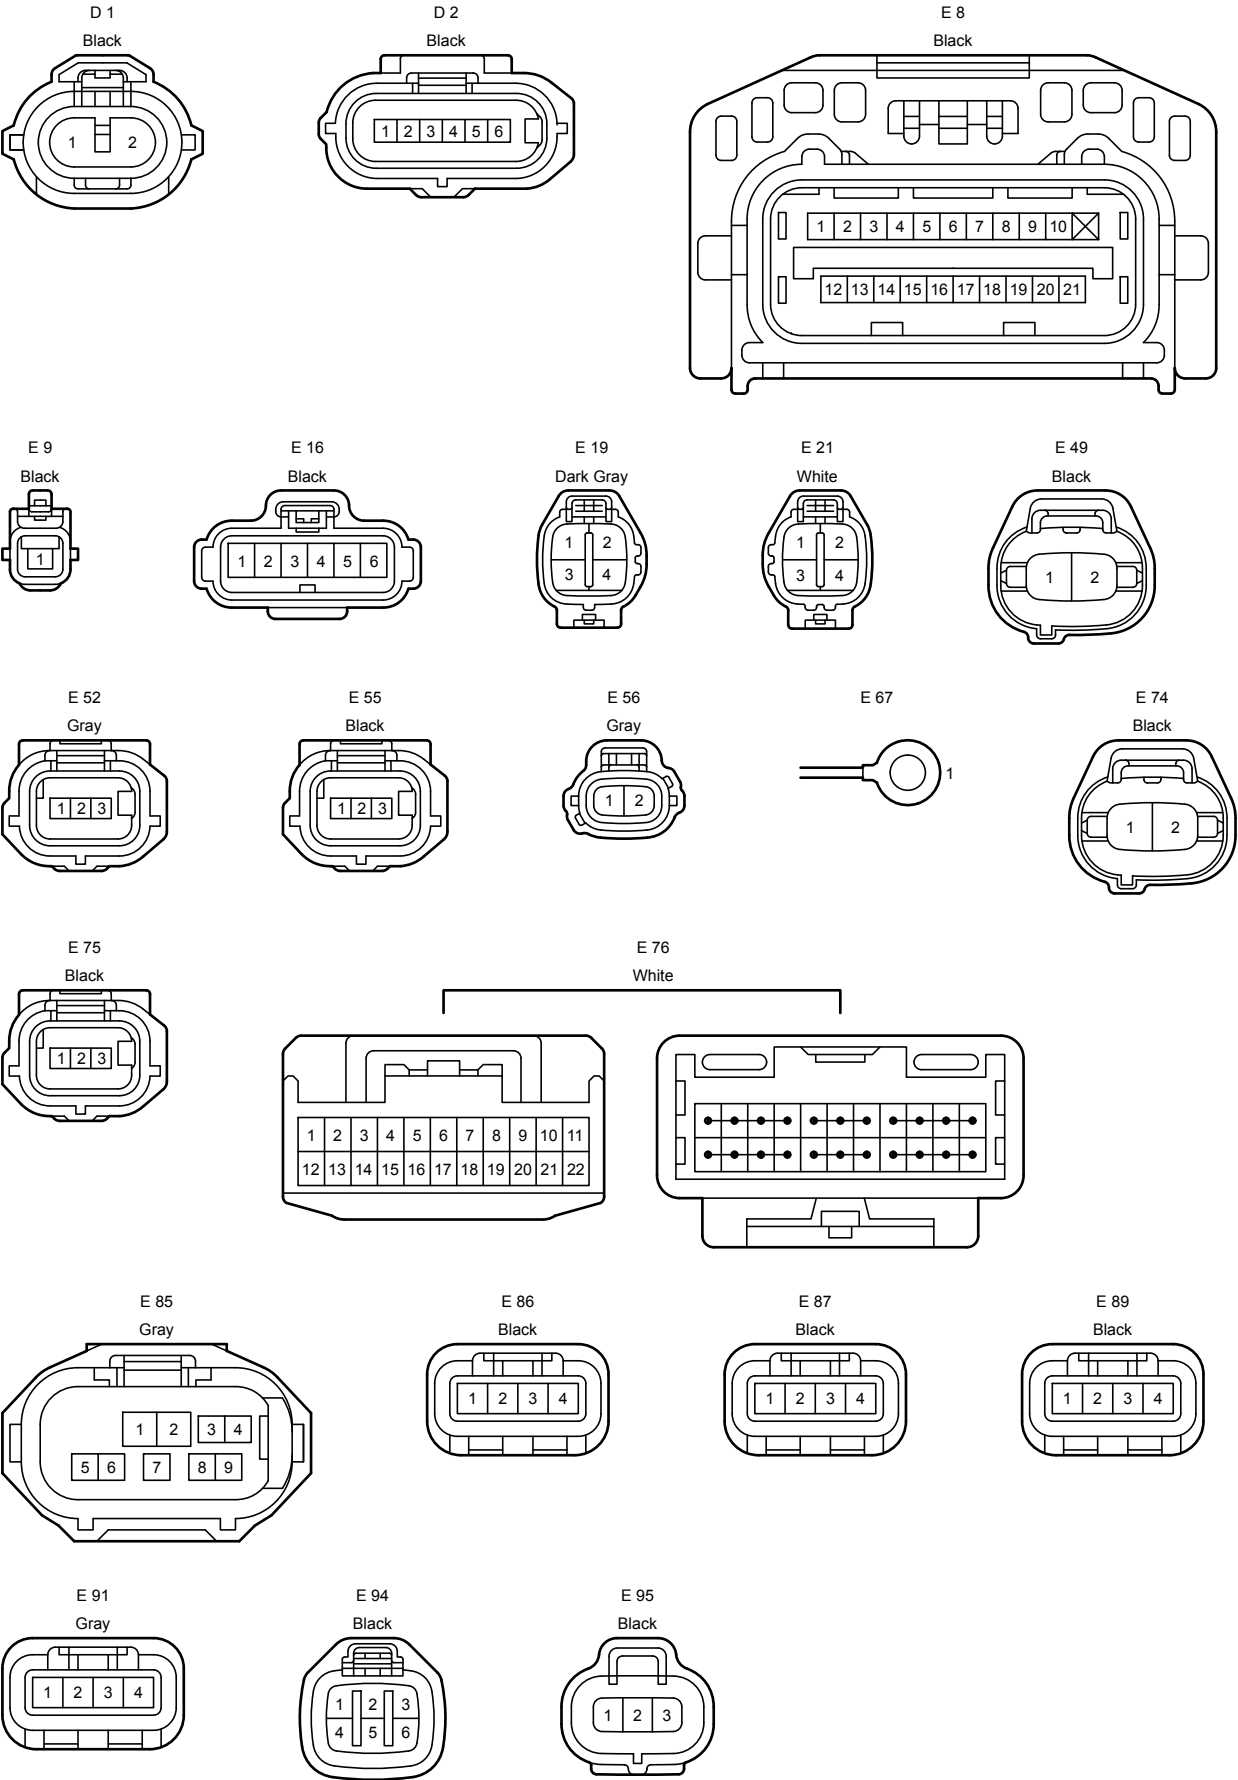

Position of Parts in Engine Compartment <LHD 6AR-FSE>

