


Position of Parts in Body <LHD>

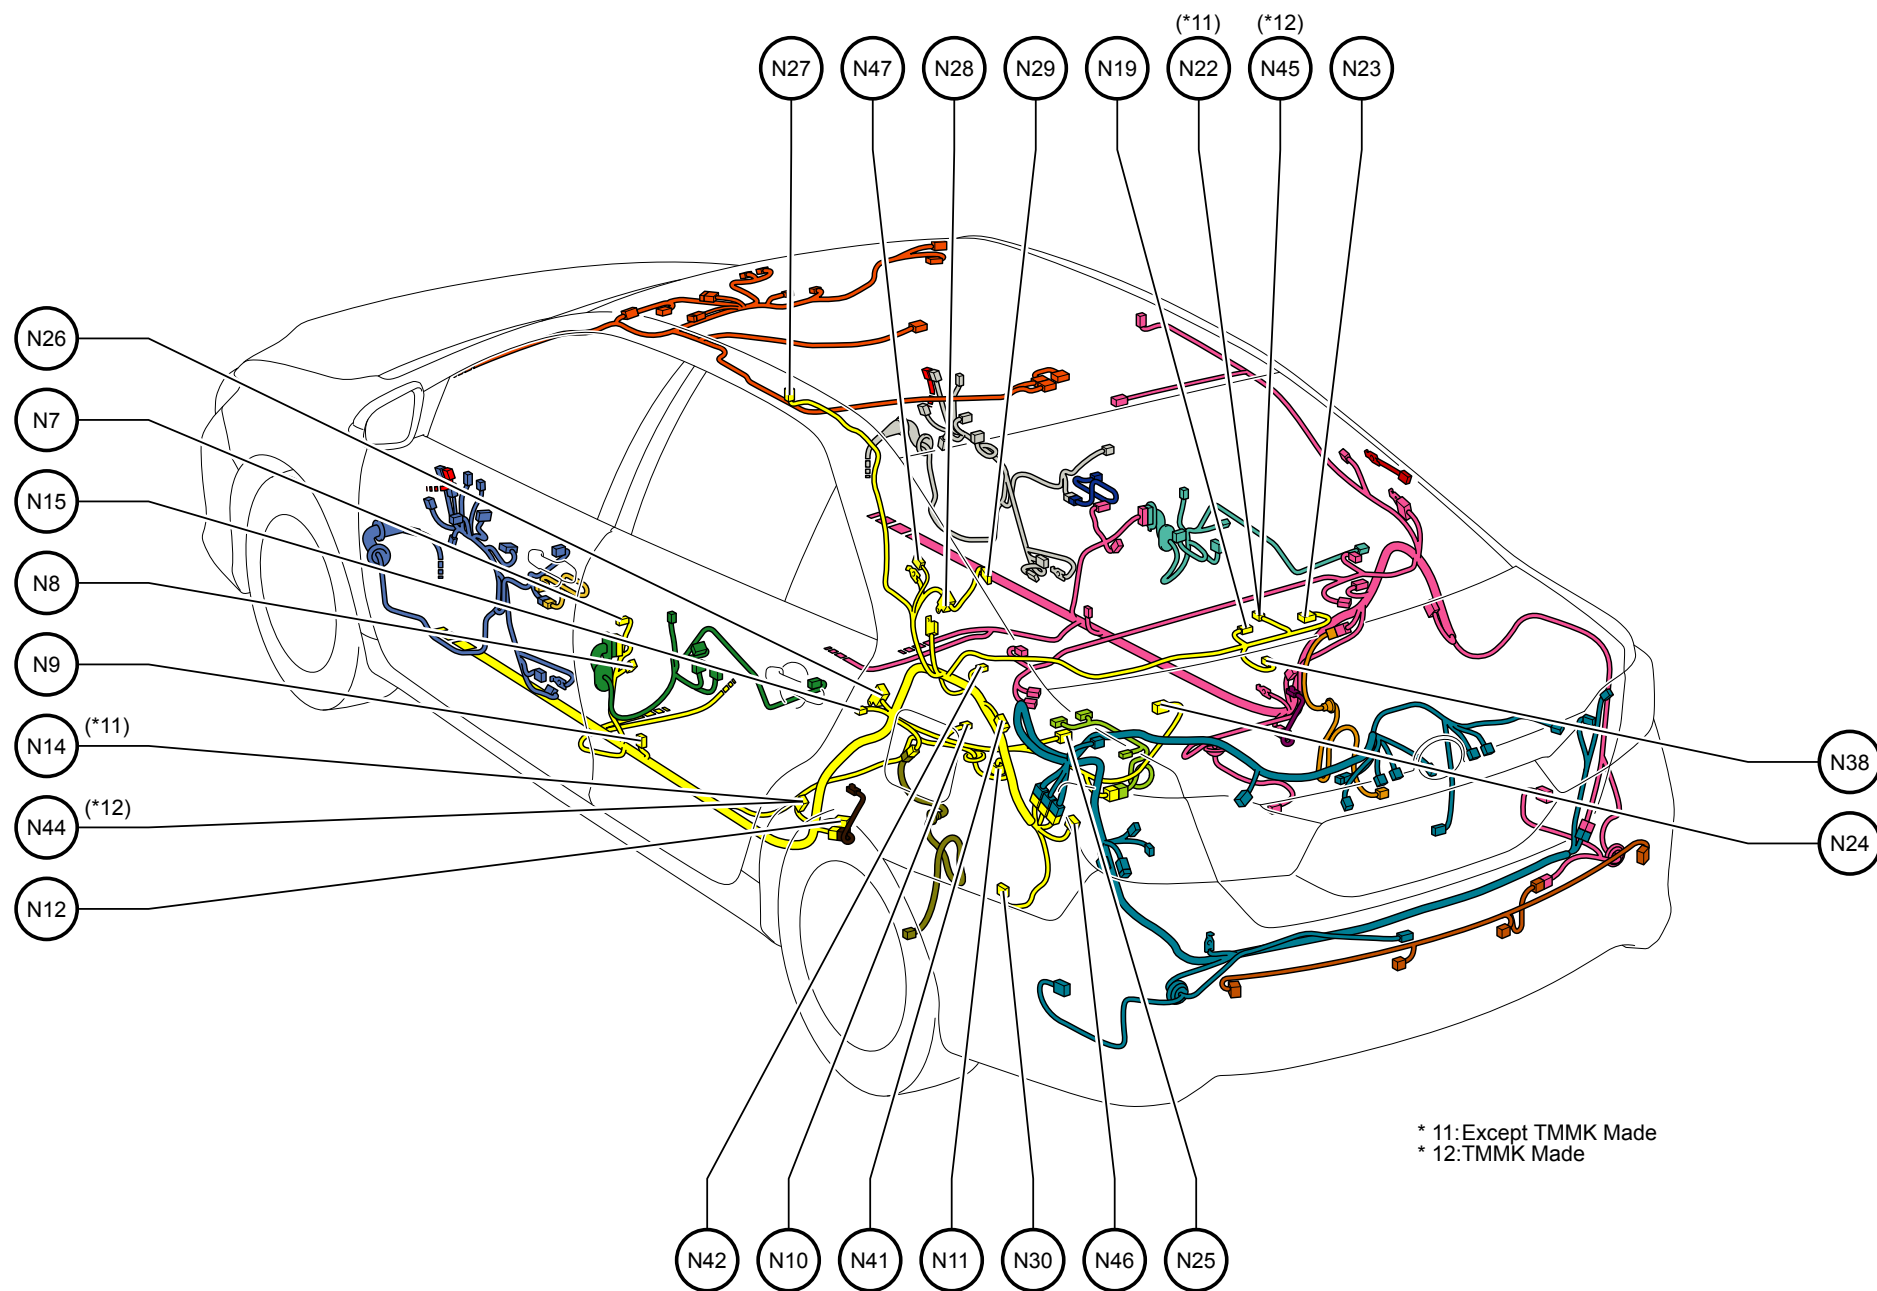

- N 7 Front Door Courtesy Light Switch Assembly LH
- N 8 Side Airbag Sensor Assembly LH
- N 9 Front Seat Outer Belt Assembly LH
- N 10 No. 2 Indoor Electrical Key Antenna Assembly
- N 11 Fuel Suction Tube Assembly with Pump & Gage
- N 12 Rear Seat Heater Control Sub-Assembly
- N 14 No. 2 Side Airbag Sensor Assembly LH
- N 15 Rear Door Courtesy Light Switch Assembly LH
- N 19 Rear Sunshade Relay
- N 22 Center Stop Light Set
- N 23 No. 1 Luggage Compartment Light Assembly
- N 24 Rear Seat Reclining Adjuster Assembly RH
- N 25 Rear Seat Reclining Adjuster Assembly LH
- N 26 Radio Setting Condenser (Center Stop Light)
- N 27 Curtain Shield Airbag Assembly LH
- N 28 Radio Setting Condenser (Rear Window Defogger)
- N 29 Rear Window Defogger (Back Window Glass)
- N 30 Fuel Pump Control ECU Assembly
- N 38 No. 3 Indoor Electrical Key Antenna Assembly
- N 41 Junction Connector
- N 42 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- N 44 No. 2 Side Airbag Sensor Assembly LH
- N 45 Center Stop Light Set
- N 46 Back Up Light Relay
- N 47 Tire Pressure Warning ECU and Receiver

Position of Parts in Body <LHD>

