

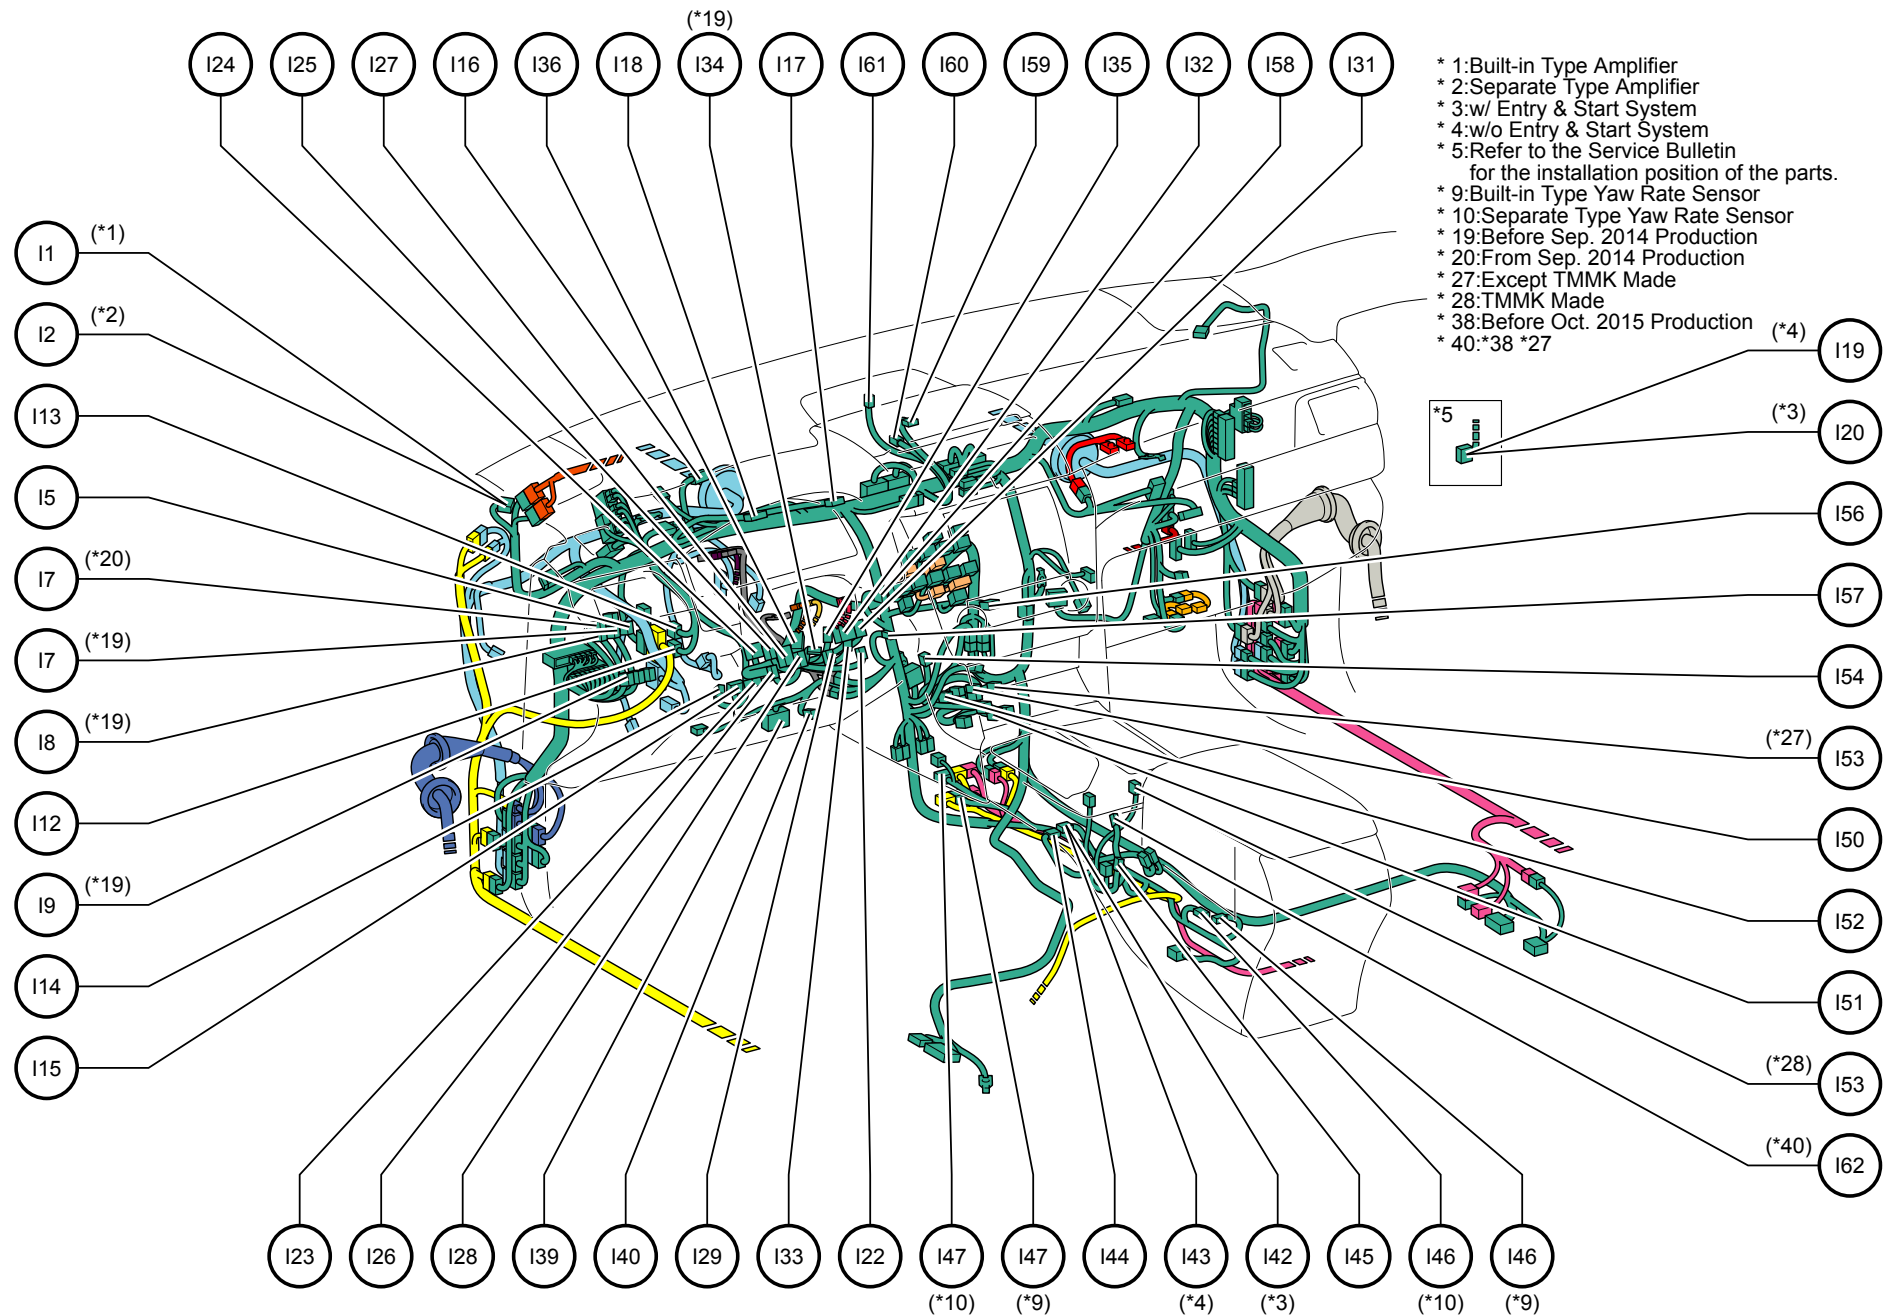
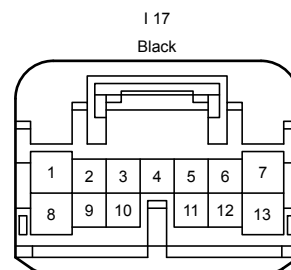
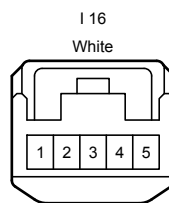
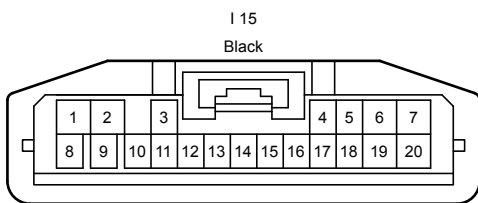
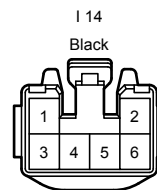
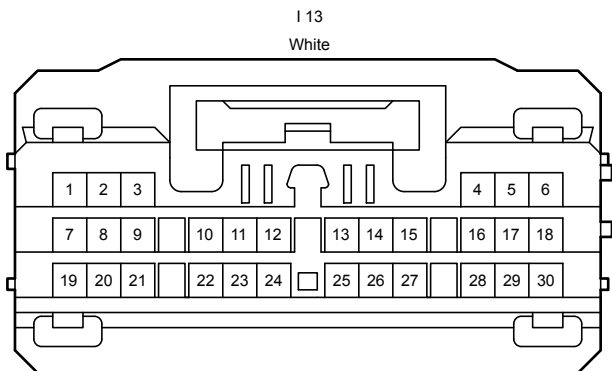
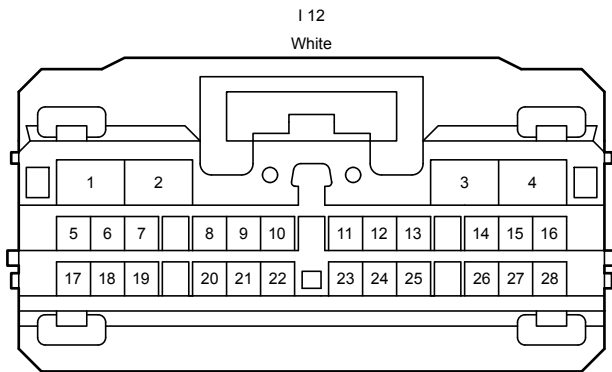
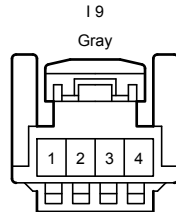
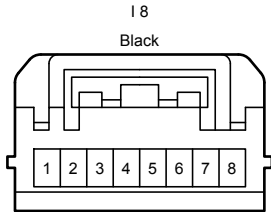
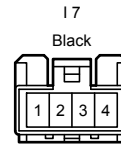
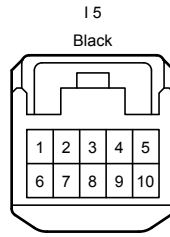


Position of Parts in Instrument Panel <LHD>


 



 


 

 









 


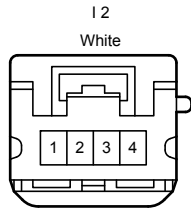


- | 1 Front No. 2 Speaker Assembly LH
- | 2 Front No. 2 Speaker Assembly LH
- | 5 Back Sonar or Clearance Sonar Switch Assembly
- | 7 Headlight Leveling Switch
- | 8 Headlight Swivel Main Switch
- | 9 Headlight Cleaner Switch Assembly
- | 12 Main Body ECU
- | 13 Main Body ECU
- | 14 Electric Power Steering Column Sub-Assembly
- | 15 Multiplex Tilt & Telescopic ECU
- | 16 Ion Generator Assembly
- | 17 Combination Meter Assembly
- | 18 Combination Meter Assembly
- | 19 Transponder Key ECU Assembly
- | 20 ID Code Box
- | 22 Electric Power Steering Column Sub-Assembly
- | 23 Electric Power Steering Column Sub-Assembly
- | 24 Steering Lock Actuator Assembly
- | 25 Headlight Dimmer Switch Assembly
- | 26 Tilt & Telescopic Switch
- | 27 Spiral Cable Sub-Assembly
- | 28 Spiral Cable Sub-Assembly
- | 29 Steering Sensor
- | 31 Windshield Wiper Switch Assembly
- | 32 Windshield Wiper Switch Assembly
- | 33 Un-Lock Warning Switch Assembly
- | 34 Transponder Key Amplifier
- | 35 Key Inter Lock Solenoid
- | 36 Ignition or Starter Switch Assembly
- | 39 DLC3
- | 40 Lower No. 1 Instrument Panel Airbag Assembly
- | 42 Shift Lock Control ECU (Lower Shift Lever Assembly)
- | 43 Shift Lock Control ECU (Lower Shift Lever Assembly)
- | 44 Transmission Control Switch (Lower Shift Lever Assembly)
- | 45 No. 3 Power Outlet Socket Assembly
- | 46 No. 1 Indoor Electrical Key Antenna Assembly
- | 47 Airbag Sensor Assembly
- | 50 Rear Sunshade Switch Assembly
- | 51 Cigarette Lighter Assembly
- | 52 Seat Heater Switch LH
- | 53 Seat Heater Switch RH
- | 54 No. 1 Clearance Warning Buzzer
- | 56 A/C Control Assembly
- | 57 Cooler (Room Temperature Sensor) Thermistor
- | 58 Engine Switch
- | 59 Clock Assembly
- | 60 Front No. 3 Speaker Assembly
- | 61 Automatic Light Control Sensor
- | 62 Shift Position Indicator (Indicator Light Wire Sub-Assembly)

Position of Parts in Instrument Panel <LHD>

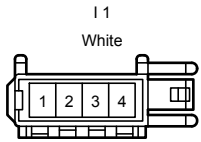

Position of Parts in Instrument Panel <LHD>

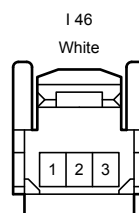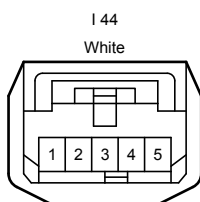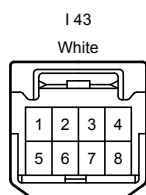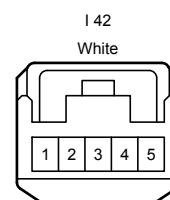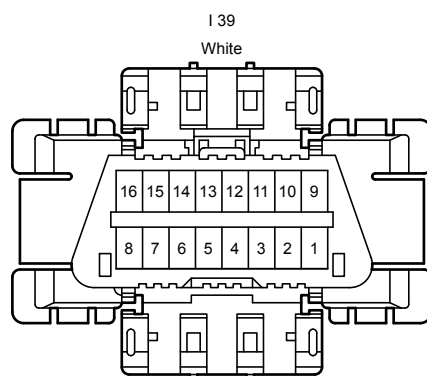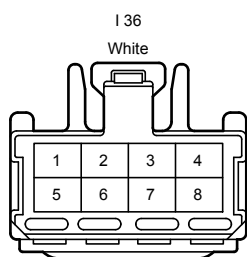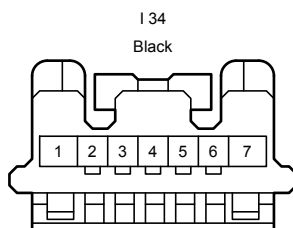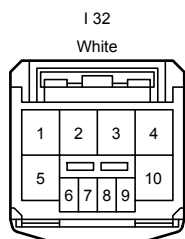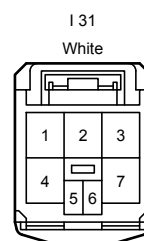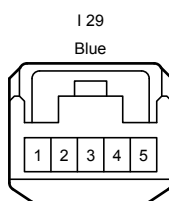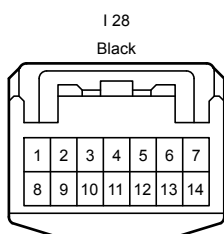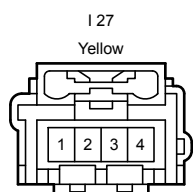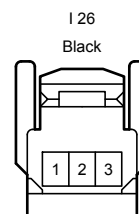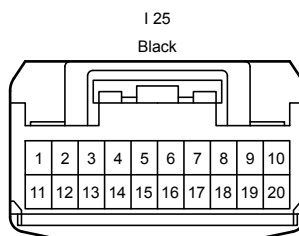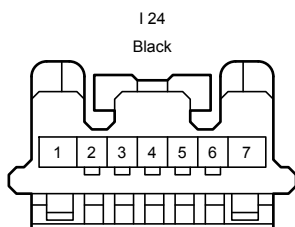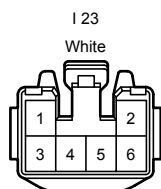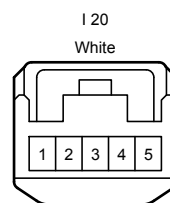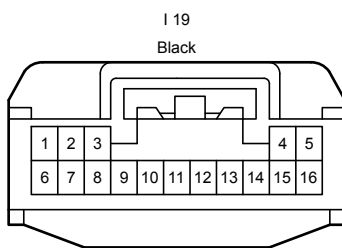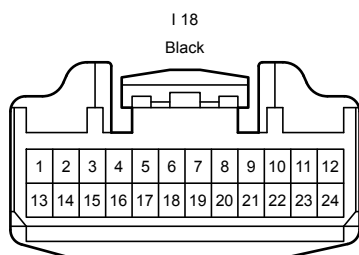

Position of Parts in Instrument Panel <LHD>

