

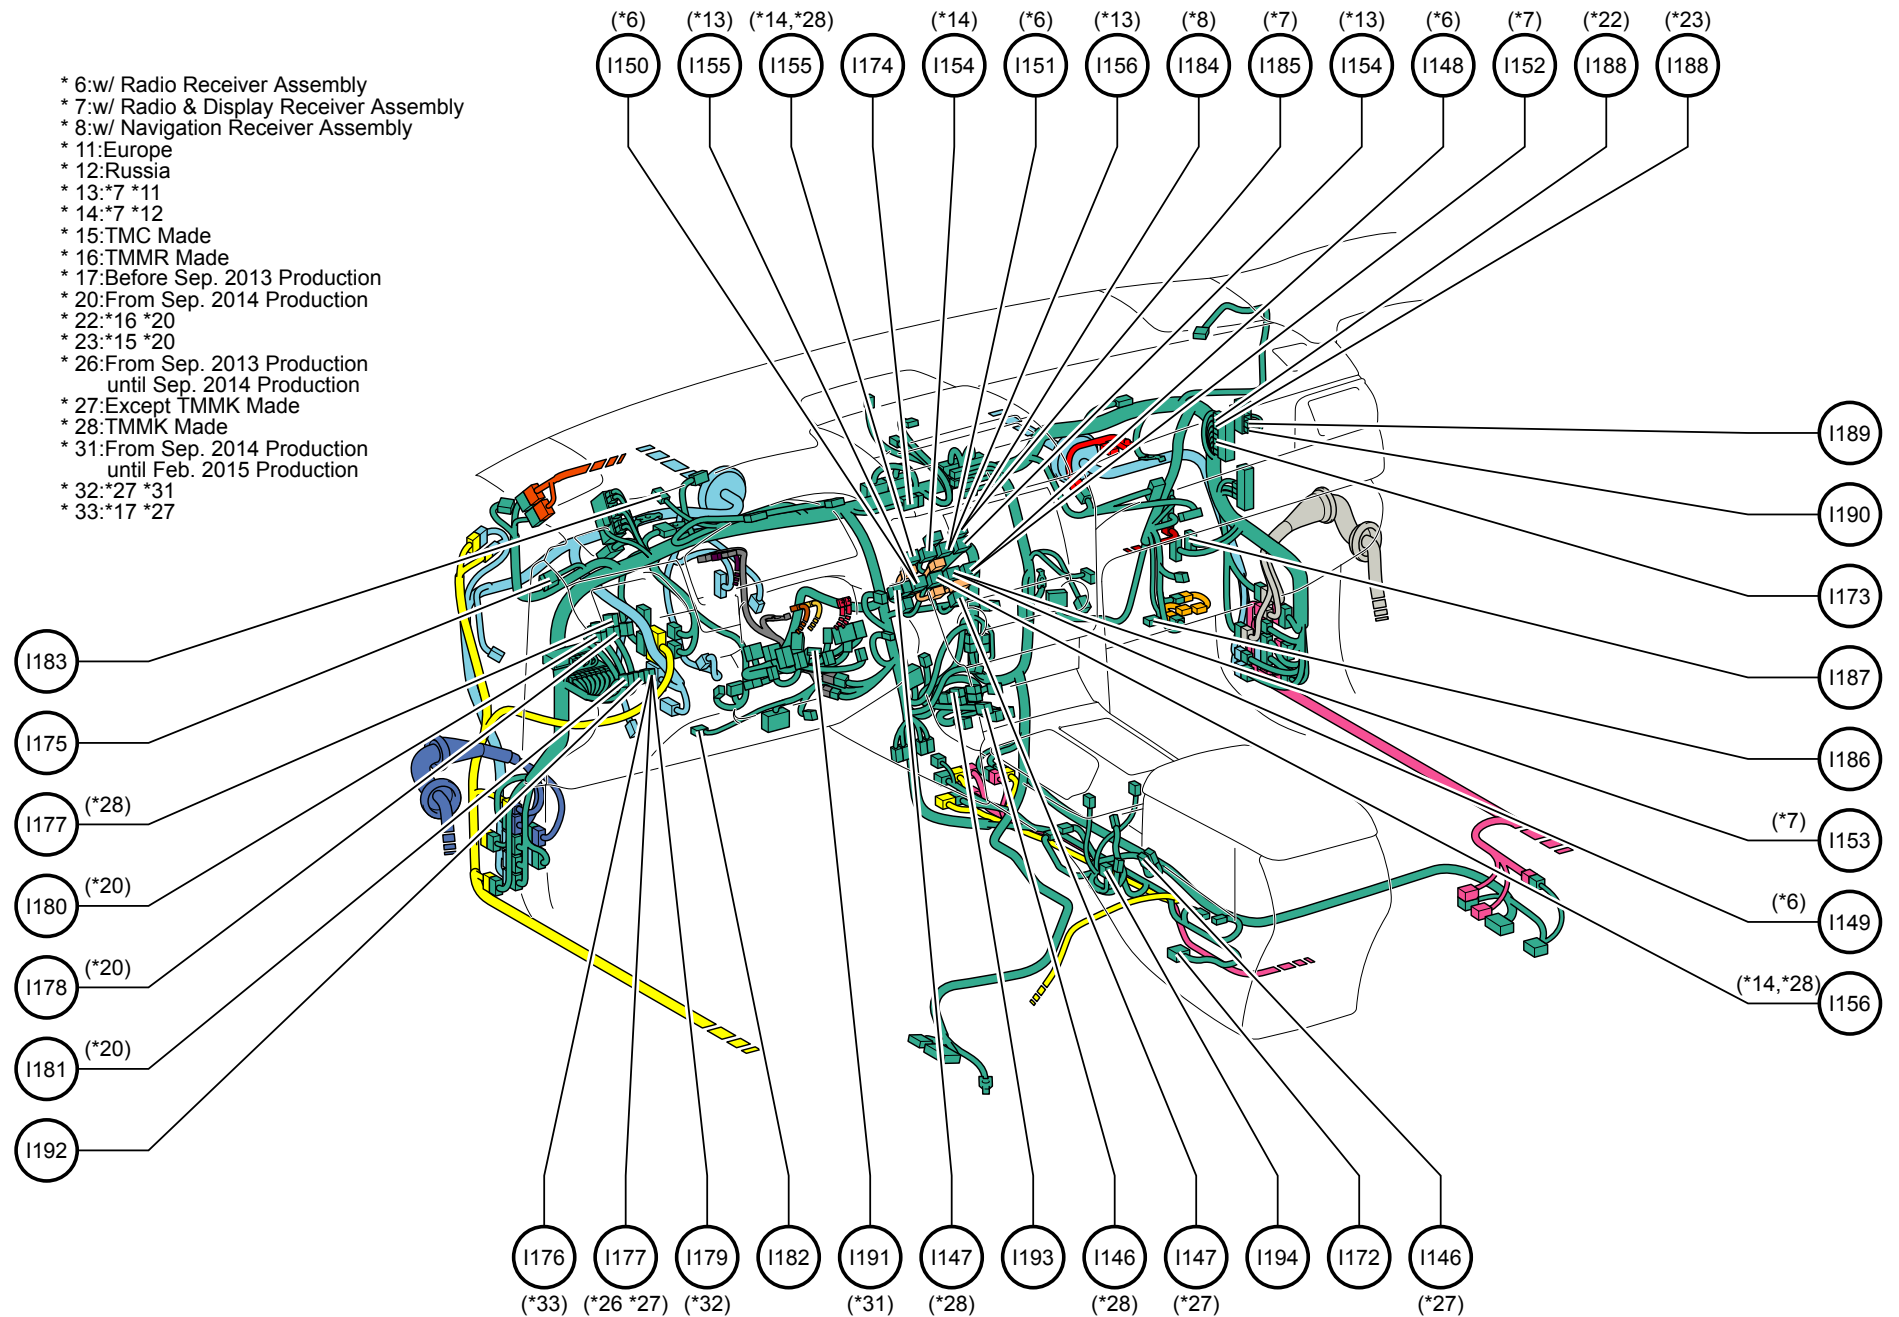
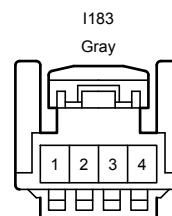
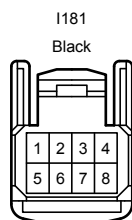
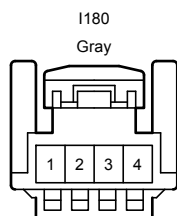
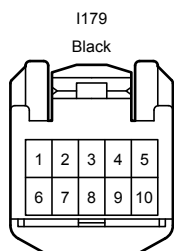
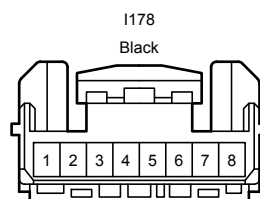
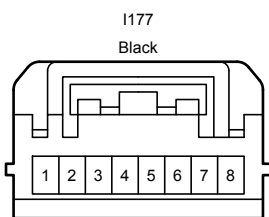
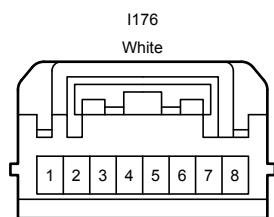
 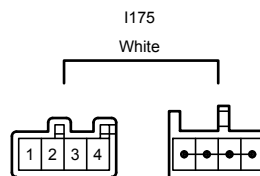
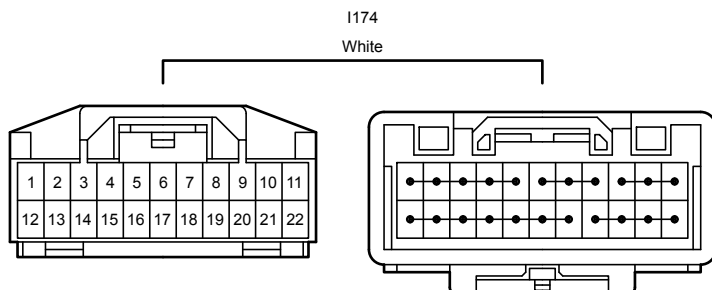

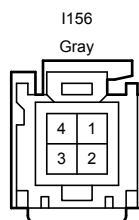
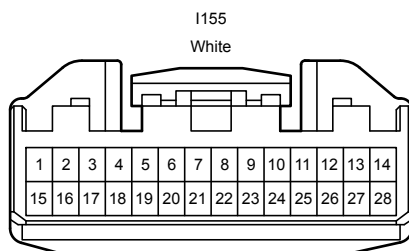
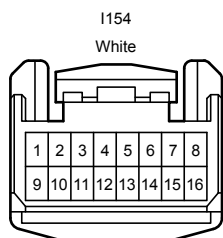
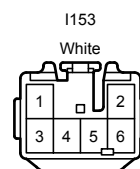
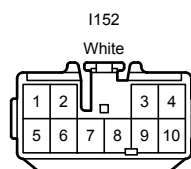
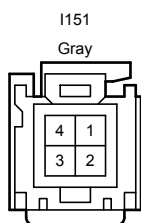
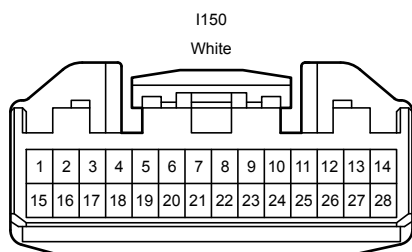
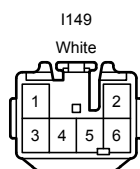
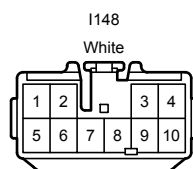


Position of Parts in Instrument Panel <LHD>

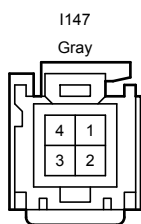

- I 146 No. 1 Stereo Jack Adapter Assembly
- I 147 Navigation Receiver Assembly
- I 148 Radio Receiver Assembly
- I 149 Radio Receiver Assembly
- I 150 Radio Receiver Assembly
- I 151 Radio Receiver Assembly
- I 152 Radio & Display Receiver Assembly
- I 153 Radio & Display Receiver Assembly
- I 154 Radio & Display Receiver Assembly
- I 155 Radio & Display Receiver Assembly
- I 156 Radio & Display Receiver Assembly
- I 172 Yaw Rate Sensor
- I 173 Junction Connector
- I 174 Junction Connector
- I 175 Junction Connector
- I 176 Vehicle Stability Control Switch
- I 177 Vehicle Stability Control Switch
- I 178 Back Sonar or Clearance Sonar Switch Assembly
- I 179 Vehicle Stability Control Switch
- I 180 Headlight Swivel Main Switch
- I 181 Headlight Cleaner Switch Assembly
- I 182 Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
- I 183 Ion Generator Assembly
- I 184 Navigation Receiver Assembly
- I 185 Radio & Display Receiver Assembly
- I 186 Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
- I 187 Network Gateway ECU
- I 188 Junction Connector
- I 189 Junction Connector
- I 190 Junction Connector
- I 191 Transponder Key Coil
- I 192 Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
- I 193 Front Wiper Deicer Switch
- I 194 Mobile Wireless Charger Cradle Assembly

Position of Parts in Instrument Panel <LHD>

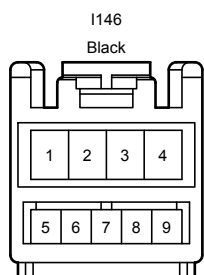

Position of Parts in Instrument Panel <LHD>

