
 
 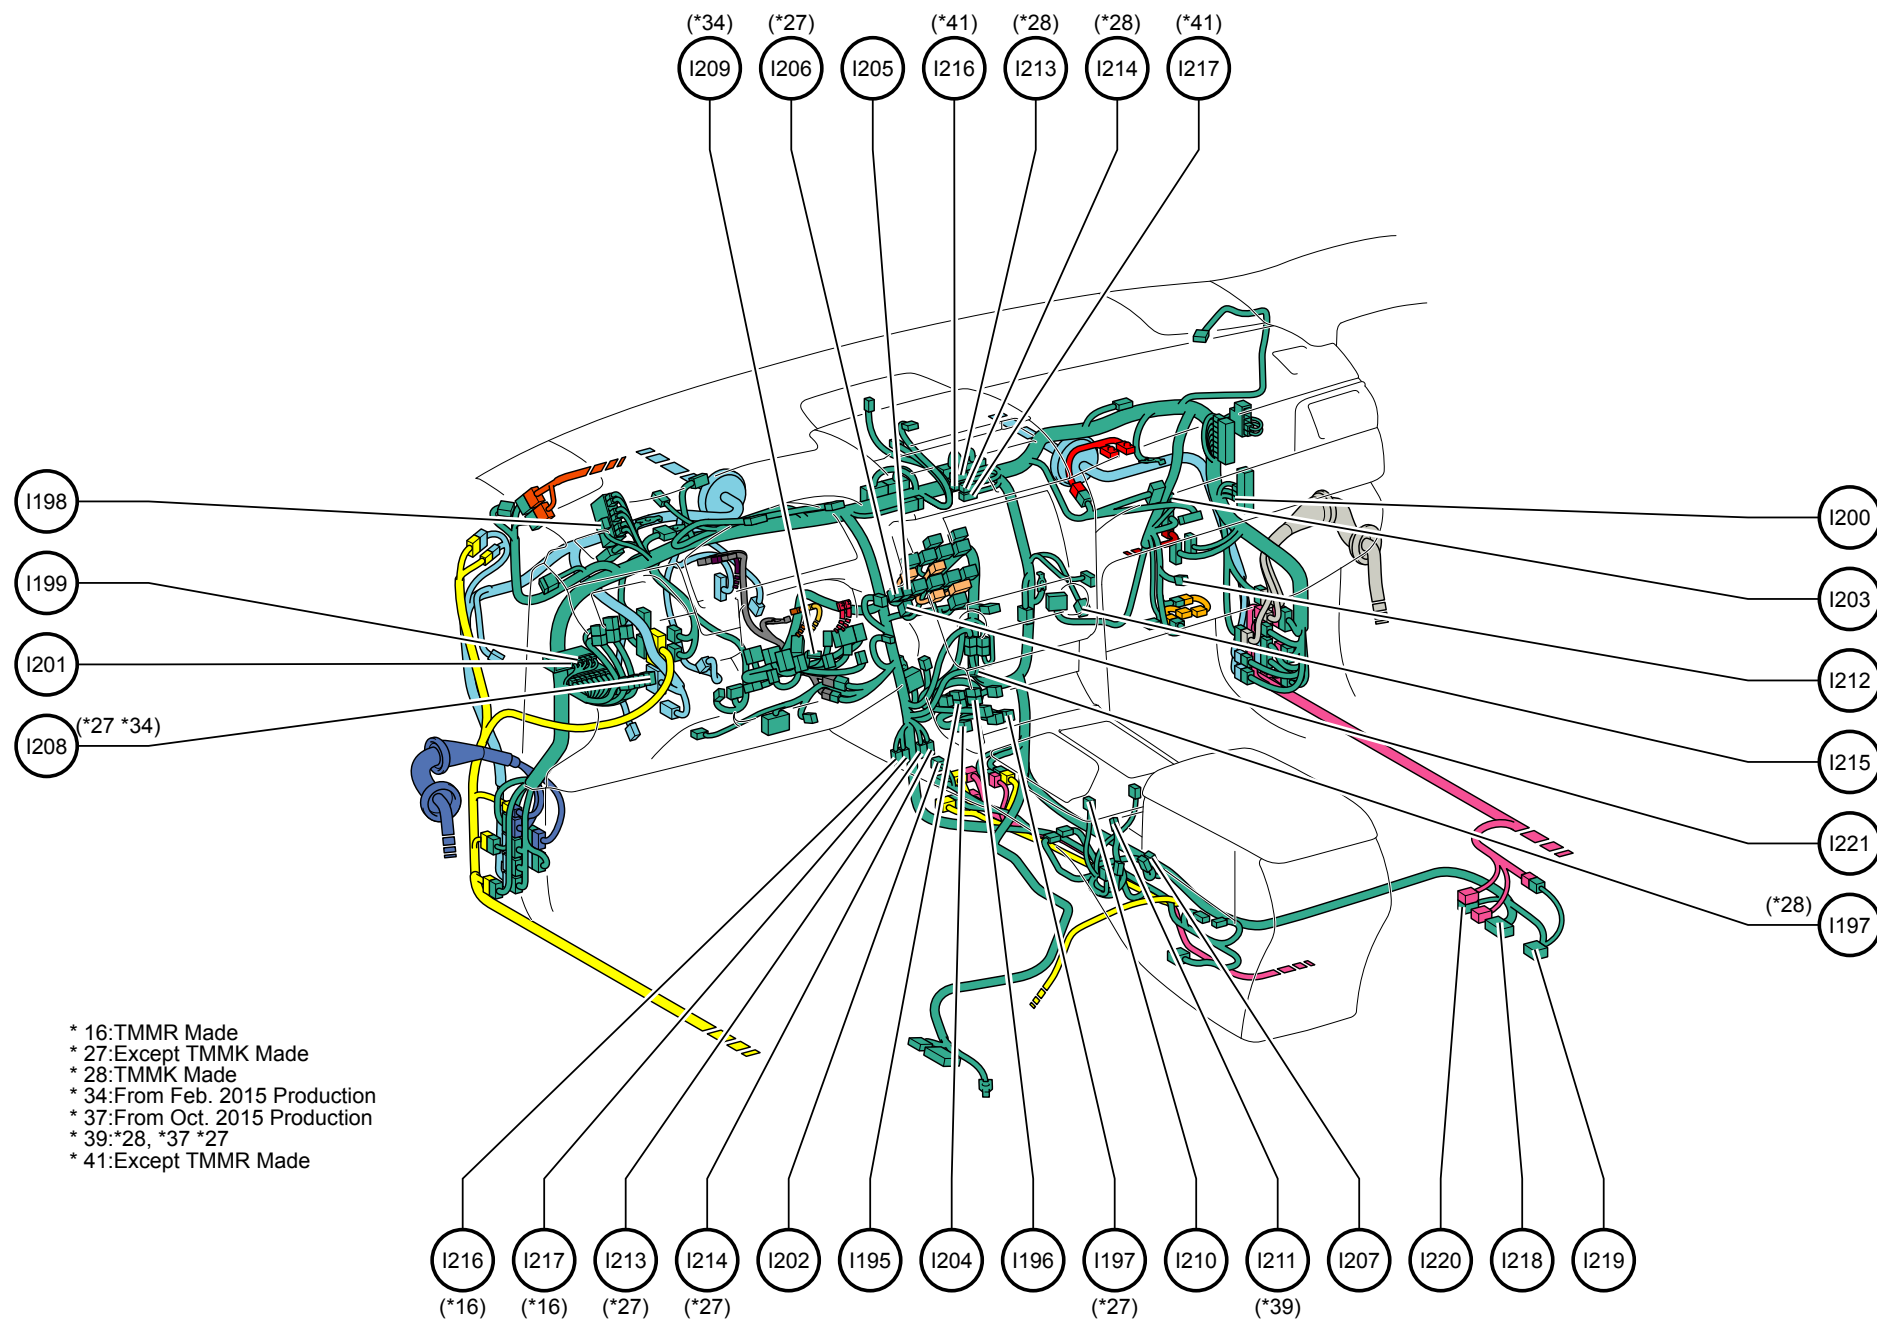
 
 


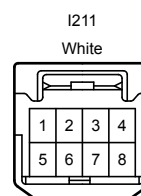
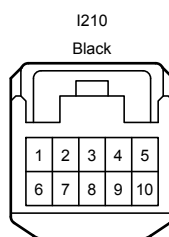
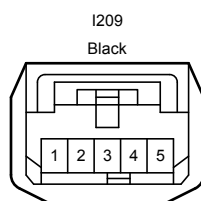
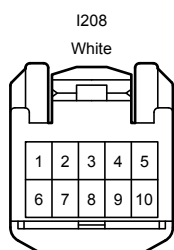
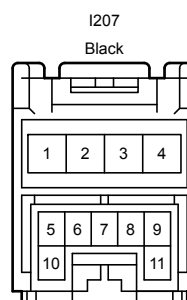
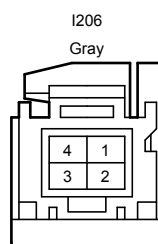
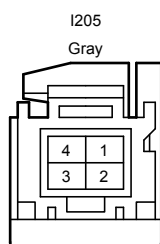
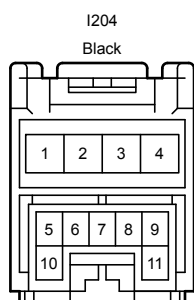
 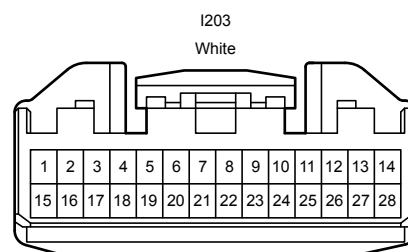
 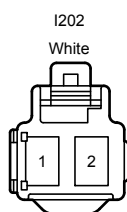
 


 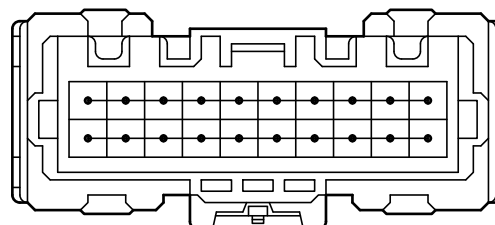
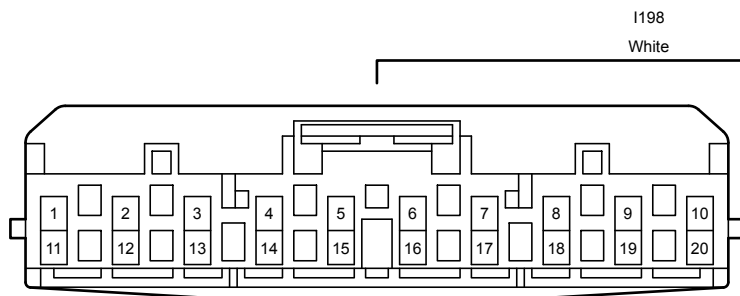



# Position of Parts in Instrument Panel <LHD>

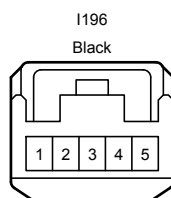


- I 195 Front Window Deicer Switch
- I 196 Rear Sunshade Switch Assembly
- I 197 No. 1 Rear Power Outlet Socket Assembly
- I 198 Junction Connector
- I 199 Junction Connector
- I 200 Junction Connector
- I 201 Junction Connector
- I 202 Quick Heater Assembly
- I 203 A/C Amplifier Assembly
- I 204 No. 1 Stereo Jack Adapter Assembly
- I 205 Radio & Display Receiver Assembly
- I 206 Navigation Receiver Assembly
- I 207 No. 1 Stereo Jack Adapter Assembly
- I 208 Vehicle Stability Control Switch
- I 209 Transponder Key Coil
- I 210 Seat Heater Switch LH
- I 211 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
- I 212 Lower No. 2 Instrument Panel Airbag Assembly
- I 213 Diode (A/T Shift)
- I 214 Diode (A/T Shift)
- I 215 Tire Pressure Warning Reset Switch
- I 216 Diode (A/T Shift)
- I 217 Diode (A/T Shift)
- I 218 DCM (Telematics Transceiver)
- I 219 Antenna Divider
- I 220 DCM (Telematics Transceiver)
- I 221 Navigation ECU

# Position of Parts in Instrument Panel <LHD>

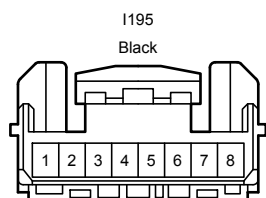


## Position of Parts in Instrument Panel <LHD>


I218  
White

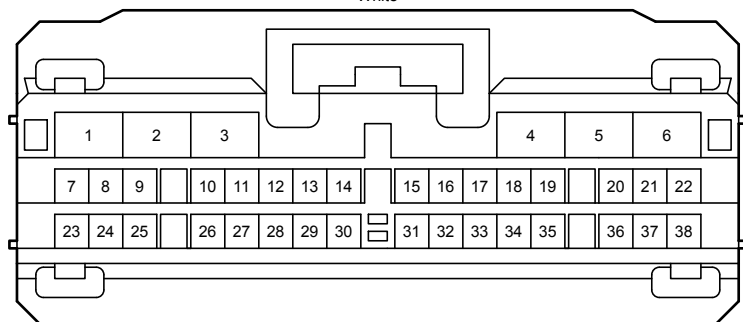

I219  
White

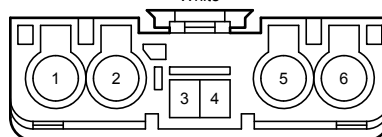

I220

 

I221

White

