


Position of Parts in Instrument Panel <LHD>








 
 



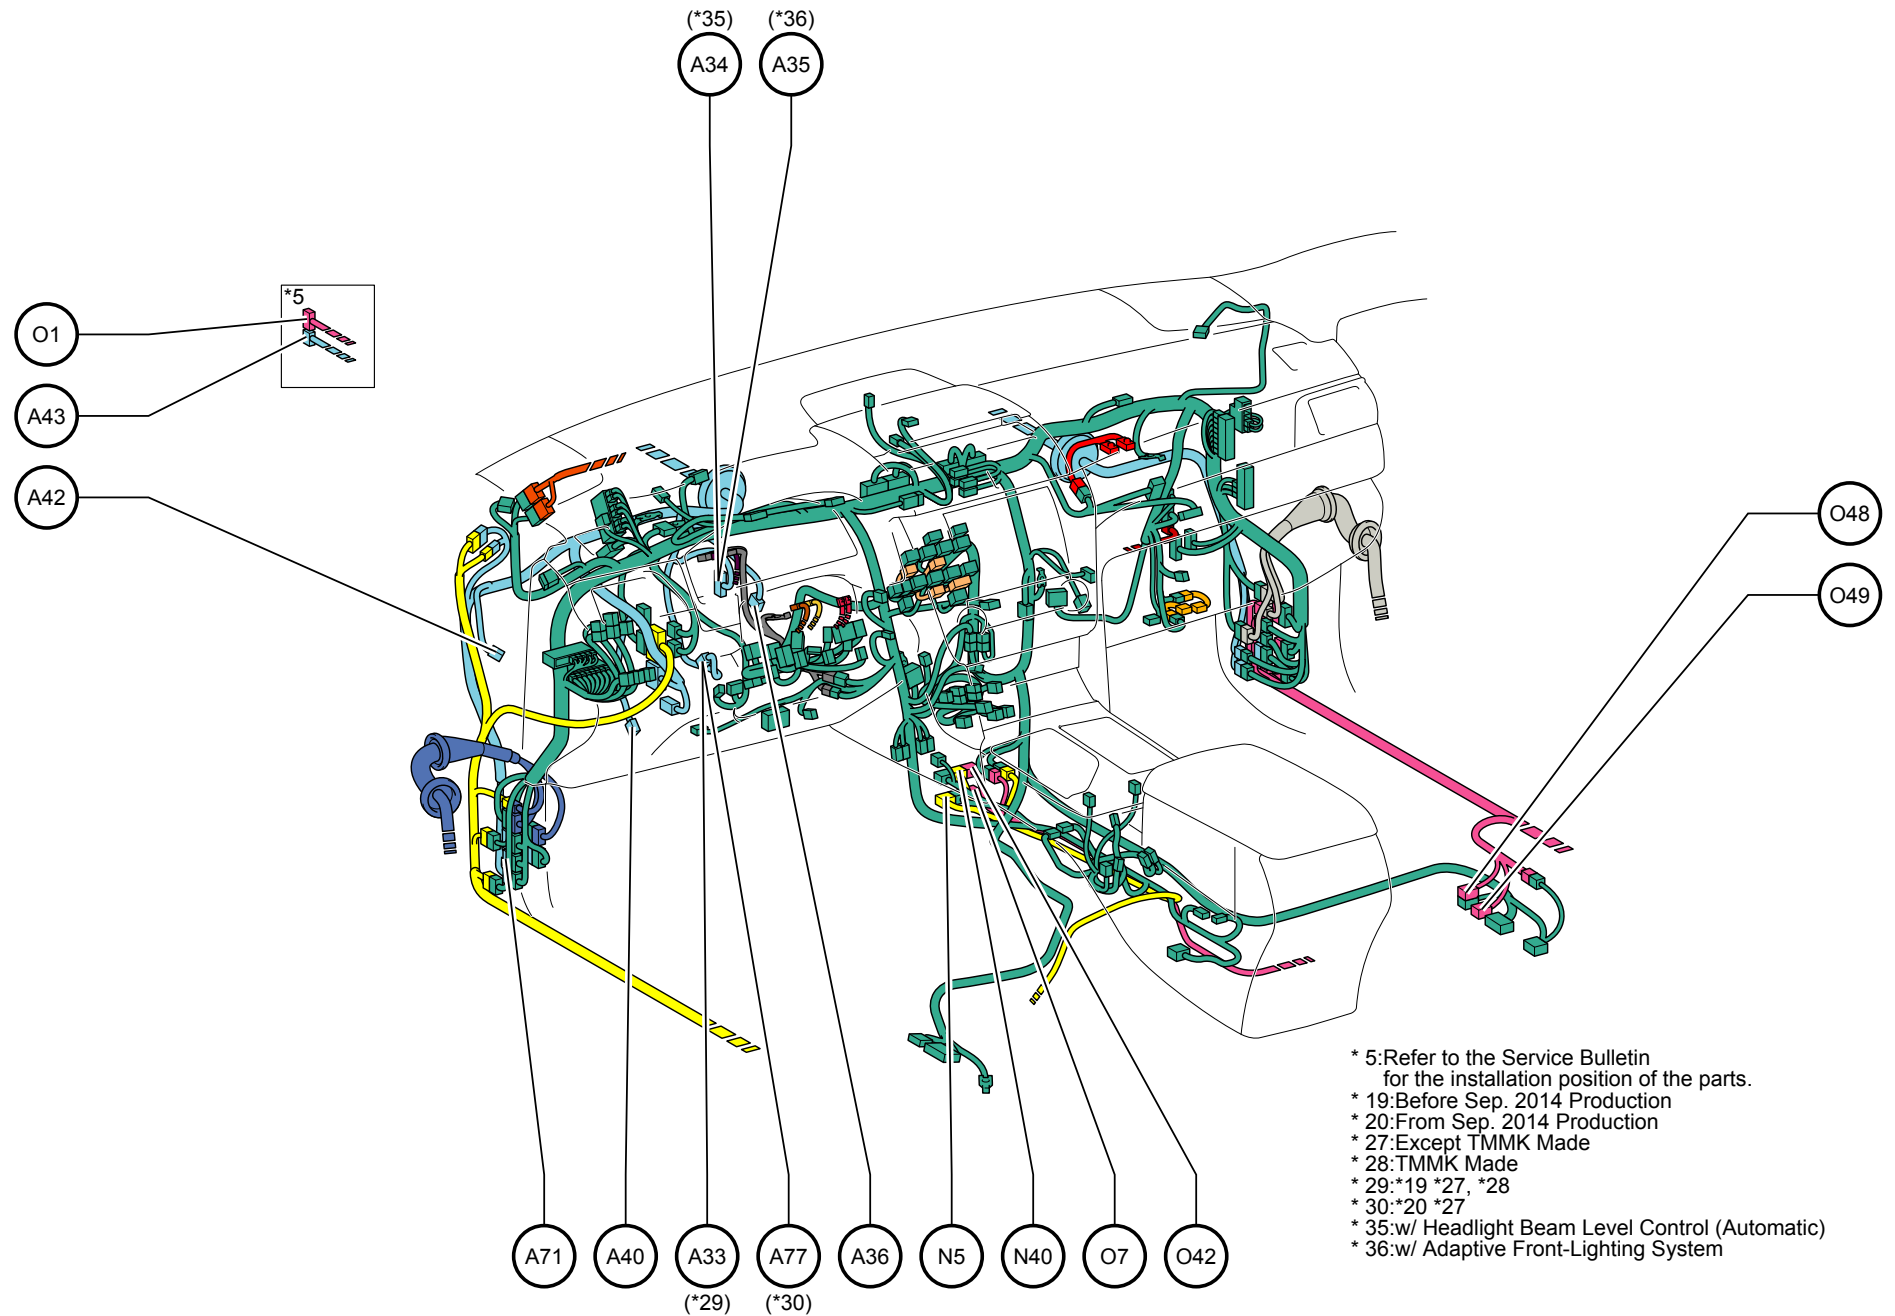


A 33 Stop Light Switch Assembly
A 34 Headlight Leveling ECU Assembly
A 35 Headlight Swivel ECU Assembly
A 36 Accelerator Pedal Sensor Assembly
A 40 Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A 42 Parking Brake Switch Assembly
A 43 Certification ECU
A 71 Junction Connector
A 77 Stop Light Switch Assembly

N 5 Airbag Sensor Assembly
N 40 Airbag Sensor Assembly

O 1 Certification ECU
O 7 Airbag Sensor Assembly
O 42 Airbag Sensor Assembly
O 48 DCM (Telematics Transceiver)
O 49 DCM (Telematics Transceiver)

Position of Parts in Instrument Panel <LHD>

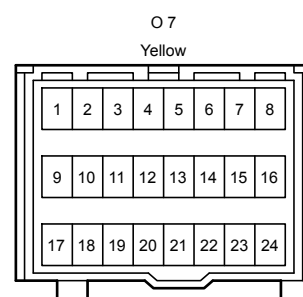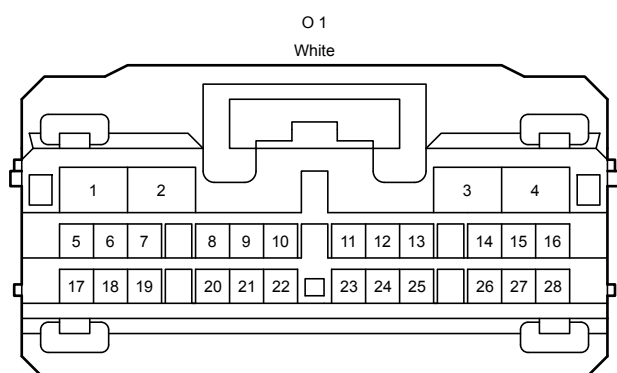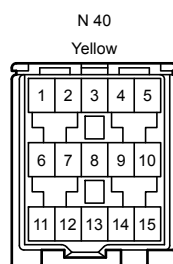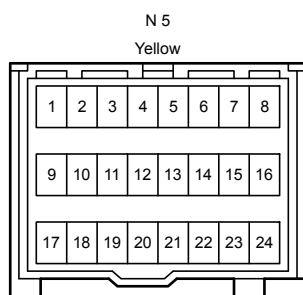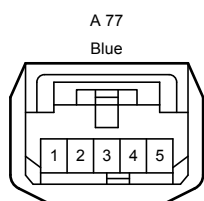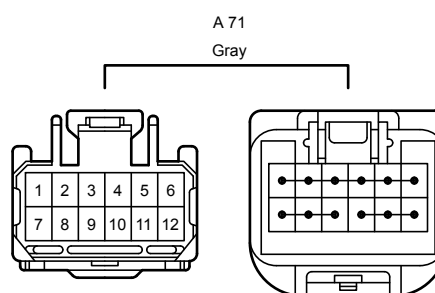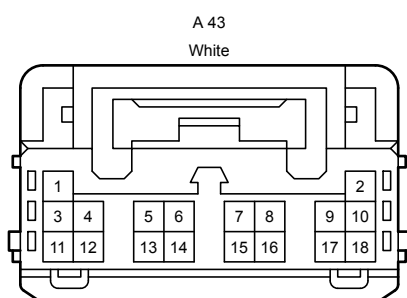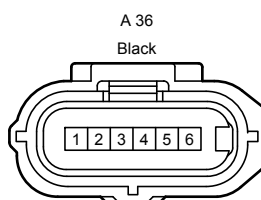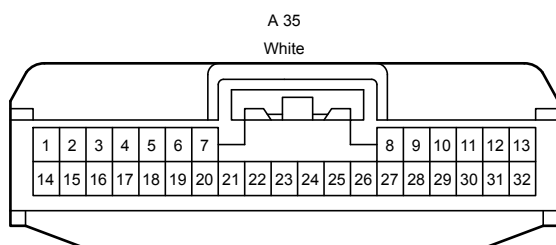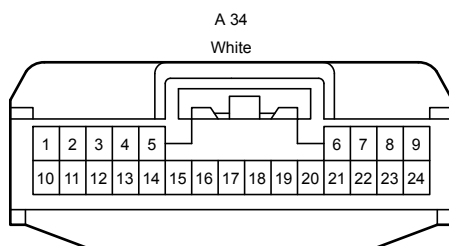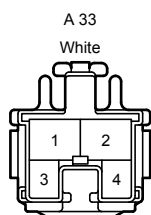

Position of Parts in Instrument Panel <LHD>

