


Position of Parts in Engine Compartment <2GR-FE>

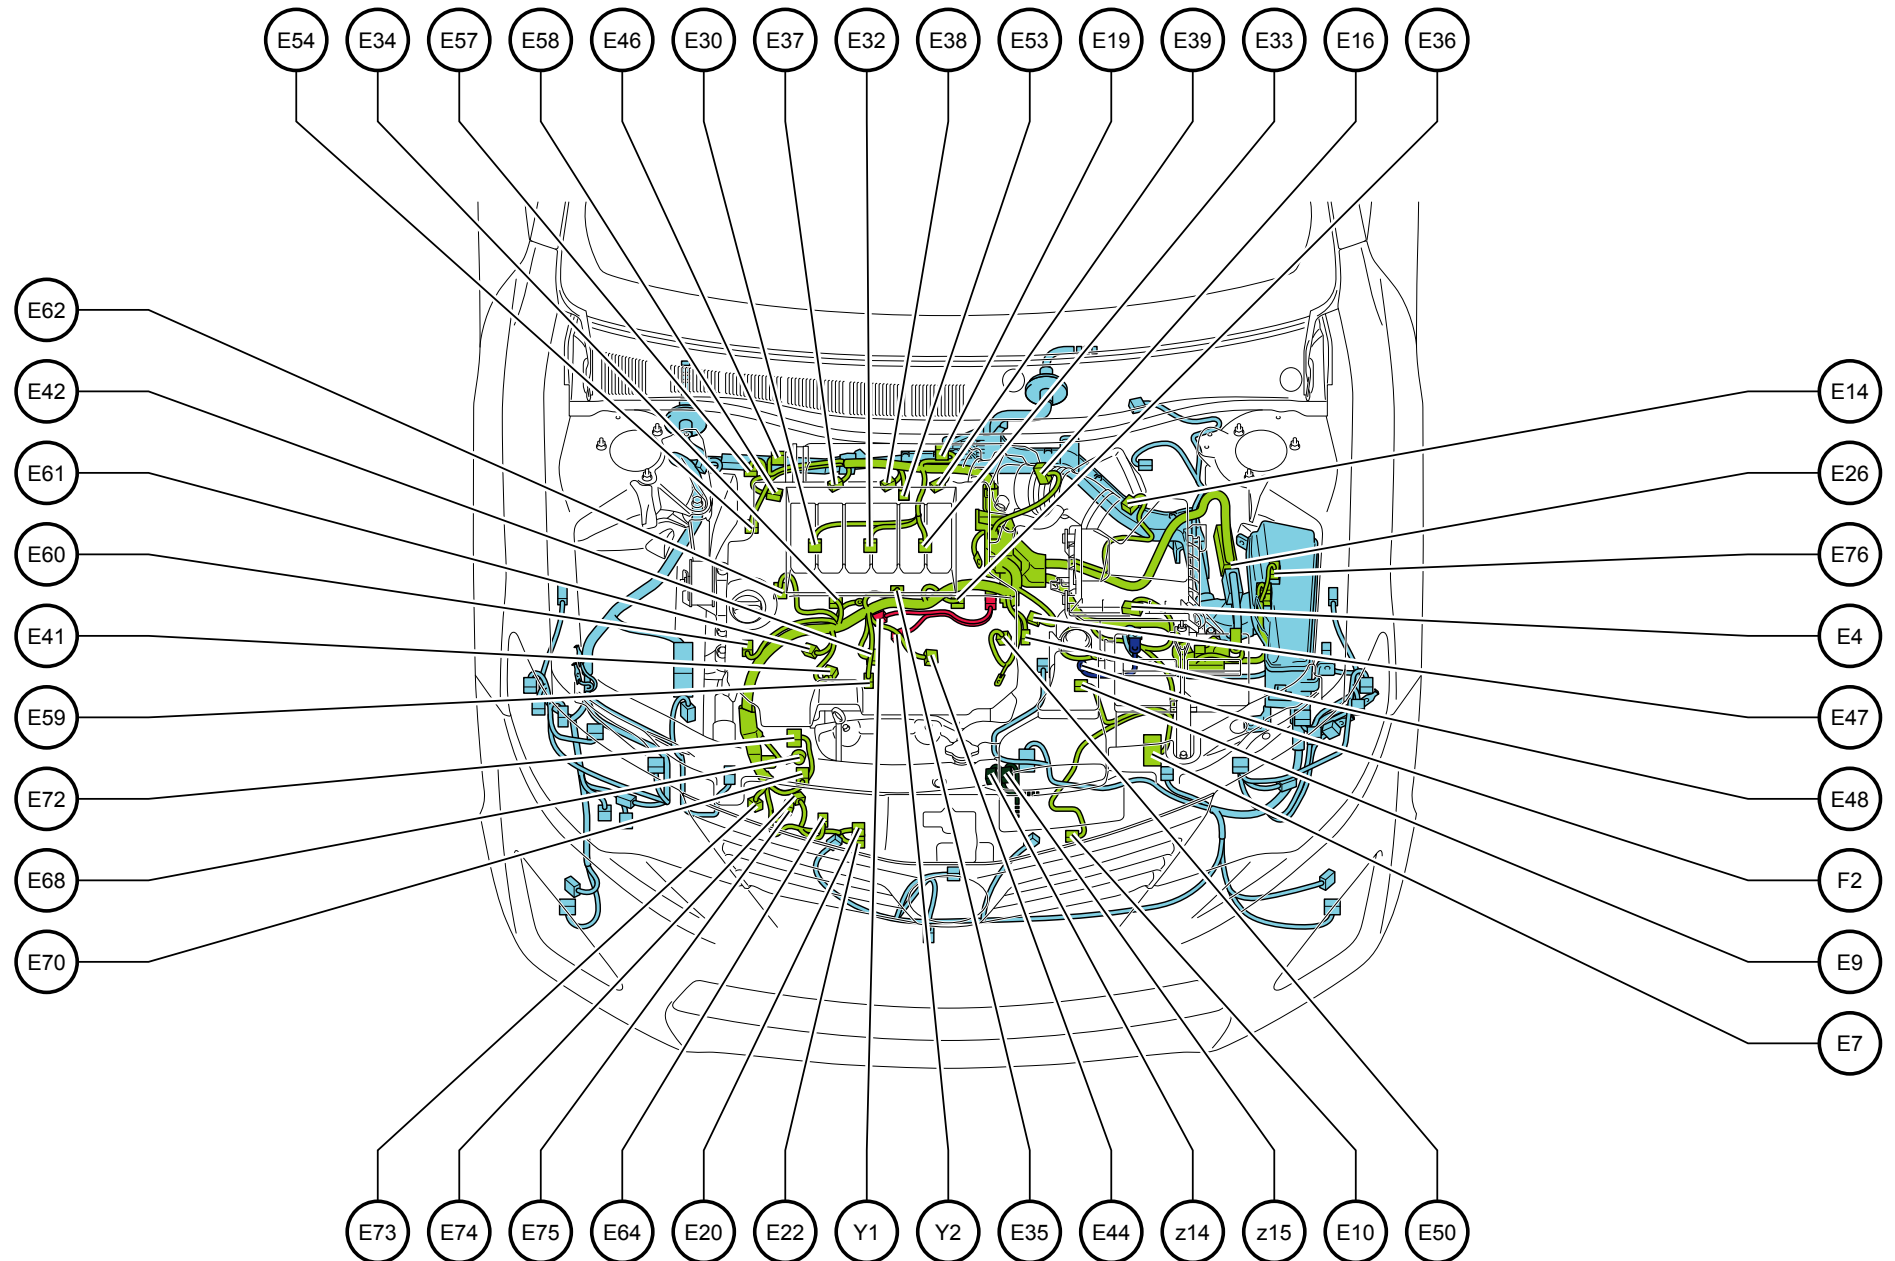

- E 4 Park/Neutral Position Switch Assembly
- E 7 Transmission Control ECU Assembly
- E 9 Starter Assembly
- E 10 VSV (ACM)
- E 14 Intake Mass Air Flow Meter Sub-Assembly
- E 16 Throttle Body Assembly with Motor
- E 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 20 Oxygen Sensor (Bank 2 Sensor 2)
- E 22 Oxygen Sensor (Bank 1 Sensor 2)
- E 26 ECM
- E 30 Fuel Injector Assembly No. 1
- E 32 Fuel Injector Assembly No. 3
- E 33 Fuel Injector Assembly No. 5
- E 34 Fuel Injector Assembly No. 2
- E 35 Fuel Injector Assembly No. 4
- E 36 Fuel Injector Assembly No. 6
- E 37 Ignition Coil Assembly No. 1
- E 38 Ignition Coil Assembly No. 3
- E 39 Ignition Coil Assembly No. 5
- E 41 Ignition Coil Assembly No. 2
- E 42 Ignition Coil Assembly No. 4
- E 44 Ignition Coil Assembly No. 6
- E 46 VSV (ACIS)
- E 47 E.F.I. Engine Coolant Temperature Sensor
- E 48 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 50 Purge VSV
- E 53 VVT Sensor (Bank 1 Exhaust Side)
- E 54 VVT Sensor (Bank 1 Intake Side)
- E 57 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- E 58 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- E 59 VVT Sensor (Bank 2 Exhaust Side)
- E 60 VVT Sensor (Bank 2 Intake Side)
- E 61 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- E 62 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- E 64 Engine Oil Pressure Switch Assembly
- E 68 Generator Assembly
- E 70 Generator Assembly
- E 72 Crank Position Sensor
- E 73 Compressor Assembly with Pulley
- E 74 Compressor Assembly with Pulley
- E 75 Compressor Assembly with Pulley
- E 76 Junction Connector

- F 2 Starter Assembly

- Y 1 Knock Control Sensor (Bank 1)
- Y 2 Knock Control Sensor (Bank 2)

- z 14 Cooling Fan ECU , Cooling Fan Motor
- z 15 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <2GR-FE>

