


Position of Parts in Body

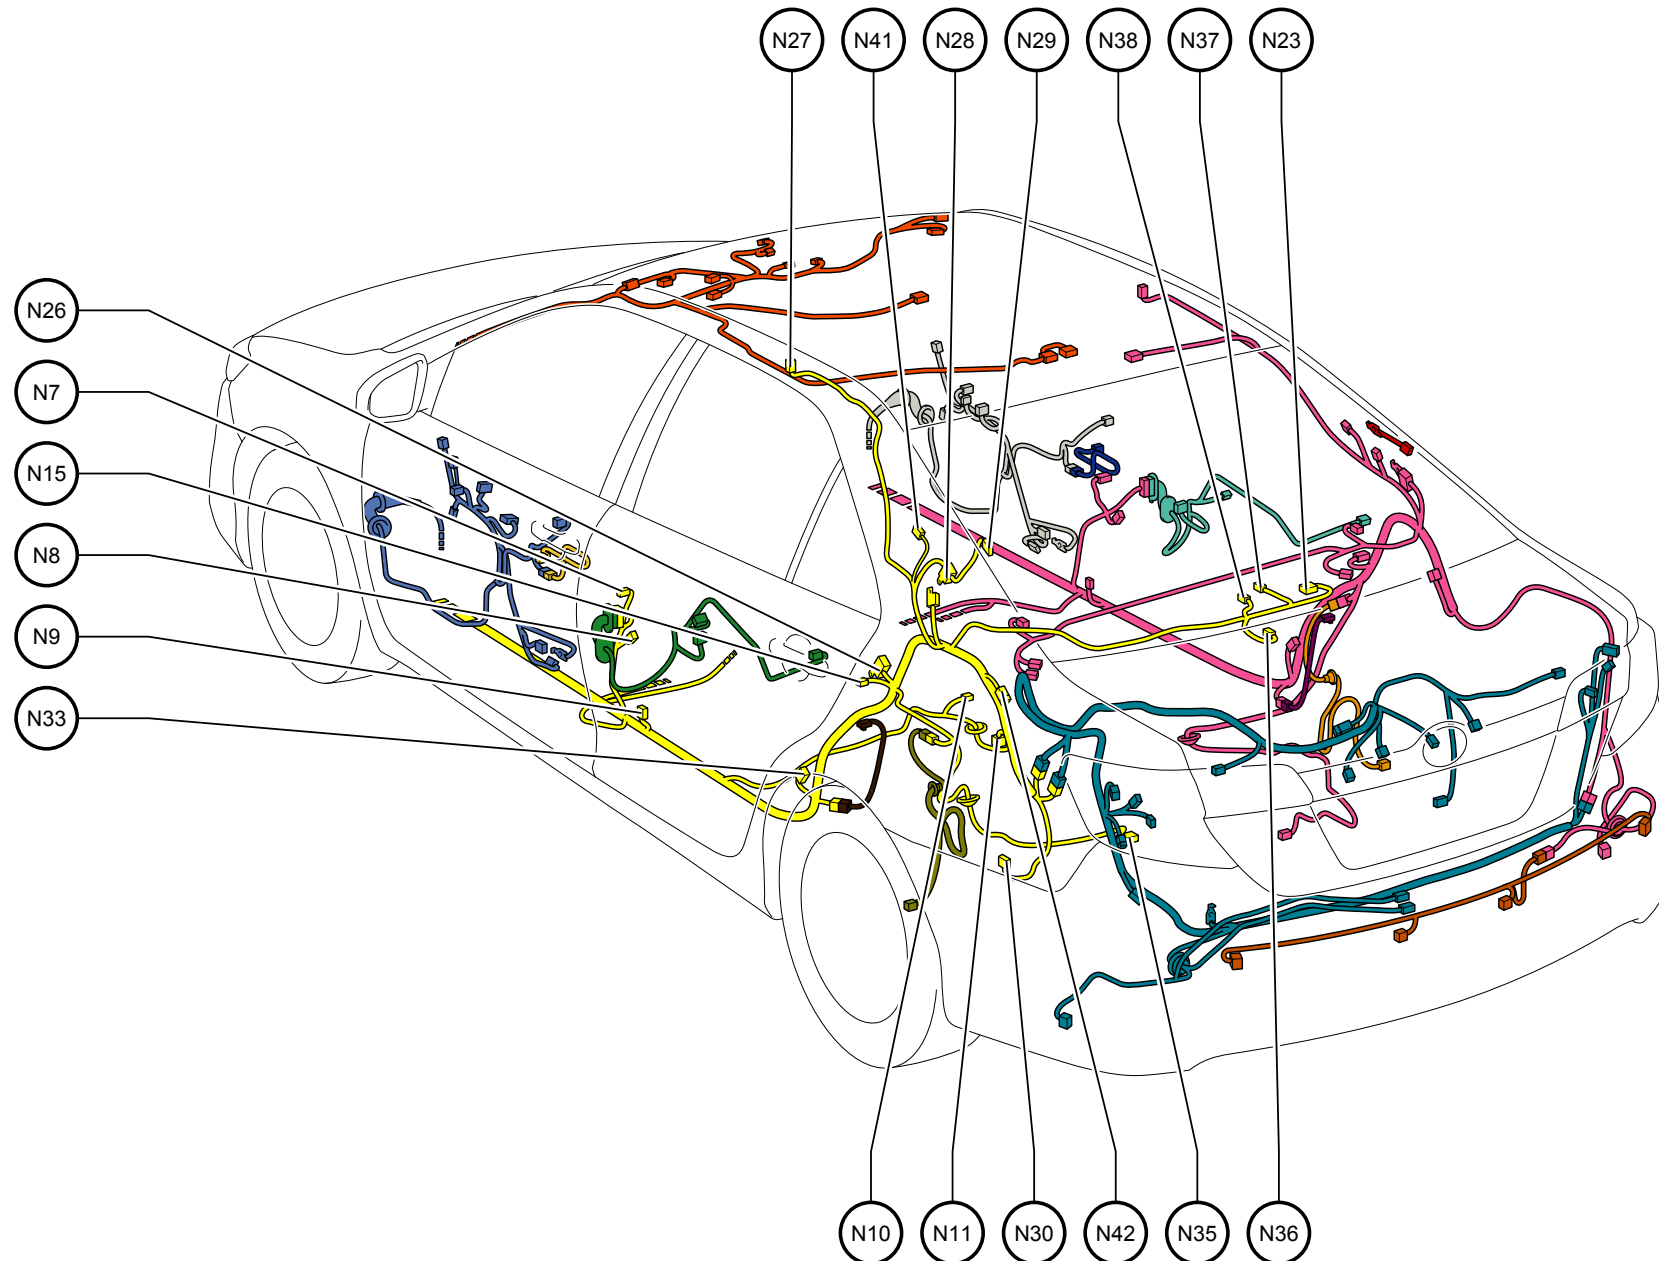

- N 7 Front Door Courtesy Light Switch Assembly LH
- N 8 Side Airbag Sensor Assembly LH
- N 9 Front Seat Outer Belt Assembly LH
- N 10 No. 2 Indoor Electrical Key Antenna Assembly
- N 11 Fuel Suction Tube Assembly with Pump & Gage
- N 15 Rear Door Courtesy Light Switch Assembly LH
- N 23 No. 1 Luggage Compartment Light Assembly
- N 26 Radio Setting Condenser (Center Stop Light)
- N 27 Curtain Shield Airbag Assembly LH
- N 28 Radio Setting Condenser (Rear Window Defogger)
- N 29 Rear Window Defogger (Back Window Glass)
- N 30 Fuel Pump Control ECU Assembly
- N 33 No. 2 Side Airbag Sensor Assembly LH
- N 35 Canister Pump Module
- N 36 No. 3 Indoor Electrical Key Antenna Assembly
- N 37 Center Stop Light Set
- N 38 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- N 41 Tire Pressure Warning ECU and Receiver
- N 42 Junction Connector

Position of Parts in Body

