


Position of Parts in Instrument Panel <Before Dec. 2013 Production>

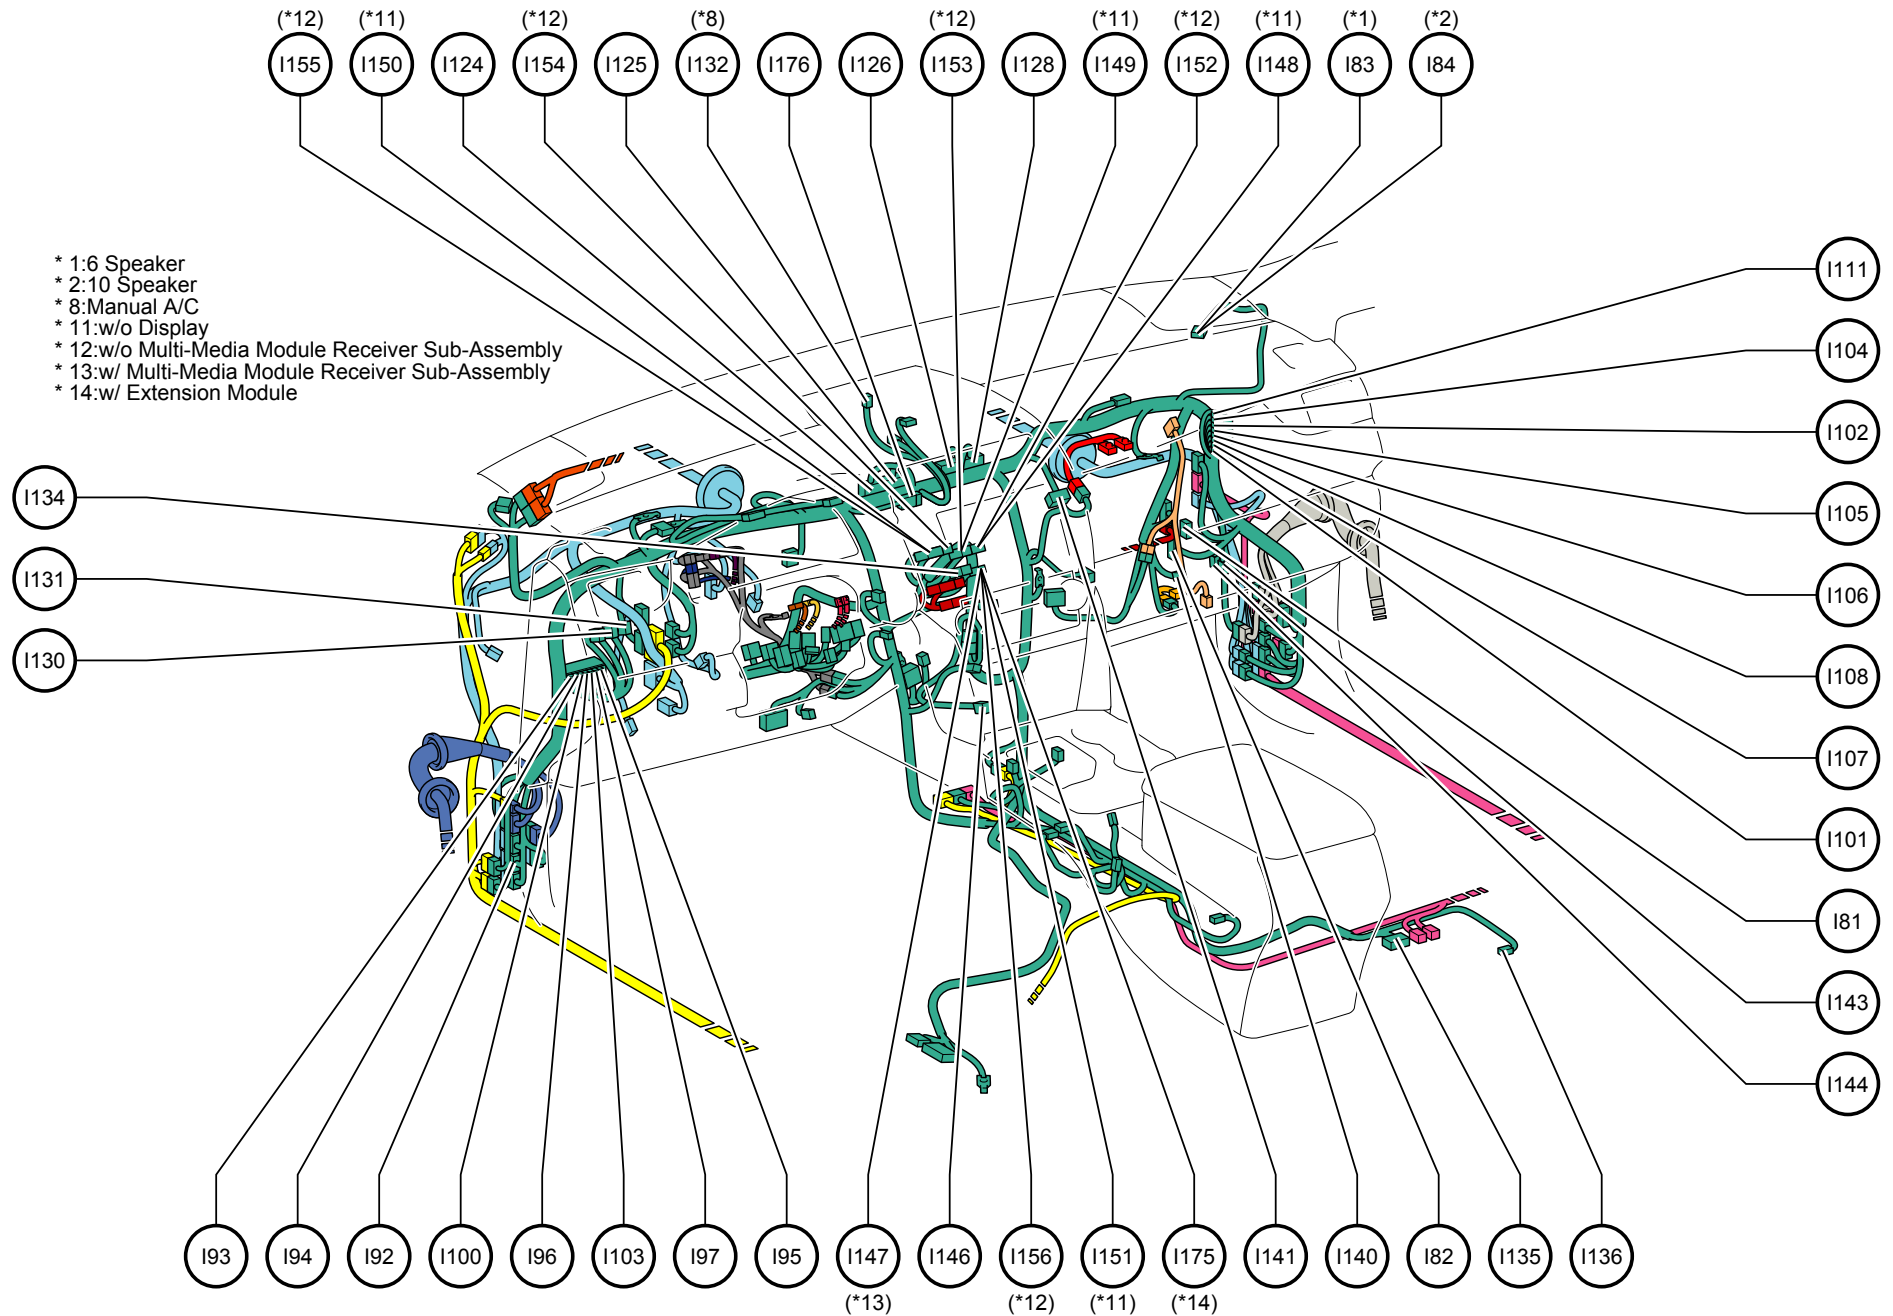

I	81	Network Gateway ECU
I	82	Clearance Warning ECU Assembly
I	83	Front No. 2 Speaker Assembly RH
I	84	Front No. 2 Speaker Assembly RH
I	92	Junction Connector
I	93	Junction Connector
I	94	Junction Connector
I	95	Junction Connector
I	96	Junction Connector
I	97	Junction Connector
I	100	Junction Connector
I	101	Junction Connector
I	102	Junction Connector
I	103	Junction Connector
I	104	Junction Connector
I	105	Junction Connector
I	106	Junction Connector
I	107	Junction Connector
I	108	Junction Connector
I	111	Junction Connector
I	124	Junction Connector
I	125	Junction Connector
I	126	Junction Connector
I	128	Junction Connector
I	130	VSC Off Switch
I	131	Headlight Leveling Switch
I	132	Automatic Light Control Sensor
I	134	Radio & Display Receiver Assembly
I	135	DCM (Telematics Transceiver)
I	136	Back-Up Battery (Mayday Battery)
I	140	Lower No. 2 Instrument Panel Airbag Assembly
I	141	Remote Engine Starter
I	143	Check Connector (Remote Engine Starter)
I	144	Check Connector (Remote Engine Starter)
I	146	No. 1 Stereo Jack Adapter Assembly
I	147	Multi-Media Module Receiver Sub-Assembly
I	148	Radio Receiver Assembly
I	149	Radio Receiver Assembly
I	150	Radio Receiver Assembly
I	151	Radio Receiver Assembly
I	152	Radio & Display Receiver Assembly
I	153	Radio & Display Receiver Assembly
I	154	Radio & Display Receiver Assembly
I	155	Radio & Display Receiver Assembly
I	156	Radio & Display Receiver Assembly
I	175	Extension Module
I	176	Junction Connector

Position of Parts in Instrument Panel <Before Dec. 2013 Production>

