


Position of Parts in Body

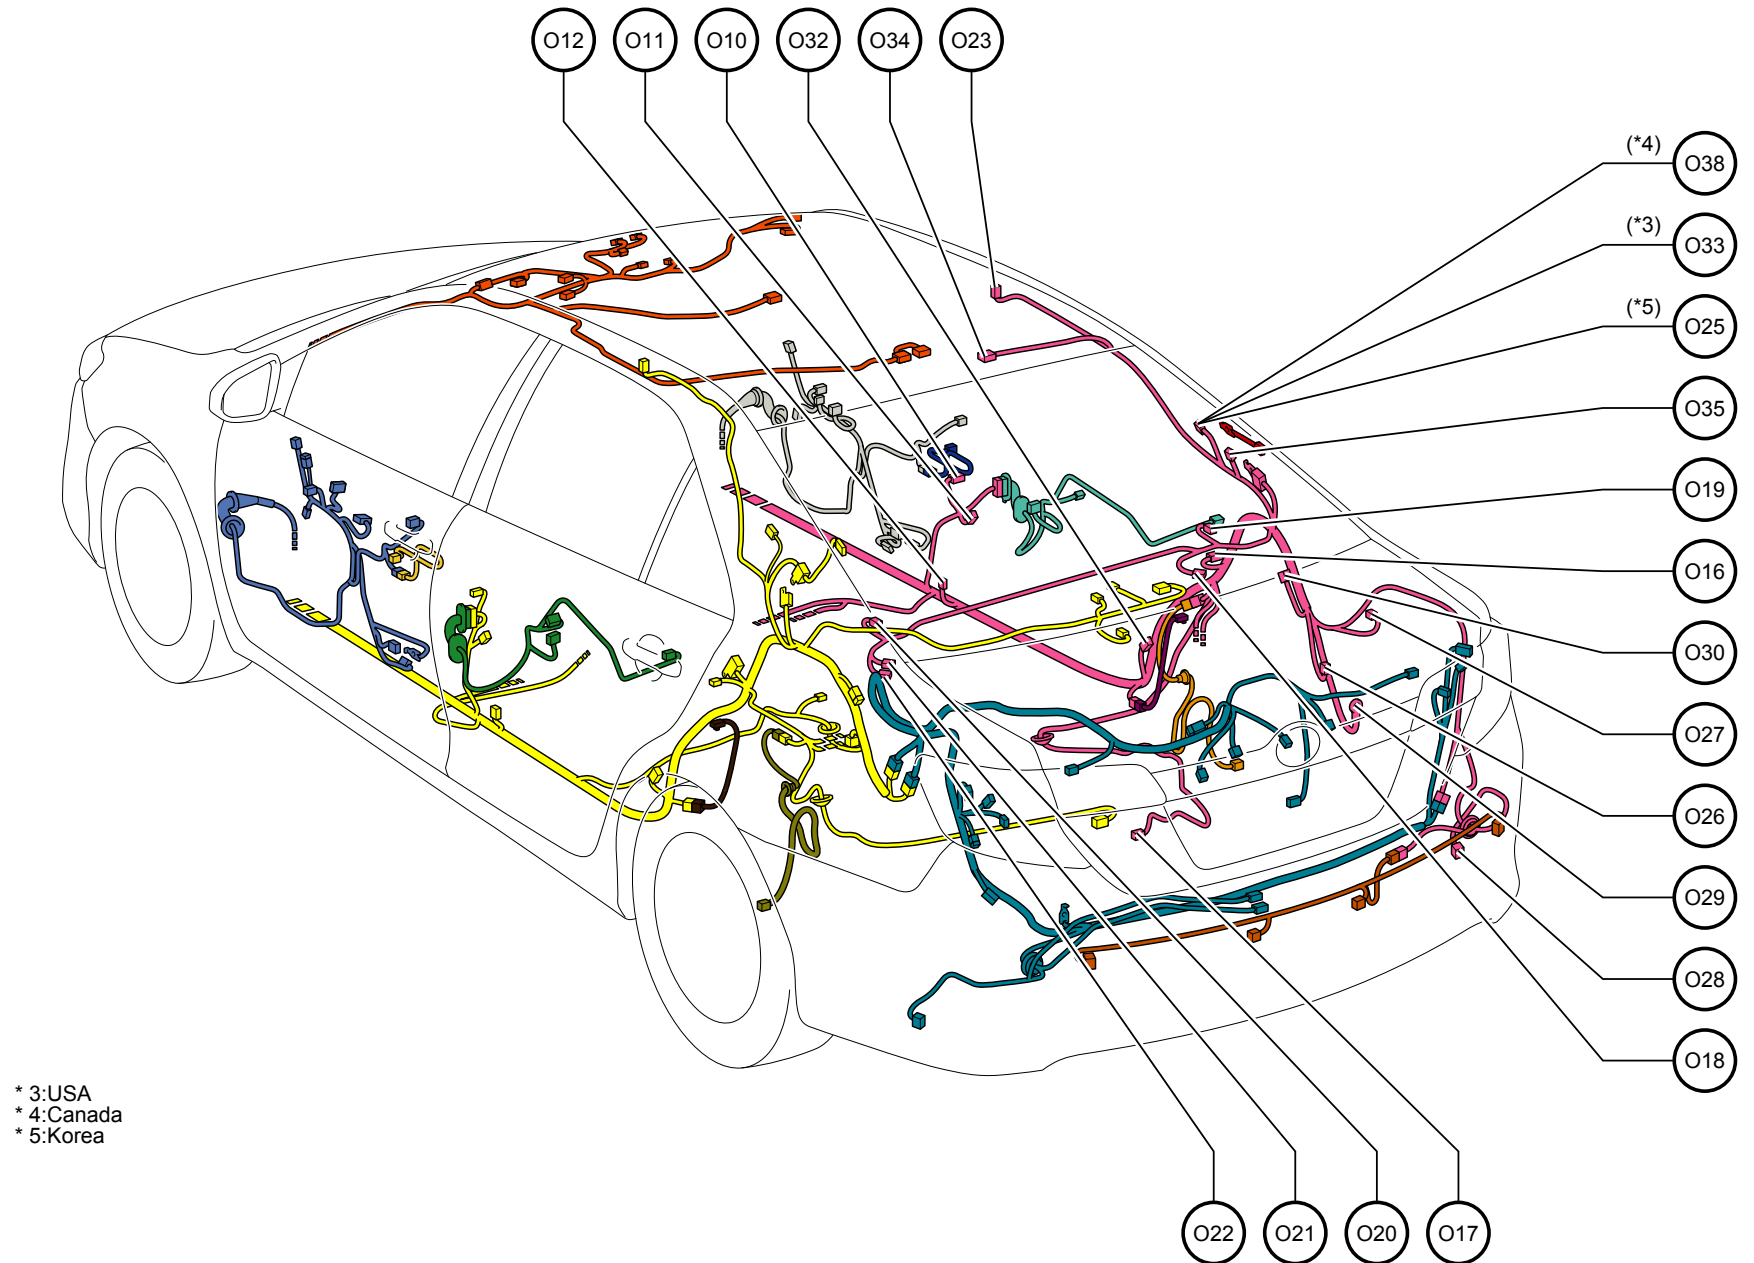


- O 10 Front Door Courtesy Light Switch Assembly RH
- O 11 Side Airbag Sensor Assembly RH
- O 12 Front Seat Outer Belt Assembly RH
- O 16 Rear Door Courtesy Light Switch Assembly RH
- O 17 Rear Height Control Sensor Sub-Assembly
- O 18 Rear Speaker Assembly RH
- O 19 Rear No. 2 Speaker Assembly RH
- O 20 Rear No. 2 Speaker Assembly LH
- O 21 Rear Speaker Assembly LH
- O 22 Woofer Speaker (Rear Speaker Assembly)
- O 23 Curtain Shield Airbag Assembly RH
- O 25 Door Control Receiver
- O 26 Battery Thermometer Sensor (Thermistor Assembly)
- O 27 Security Horn Assembly
- O 28 Blind Spot Monitor Sensor RH
- O 29 Fusible Link Block Assembly
- O 30 Junction Connector
- O 32 No. 2 Side Airbag Sensor Assembly RH
- O 33 Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
- O 34 Roof Antenna Assembly
- O 35 No. 3 Antenna Cord Sub-Assembly
- O 38 Door Control Receiver

Position of Parts in Body


O 10
Black



O 11
Yellow

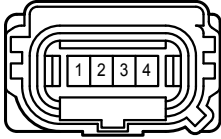


O 12
Black

 

O 16
Black




O 17
Black

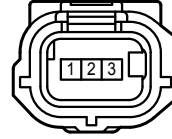


O 18
Black



O 19
White

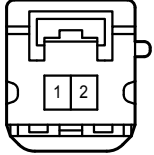

O 20
White

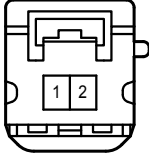


O 21
Black




O 22
Black



O 23
Black

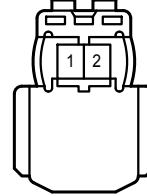

O 25
White

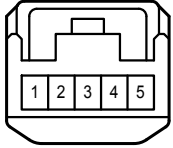

O 26
Black



 
O 27
Black




O 28
Black




O 29




O 30
Black

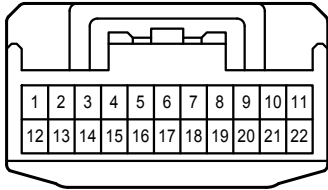


O 32
Yellow

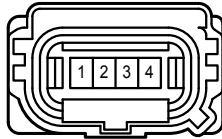


O 33
White

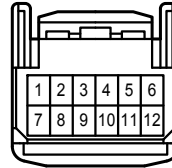

O 34
Blue

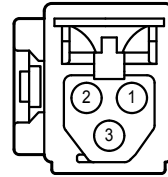

O 35
Gray

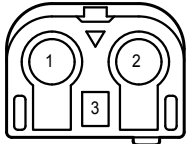

O 38
White

