



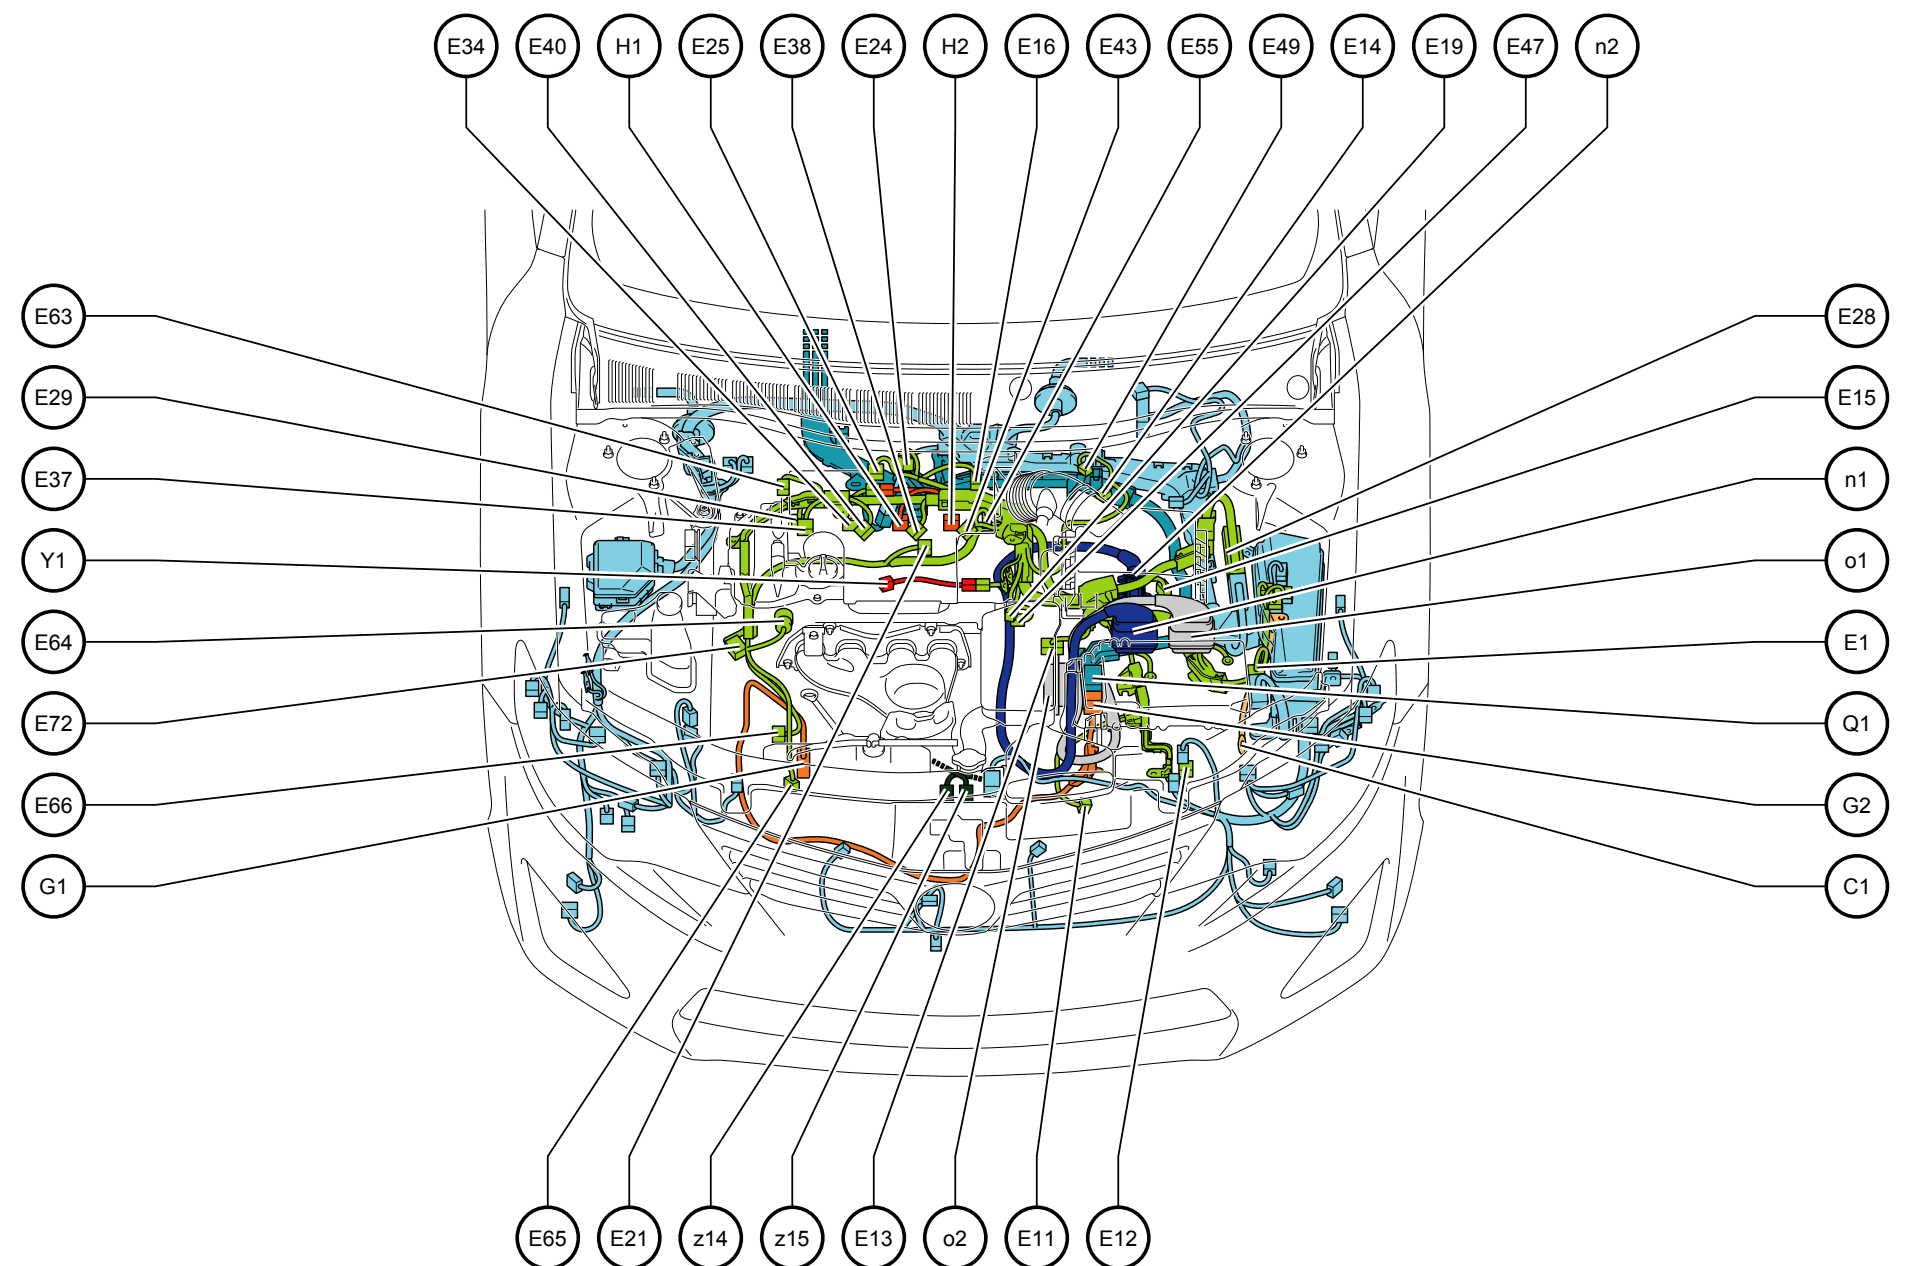

- C 1 Inverter with Converter Assembly
- E 1 Inverter with Converter Assembly
- E 11 Shift Lever Position Sensor
- E 12 Hybrid Vehicle Transaxle Assembly
- E 13 Hybrid Vehicle Transaxle Assembly
- E 14 Intake Mass Air Flow Meter Sub-Assembly
- E 15 Hybrid Vehicle Transaxle Assembly
- E 16 Throttle Body Assembly with Motor
- E 19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 21 Oxygen Sensor (Bank 1 Sensor 2)
- E 24 EGR Valve Assembly
- E 25 E.F.I. Vacuum Sensor Assembly
- E 28 ECM
- E 29 Fuel Injector Assembly No. 1
- E 34 Fuel Injector Assembly No. 2
- E 37 Ignition Coil Assembly No. 1
- E 38 Ignition Coil Assembly No. 3
- E 40 Ignition Coil Assembly No. 2
- E 43 Ignition Coil Assembly No. 4
- E 47 E.F.I. Engine Coolant Temperature Sensor
- E 49 Purge VSV
- E 55 VVT Sensor (Camshaft Position Sensor)
- E 63 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- E 64 Engine Oil Pressure Switch Assembly
- E 65 Compressor with Motor Assembly
- E 66 Engine Water Pump Assembly
- E 72 Crank Position Sensor
- G 1 Compressor with Motor Assembly
- G 2 Inverter with Converter Assembly
- H 1 Fuel Injector Assembly No. 3
- H 2 Fuel Injector Assembly No. 4
- Q 1 Inverter with Converter Assembly
- Y 1 Knock Control Sensor (Bank 1)
- n 1 Inverter with Converter Assembly
- n 2 Hybrid Vehicle Transaxle Assembly
- o 1 Inverter with Converter Assembly
- o 2 Hybrid Vehicle Transaxle Assembly
- z 14 Cooling Fan ECU , Cooling Fan Motor
- z 15 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment

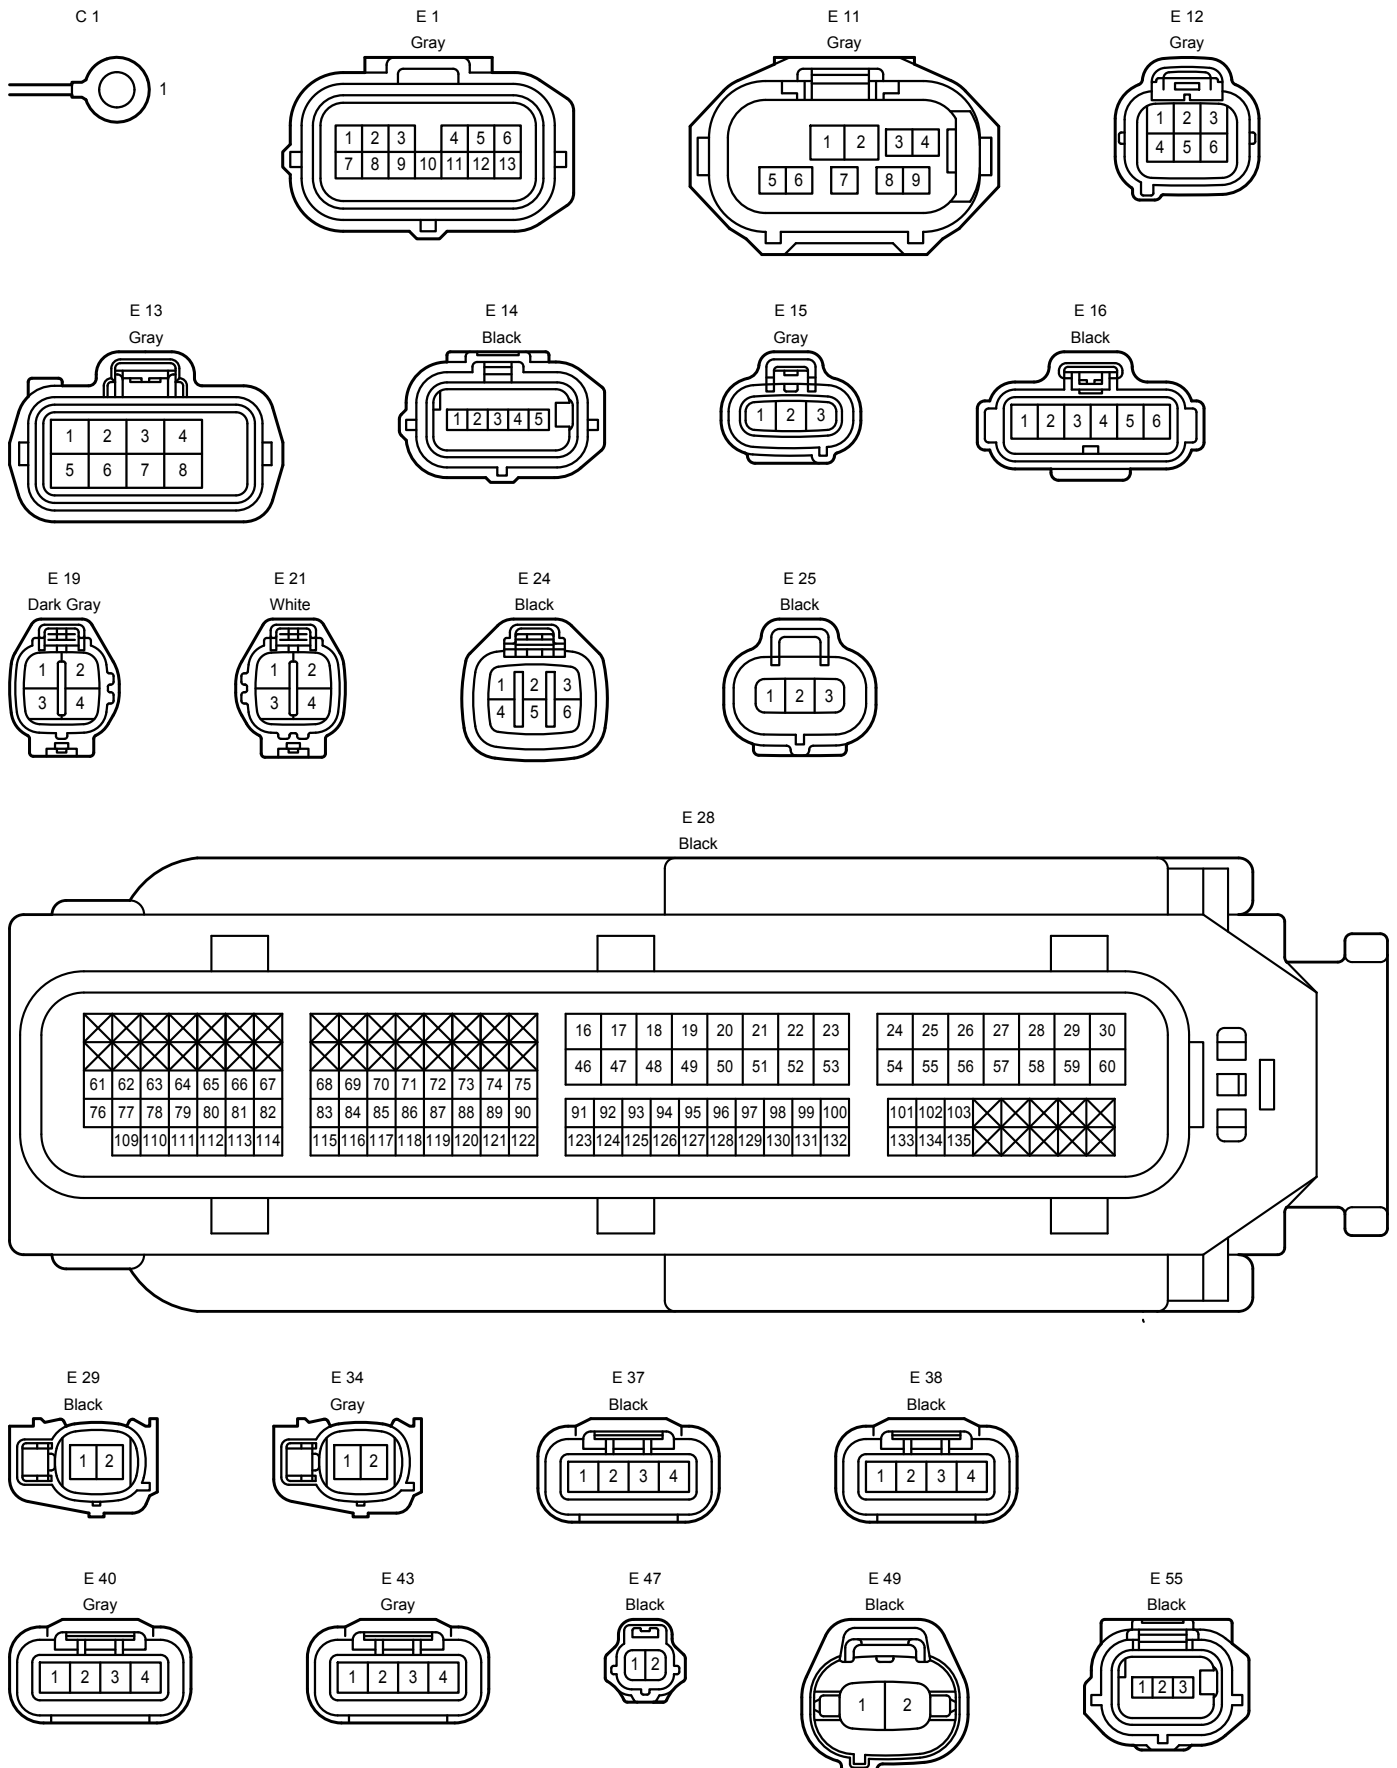

Position of Parts in Engine Compartment

