


Position of Parts in Instrument Panel <Before Dec. 2013 Production>

* 1:6 Speaker
* 2:10 Speaker

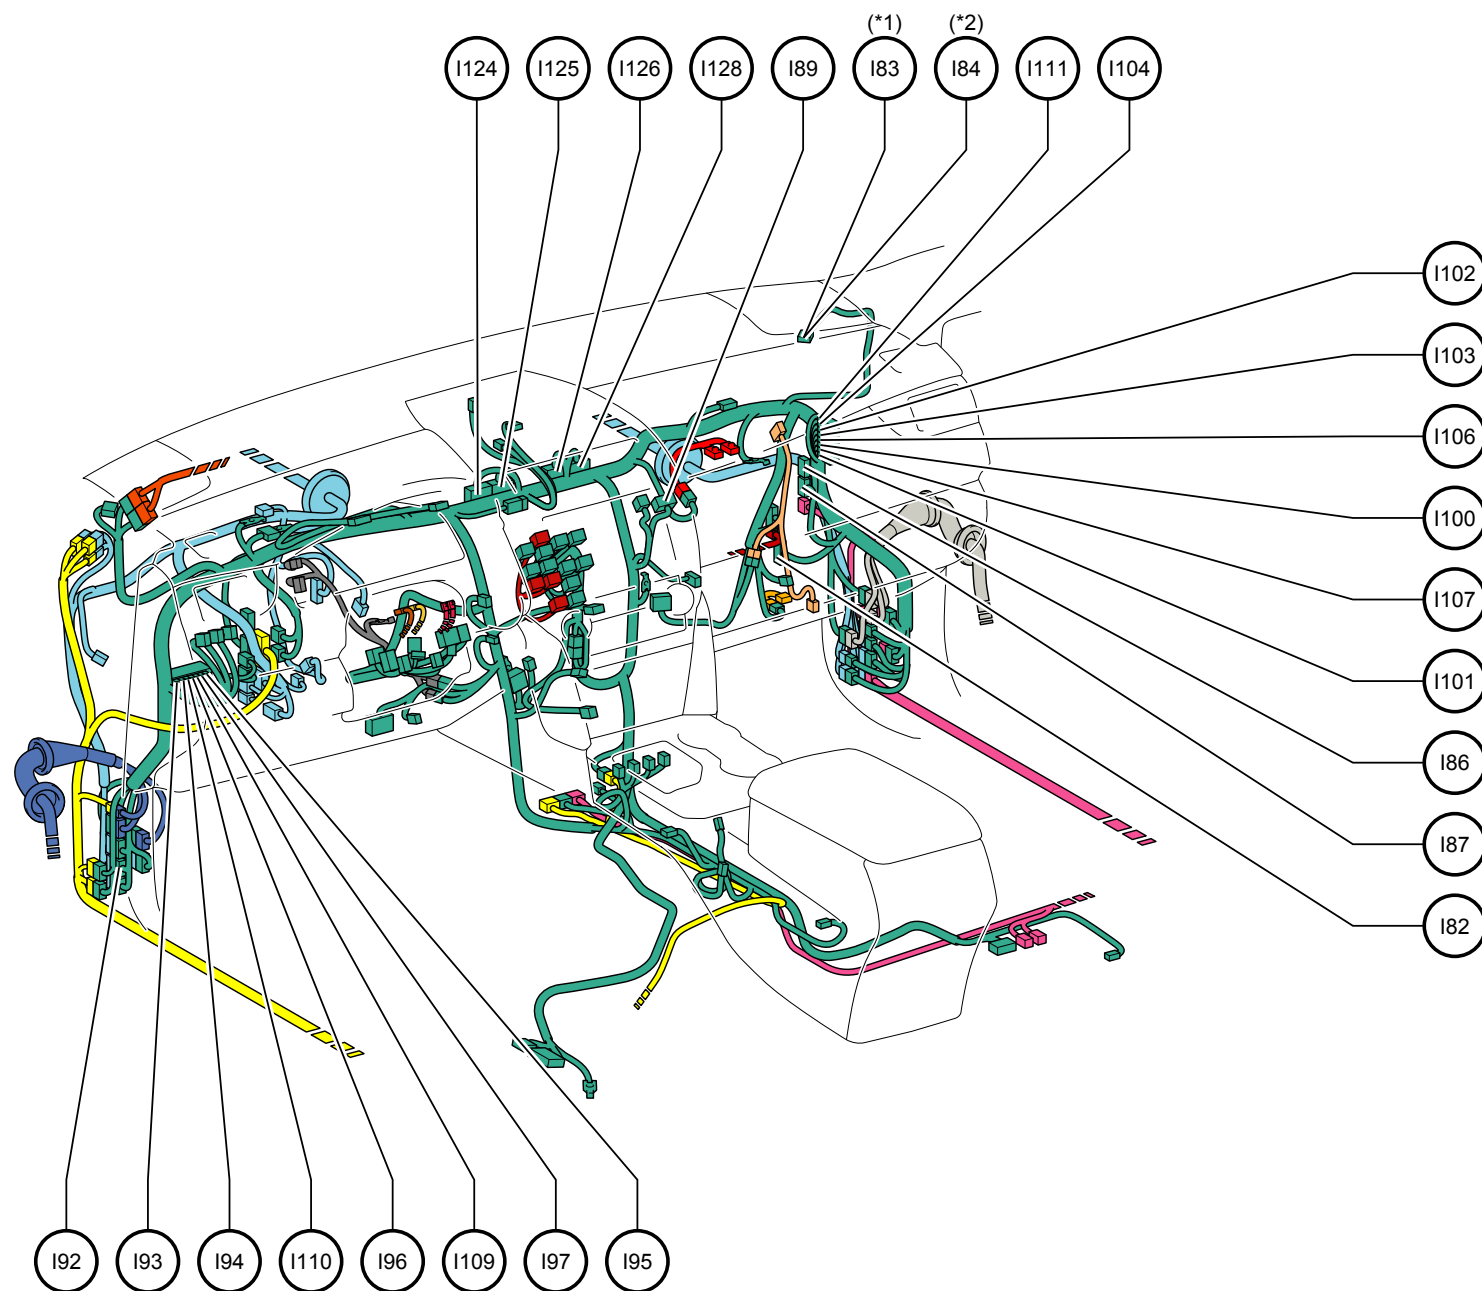

- I 82 Clearance Warning ECU Assembly
- I 83 Front No. 2 Speaker Assembly RH
- I 84 Front No. 2 Speaker Assembly RH
- I 86 Certification ECU
- I 87 Certification ECU
- I 89 Option Connector (Remote Engine Starter)
- I 92 Junction Connector
- I 93 Junction Connector
- I 94 Junction Connector
- I 95 Junction Connector
- I 96 Junction Connector
- I 97 Junction Connector
- I 100 Junction Connector
- I 101 Junction Connector
- I 102 Junction Connector
- I 103 Junction Connector
- I 104 Junction Connector
- I 106 Junction Connector
- I 107 Junction Connector
- I 109 Junction Connector
- I 110 Junction Connector
- I 111 Junction Connector
- I 124 Junction Connector
- I 125 Junction Connector
- I 126 Junction Connector
- I 128 Junction Connector

Position of Parts in Instrument Panel <Before Dec. 2013 Production>

