


Position of Parts in Instrument Panel <From Dec. 2013 Production>

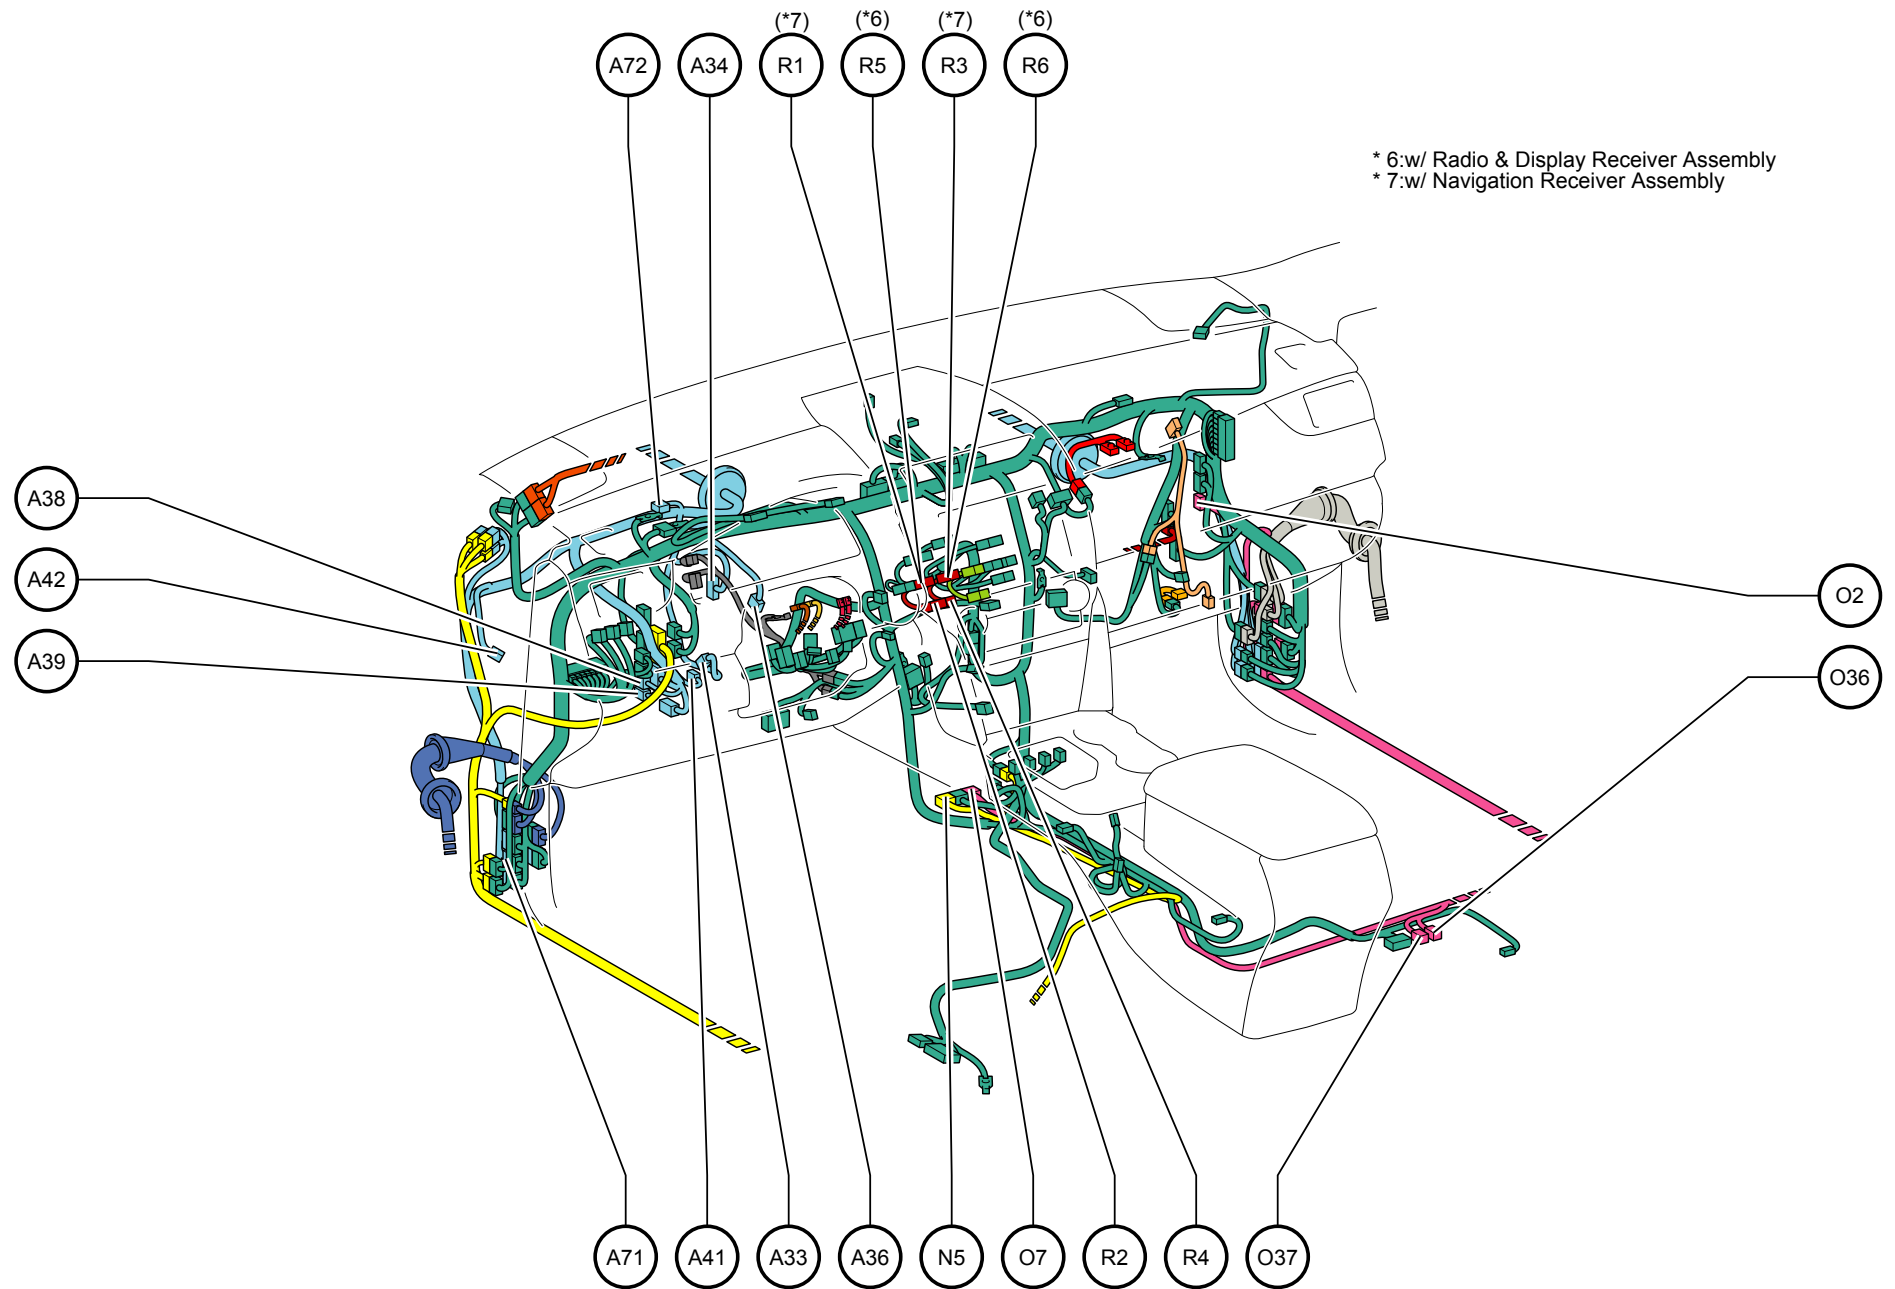

A 33 Stop Light Switch Assembly
A 34 Headlight Leveling ECU Assembly
A 36 Accelerator Pedal Sensor Assembly
A 38 Power Management Control ECU
A 39 Power Management Control ECU
A 41 Brake Pedal Stroke Sensor Assembly
A 42 Parking Brake Switch Assembly
A 71 Junction Connector
A 72 Junction Connector

N 5 Airbag Sensor Assembly

O 2 Certification ECU
O 7 Airbag Sensor Assembly
O 36 DCM (Telematics Transceiver)
O 37 DCM (Telematics Transceiver)

R 1 Navigation Receiver Assembly
R 2 Stereo Component Tuner Assembly
R 3 Navigation Receiver Assembly
R 4 Stereo Component Tuner Assembly
R 5 Radio & Display Receiver Assembly
R 6 Radio & Display Receiver Assembly

Position of Parts in Instrument Panel <From Dec. 2013 Production>

