




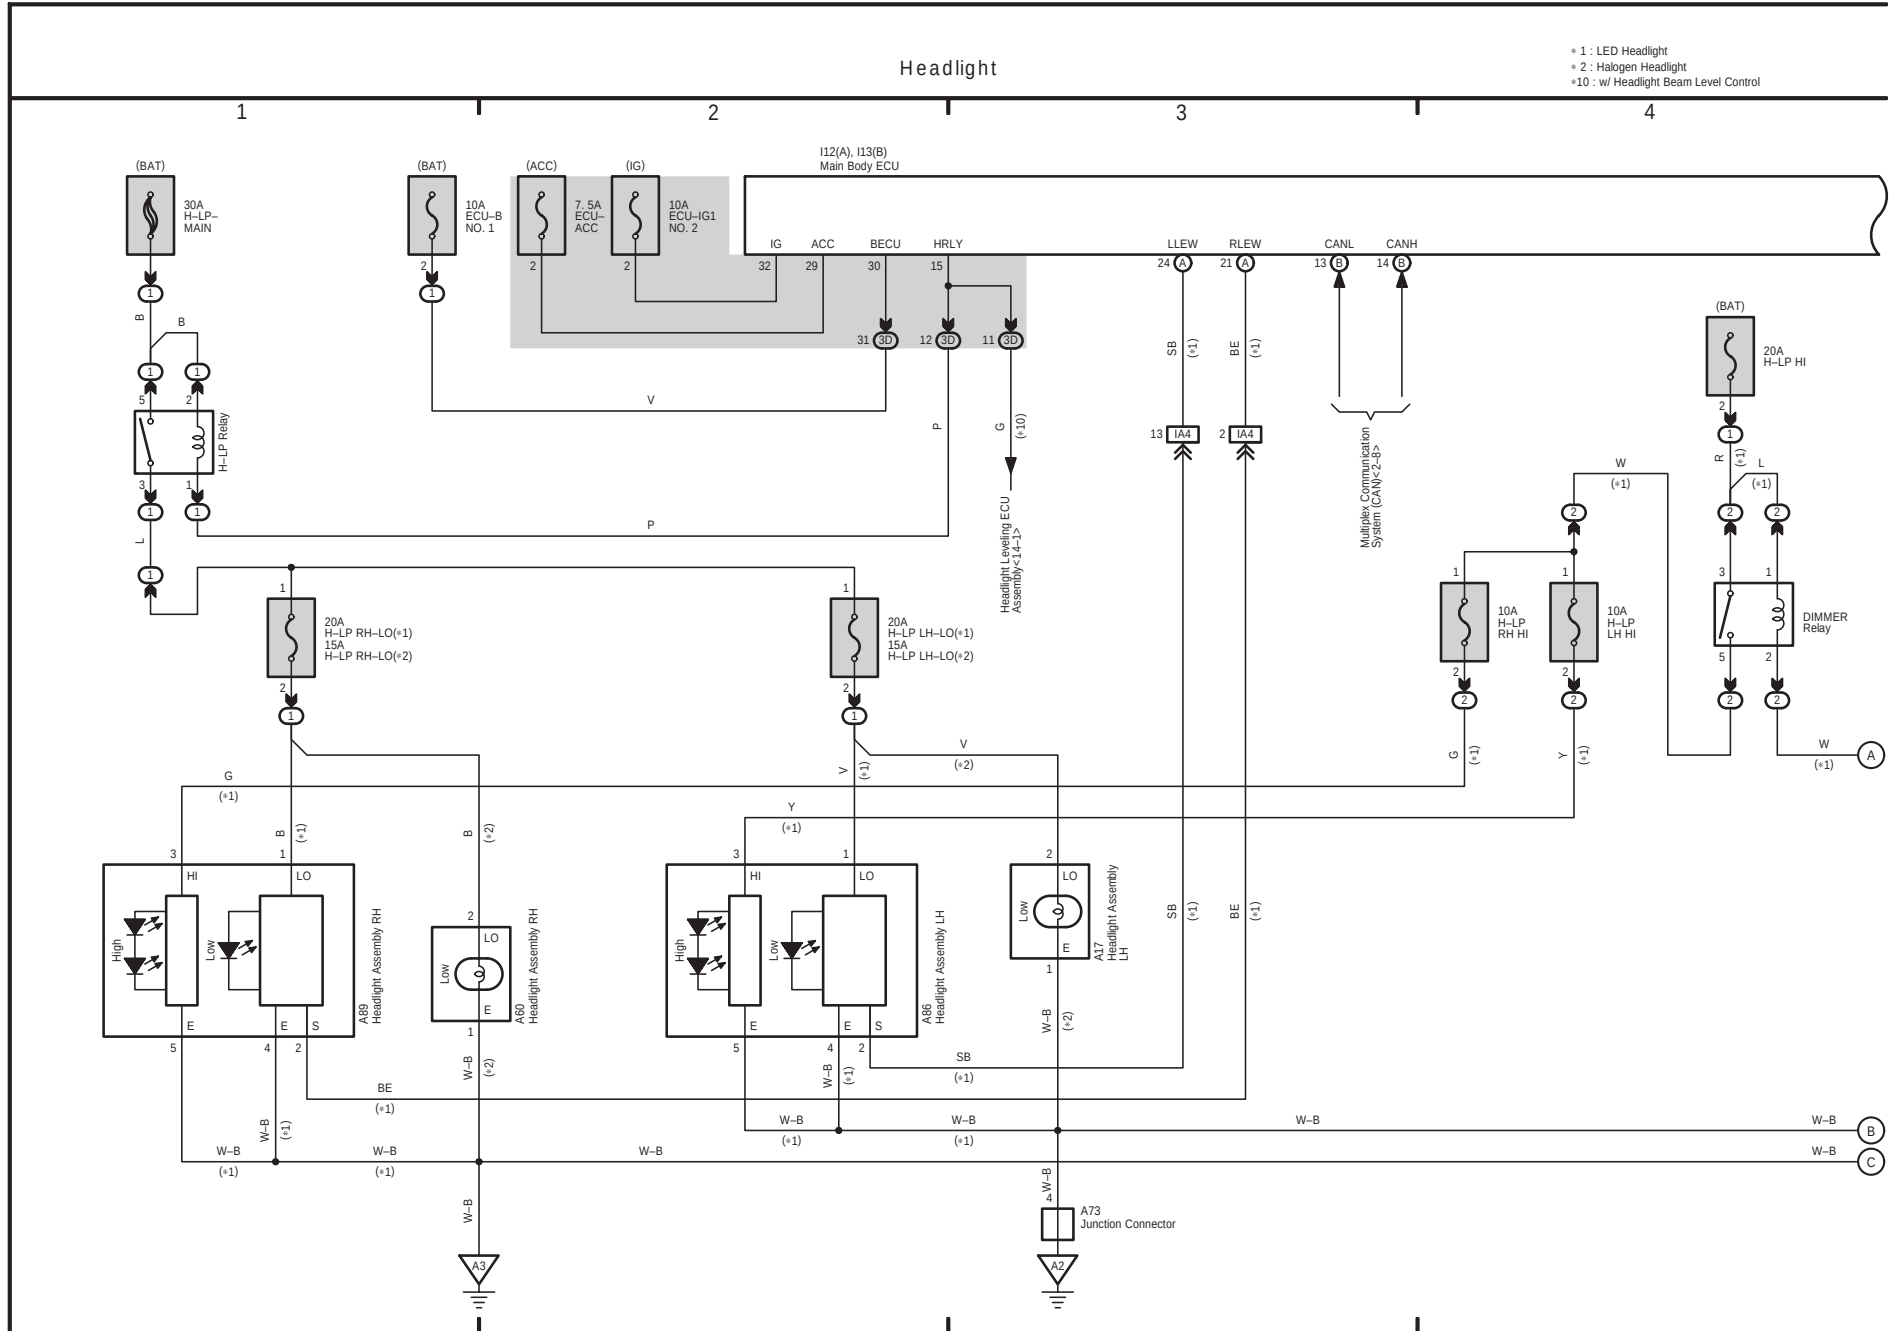

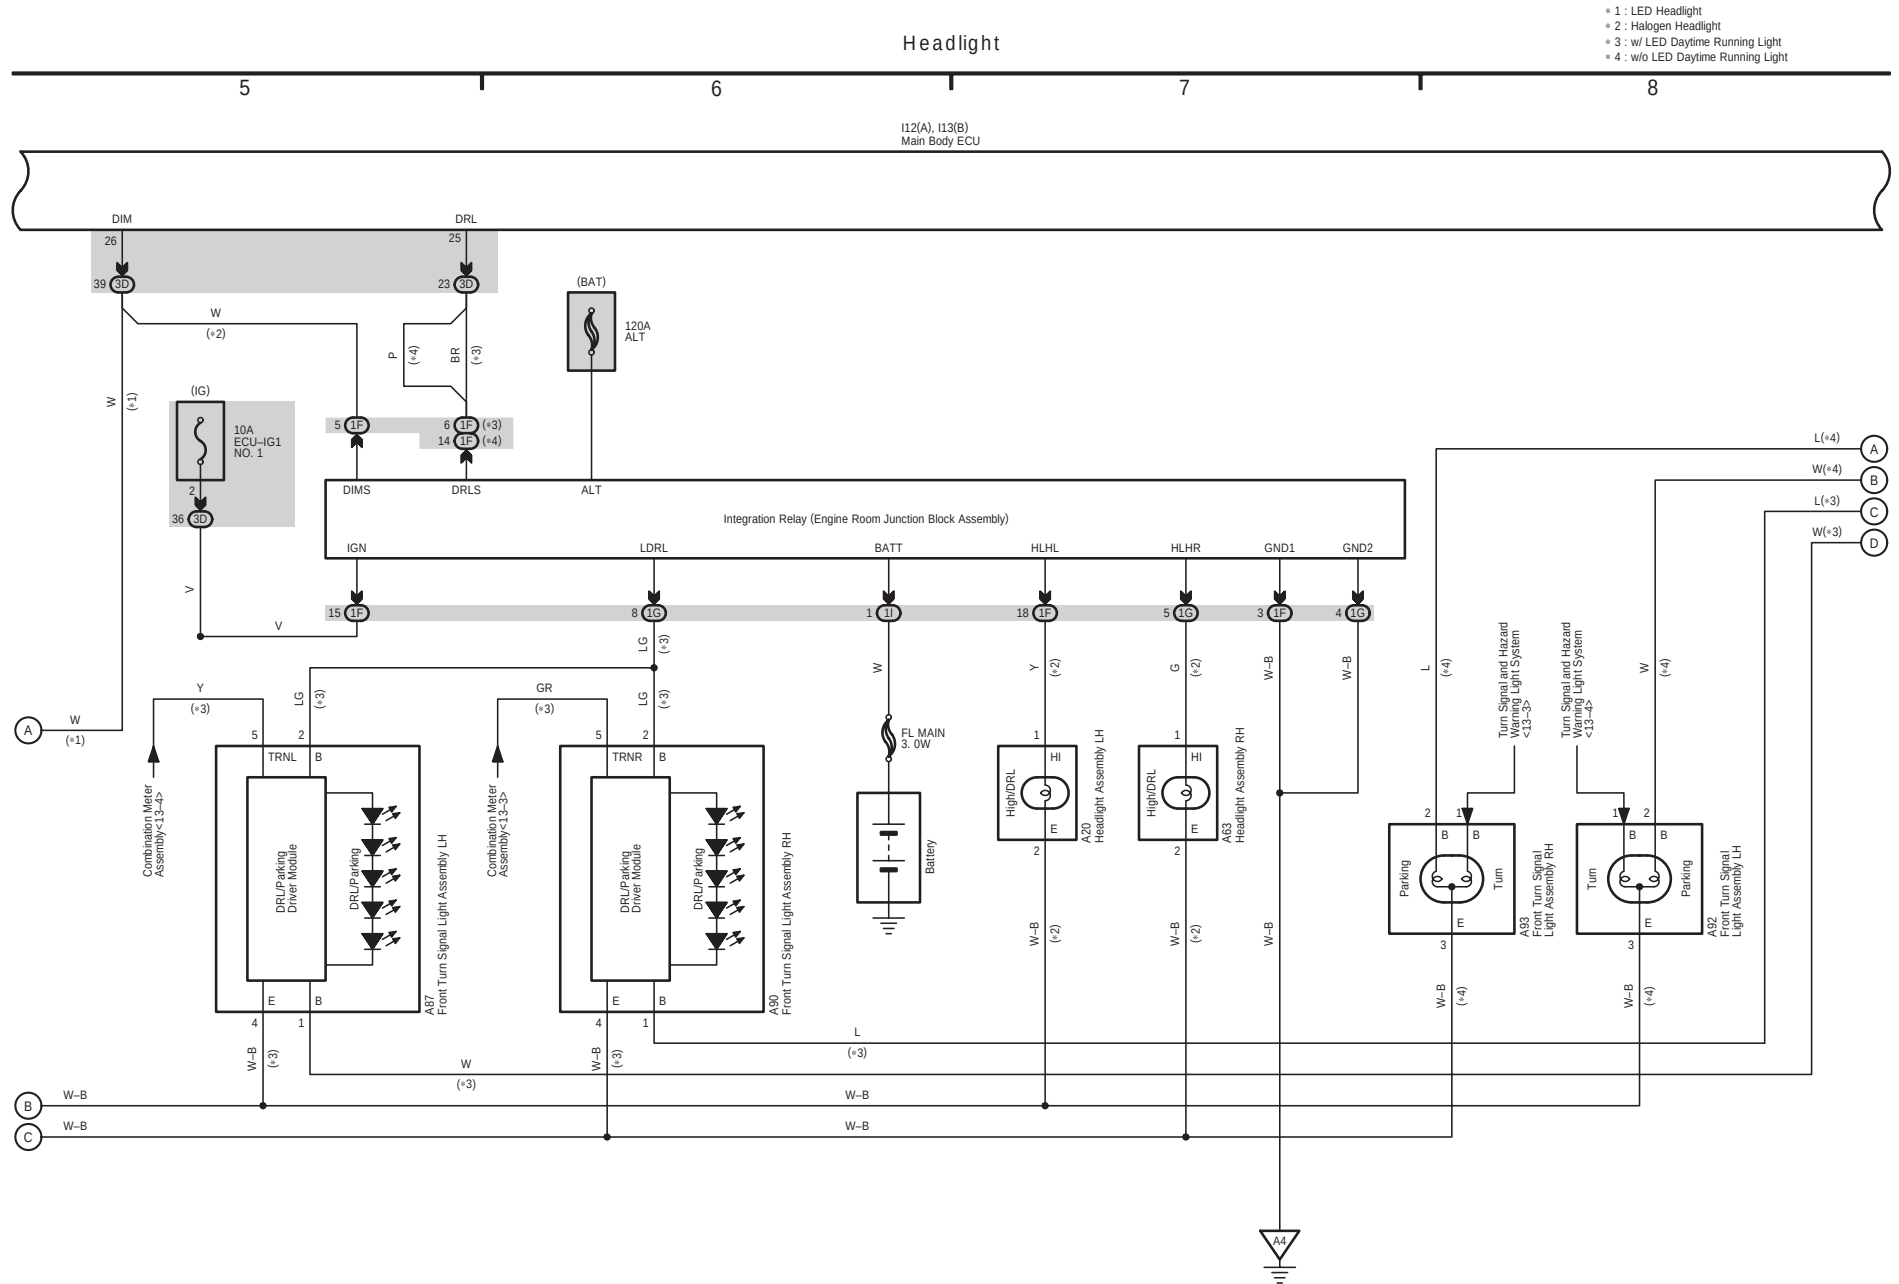

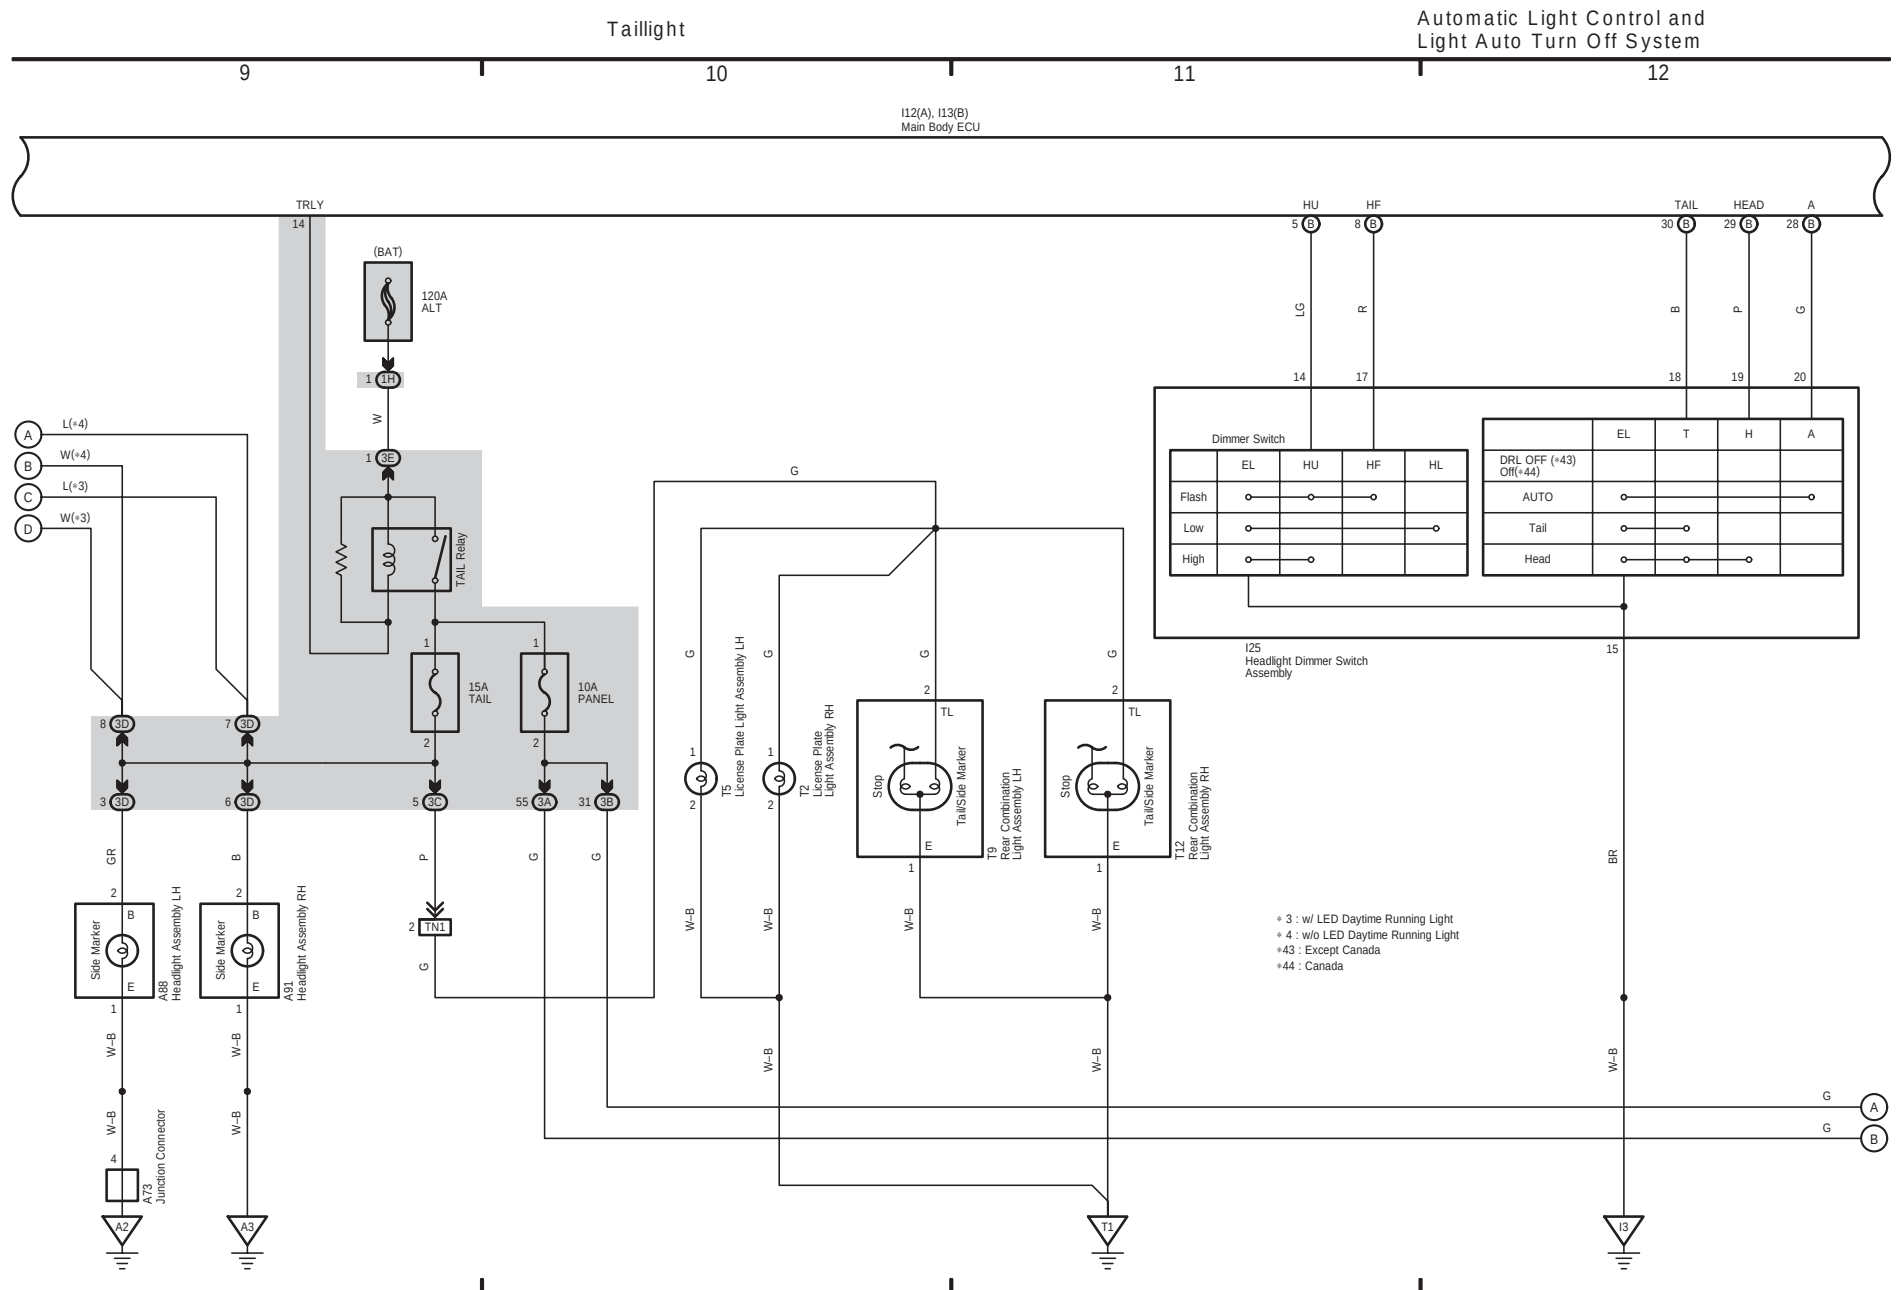


Interior Light

16





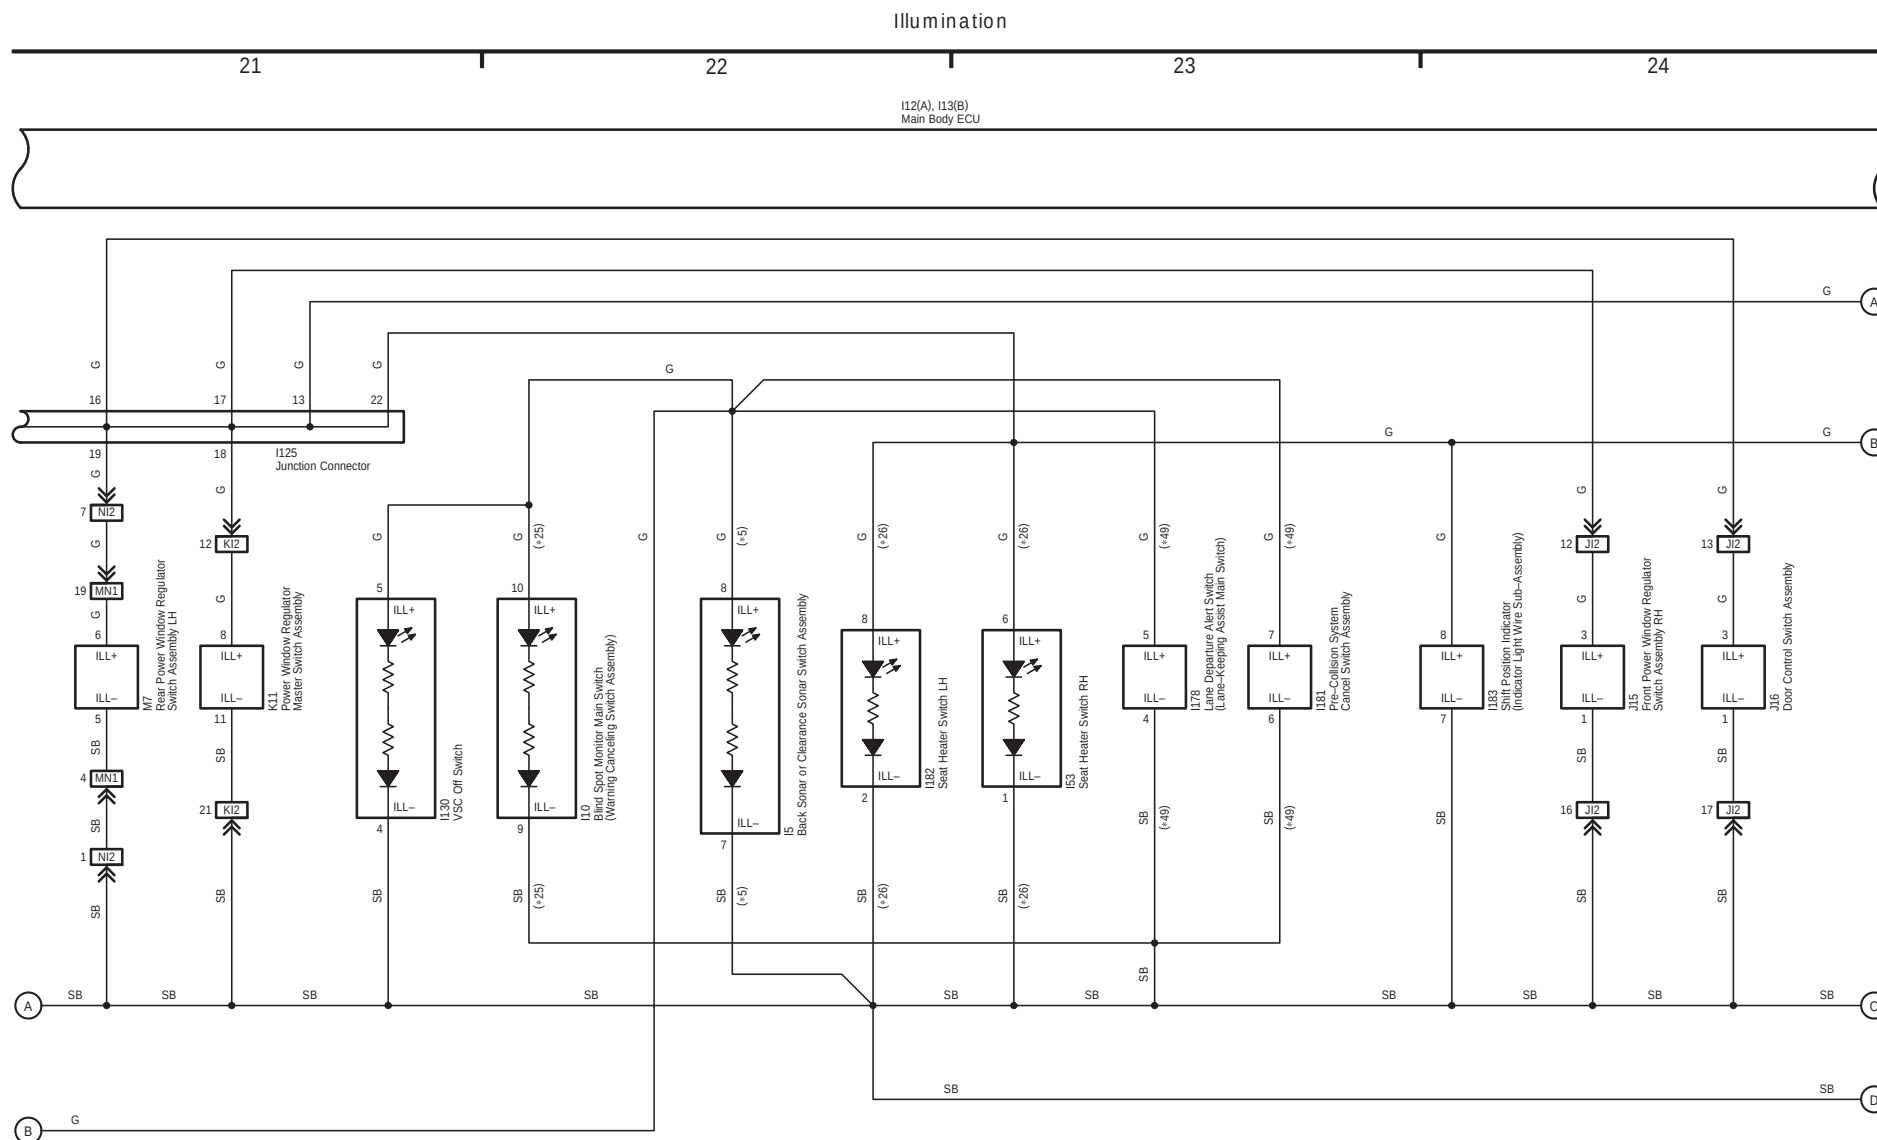

* 5 : w/ Parking Assist (Intuitive Parking Assist)
 *25 : w/ Blind Spot Monitor System
 *26 : w/ Seat Heater
 *49 : w/ Dynamic Radar Cruise Control

CAMRY (EM26C0U)

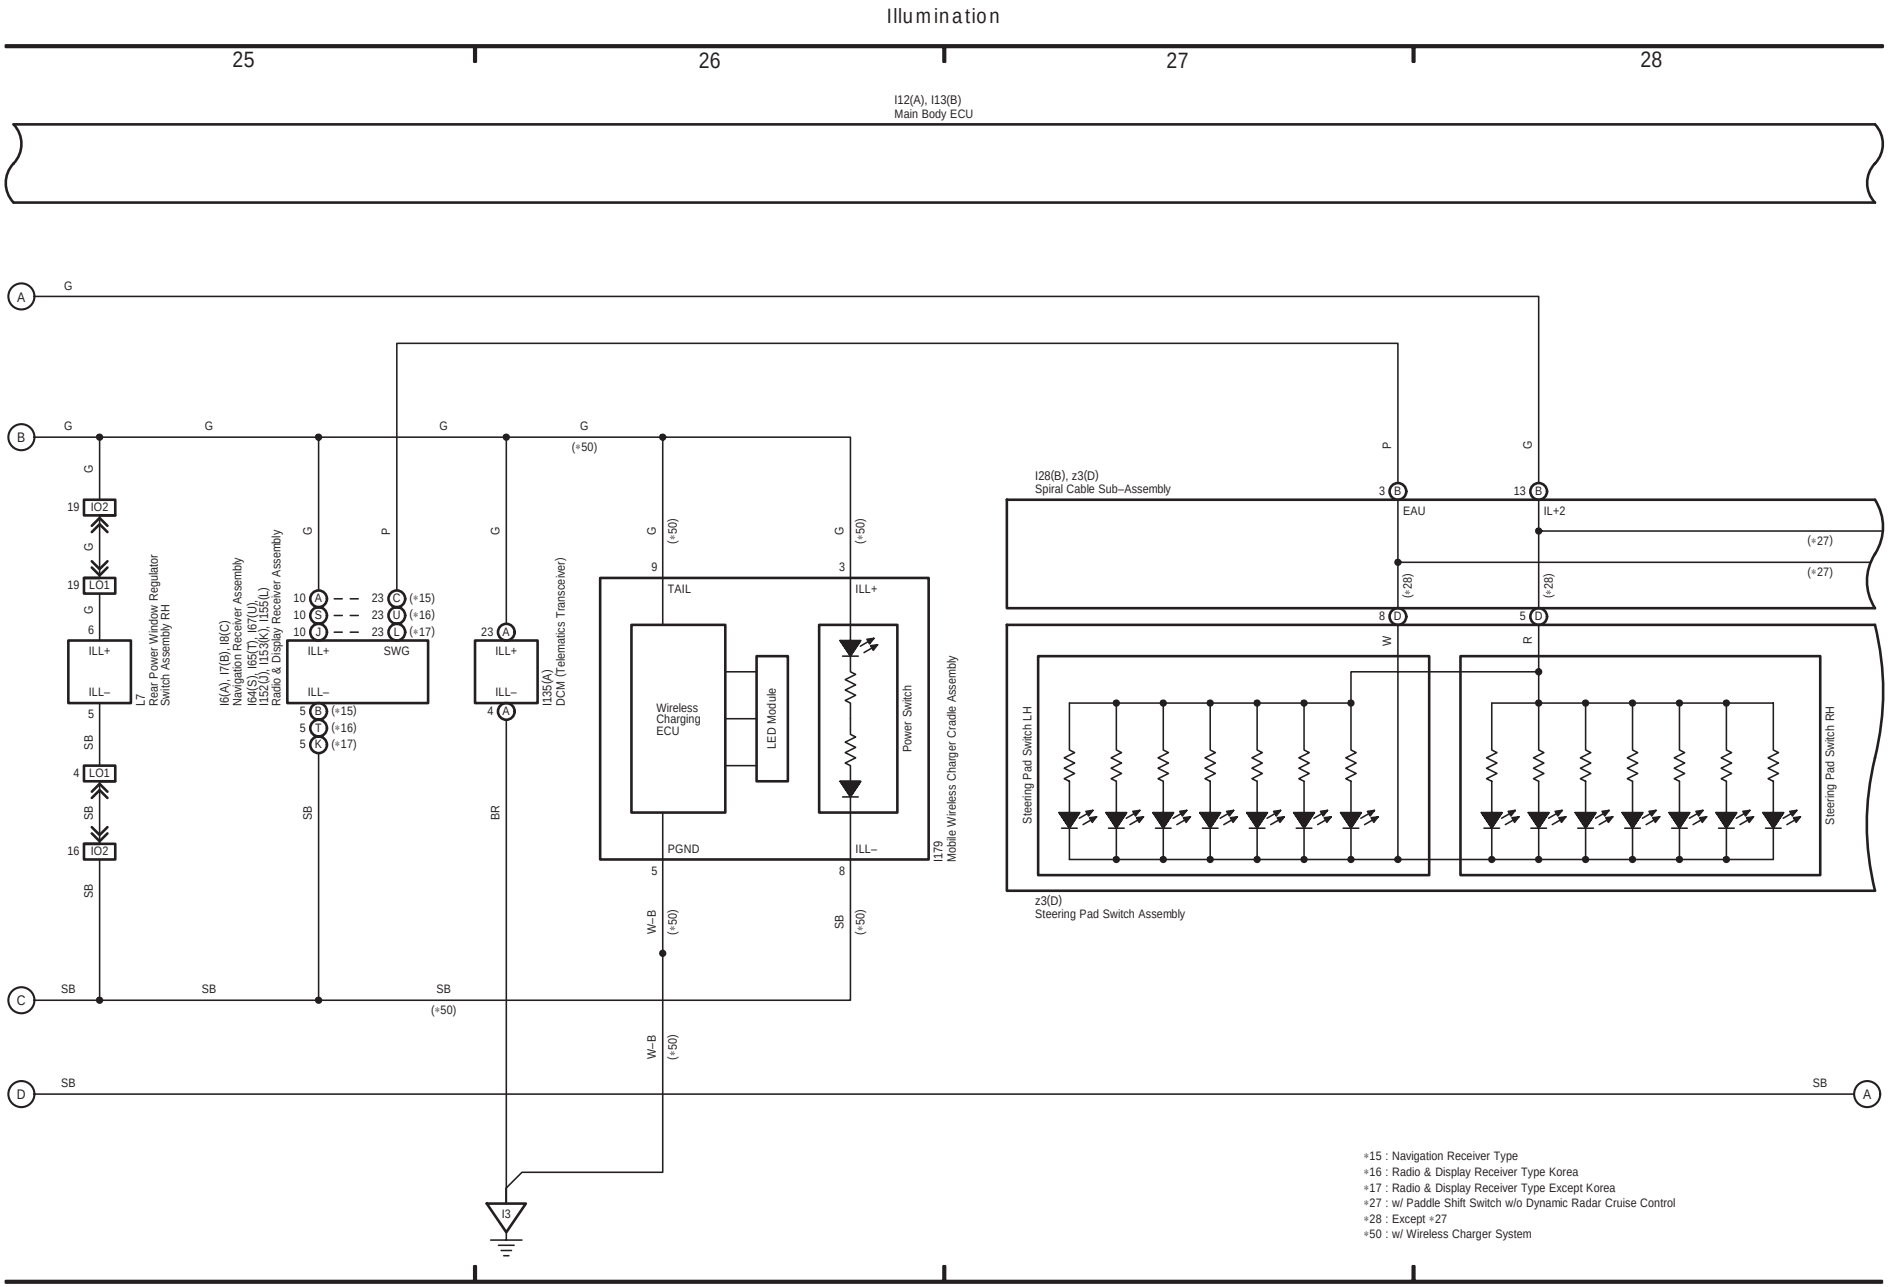



Diagram illustrating the wiring for the Illumination system, showing connections between the Main Body ECU, the Steering Pad Switch Assembly, and the Combination Meter Assembly.

Legend:

- *27 : w/ Paddle Shift Switch w/o Dynamic Radar Cruise Control
- *47 : w/ TFT Display
- *48 : w/o TFT Display

Wiring Details:

- Main Body ECU:** I12(A), I13(B)
- Steering Pad Switch Assembly:** I28(B), z3(D) Spiral Cable Sub-Assembly. The assembly includes Steering Pad Switch LH and Steering Pad Switch RH, connected to the z3(D) Steering Pad Switch Assembly.
- Combination Meter Assembly:** I18(B). The assembly includes a CPU, LED Driver, Telltales, CAN I/F, I/F, Display Driver, and Buzzer. It is connected to the Main Body ECU via a 125 Junction Connector.
- Power Sources:** (BAT) 10A ECU-B NO. 1, (IG) 5A METER-IG2.
- Wiring Connections:** The diagram shows various wires (V, W, B, IG+, ES, SB, W-B, BR) connecting the components. The Main Body ECU is connected to the Combination Meter Assembly via a 125 Junction Connector. The Steering Pad Switch Assembly is connected to the Main Body ECU via a 125 Junction Connector.

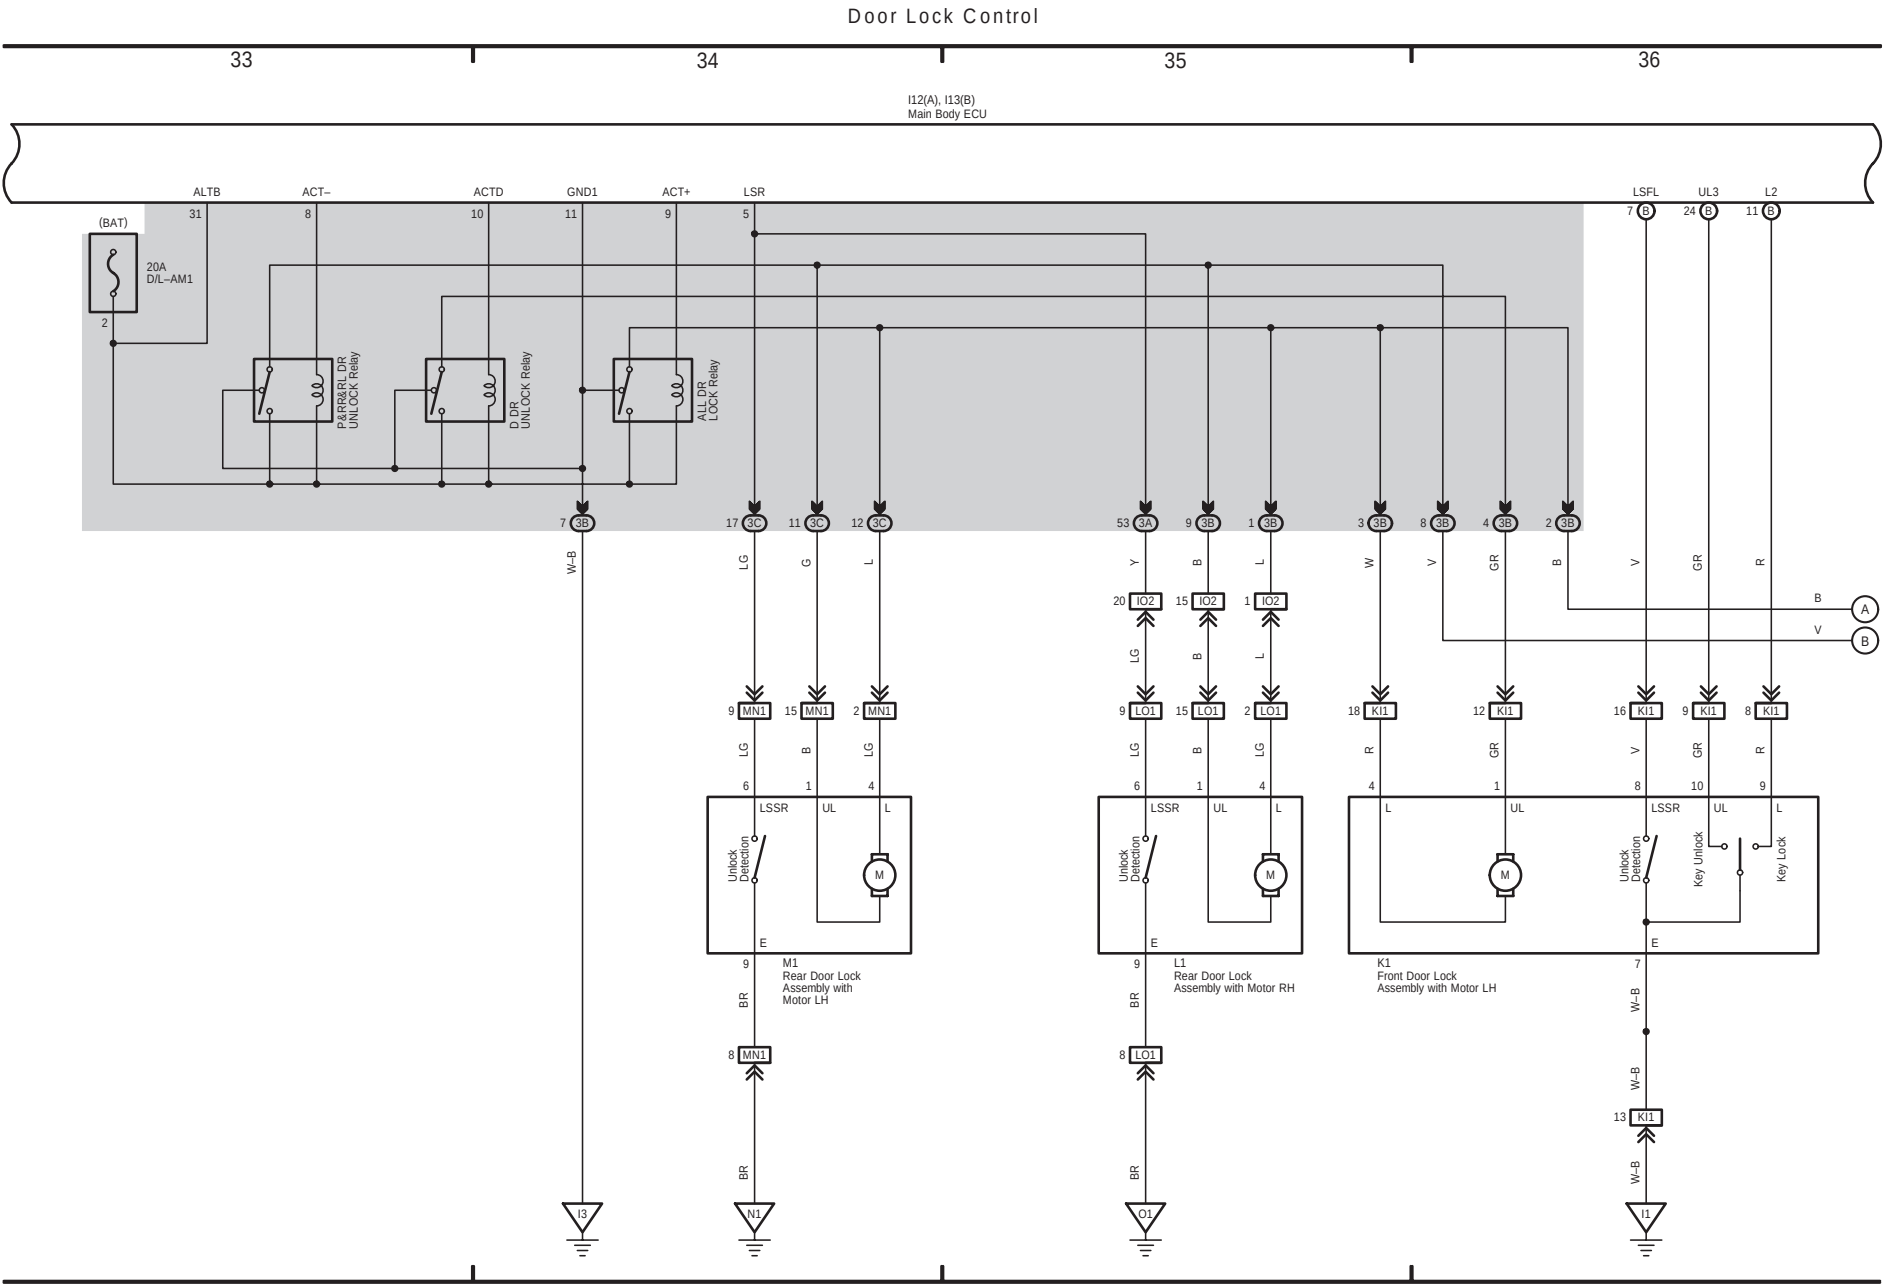

Wireless Door Lock Control (w/o Smart Key System)

40

[illegible]

CAMRY (EM26C0U)

16 CAMRY (Cont' d)

Theft Deterrent

