


Position of Parts in Engine Compartment <2AR-FE>

- * 1:Korea
- * 2:Except Korea
- * 3:w/o Dynamic Radar Cruise Control
- * 4:w/ Dynamic Radar Cruise Control

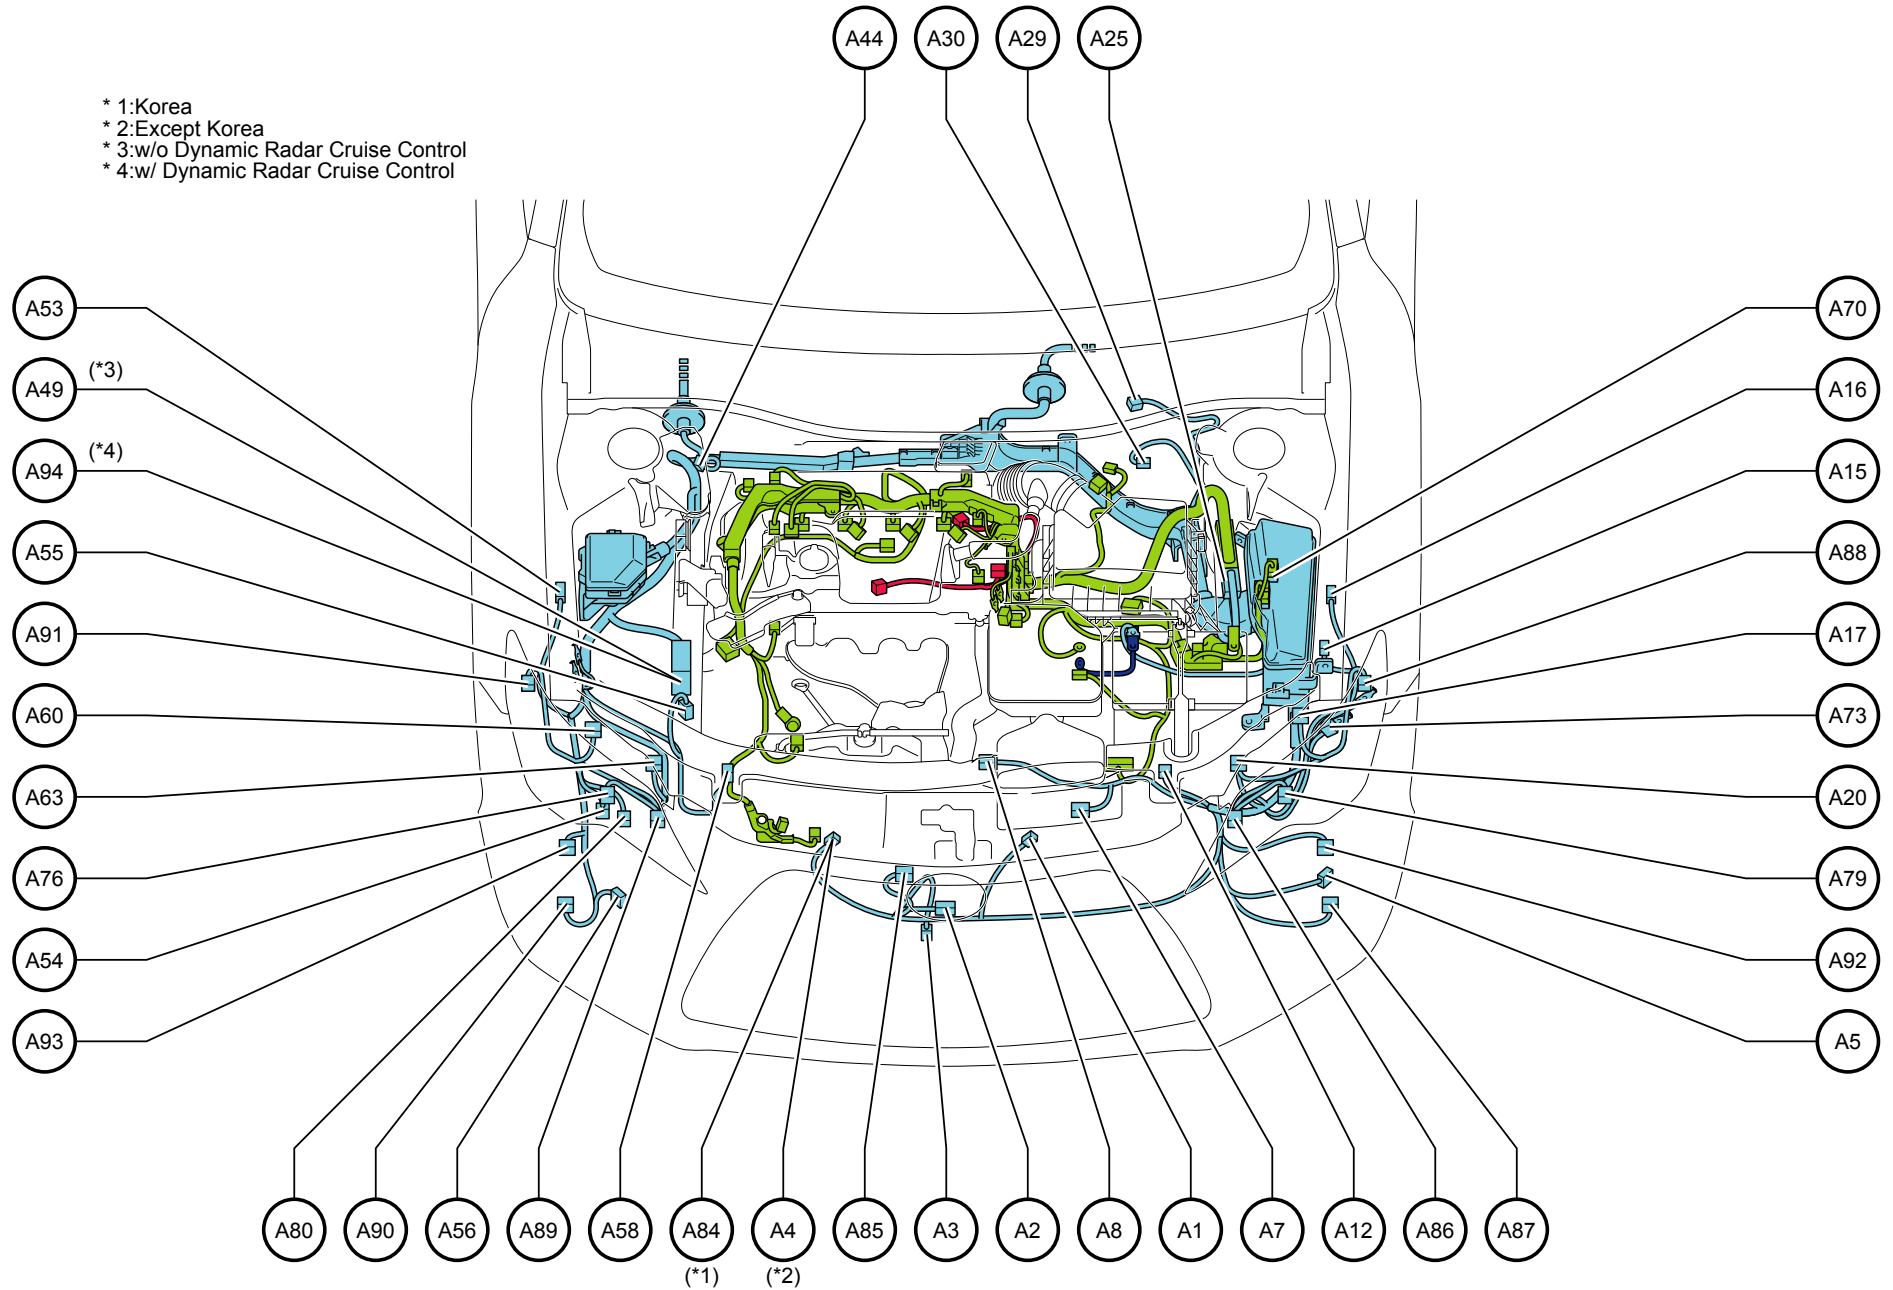

- A 1 Low Pitched Horn Assembly
- A 2 Engine Hood Courtesy Switch (Hood Lock Assembly)
- A 3 Ambient Temperature Sensor (Thermistor Assembly)
- A 4 High Pitched Horn Assembly
- A 5 Front No. 1 Ultrasonic Sensor LH
- A 7 Cooling Fan Motor
- A 8 No. 2 Cooling Fan Motor
- A 12 Front Airbag Sensor LH
- A 15 Wireless Door Lock Buzzer
- A 16 Front Speed Sensor LH
- A 17 Headlight Assembly LH
- A 20 Headlight Assembly LH
- A 25 ECM
- A 29 Windshield Wiper Motor Assembly
- A 30 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
- A 44 Security Horn Assembly
- A 49 Brake Actuator Assembly
- A 53 Front Speed Sensor RH
- A 54 Windshield Washer Motor and Pump Assembly
- A 55 A/C Pressure Sensor (A/C Tube & Accessory Assembly)
- A 56 Front No. 1 Ultrasonic Sensor RH
- A 58 Front Airbag Sensor RH
- A 60 Headlight Assembly RH
- A 63 Headlight Assembly RH
- A 70 Junction Connector
- A 73 Junction Connector
- A 76 Headlight Assembly RH
- A 79 Headlight Assembly LH
- A 80 Level Warning Switch Assembly
- A 84 Super Low Pitched Horn Assembly
- A 85 Millimeter Wave Radar Sensor Assembly
- A 86 Headlight Assembly LH
- A 87 Front Turn Signal Light Assembly LH
- A 88 Headlight Assembly LH
- A 89 Headlight Assembly RH
- A 90 Front Turn Signal Light Assembly RH
- A 91 Headlight Assembly RH
- A 92 Front Turn Signal Light Assembly LH
- A 93 Front Turn Signal Light Assembly RH
- A 94 Brake Actuator Assembly

Position of Parts in Engine Compartment <2AR-FE>

