


Position of Parts in Instrument Panel



- I 152 Radio & Display Receiver Assembly
- I 153 Radio & Display Receiver Assembly
- I 155 Radio & Display Receiver Assembly
- I 156 Radio & Display Receiver Assembly
- I 158 Radio & Display Receiver Assembly
- I 161 Navigation Receiver Assembly
- I 177 Navigation Receiver Assembly
- I 178 Lane Departure Alert Switch (Lane-Keeping Assist Main Switch)
- I 179 Mobile Wireless Charger Cradle Assembly
- I 180 Transponder Key Coil
- I 181 Pre-Collision System Cancel Switch Assembly
- I 182 Seat Heater Switch LH
- I 183 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
- I 184 Automatic Light Control Sensor
- I 185 Automatic Light Control Sensor
- I 186 Tire Pressure Warning Switch
- I 187 Driving Support ECU Assembly
- I 188 Diode (A/T Shift)
- I 189 Diode (A/T Shift)
- I 190 Skid Control Buzzer Assembly
- I 191 Junction Connector
- I 192 Junction Connector
- I 193 Junction Connector
- I 194 Junction Connector
- I 195 Junction Connector
- I 196 Radio & Display Receiver Assembly

Position of Parts in Instrument Panel

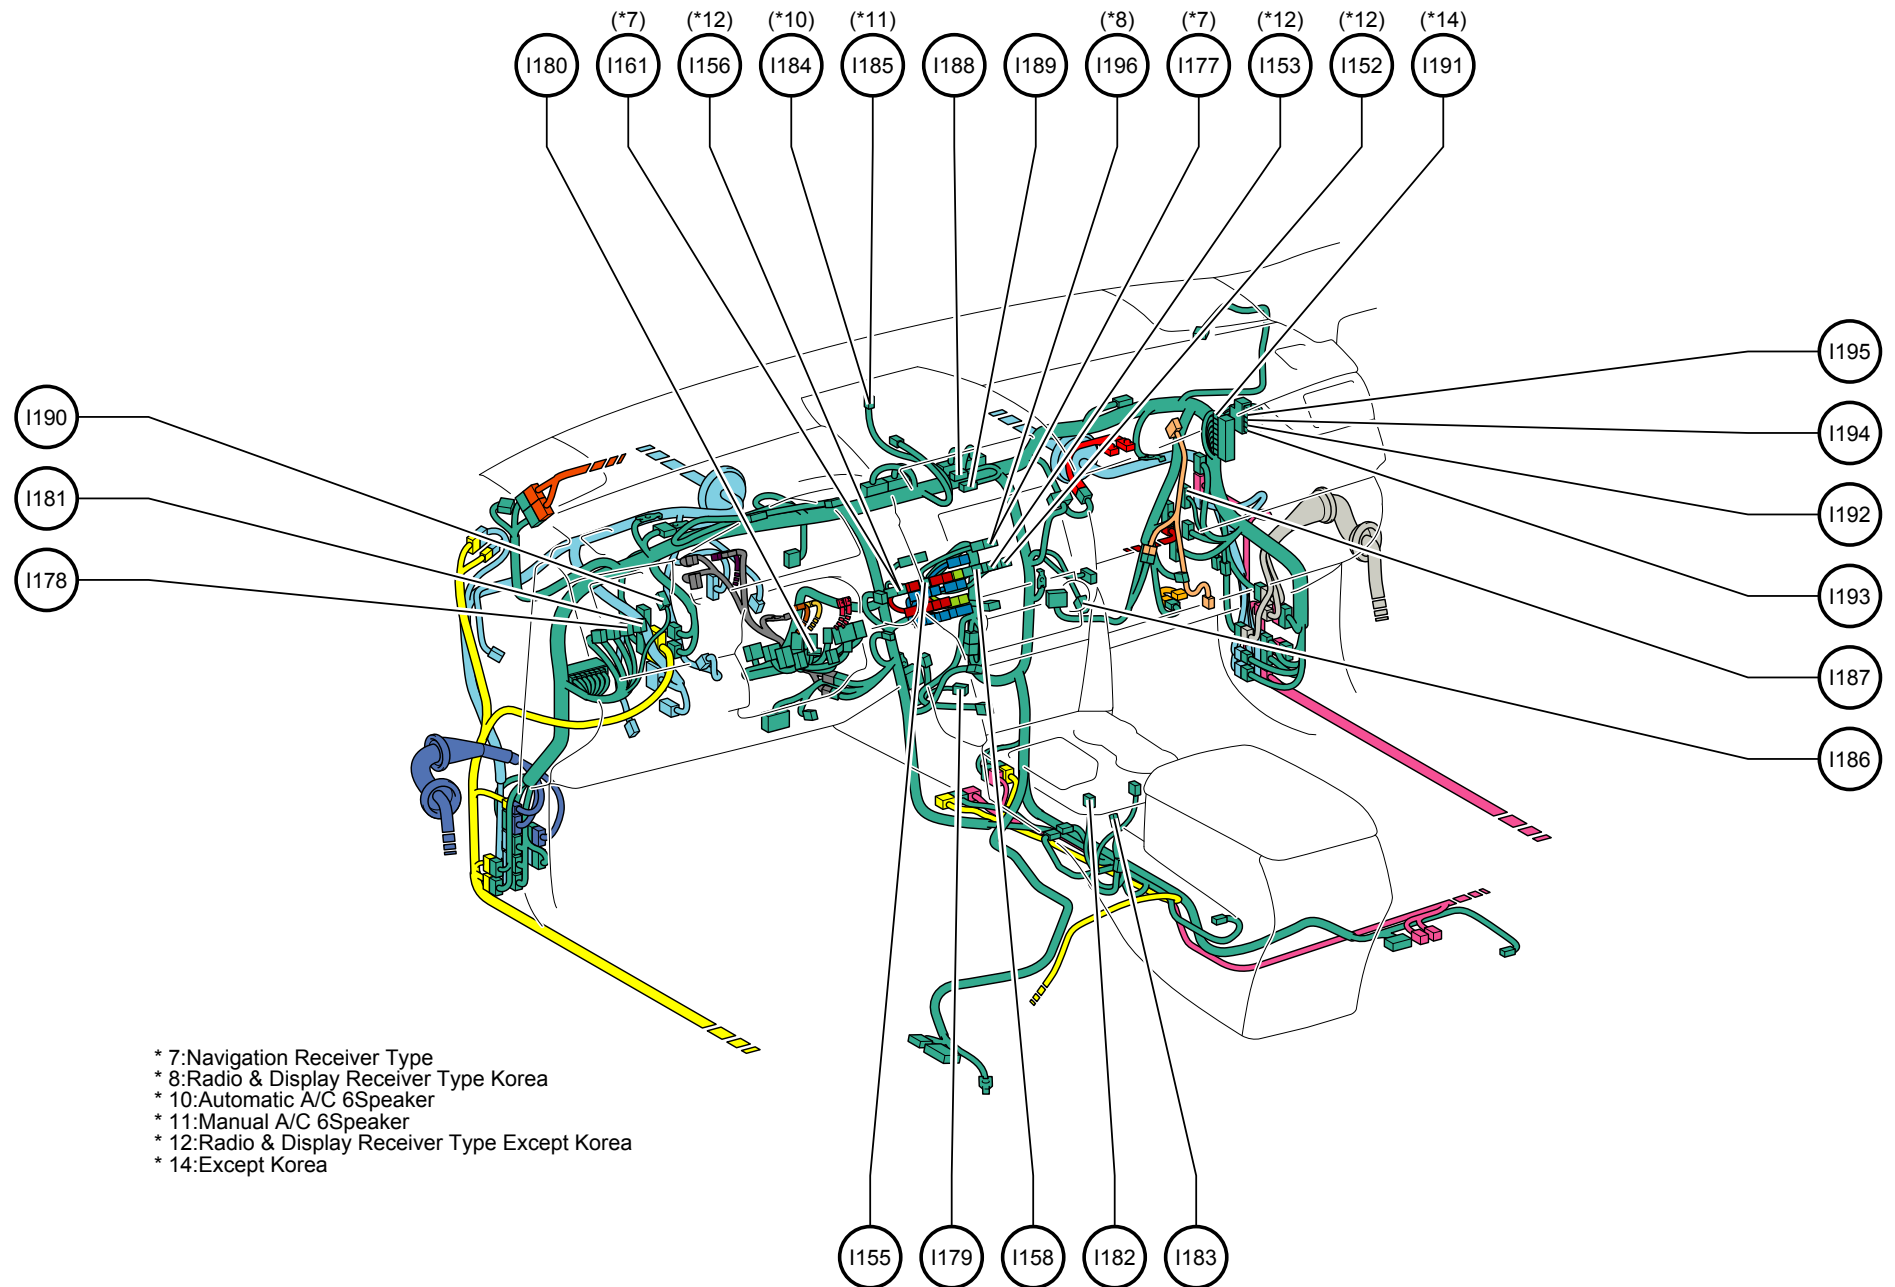