


Position of Parts in Instrument Panel

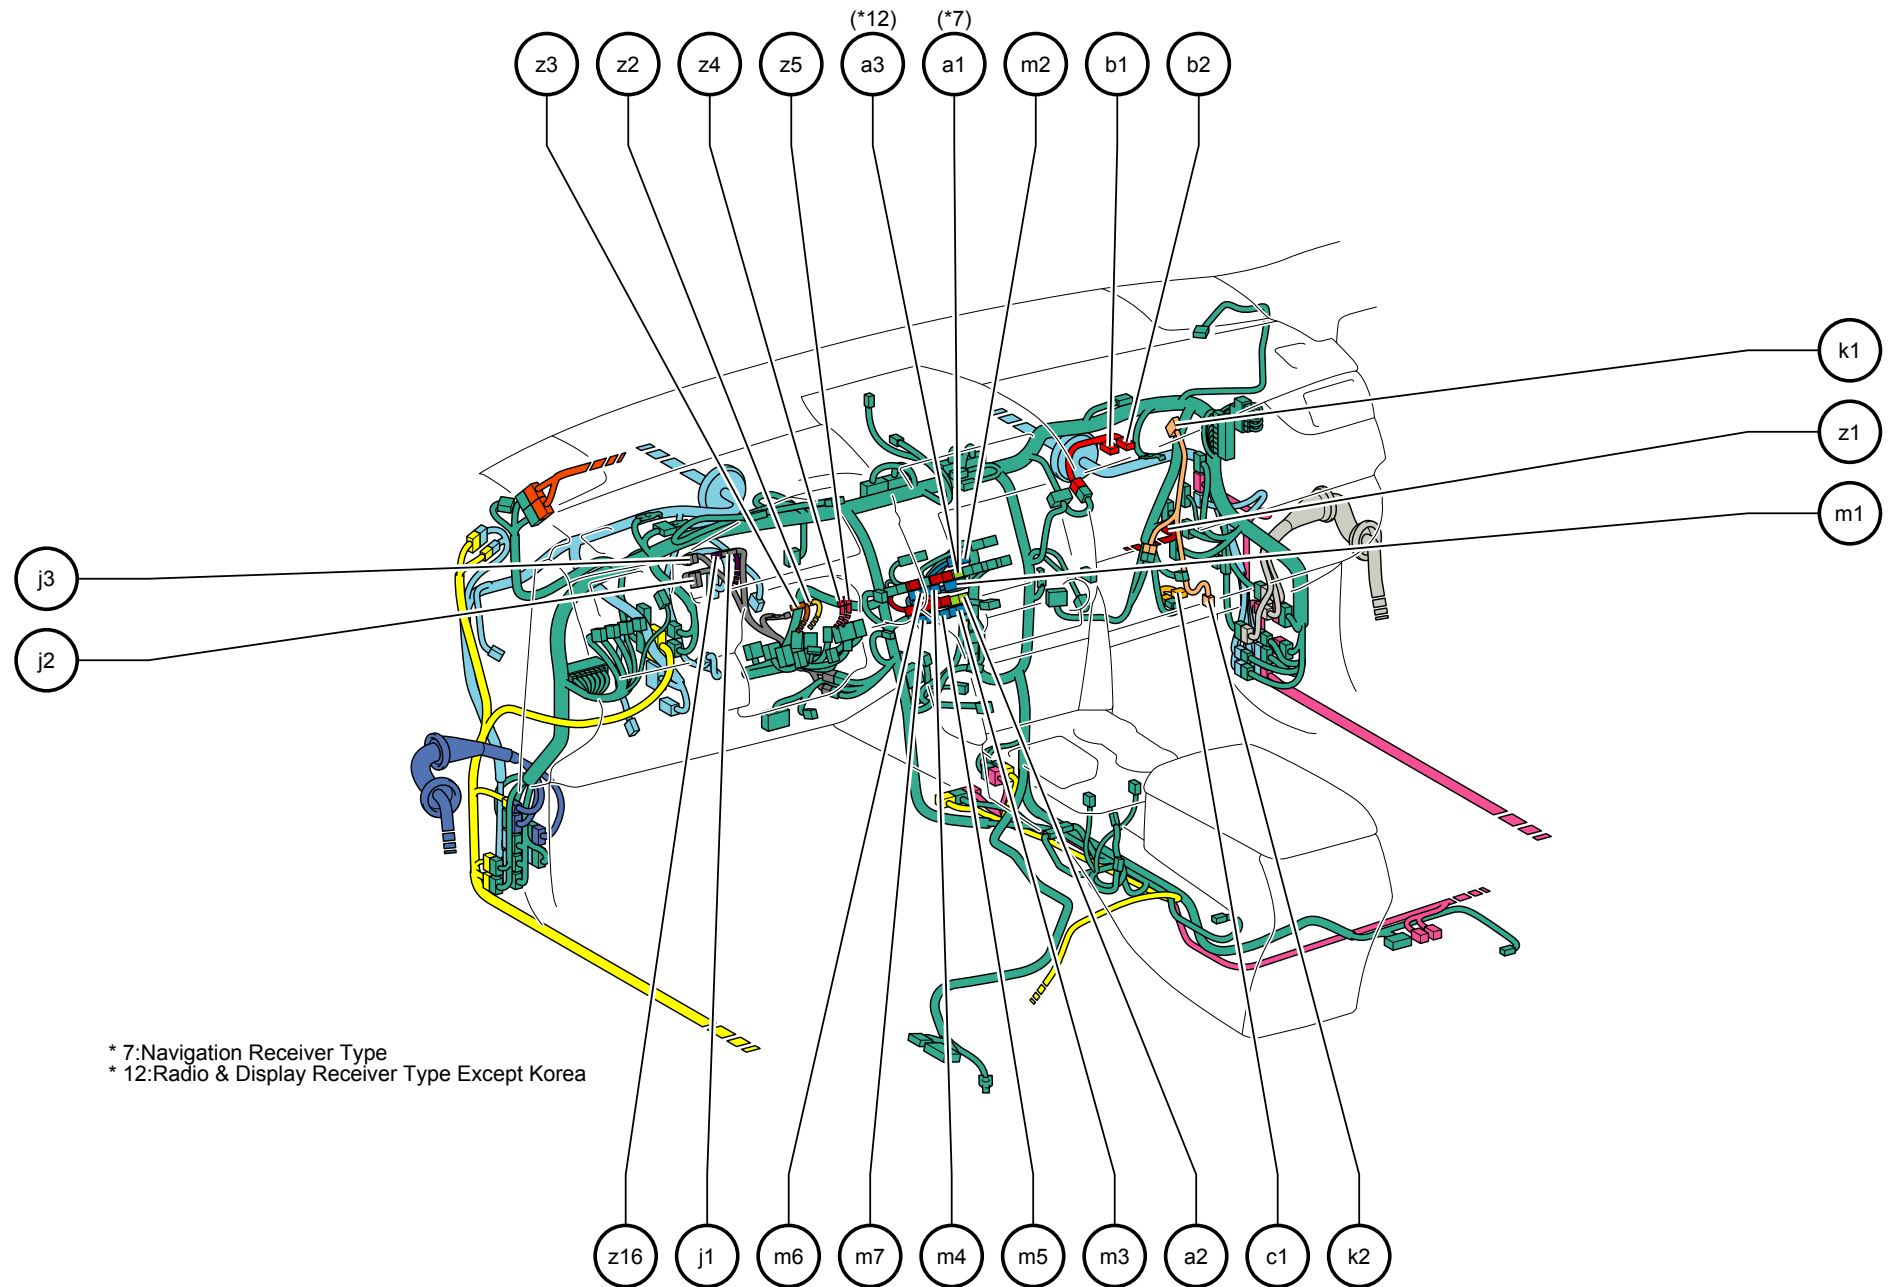

- a 1 Navigation Receiver Assembly
- a 2 Stereo Component Tuner Assembly
- a 3 Radio & Display Receiver Assembly

- b 1 Instrument Panel Passenger Airbag Assembly without Door
- b 2 Instrument Panel Passenger Airbag Assembly without Door

- c 1 Light Cut Relay

- j 1 Power Steering ECU Assembly
- j 2 Power Steering ECU Assembly
- j 3 Power Steering ECU Assembly

- k 1 Glass Breakage Sensor ECU Assembly
- k 2 Glass Breakage Sensor Microphone

- m 1 Radio & Display Receiver Assembly
- m 2 Radio & Display Receiver Assembly
- m 3 Option Connector (Extension Box)
- m 4 Radio & Display Receiver Assembly
- m 5 Option Connector (Extension Box)
- m 6 Radio & Display Receiver Assembly
- m 7 Option Connector (Extension Box)

- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 3 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 4 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 5 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 16 Electric Power Steering Column Sub-Assembly

Position of Parts in Instrument Panel

