


* 1:w/ Power Seat
* 2:w/o Power Seat

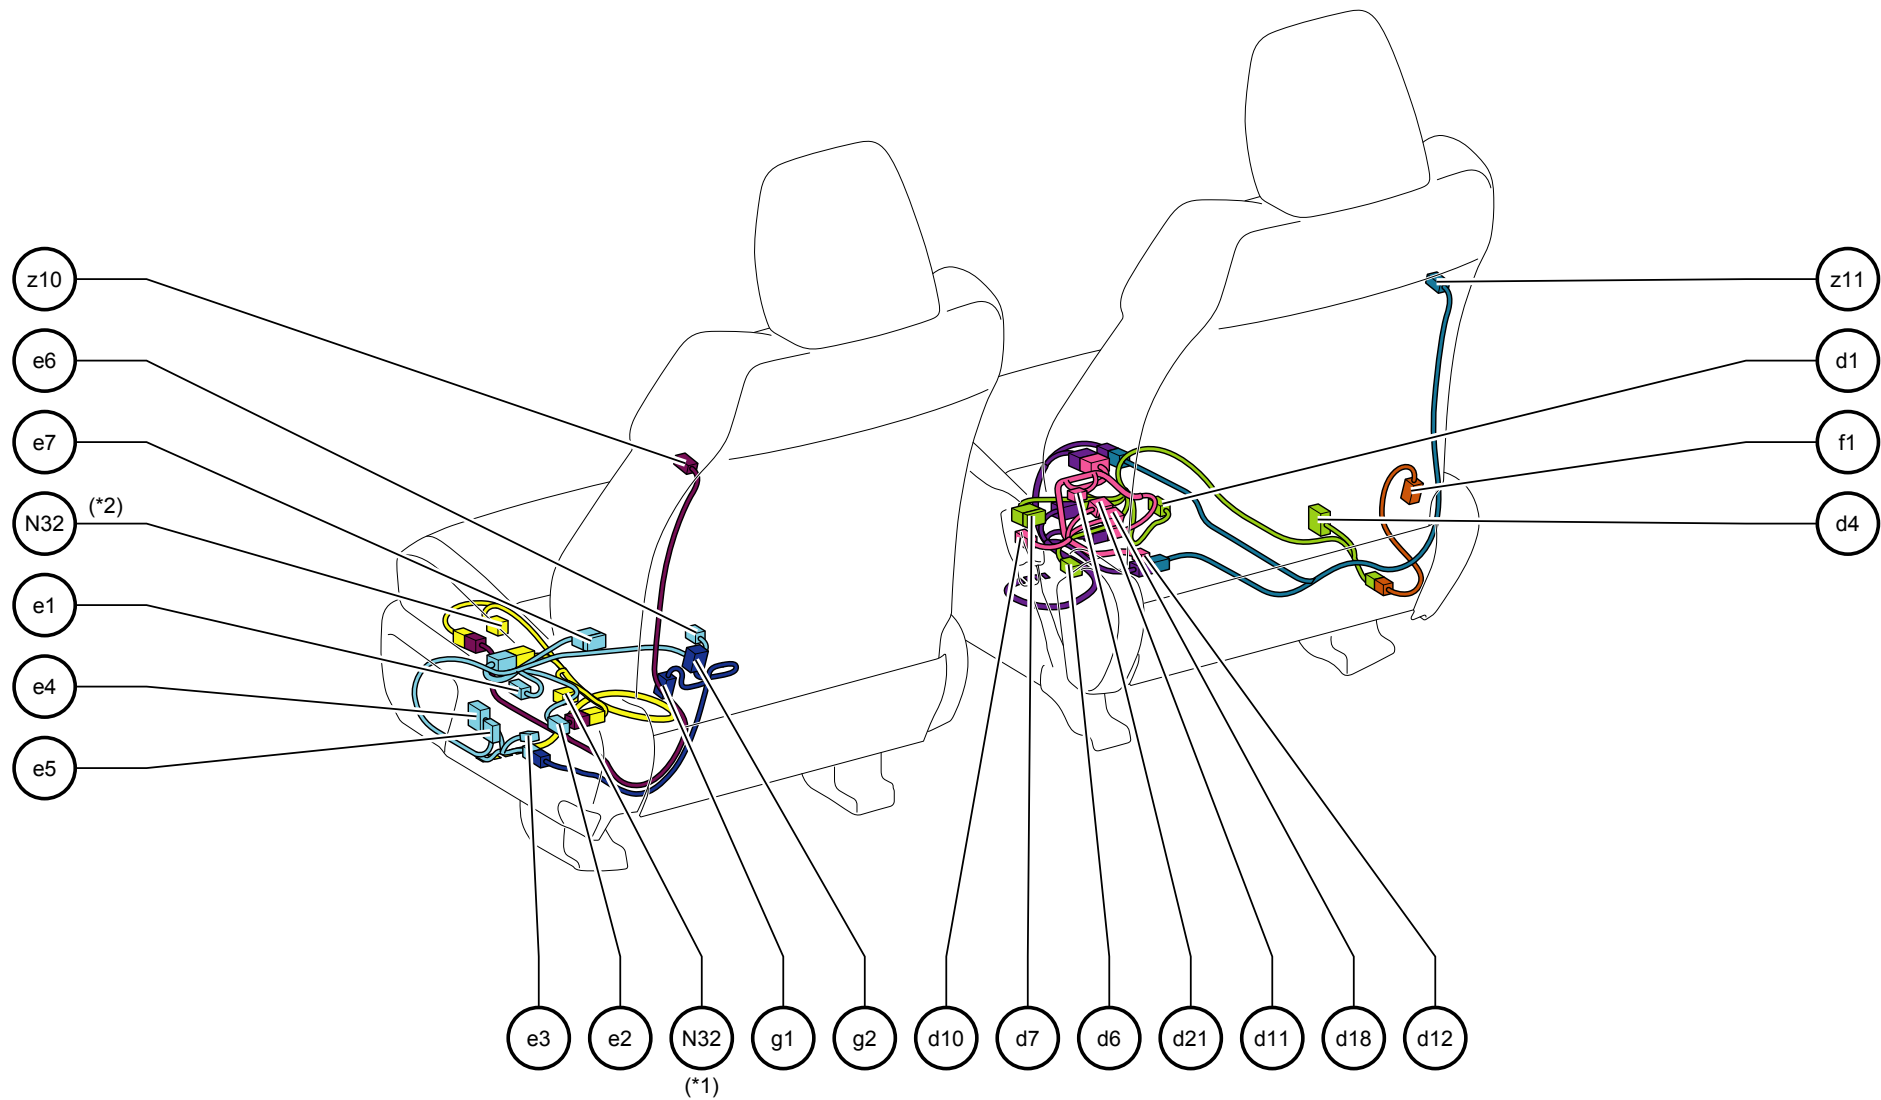

N 32 Front Seat Inner Belt Assembly LH

- d 1 Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
- d 4 Front Power Seat Switch RH
- d 6 Seat Heater Control Sub-Assembly RH
- d 7 Junction Connector
- d 10 Front Occupant Classification Sensor LH
- d 11 Occupant Detection ECU
- d 12 Rear Occupant Classification Sensor LH
- d 18 Occupant Detection ECU
- d 21 Front Seat Inner Belt Assembly RH

- e 1 Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
- e 2 Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
- e 3 Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
- e 4 Front Power Seat Switch LH
- e 5 Front Power Seat Lumbar Switch
- e 6 Seat Heater Control Sub-Assembly LH
- e 7 Junction Connector

- f 1 Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)

- g 1 Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
- g 2 Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)

- z 10 Front Seat Airbag Assembly LH
- z 11 Front Seat Airbag Assembly RH

Position of Parts in Seat <SIA Made>

