


Position of Parts in Engine Compartment (LHD 2GR-FKS)

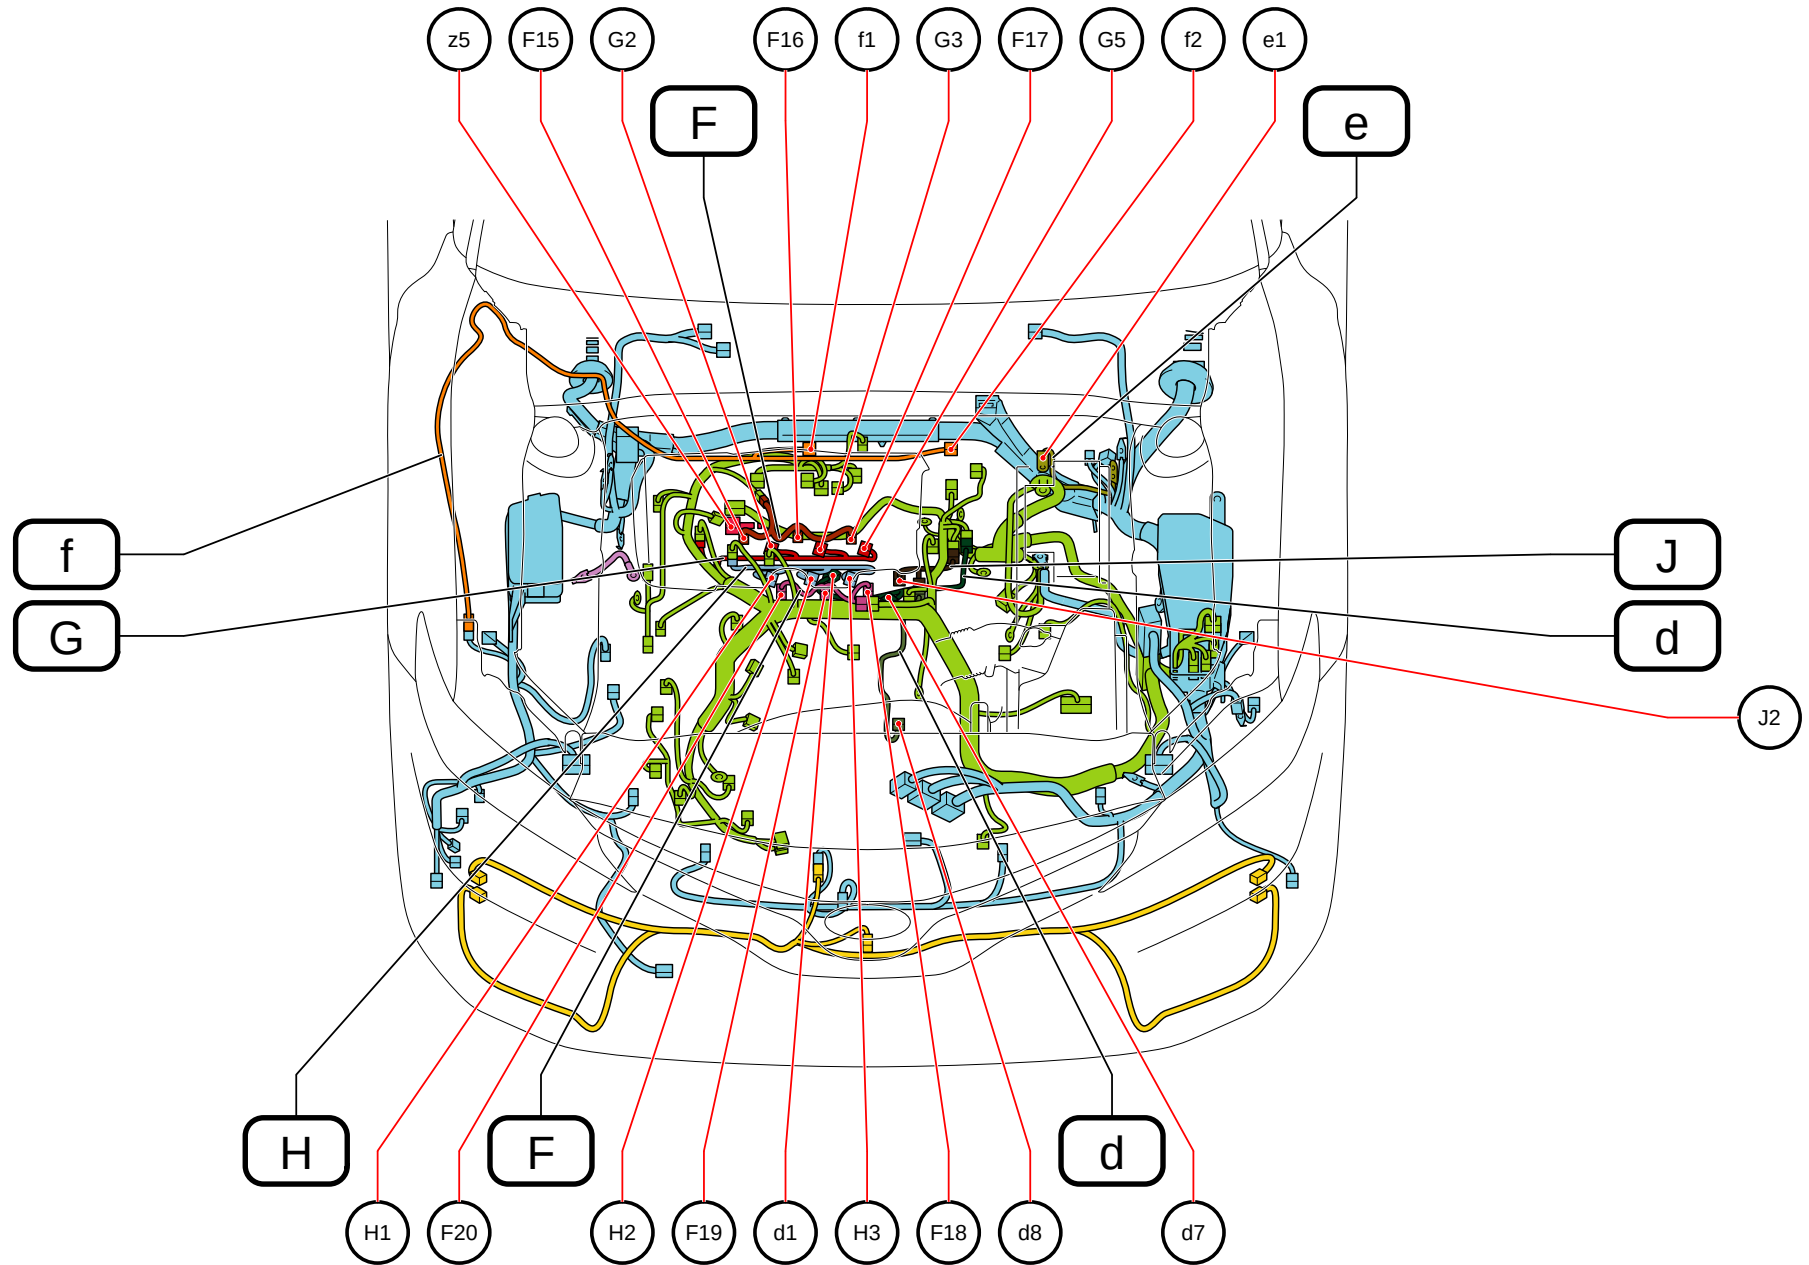

F15	Port Fuel Injector Assembly No. 1
F16	Port Fuel Injector Assembly No. 3
F17	Port Fuel Injector Assembly No. 5
F18	Port Fuel Injector Assembly No. 6
F19	Port Fuel Injector Assembly No. 4
F20	Port Fuel Injector Assembly No. 2
G2	Direct Fuel Injector Assembly No. 1
G3	Direct Fuel Injector Assembly No. 3
G5	Direct Fuel Injector Assembly No. 5
H1	Direct Fuel Injector Assembly No. 2
H2	Direct Fuel Injector Assembly No. 4
H3	Direct Fuel Injector Assembly No. 6
J2	Fuel Pressure Sensor (High)
d1	Knock Control Sensor (Bank 1)
d7	Knock Control Sensor (Bank 2)
d8	Crank Position Sensor
e1	Battery
f1	Washer Nozzle Sub-Assembly RH
f2	Washer Nozzle Sub-Assembly LH
z5	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly

Position of Parts in Engine Compartment (LHD 2GR-FKS)

