



Position of Parts in Engine Compartment (RHD 2GR-FKS)

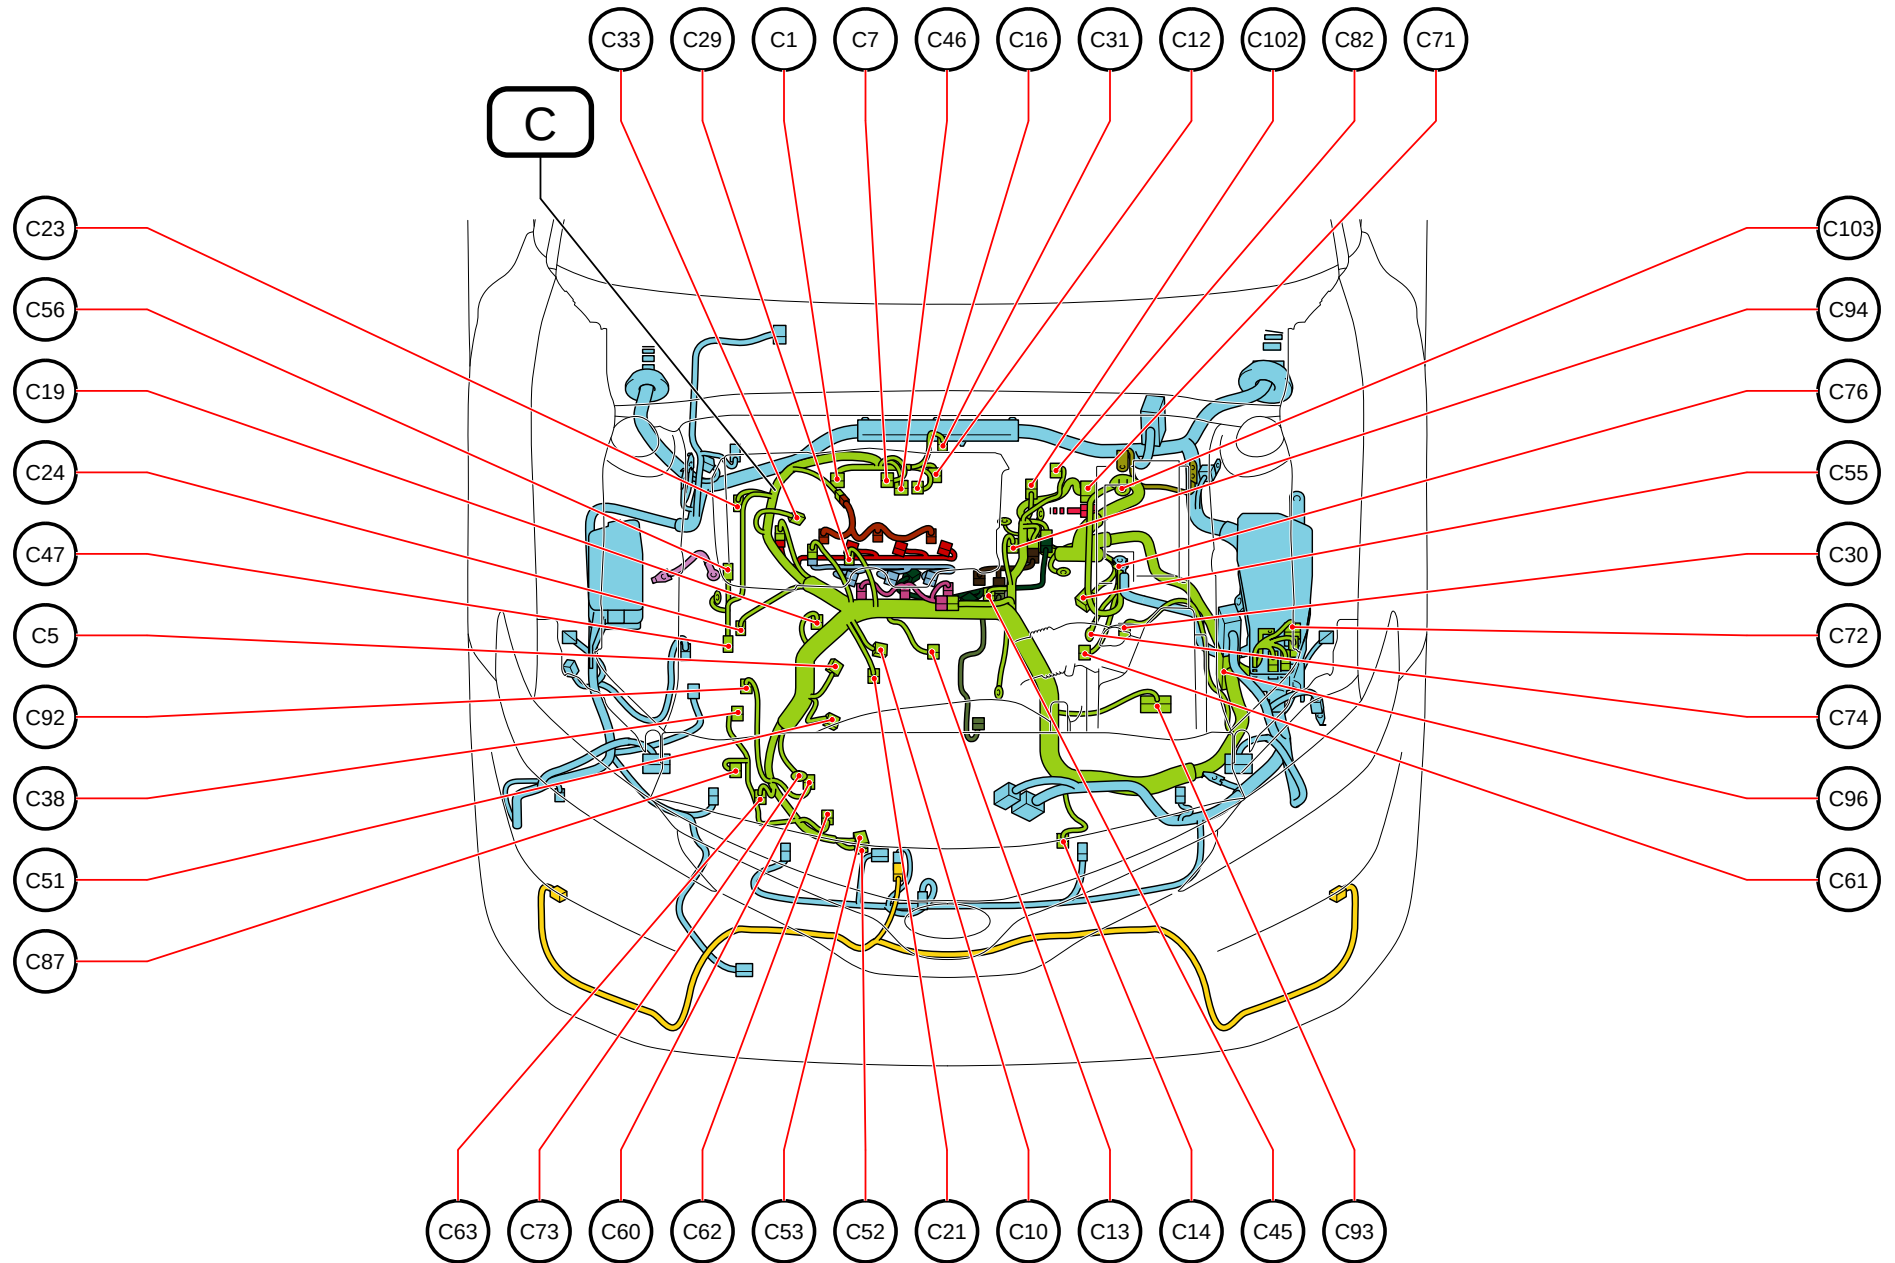


C1	Ignition Coil Assembly No. 1
C5	Ignition Coil Assembly No. 2
C7	Ignition Coil Assembly No. 3
C10	Ignition Coil Assembly No. 4
C12	Ignition Coil Assembly No. 5
C13	Ignition Coil Assembly No. 6
C14	VSV (ACM)
C16	VVT Sensor (Bank 1 Intake Side)
C19	VVT Sensor (Bank 2 Intake Side)
C21	VVT Sensor (Bank 2 Exhaust Side)
C23	Cam Timing Oil Control Solenoid Assembly (Bank 1 Intake Side)
C24	Cam Timing Oil Control Solenoid Assembly (Bank 2 Intake Side)
C29	VSV (ACIS)
C30	Intake Mass Air Flow Meter Sub-Assembly
C31	VSV (Fuel Pump)
C33	Fuel Pressure Sensor (Low)
C38	Engine Oil Level Sensor
C45	Engine Coolant Temperature Sensor
C46	VVT Sensor (Bank 1 Exhaust Side)
C47	Thermostat with Water Inlet Sub-Assembly
C51	Air Fuel Ratio Sensor No. 2
C52	Rear Oxygen Sensor (Bank 1 Sensor 2)
C53	Rear Oxygen Sensor (Bank 2 Sensor 2)
C55	Park/Neutral Position Switch Assembly
C56	Cam Timing Oil Control Solenoid Assembly (Bank 1 Exhaust Side)
C60	Generator Assembly
C61	Starter Assembly
C62	Compressor with Pulley Assembly
C63	Magnet Clutch Assembly
C71	Power Steering ECU Assembly
C72	No. 32 Junction Connector
C73	Generator Assembly
C74	Starter Assembly
C76	Battery
C82	Throttle with Motor Body Assembly
C87	Engine Oil Pressure Switch Assembly
C92	Cam Timing Oil Control Solenoid Assembly (Bank 2 Exhaust Side)
C93	ECT Solenoid (Transmission Wire)
C94	Purge VSV
C96	ECM
C102	Air Fuel Ratio Sensor No. 1
C103	Battery


Position of Parts in Engine Compartment (RHD 2GR-FKS)

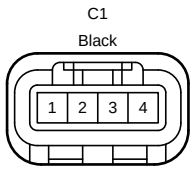


90980-12A37

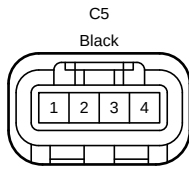


90980-12A37

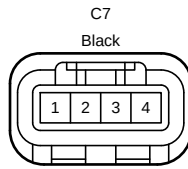


90980-12A37

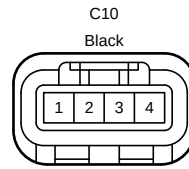


90980-12A37

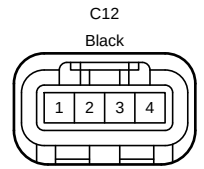


90980-12A37

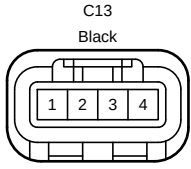


90980-12A37

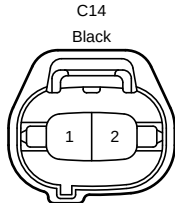


90980-11156

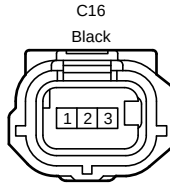


90980-12353

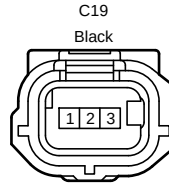


90980-12353

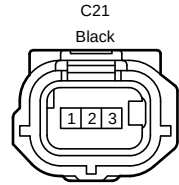


90980-12353

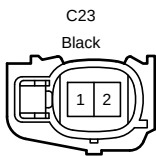


90980-11875

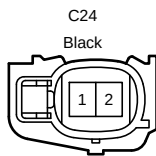


90980-11875

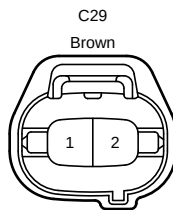


90980-11149

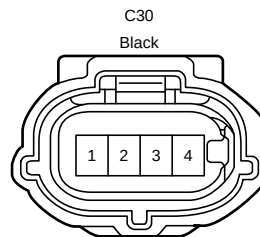


90980-12A85

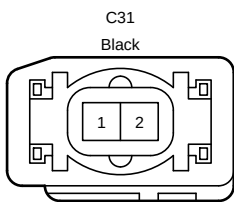


90980-12747

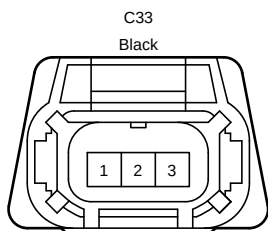


90980-12A19

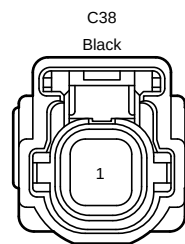


90980-12C20

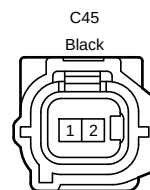

90980-12416

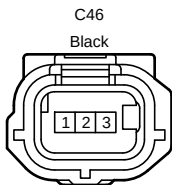

90980-12353

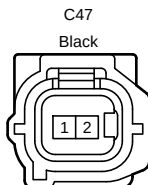

90980-12572




90980-10869




90980-11028




90980-10869

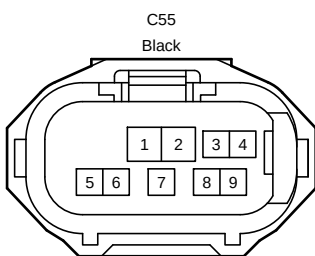


90980-12A23

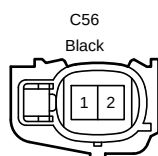


90980-11875

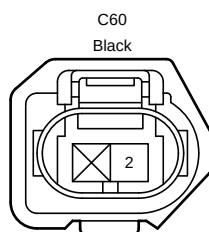

90980-12A88

 

90980-11400

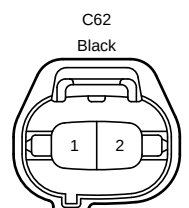

90980-11156

Position of Parts in Engine Compartment (RHD 2GR-FKS)

