



Position of Parts in Engine Compartment (LHD 6AR-FSE)

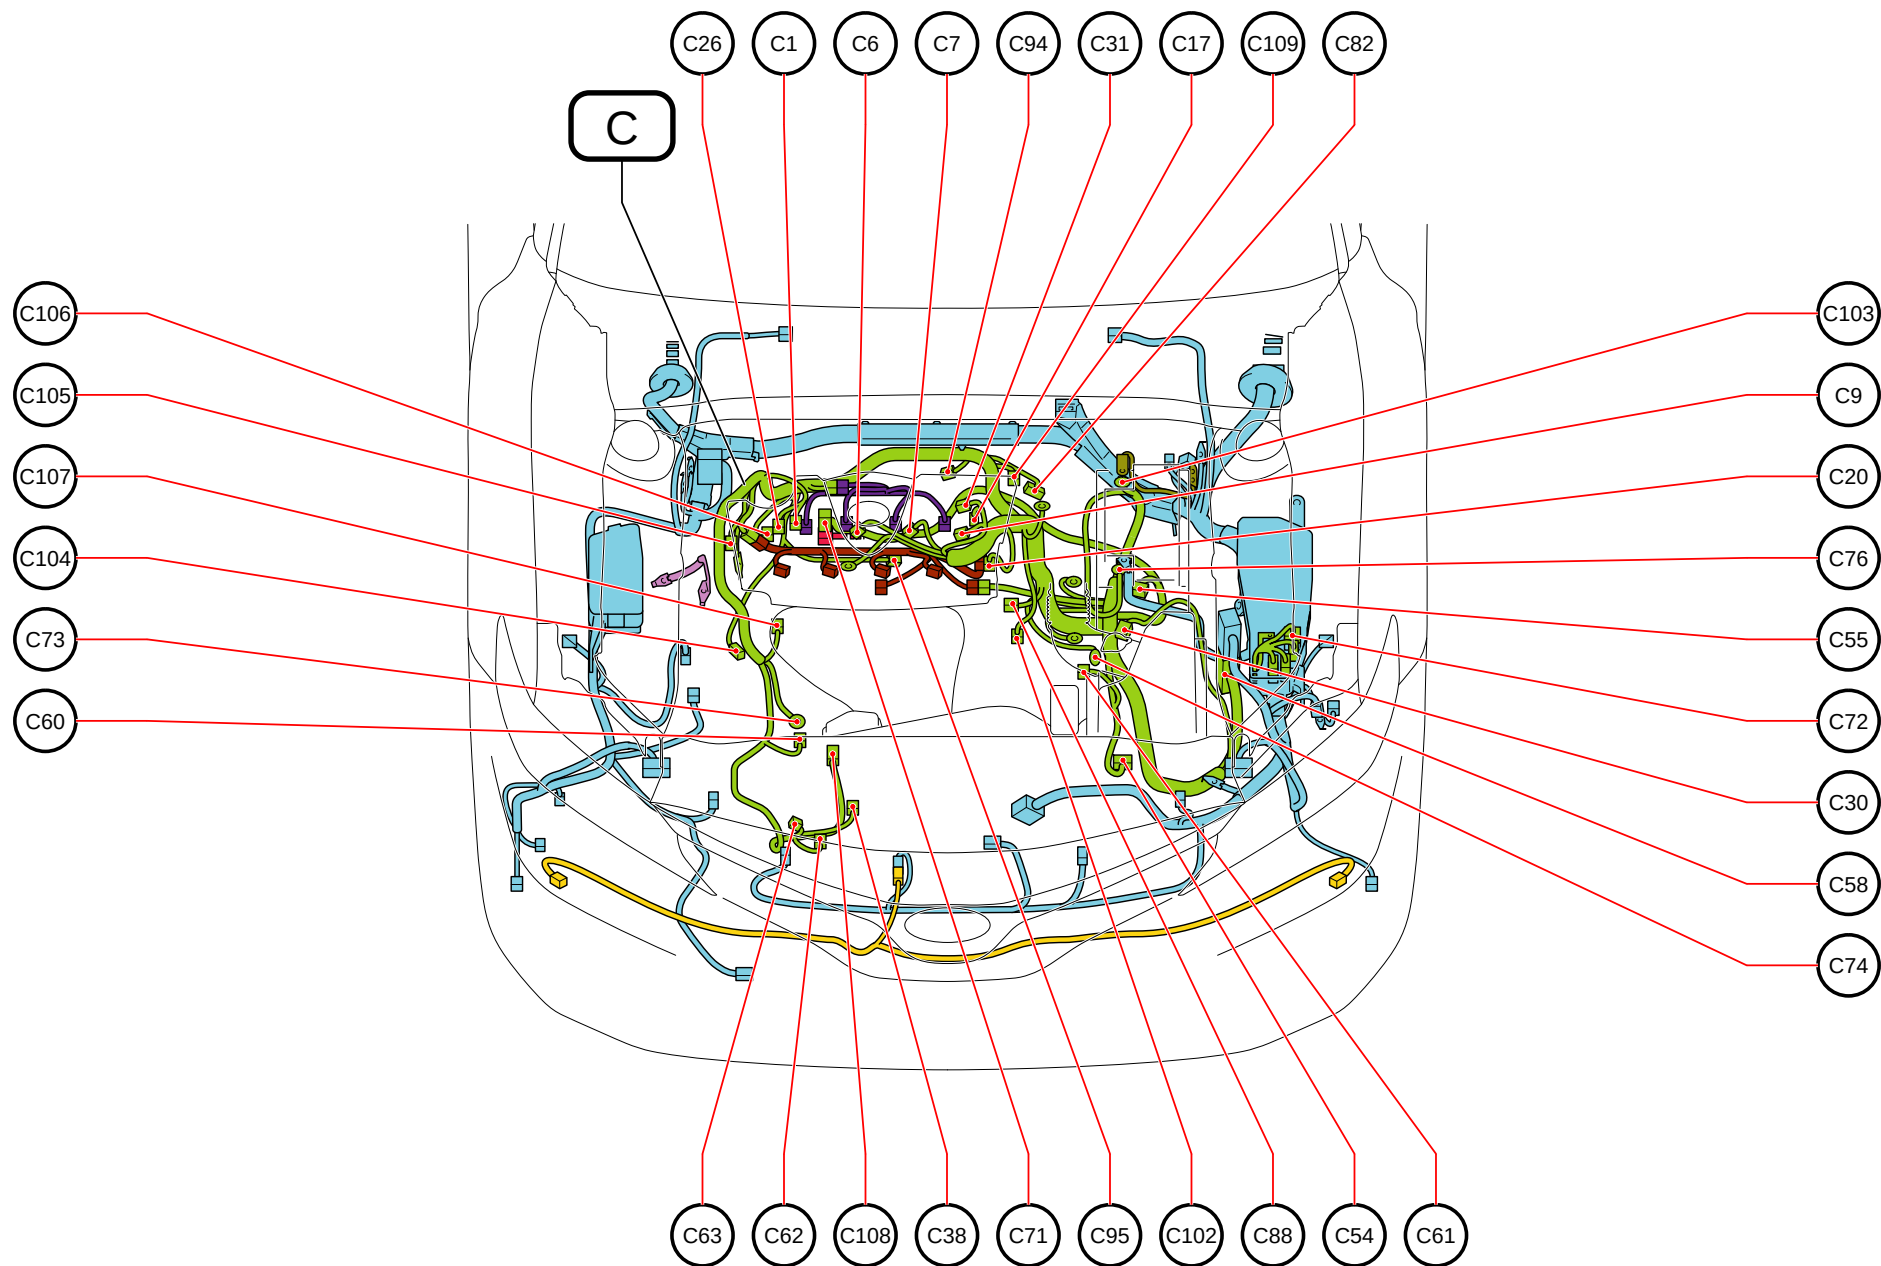


|      |                                                         |
|------|---------------------------------------------------------|
| C1   | Ignition Coil Assembly No. 1                            |
| C6   | Ignition Coil Assembly No. 2                            |
| C7   | Ignition Coil Assembly No. 3                            |
| C9   | Ignition Coil Assembly No. 4                            |
| C17  | VVT Sensor (Intake Side)                                |
| C20  | VVT Sensor (Exhaust Side)                               |
| C26  | Cam Timing Oil Control Solenoid Assembly (Exhaust Side) |
| C30  | Intake Mass Air Flow Meter Sub-Assembly                 |
| C31  | VSV (Fuel Pump)                                         |
| C38  | Engine Oil Level Sensor                                 |
| C54  | ECT Solenoid (Transmission Wire)                        |
| C55  | Park/Neutral Position Switch Assembly                   |
| C58  | ECM                                                     |
| C60  | Generator Assembly                                      |
| C61  | Starter Assembly                                        |
| C62  | Compressor with Pulley Assembly                         |
| C63  | Magnet Clutch Assembly                                  |
| C71  | Power Steering ECU Assembly                             |
| C72  | No. 32 Junction Connector                               |
| C73  | Generator Assembly                                      |
| C74  | Starter Assembly                                        |
| C76  | Battery                                                 |
| C82  | Throttle with Motor Body Assembly                       |
| C88  | Engine Coolant Temperature Sensor                       |
| C94  | Purge VSV                                               |
| C95  | Rear Oxygen Sensor (Bank 1 Sensor 2)                    |
| C102 | Air Fuel Ratio Sensor No. 1                             |
| C103 | Battery                                                 |
| C104 | Crank Position Sensor                                   |
| C105 | Cam Timing Oil Control Solenoid Assembly (Intake Side)  |
| C106 | E.F.I. Vacuum Sensor Assembly                           |
| C107 | Oil Pressure Sender Gage Assembly                       |
| C108 | Engine Oil Temperature Sensor (Temperature Sensor)      |
| C109 | EGR Valve Assembly                                      |


Position of Parts in Engine Compartment (LHD 6AR-FSE)

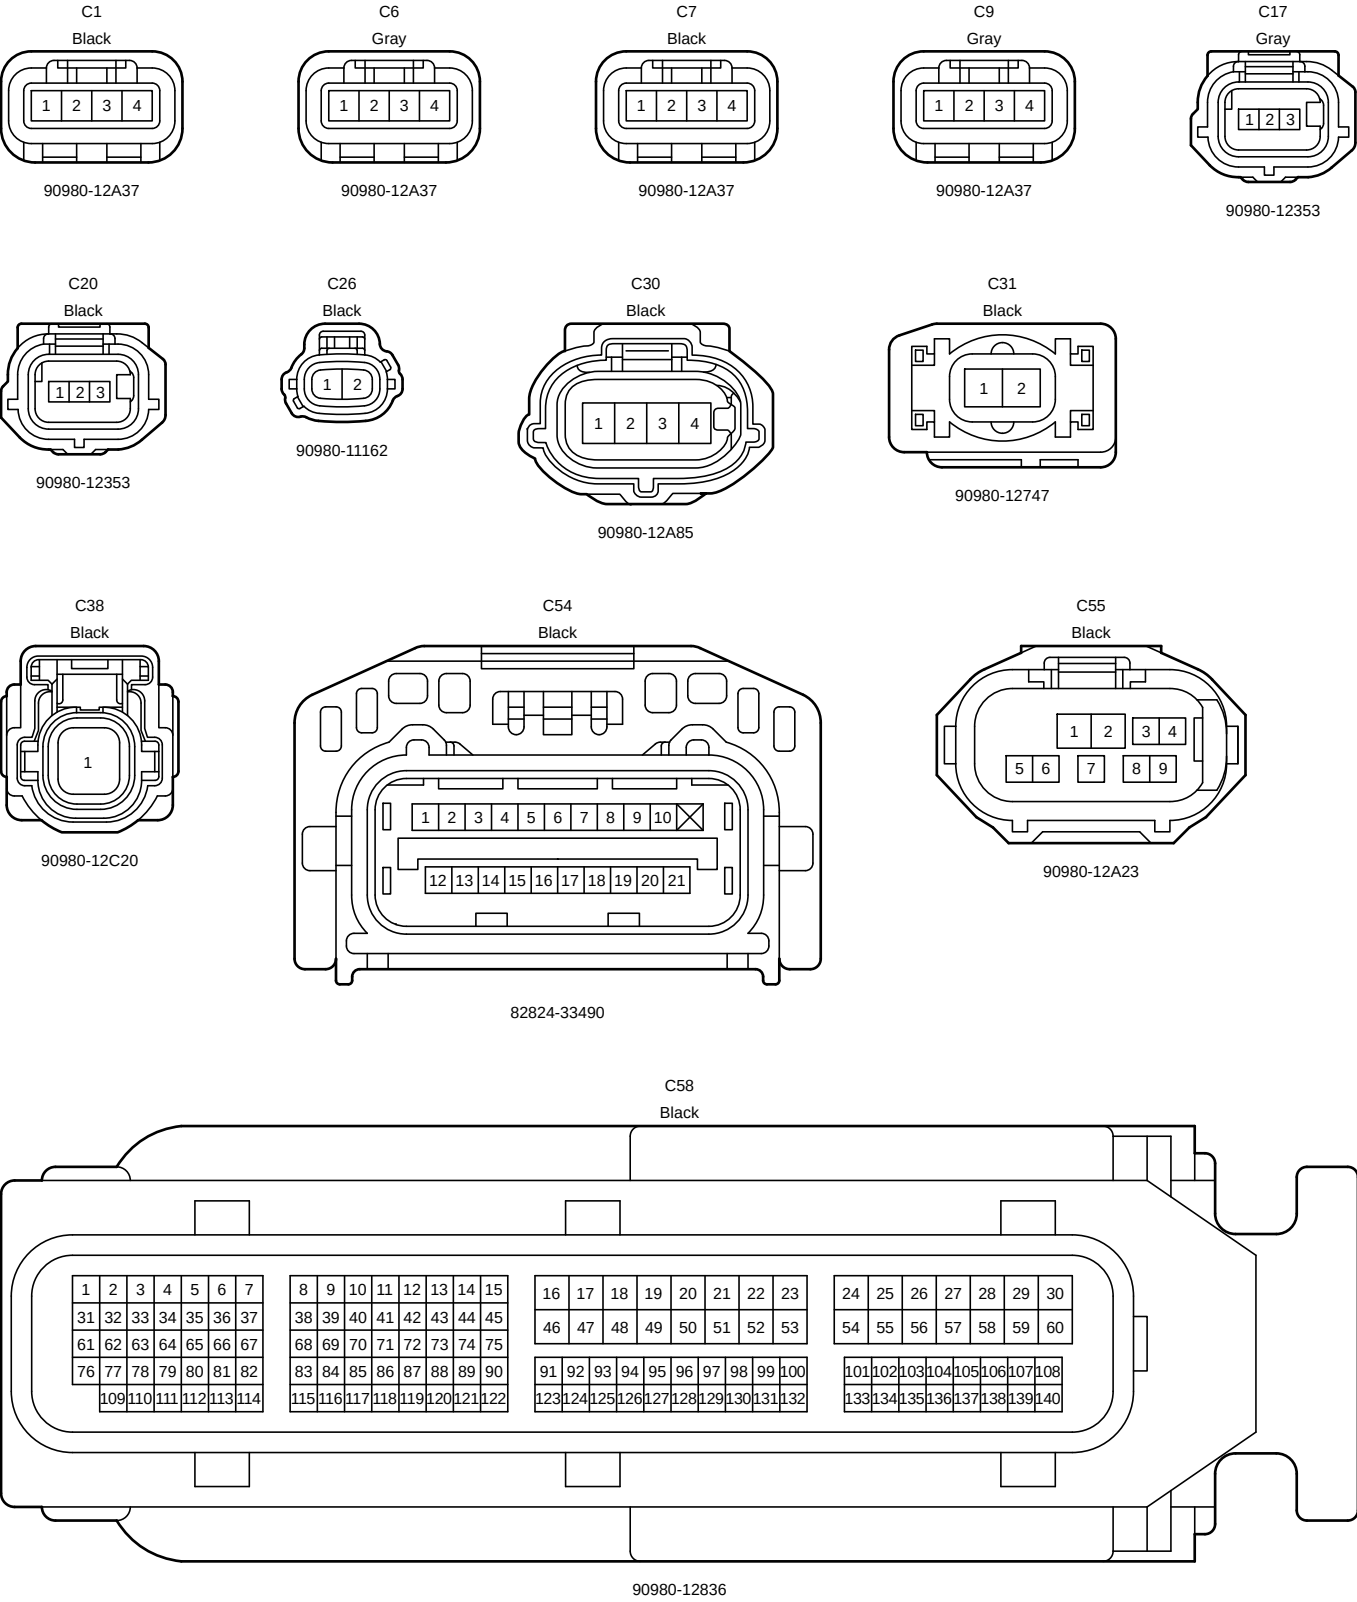


Position of Parts in Engine Compartment (LHD 6AR-FSE)

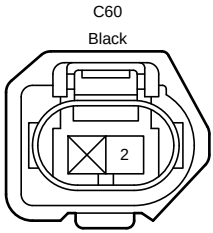


90980-12A88

 


90980-11400

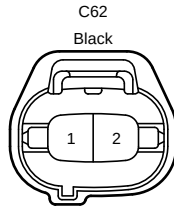


90980-11156

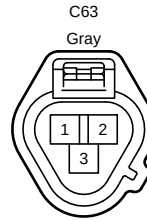





90980-11016

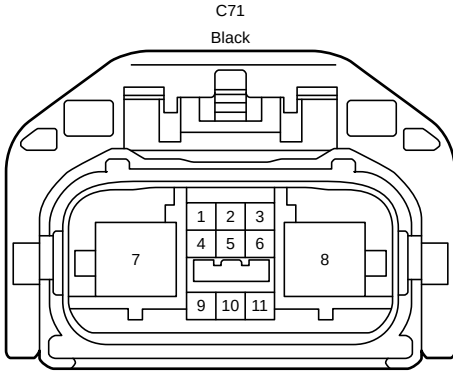


90980-12C57

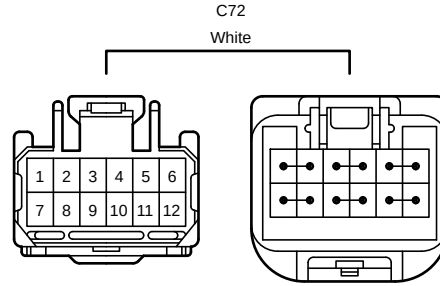


90980-11661

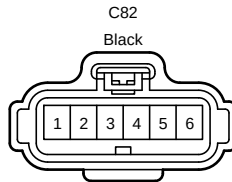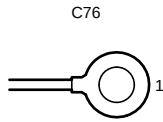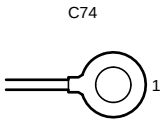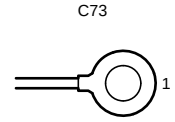

90980-11858

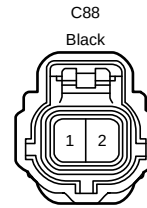

82824-33400

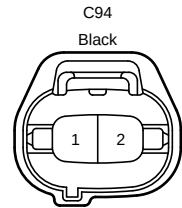



90980-11156




90980-11028



 
90980-11178

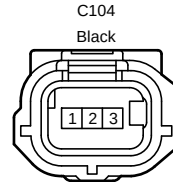


90980-12353

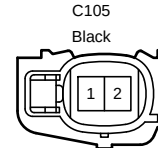


90980-11875

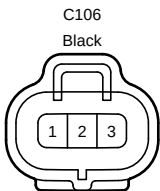


90980-10845

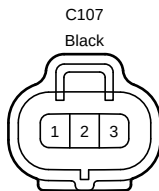

90980-10845

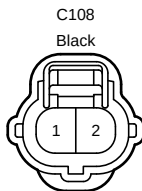

90980-11025

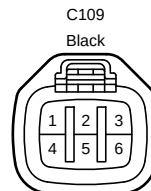

90980-11144