


Position of Parts in Engine Compartment (LHD 6AR-FSE)

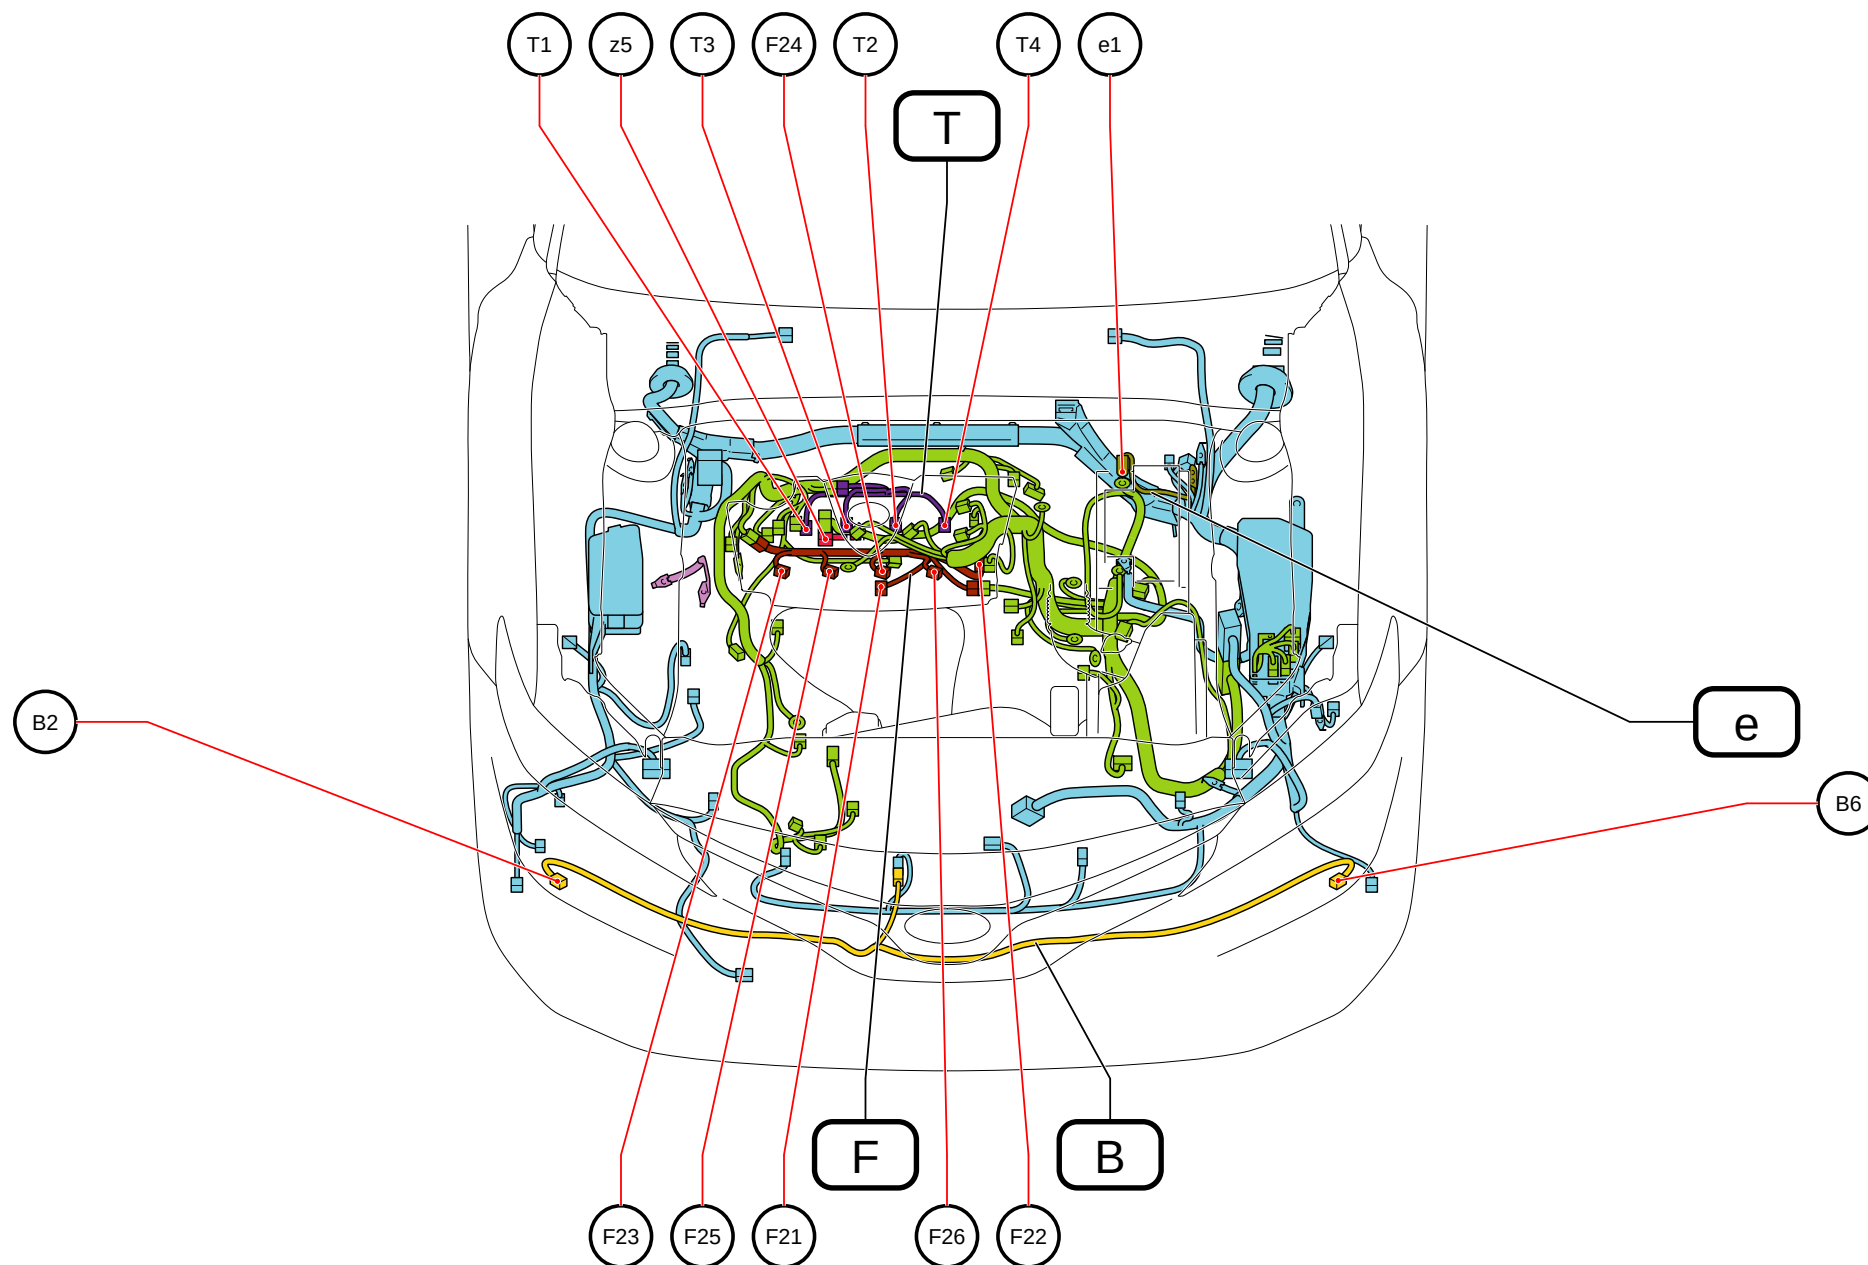

B2	Front Ultrasonic Sensor RH
B6	Front Ultrasonic Sensor LH
F21	Knock Control Sensor (Bank 1)
F22	Fuel Pressure Sensor
F23	Fuel Injector Assembly No. 1 (for Direct Injection)
F24	Fuel Injector Assembly No. 3 (for Direct Injection)
F25	Fuel Injector Assembly No. 2 (for Direct Injection)
F26	Fuel Injector Assembly No. 4 (for Direct Injection)
T1	Fuel Injector Assembly No. 1 (for Port Injection)
T2	Fuel Injector Assembly No. 3 (for Port Injection)
T3	Fuel Injector Assembly No. 2 (for Port Injection)
T4	Fuel Injector Assembly No. 4 (for Port Injection)
e1	Battery
z5	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly

Position of Parts in Engine Compartment (LHD 6AR-FSE)

