 
 


Position of Parts in Engine Compartment (LHD A25A-FKS)

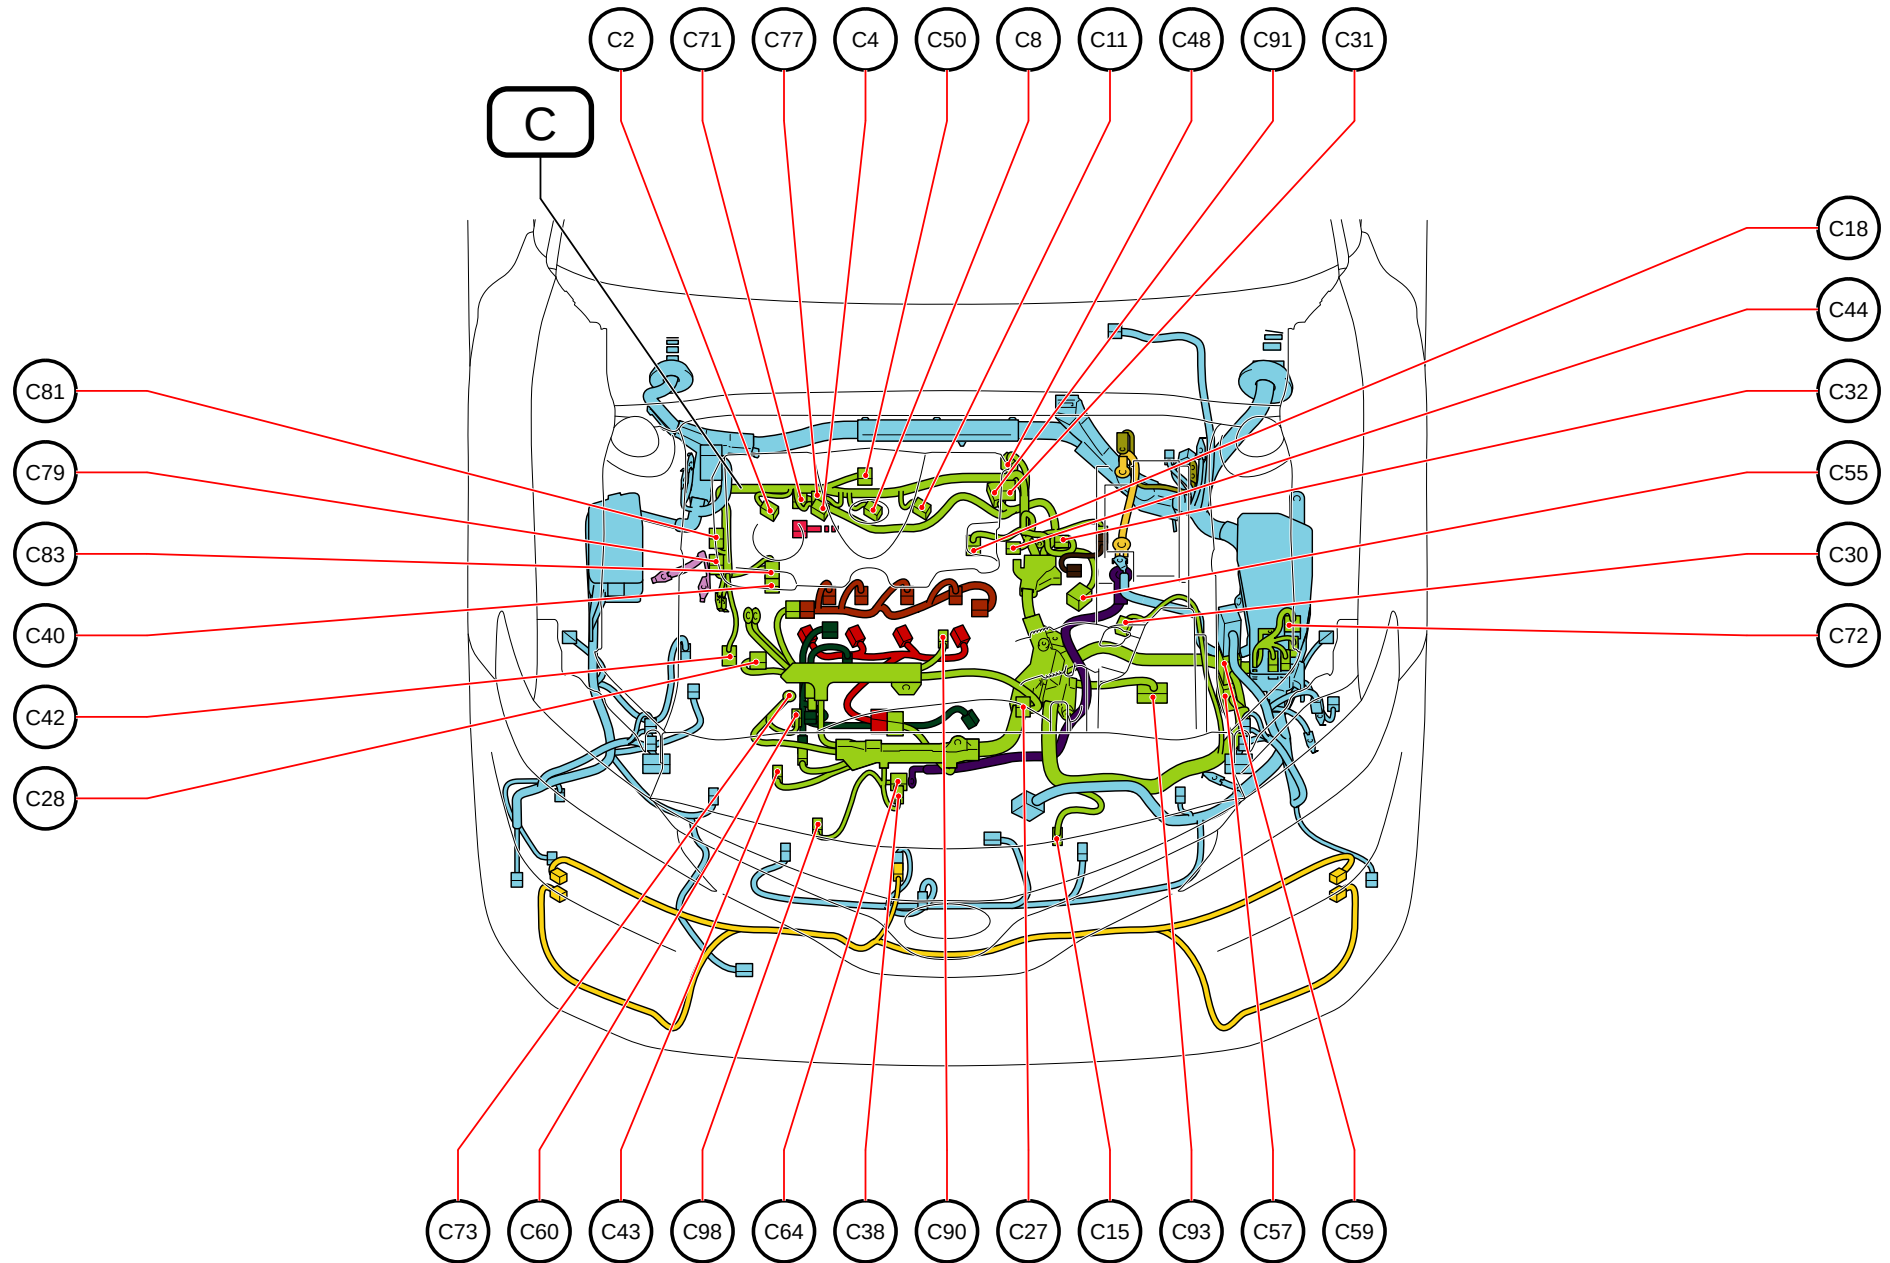


C2	Ignition Coil Assembly No. 1
C4	Ignition Coil Assembly No. 2
C8	Ignition Coil Assembly No. 3
C11	Ignition Coil Assembly No. 4
C15	VSV (ACM)
C18	Camshaft Position Sensor (Intake Side)
C27	Throttle with Motor Body Assembly
C28	E.F.I. Vacuum Sensor Assembly
C30	Intake Mass Air Flow Meter Sub-Assembly
C31	VSV (Fuel Pump)
C32	Purge VSV
C38	Engine Oil Level Sensor
C40	Oil Pressure Sender Gage Assembly
C42	Oil Pressure Control Valve Assembly
C43	Engine Water Pump Assembly
C44	Engine Coolant Temperature Sensor
C48	Water Valve (HTR)
C50	Air Fuel Ratio Sensor No. 1
C55	Park/Neutral Position Switch Assembly
C57	ECM
C59	ECM
C60	Generator Assembly
C64	Starter Assembly
C71	Power Steering ECU Assembly
C72	No. 32 Junction Connector
C73	Generator Assembly
C77	Camshaft Position Sensor (Exhaust Side)
C79	Cam Timing Control with EDU Motor Assembly
C81	Cam Timing Oil Control Solenoid Assembly (Exhaust Side)
C83	Engine Oil Temperature Sensor (Temperature Sensor)
C90	EGR Valve Assembly
C91	Air Fuel Ratio Sensor No. 2
C93	ECT Solenoid (Transmission Wire)
C98	Compressor with Pulley Assembly


Position of Parts in Engine Compartment (LHD A25A-FKS)

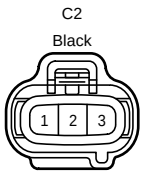

 
90980-12D33

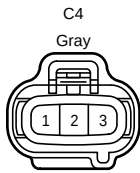


90980-12D33

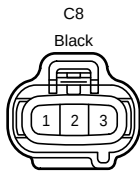 


90980-12D33

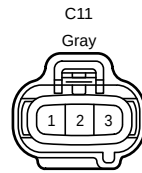 


90980-12D33

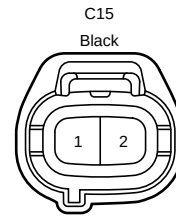 


90980-12D34

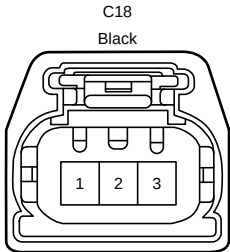 


90980-12D13

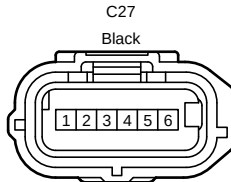 


90980-12303

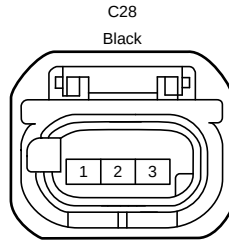 


90980-12D17

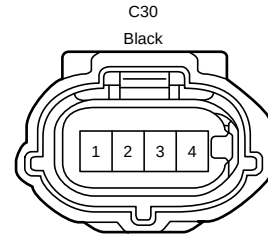 


90980-12A85

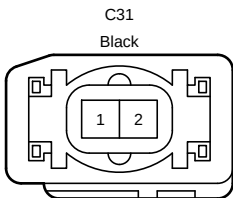 


90980-12747

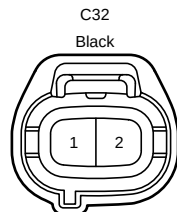 


90980-12D34

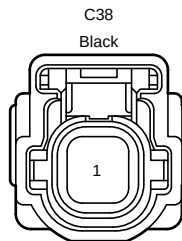 


90980-12C20

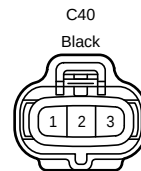 


90980-12D37

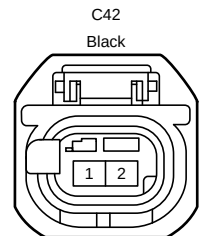 


90980-12D16

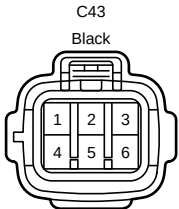 


90980-12D15

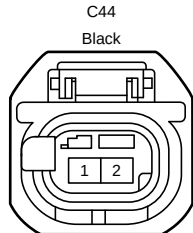 


90980-12D16

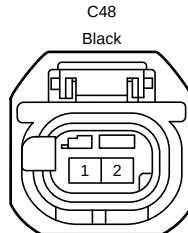 

90980-12D16

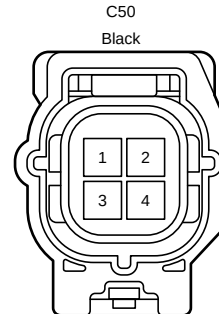 


90980-12B05

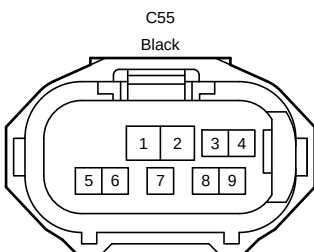 

90980-12A23


Position of Parts in Engine Compartment (LHD A25A-FKS)

 C57
Black

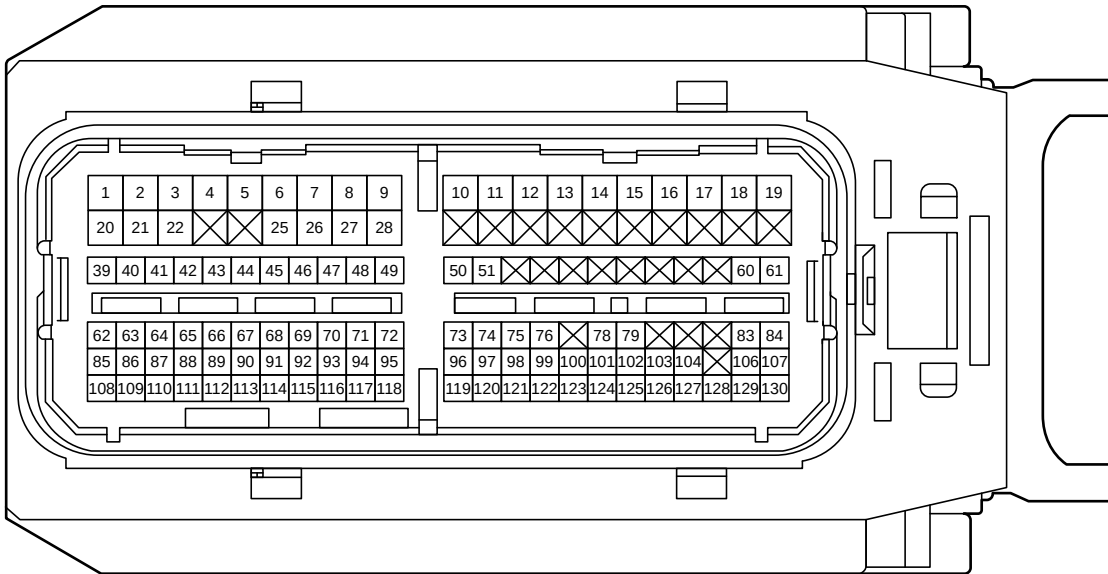


90980-12D93

 C59
Black

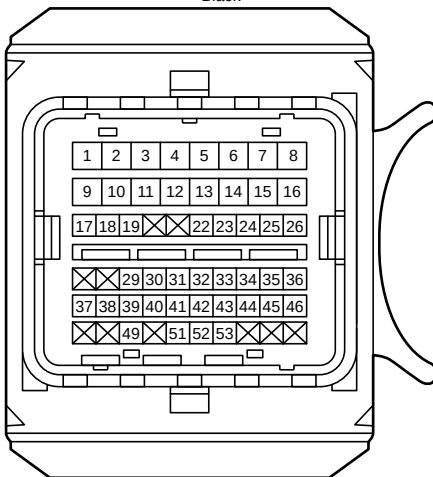

90980-12D95

 C60
Black

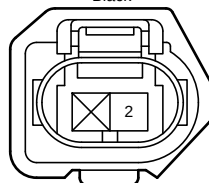


90980-12A88

C64
Black




90980-12D35

 C71
Black

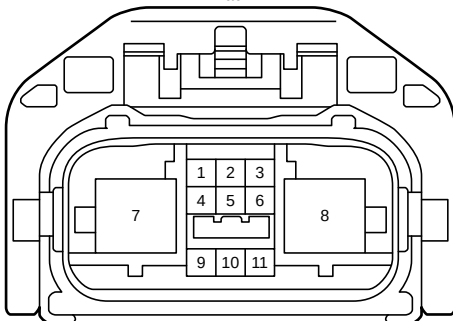


90980-12C57

 C72
White

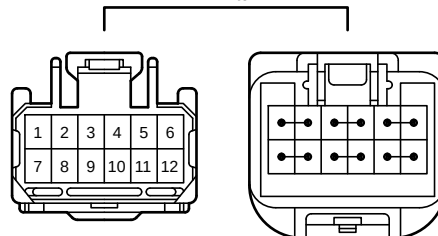

90980-11661

 
C73



Position of Parts in Engine Compartment (LHD A25A-FKS)

C77

 
Black

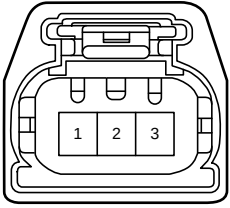

90980-12D13

C79

 
Black

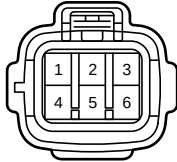

90980-12D15

C81

 
Black

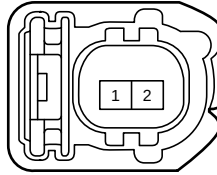

90980-12D12

C83

 
Black

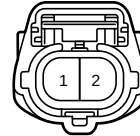

90980-12D38

C90

 
Black

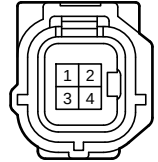

90980-12495

C91

 
Black

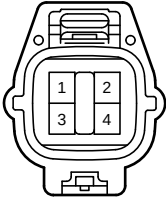

90980-11930

C93

 
Gray

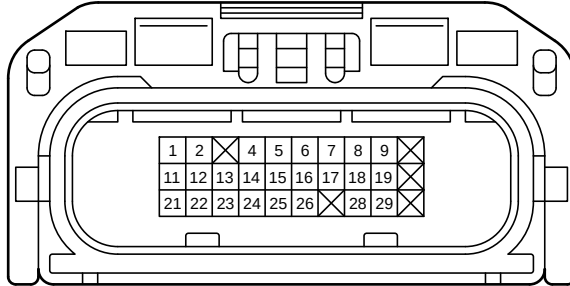

82824-33770

C98

 Black

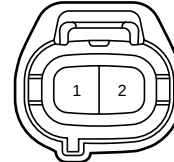

90980-12D34