


Position of Parts in Engine Compartment (LHD A25A-FKS)

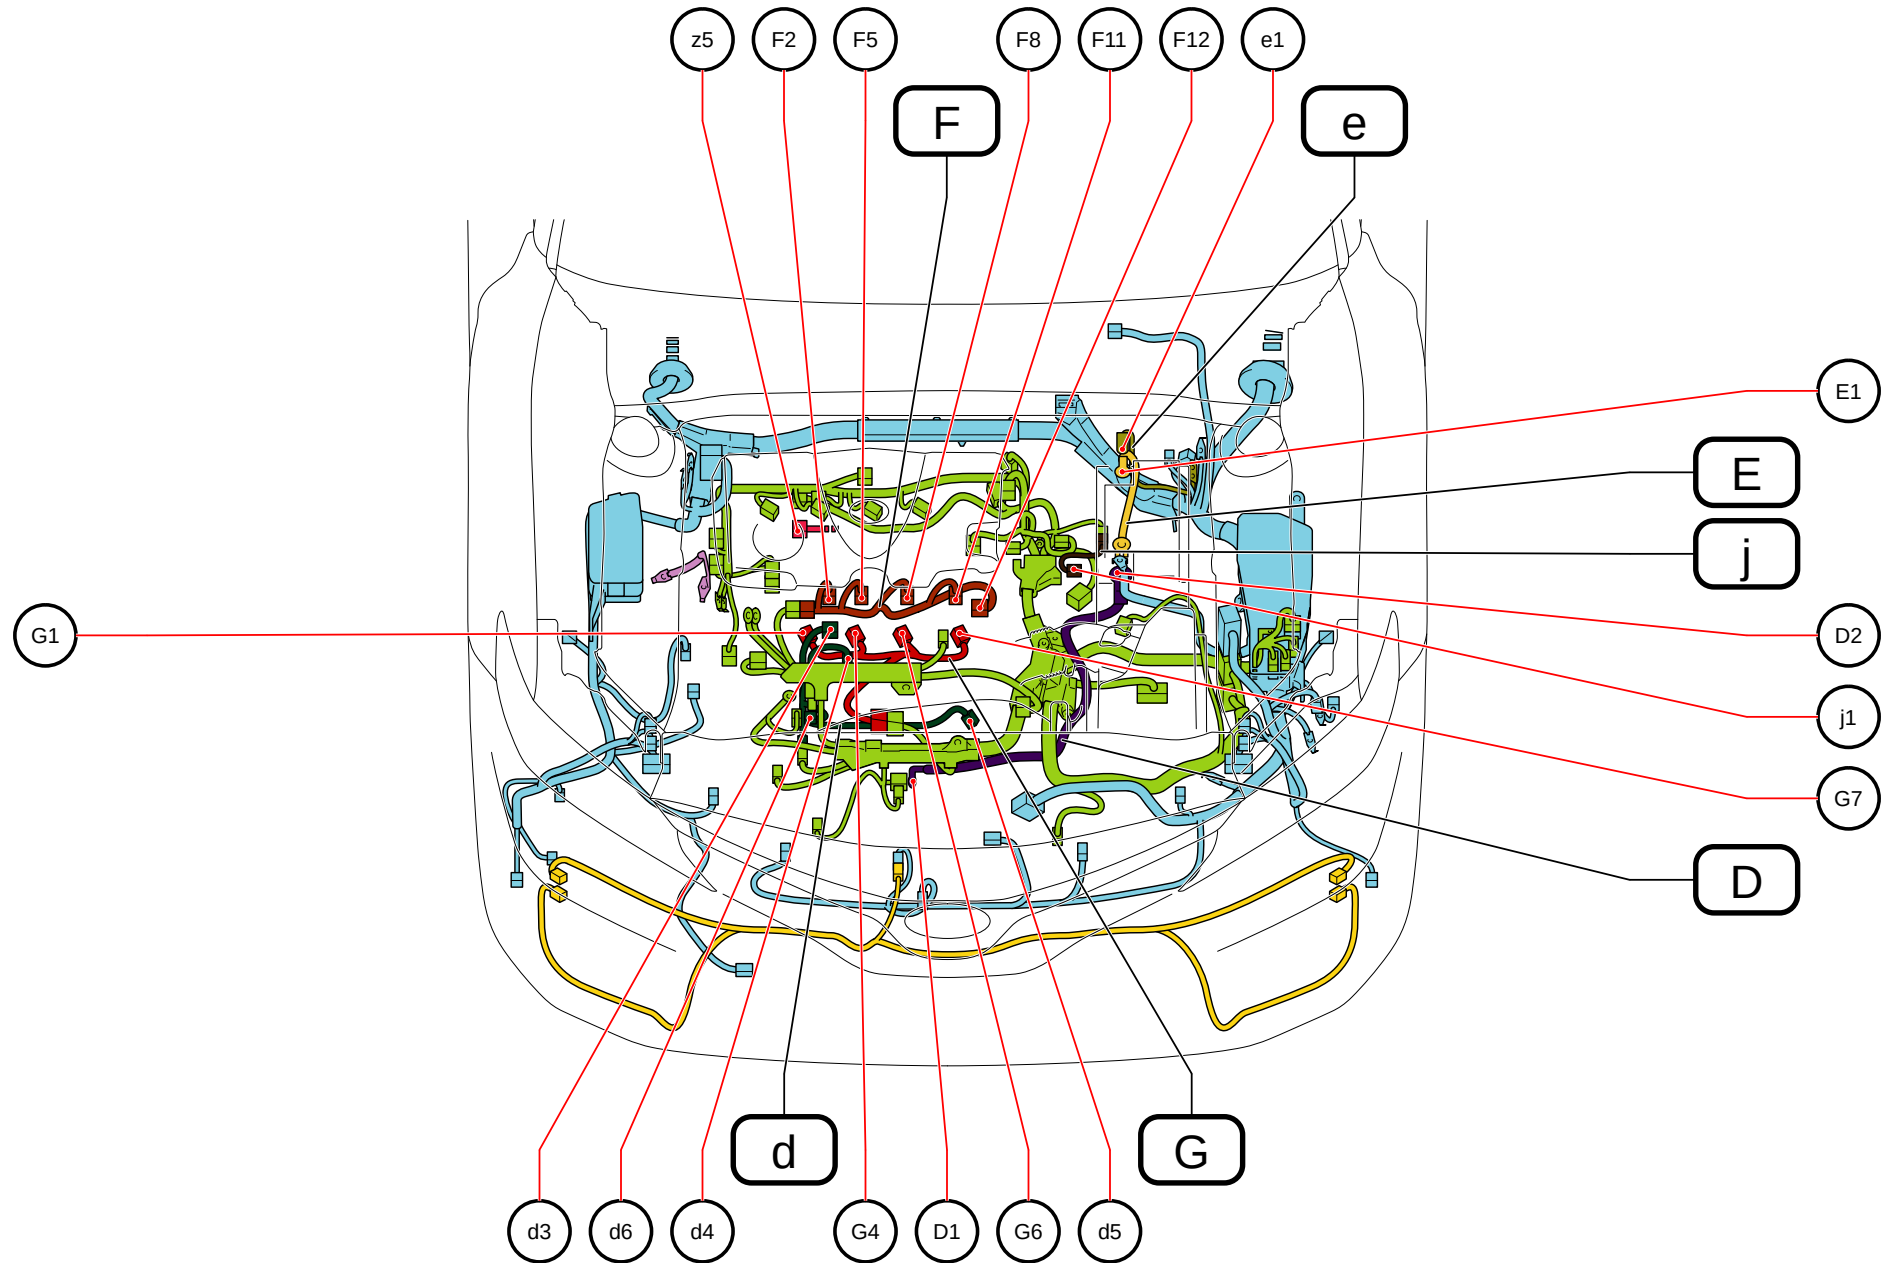

D1	Starter Assembly
D2	Battery
E1	Battery
F2	Port Fuel Injector Assembly No. 1
F5	Port Fuel Injector Assembly No. 2
F8	Port Fuel Injector Assembly No. 3
F11	Port Fuel Injector Assembly No. 4
F12	Fuel Pressure Sensor (Low)
G1	Direct Fuel Injector Assembly No. 1
G4	Direct Fuel Injector Assembly No. 2
G6	Direct Fuel Injector Assembly No. 3
G7	Direct Fuel Injector Assembly No. 4
d3	Fuel Pressure Sensor (High)
d4	Knock Control Sensor (Bank 1)
d5	Crank Position Sensor
d6	Thermostat with Water Inlet Sub-Assembly
e1	Battery
j1	Water Valve (ATF)
z5	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly

Position of Parts in Engine Compartment (LHD A25A-FKS)

