


Position of Parts in Body (LHD)

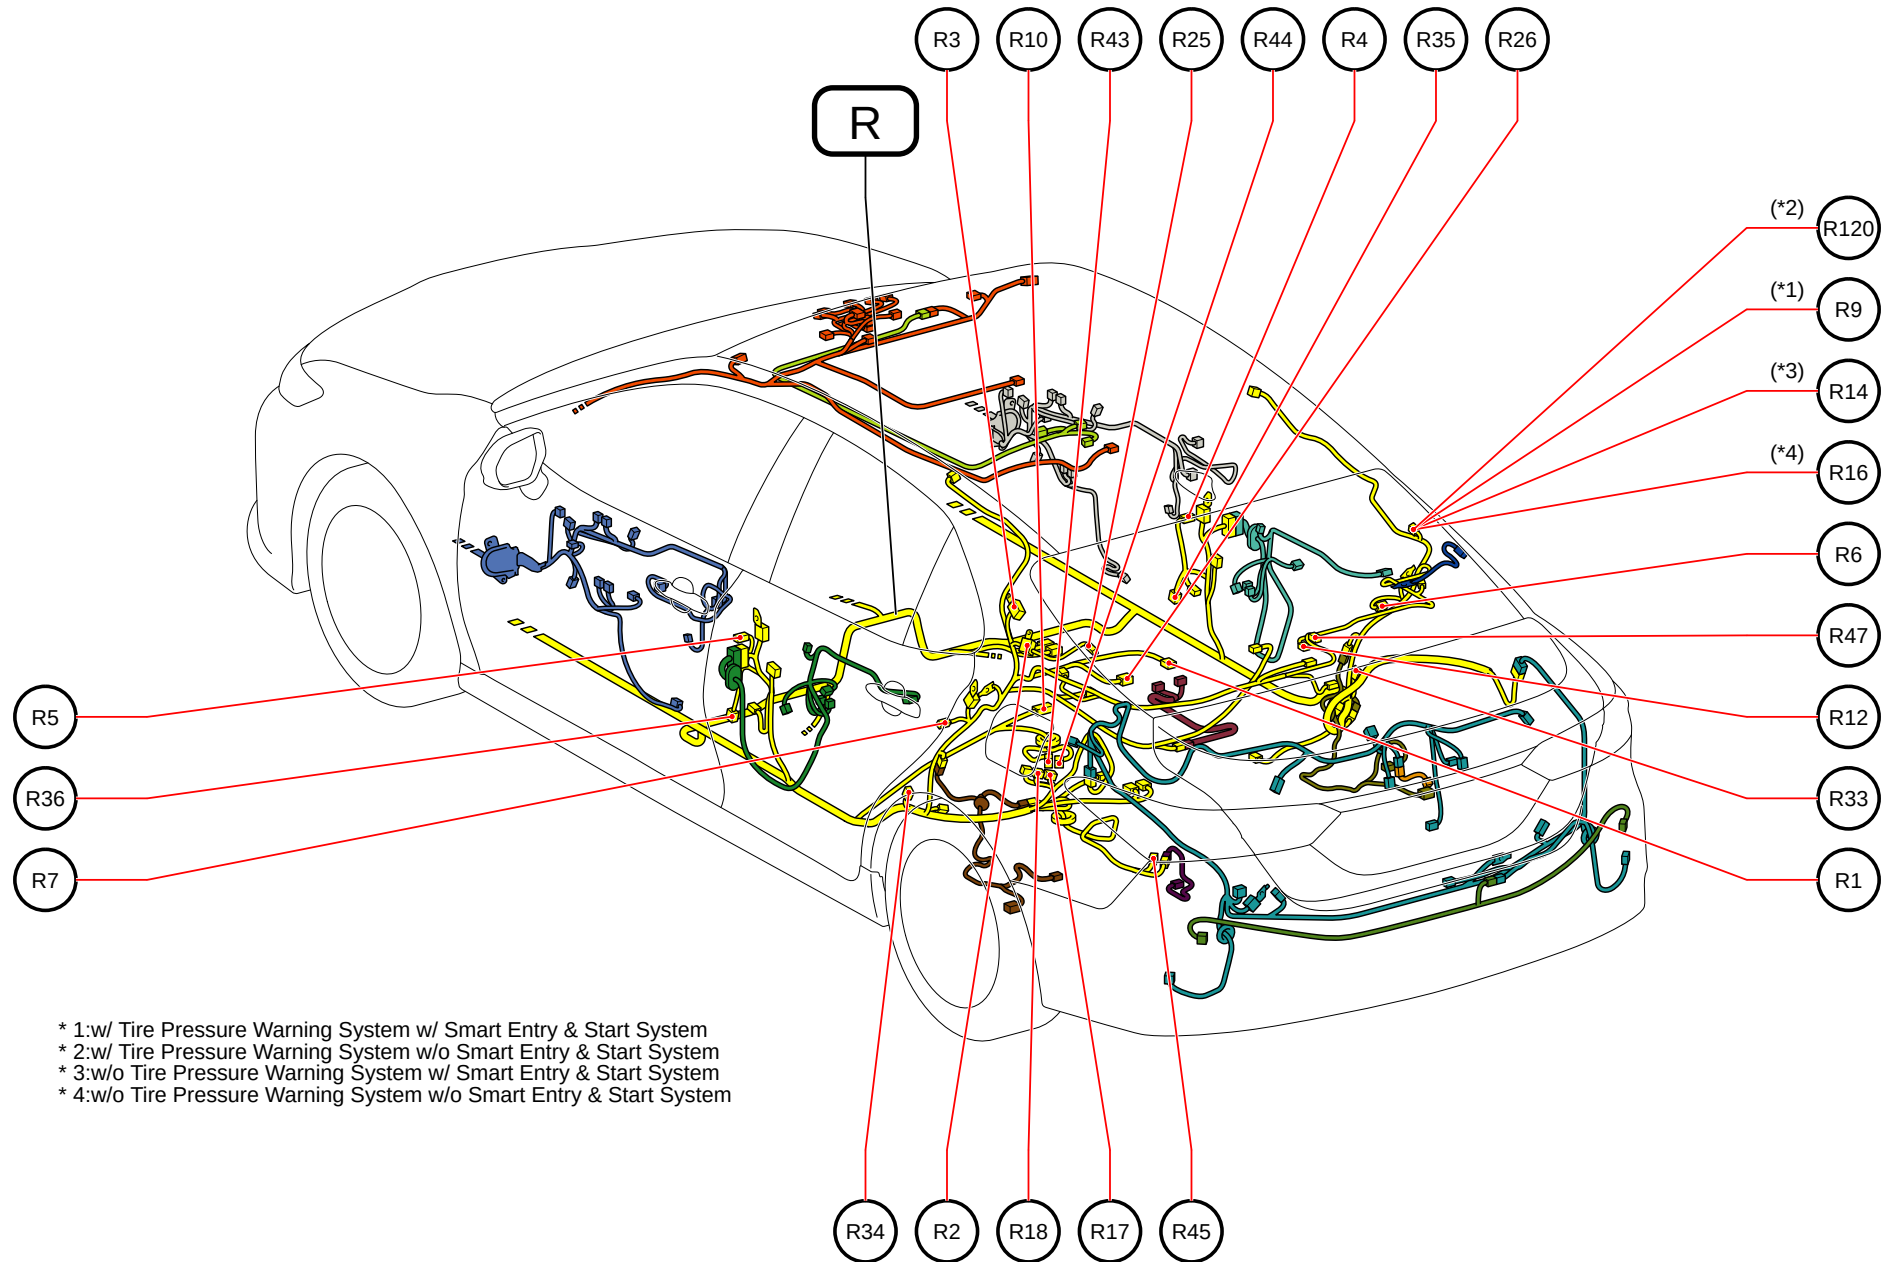

R1	Rear Stereo Component Speaker Assembly
R2	Radio Setting Condenser
R3	Radio Setting Condenser
R4	Front Door Courtesy Light Switch Assembly RH
R5	Front Door Courtesy Light Switch Assembly LH
R6	Rear Door Courtesy Light Switch Assembly RH
R7	Rear Door Courtesy Light Switch Assembly LH
R9	Tire Pressure Warning ECU and Receiver (Electrical Key and Tire Pressure Monitoring System Receiver Assembly)
R10	Rear No. 1 Indoor Electrical Key Antenna Assembly
R12	Rear No. 2 Indoor Electrical Key Antenna Assembly
R14	Door Control Receiver
R16	Door Control Receiver
R17	Fuel Pump Control ECU
R18	Fuel Pump Control ECU
R25	Rear Window Defogger (Back Window Glass)
R26	Rear Crossing Traffic Alert Buzzer (Wireless Door Lock Buzzer)
R33	No. 2 Side Airbag Sensor RH
R34	No. 2 Side Airbag Sensor LH
R35	Side Airbag Sensor Assembly RH
R36	Side Airbag Sensor Assembly LH
R43	Fuel Suction Tube Assembly with Pump & Gage
R44	Fuel Suction Tube Assembly with Pump & Gage
R45	Canister Pump Module
R47	Stop Center Light Set
R120	Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)

Position of Parts in Body (LHD)

