 



Position of Parts in Seat (LHD)

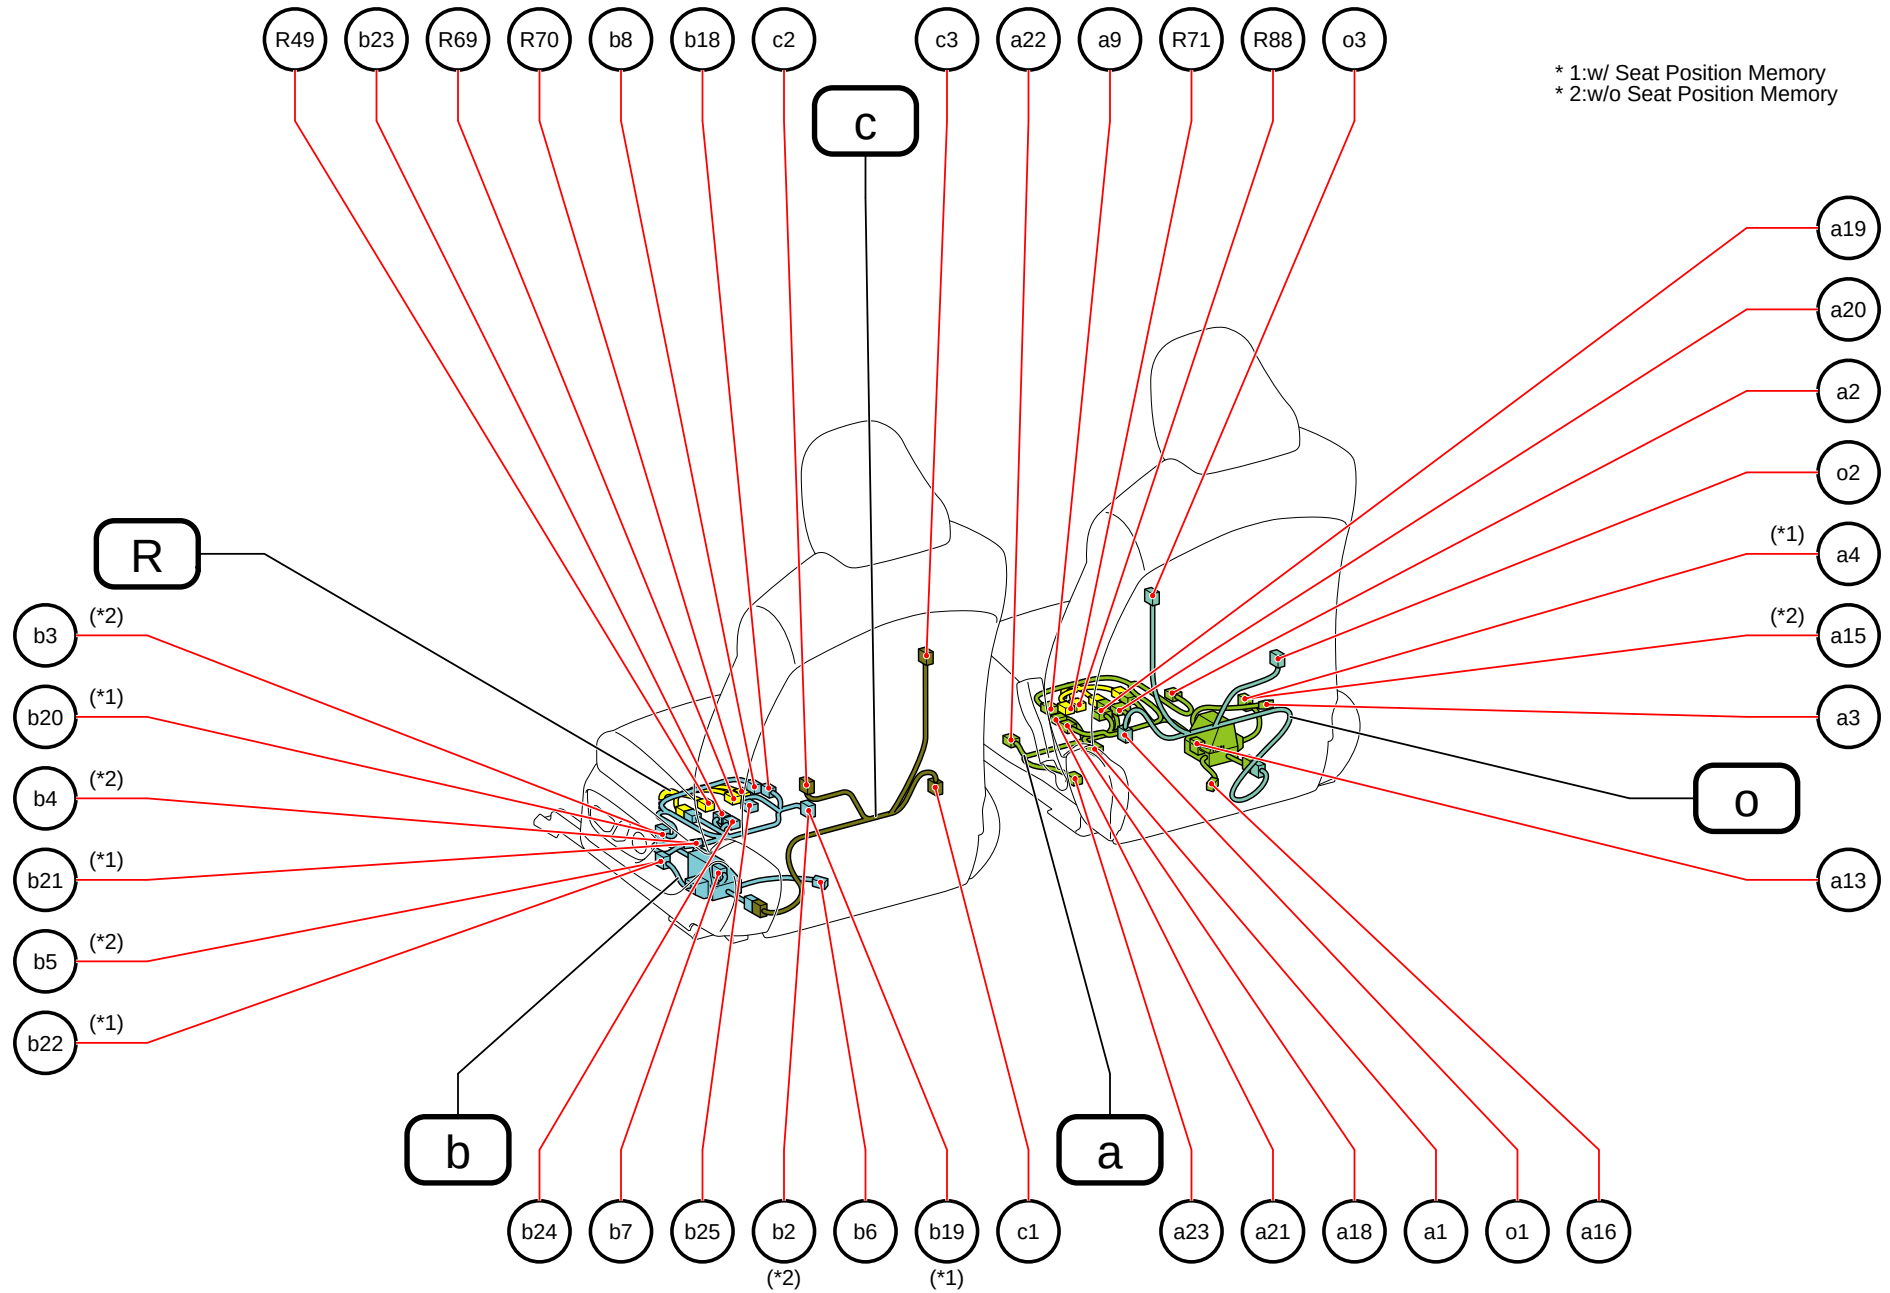

Position of Parts in Seat (LHD)

R49	Front Seat Airbag Assembly LH
R69	Front Seat Inner Belt Assembly LH
R70	Front Seat Inner Belt Assembly LH
R71	Front Seat Inner Belt Assembly RH
R88	Front Seat Airbag Assembly RH
a1	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a2	Front Power Seat Tilt Position Motor RH (Front Seat Adjuster Assembly RH)
a3	Front Power Seat Lift Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
a4	Front Power Seat Switch RH
a9	Seat Cushion Climate Control Blower Assembly RH
a13	No. 23 Junction Connector
a15	Front Power Seat Switch RH
a16	Seat Heater RH (Front Seat Cushion Heater Assembly RH)
a18	Front Seat Heater Control Sub-Assembly RH
a19	Occupant Detection ECU
a20	Occupant Detection ECU
a21	Front Seat Inner Belt Assembly RH
a22	Front Occupant Classification Sensor RH
a23	Rear Occupant Classification Sensor RH
b2	Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
b3	Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
b4	Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
b5	Front Power Seat Switch LH
b6	Seat Heater LH (Front Seat Cushion Heater Assembly LH)
b7	No. 26 Junction Connector
b8	Seat Cushion Climate Control Blower Assembly LH
b18	Front Seat Heater Control Sub-Assembly LH
b19	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
b20	Power Seat Tilt Motor Assembly LH
b21	Power Seat Lifter Motor Assembly LH
b22	Front Power Seat Switch LH
b23	Position Control ECU Assembly LH
b24	Position Control ECU Assembly LH
b25	Position Control ECU Assembly LH
c1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
c2	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
c3	Seat Back Climate Control Blower LH
o1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
o2	Front Power Seat Lumbar Support Motor RH (Lumbar Support Adjuster Assembly RH)
o3	Seat Back Climate Control Blower RH

 
Position of Parts in Seat (LHD)

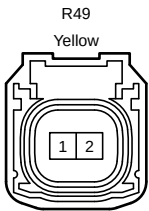


90980-12698



 
90980-10942

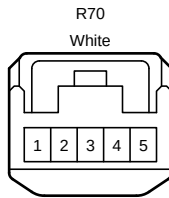


90980-12366

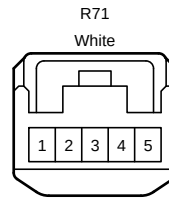 


90980-12366

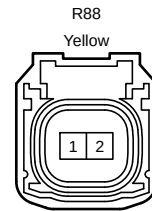 


90980-12698

 


90980-12341

 


90980-12341

 


90980-12341

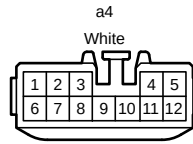 


90980-10803

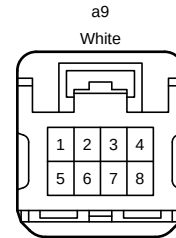 


90980-12735

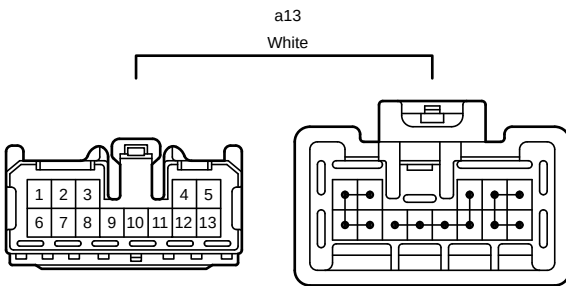 


90980-12346

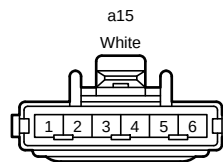 


90980-10933

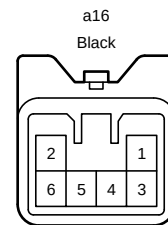 


90980-10796

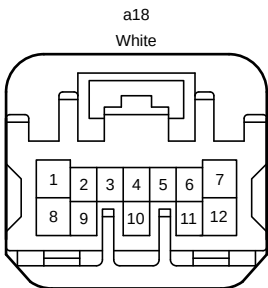 


90980-12812

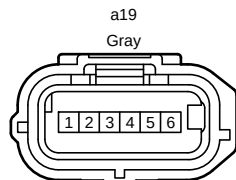 


90980-12303

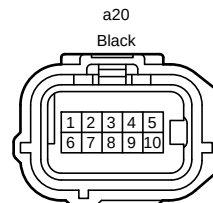 


90980-12380

 


90980-11155

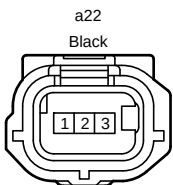 


90980-12353

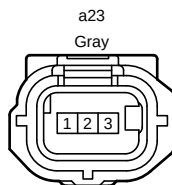 


90980-12354

 


90980-12341

 

90980-12341

 


90980-12341

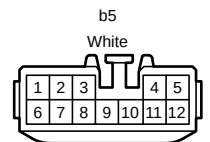 


90980-10803

 
Position of Parts in Seat (LHD)

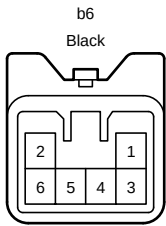


90980-10796

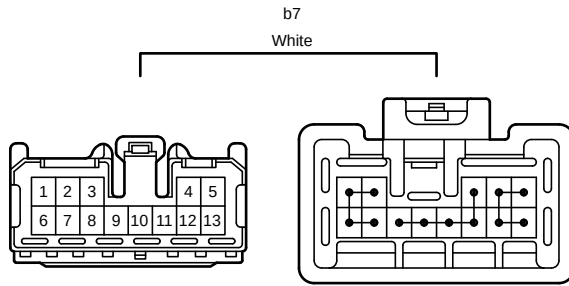 


90980-12346

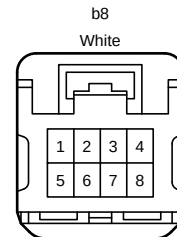 


90980-12735

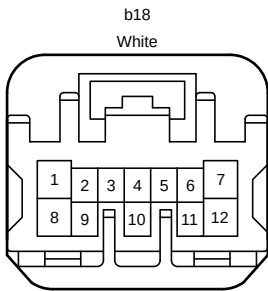 


90980-12812

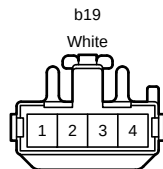 


90980-12335

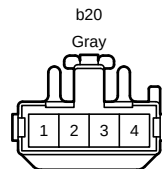 


90980-12335

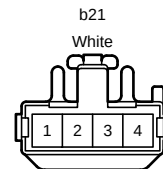 


90980-12335

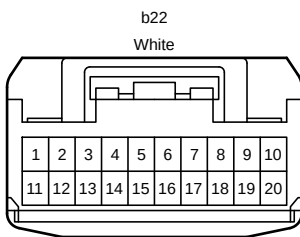 


90980-12460

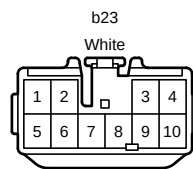 


90980-10997

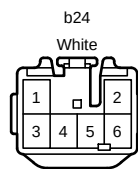 


90980-10996

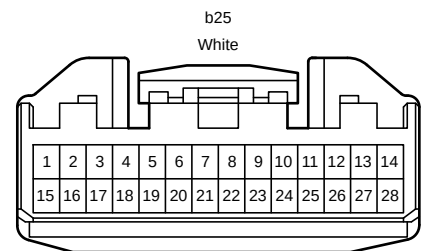 


90980-12555

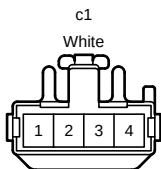 


90980-12335

 


90980-12341

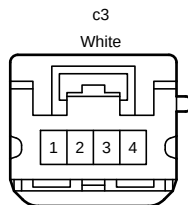 


90980-12733

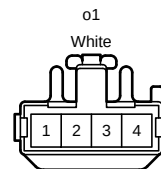 

90980-12335

 

90980-12341

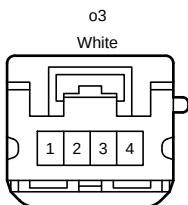 

90980-12733