



Position of Parts in Instrument Panel (LHD)

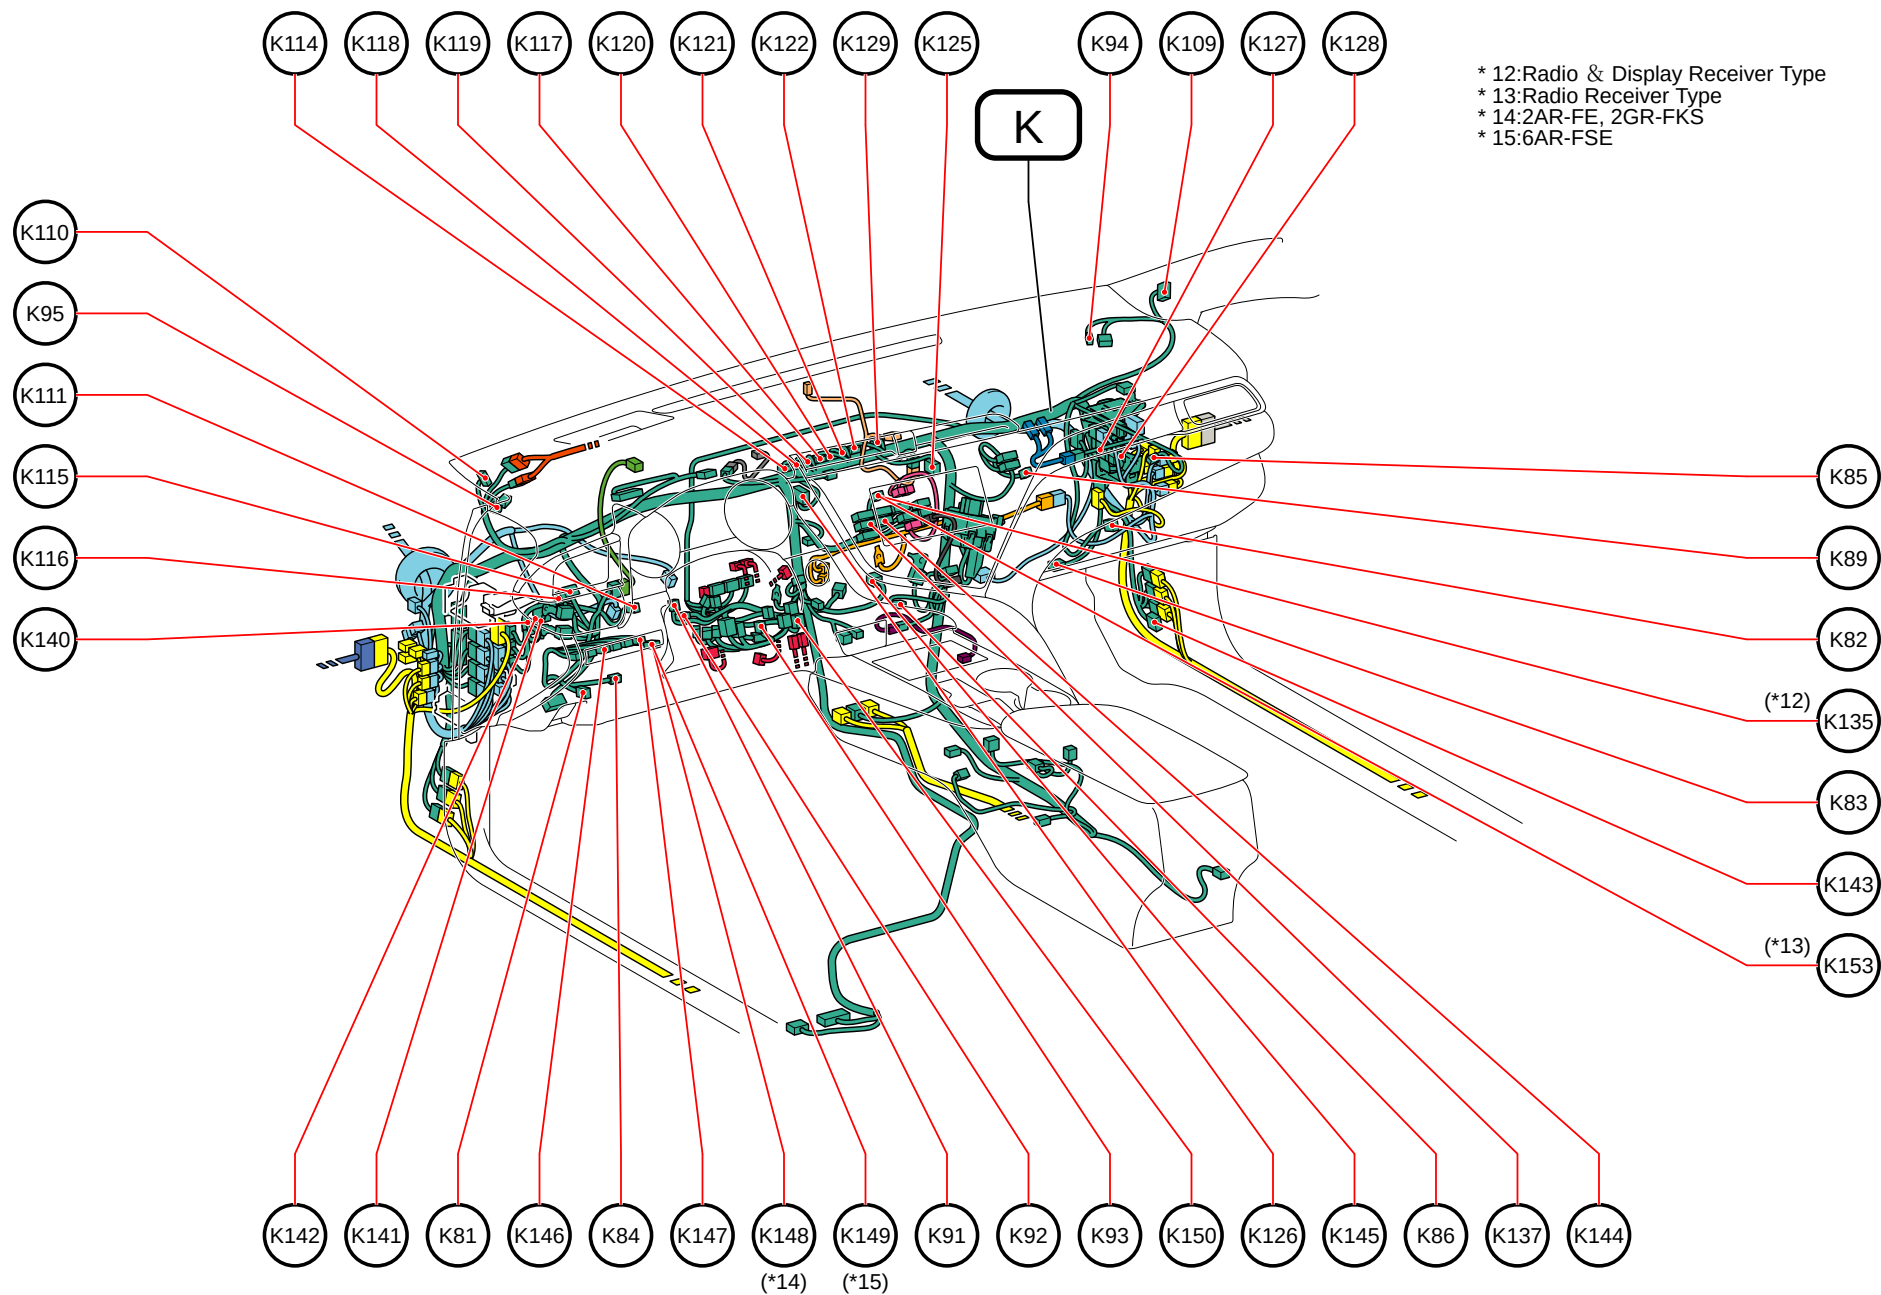


K81	Lower No. 1 Instrument Panel Airbag Assembly
K82	Lower No. 2 Instrument Panel Airbag Assembly
K83	No. 1 Interior Illumination Light Assembly RH
K84	No. 1 Interior Illumination Light Assembly LH
K85	Glove Box Light Assembly
K86	No. 2 Interior Illumination Light Sub-Assembly
K89	Instrument Panel Light Assembly
K91	Steering Column Assembly
K92	Steering Column Assembly
K93	Steering Column Assembly
K94	Front No. 2 Speaker Assembly RH
K95	Front No. 2 Speaker Assembly LH
K109	Front No. 3 Speaker Assembly RH
K110	Front No. 3 Speaker Assembly LH
K111	Trip Switch
K114	No. 33 Junction Connector
K115	No. 10 Junction Connector
K116	No. 16 Junction Connector
K117	No. 11 Junction Connector
K118	No. 12 Junction Connector
K119	No. 13 Junction Connector
K120	No. 14 Junction Connector
K121	No. 9 Junction Connector
K122	No. 15 Junction Connector
K125	No. 17 Junction Connector
K126	No. 3 CAN Junction Connector
K127	No. 4 CAN Junction Connector
K128	No. 4 CAN Junction Connector
K129	No. 18 Junction Connector
K135	Radio & Display Receiver Assembly
K137	Option Connector (Audio)
K140	Network Gateway ECU (Accessory Gateway ECU)
K141	No. 6 CAN Junction Connector
K142	No. 6 CAN Junction Connector
K143	Option Connector (Remote Engine Start)
K144	Radio Receiver Assembly
K145	Telephone Transceiver Assembly
K146	Panoramic View Monitor Switch
K147	Steering Heater Switch
K148	Front Window Deicer Switch
K149	Front Wiper Deicer Switch
K150	Spiral Cable Sub-Assembly
K153	Radio Receiver Assembly















Position of Parts in Instrument Panel (LHD)

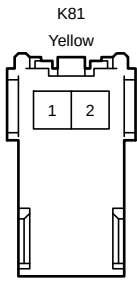

90980-12253

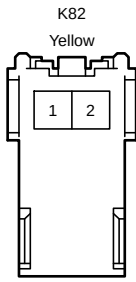


90980-12253

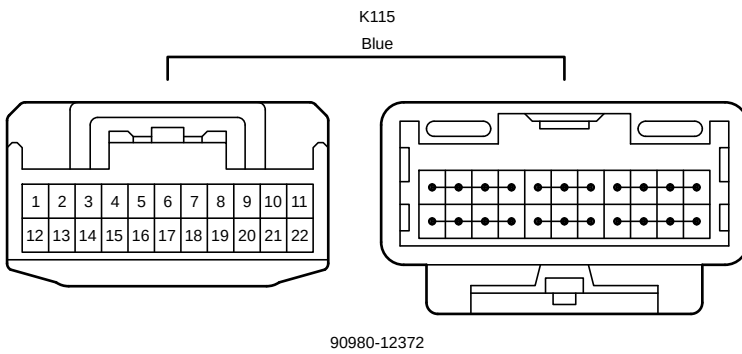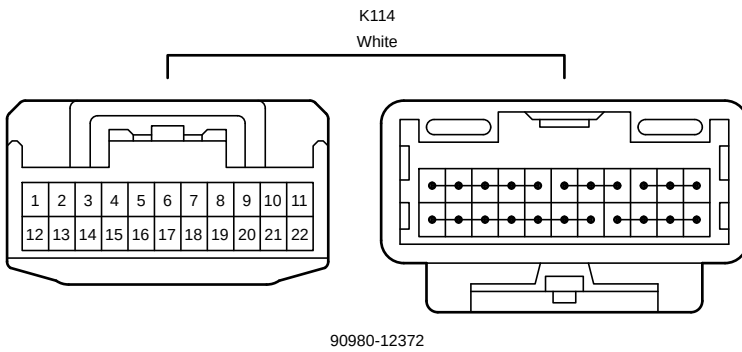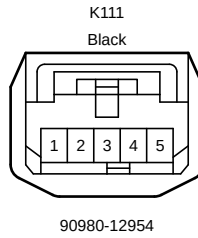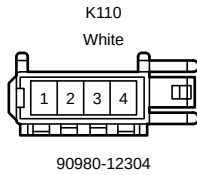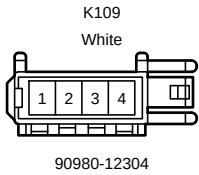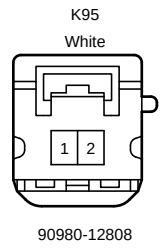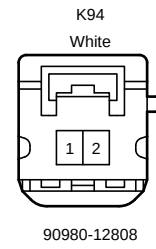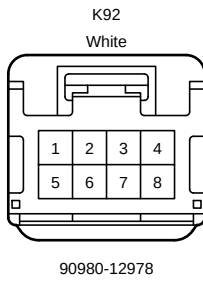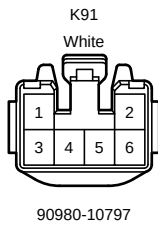     


Position of Parts in Instrument Panel (LHD)

K116
White

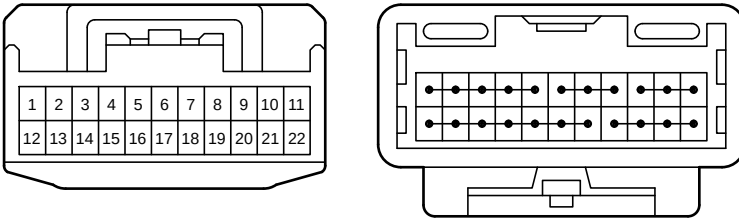


90980-12372

K117
Gray

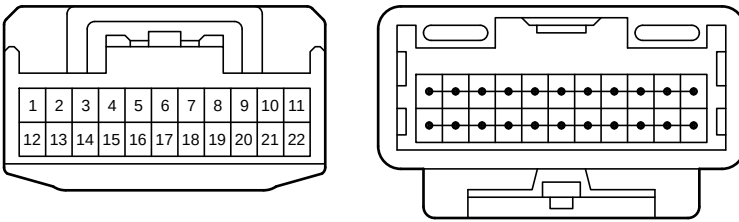


90980-12372

K118
Gray

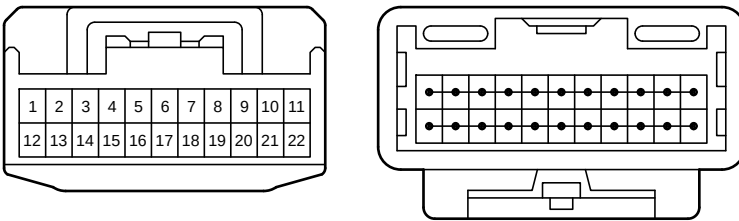

90980-12372

K119
Gray

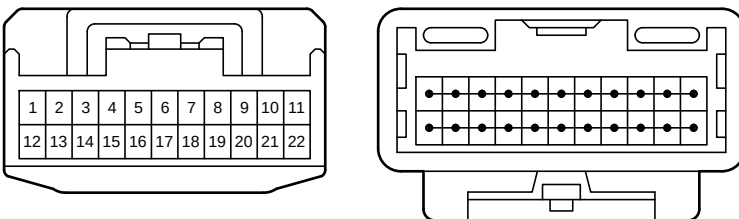


90980-12372

Position of Parts in Instrument Panel (LHD)

K120


Gray

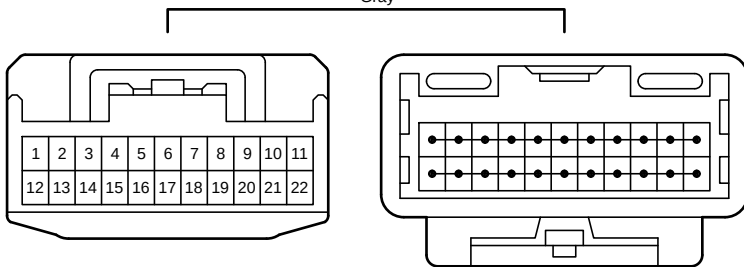

90980-12372

K121


Gray

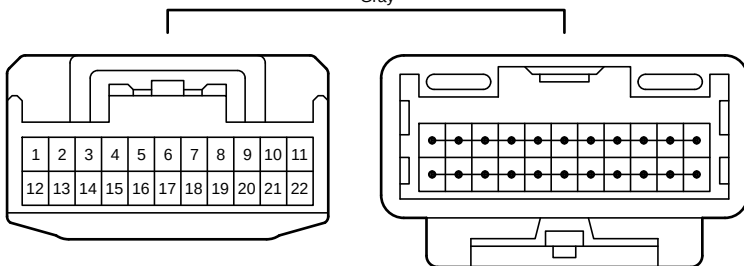

90980-12372

K122


Gray

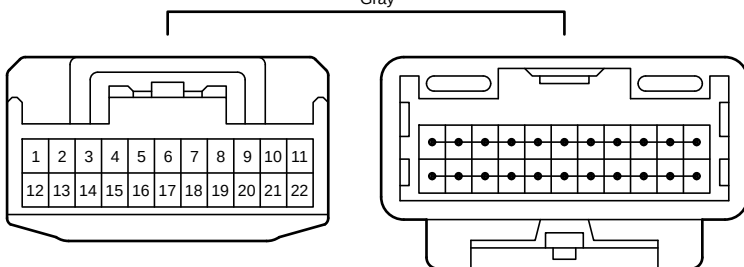

90980-12372

K125


Blue

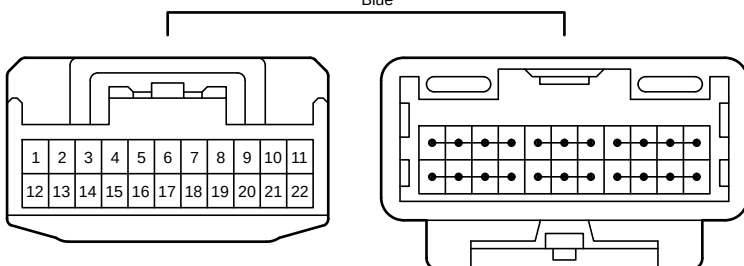

90980-12372


Position of Parts in Instrument Panel (LHD)

K126
Blue

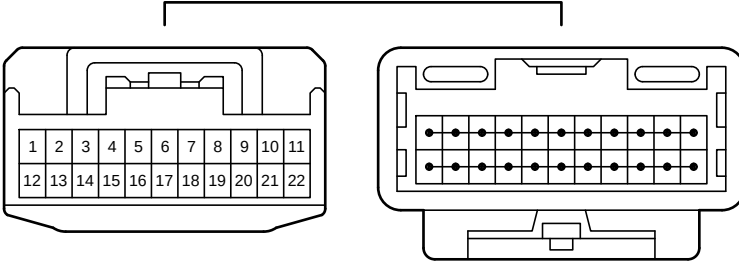


90980-12372

K127
White

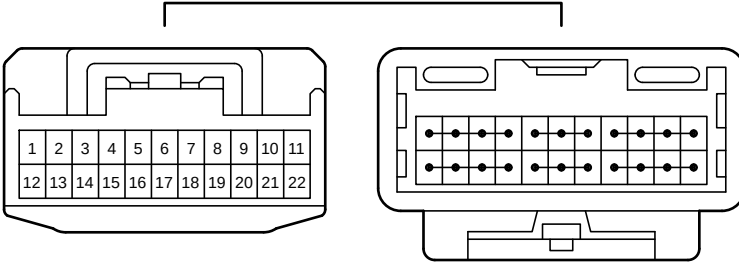


90980-12372

K128
White

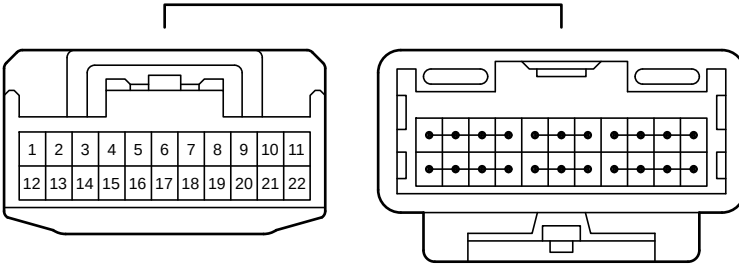

90980-12372

K129
Gray

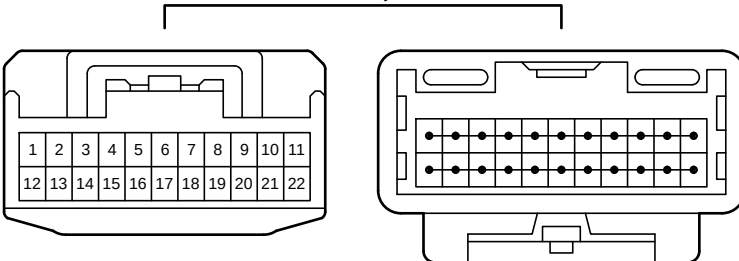


90980-12372

K135
Gray




90980-12C94

Position of Parts in Instrument Panel (LHD)

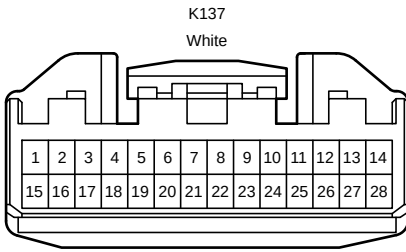


90980-12555

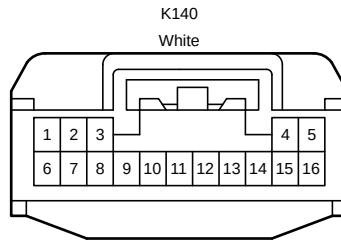


90980-12423



 
90980-12355




90980-10871

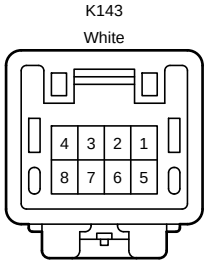


90980-12734

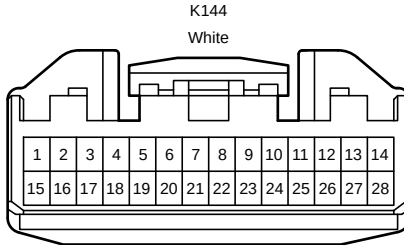


90980-12555

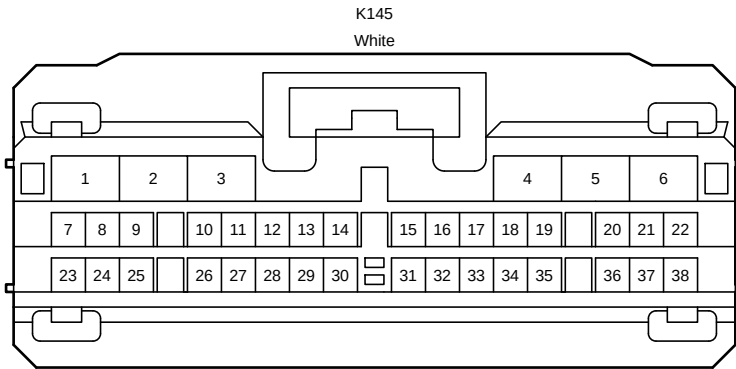


90980-12817

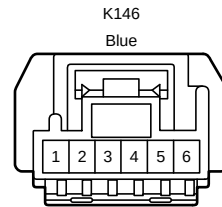


90980-12C69

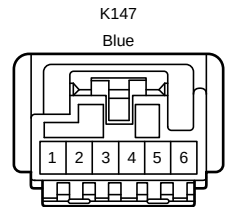


90980-12C73

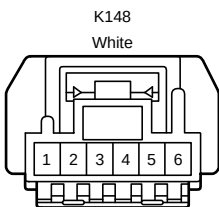

90980-12C70

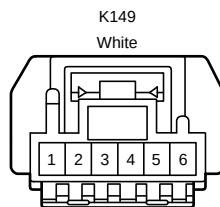

90980-12C75

 

90980-12A94



90980-12C94