



Position of Parts in Instrument Panel (LHD)

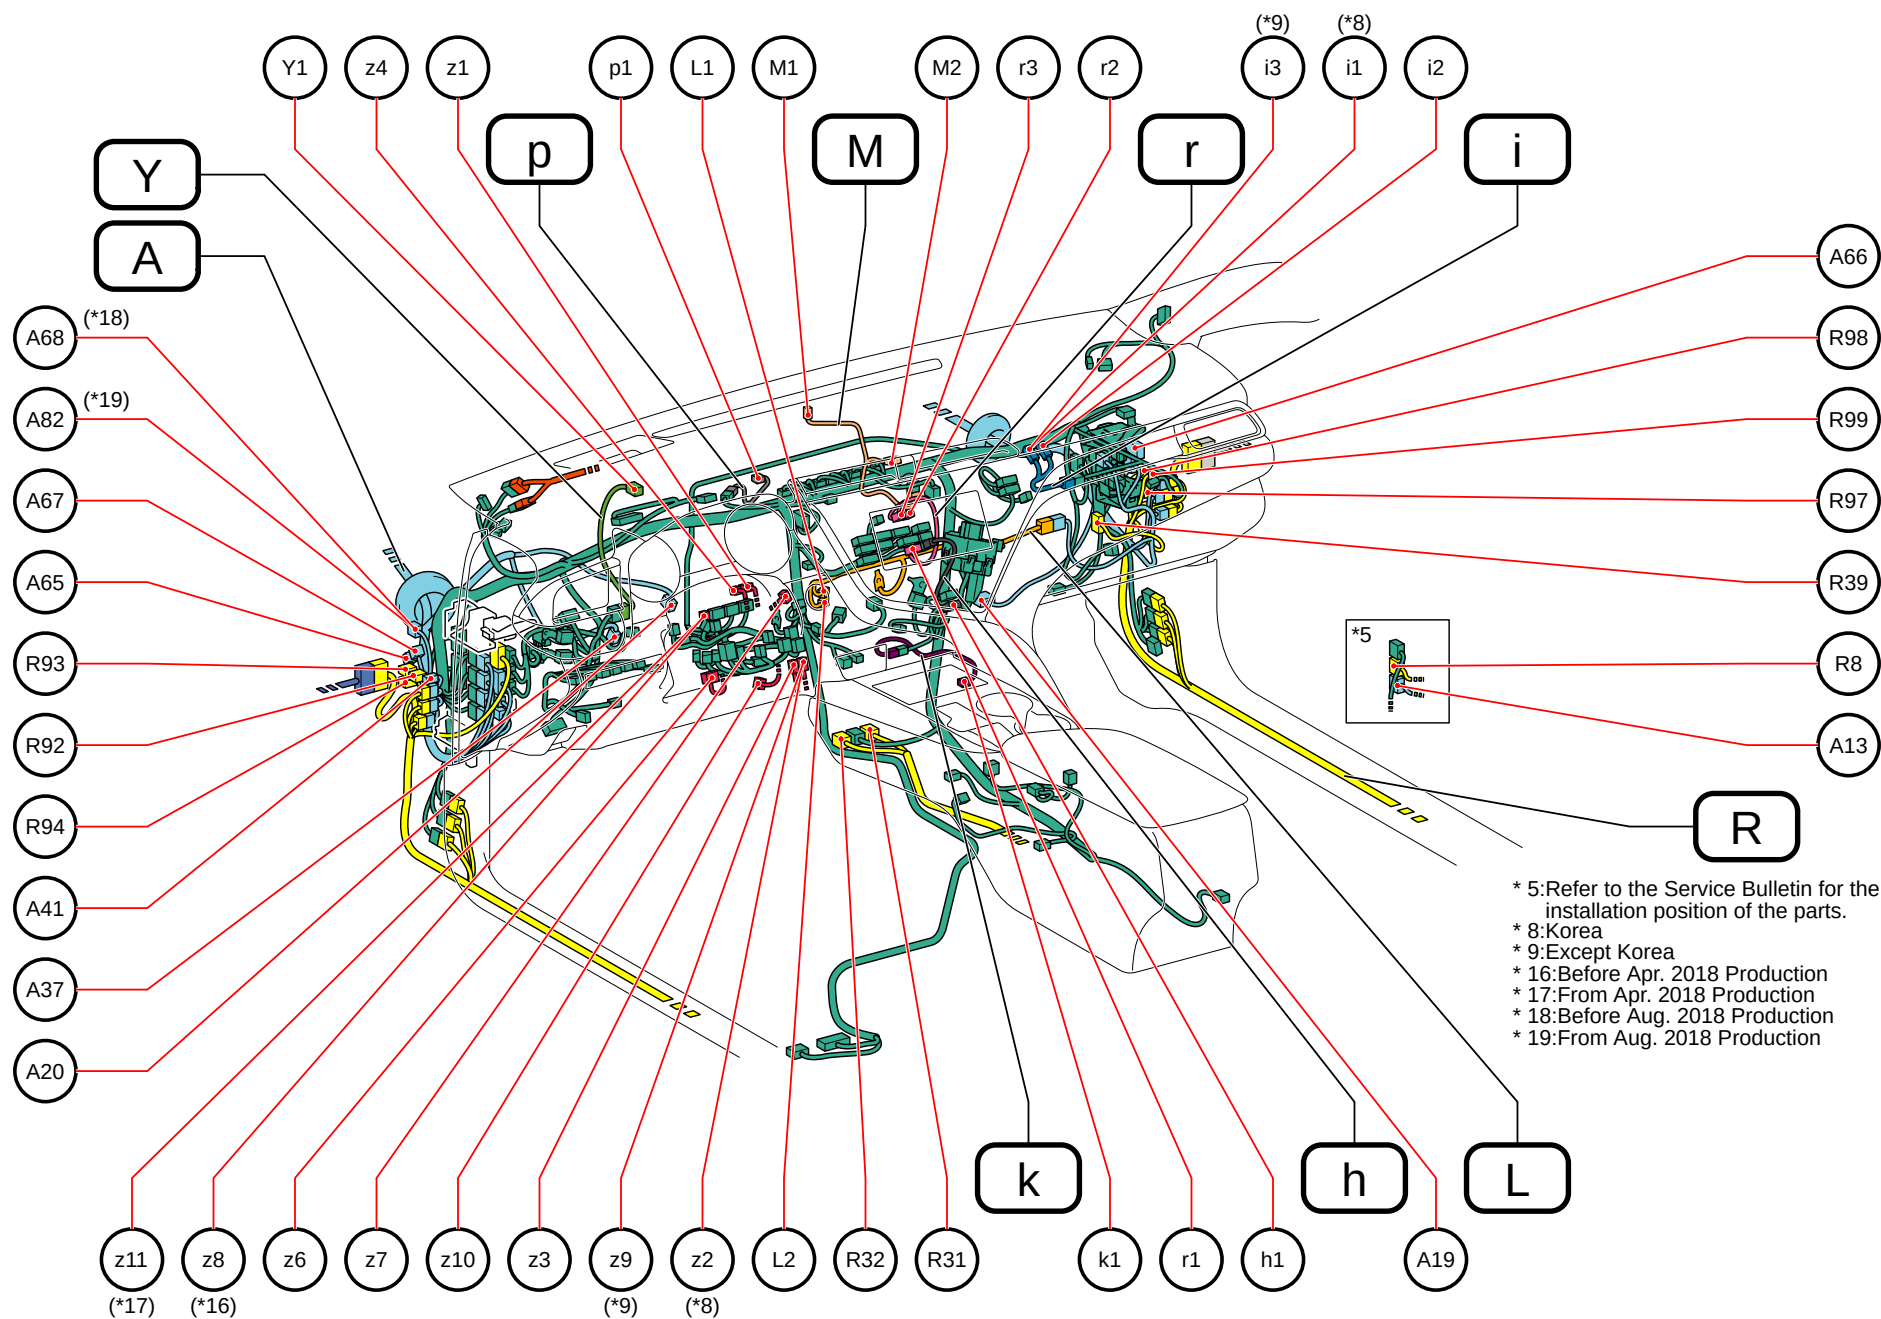


Position of Parts in Instrument Panel (LHD)

A13	Certification ECU
A19	Blower with Fan Motor Sub-Assembly
A20	Accelerator Pedal Sensor Assembly
A37	Stop Light Switch Assembly
A41	Diode (Park/Neutral Position Switch Assembly)
A65	No. 7 Junction Connector
A66	No. 1 CAN Junction Connector
A67	No. 2 CAN Junction Connector
A68	No. 8 Junction Connector
A82	No. 34 Junction Connector
L1	Quick Heater Assembly
L2	Quick Heater Assembly
M1	Automatic Light Control Sensor
M2	Hazard Warning Signal Switch Assembly
R8	Certification ECU
R31	Airbag Sensor Assembly
R32	Airbag Sensor Assembly
R39	Clearance Warning ECU Assembly
R92	No. 21 Junction Connector
R93	No. 22 Junction Connector
R94	No. 1 Junction Connector
R97	No. 2 Junction Connector
R98	No. 5 CAN Junction Connector
R99	No. 3 Junction Connector
Y1	Ion Generator Sub-Assembly
h1	Radio & Display Receiver Assembly
i1	Instrument Panel Passenger Airbag Assembly without Door
i2	Instrument Panel Passenger Airbag Assembly without Door
i3	Instrument Panel Passenger Airbag Assembly without Door
k1	Mobile Wireless Charger Cradle Assembly
p1	Meter Mirror Sub-Assembly
r1	Navigation ECU
r2	Navigation ECU
r3	Navigation ECU
z1	Steering Pad Switch Assembly , Spiral Cable Sub-Assembly
z2	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z4	Transmission Shift Switch Assembly , Spiral Cable Sub-Assembly
z6	Headlight Dimmer Switch Assembly , Steering Sensor
z7	Windshield Wiper Switch Assembly , Headlight Dimmer Switch Assembly
z8	A/C Unit (A/C Harness Assembly) , A/C Amplifier Assembly
z9	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z10	Steering Wheel Assembly , Spiral Cable Sub-Assembly
z11	A/C Unit (A/C Harness Assembly) , A/C Amplifier Assembly


Position of Parts in Instrument Panel (LHD)

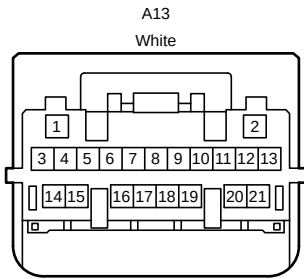


90980-12B76

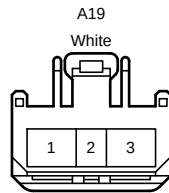


90980-11667

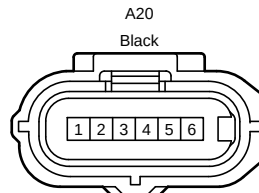


90980-12831

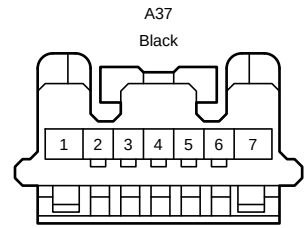


90980-12092

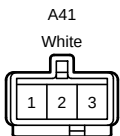


90980-11071

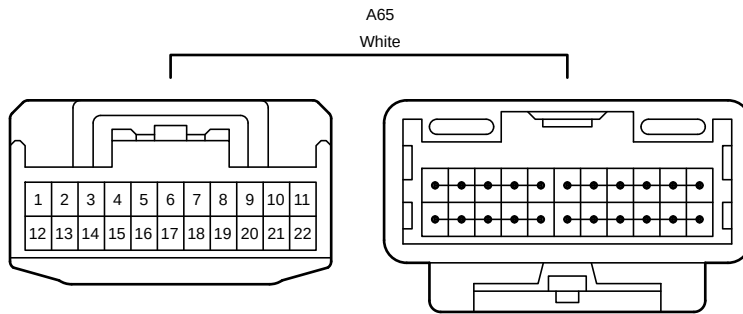

90980-12372










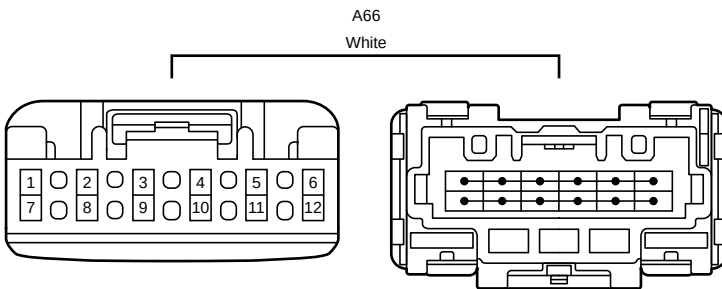


90980-12C68

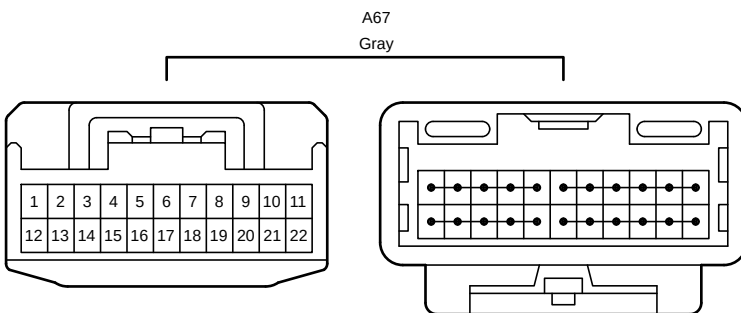


90980-12372

Position of Parts in Instrument Panel (LHD)

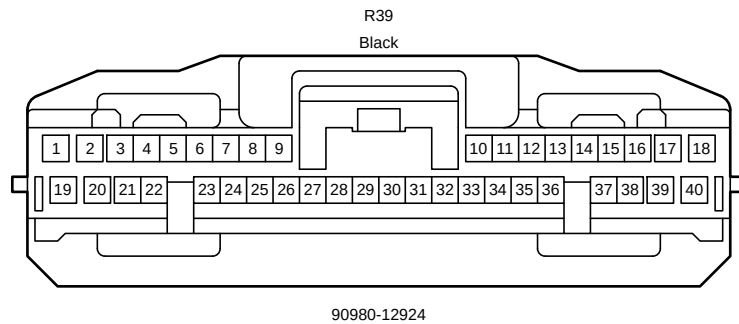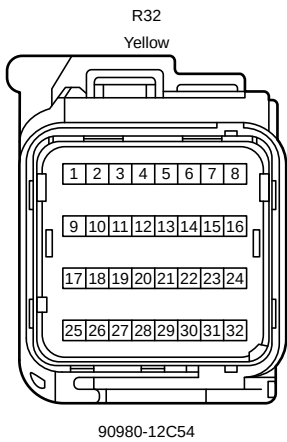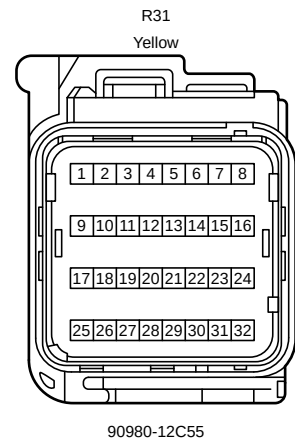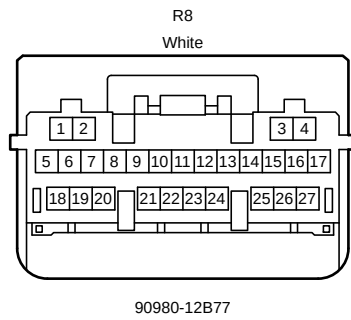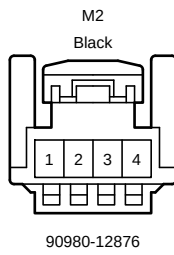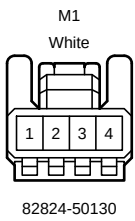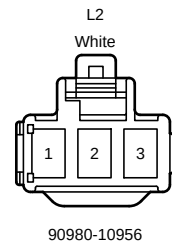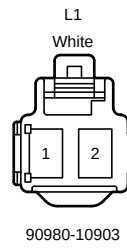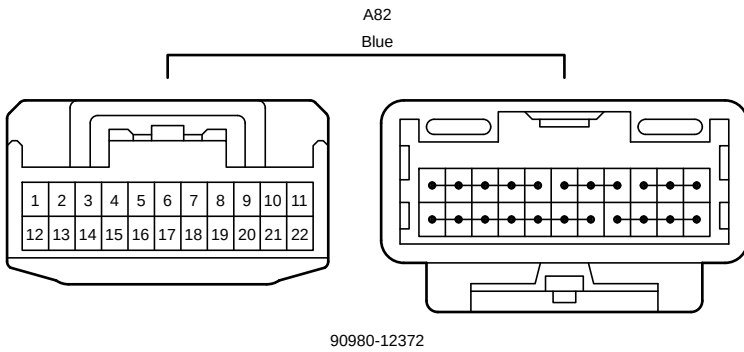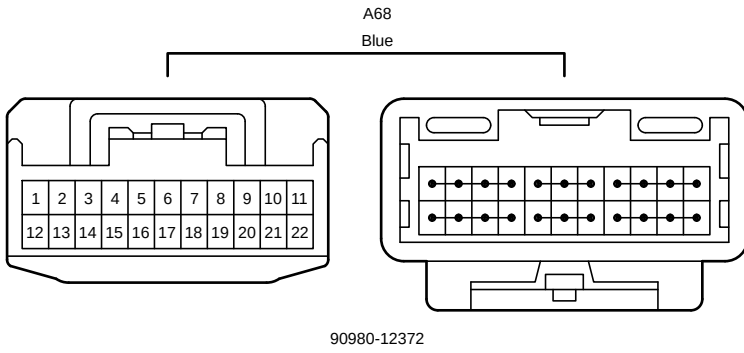


Position of Parts in Instrument Panel (LHD)

R92
Black

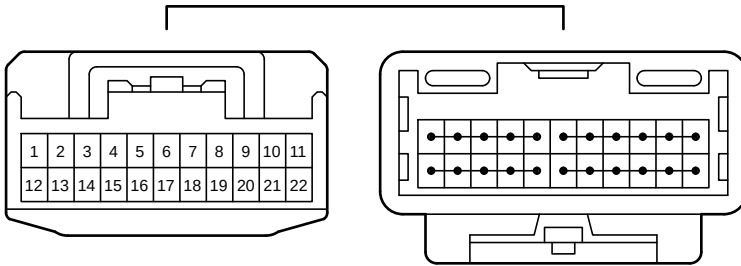


90980-12372

R93
White

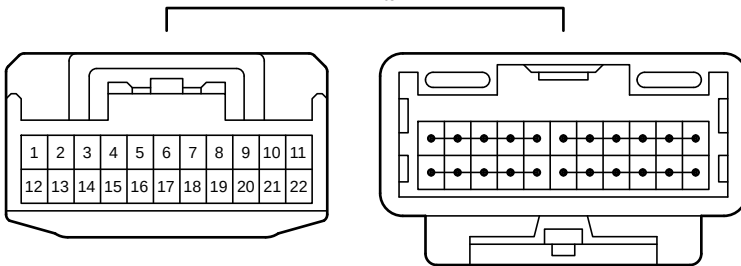


90980-12372

R94
Blue

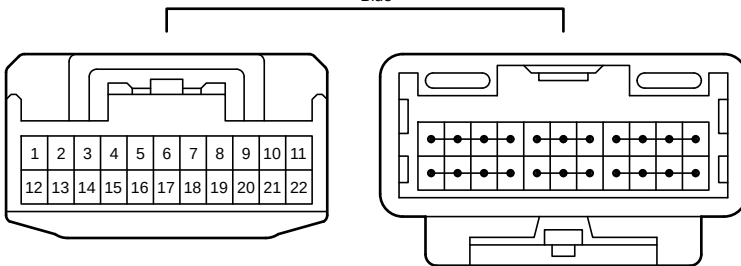

90980-12372

R97
Black


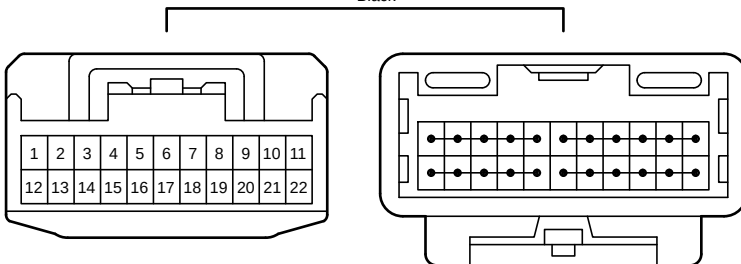


90980-12372

Position of Parts in Instrument Panel (LHD)

R98



White

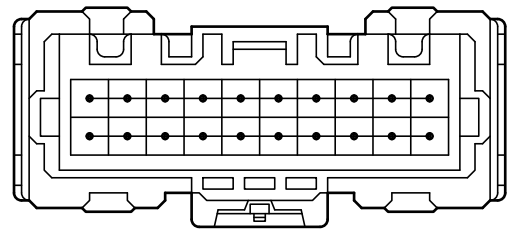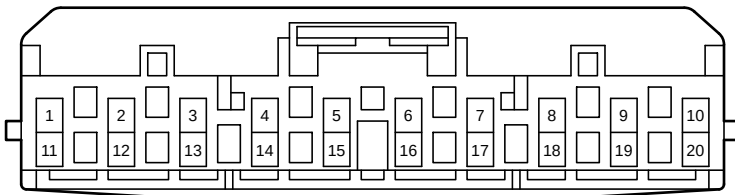

90980-12A58

R99


White

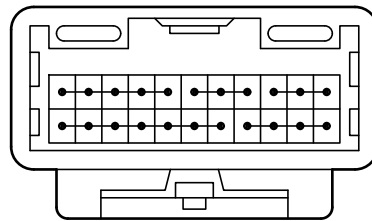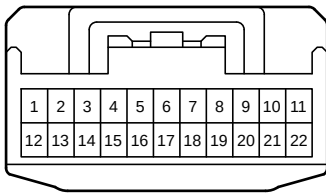

90980-12372

Y1


White

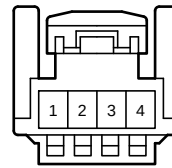

90980-12876

h1


Black

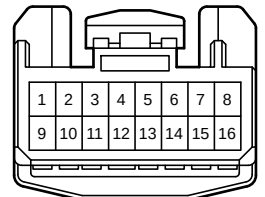

82824-33470

i1

 
Orange



90980-12224

i2

 
Black



90980-12219

i3


Orange

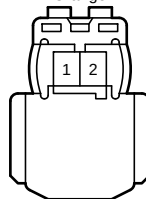

90980-12576

k1


Black

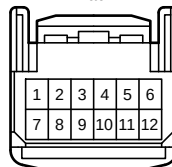

90980-12552

p1


White

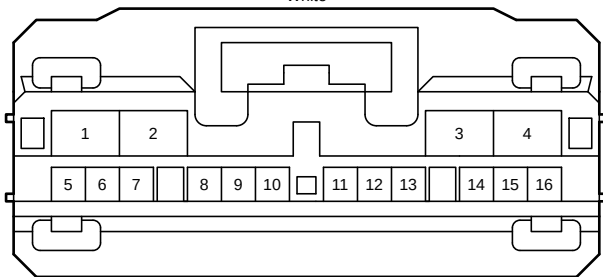

90980-12763

r1

 
Gray



90980-12C91

r2

 
Green



90980-12C85

r3

 White



90980-12C87

Position of Parts in Instrument Panel (LHD)

