

F RELAY LOCATIONS

○ : Engine Room J/B

Engine Compartment Left (See Page 76)

- *1 : 20A HEAD RH UPR DRL NO.2 (*2)
20A HEAD RH UPR (*3)
- *2 : w/ Daytime Running Light
- *3 : w/o Daytime Running Light

