


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE]

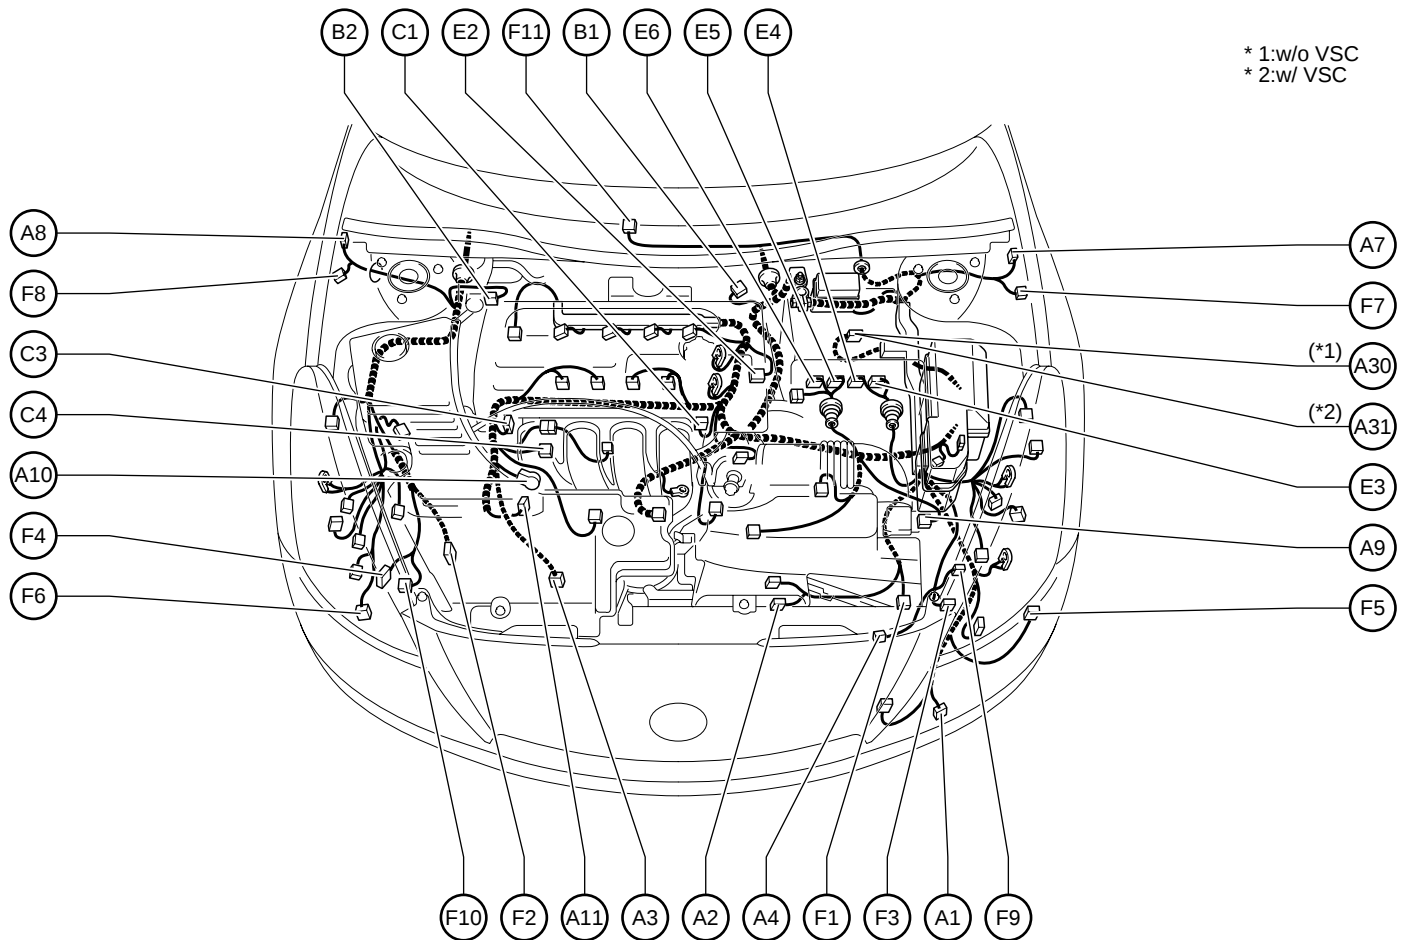

* 1:w/o VSC
* 2:w/ VSC

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Lock Sensor
A/C Magnetic Clutch
- A 4 A/C Dual Pressure SW
A/C Single Pressure SW
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A10 Alternator
- A11 Alternator
- A30 Skid Control ECU with Actuator
- A31 ABS & TRC & VSC Actuator
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 3 Camshaft Timing Oil Control Valve (VVT)
- C 4 Crankshaft Position Sensor

- E 2 EFI Water Temp. Sensor
- E 3 Engine ECU (M/T)
- E 4 Engine ECU (M/T)
- E 5 Engine ECU (M/T)
- E 6 Engine ECU (M/T)
- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F10 Front Turn Signal Light RH
- F11 Front Wiper Motor