


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 2ZZ-GE]

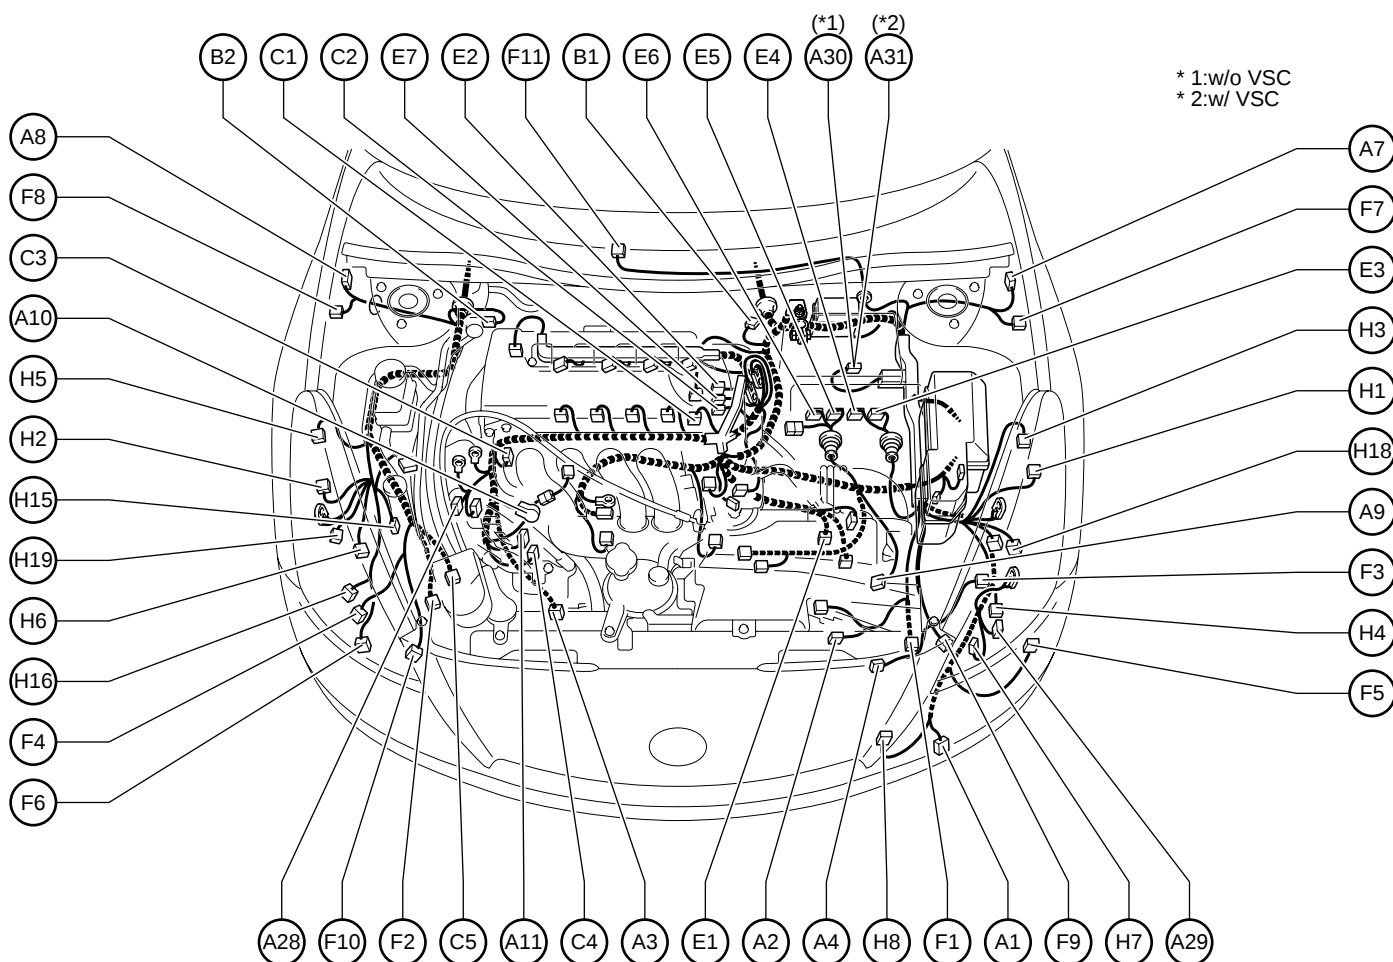

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Lock Sensor
 A/C Magnetic Clutch
 A 4 A/C Dual Pressure SW
 A/C Single Pressure SW
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A 9 Air Flow Meter
 A10 Alternator
 A11 Alternator
 A28 Air Pump Motor
 A29 Air Pump Relay
 A30 Skid Control ECU with Actuator
 A31 ABS & TRC & VSC Actuator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve (VVL)
 C 3 Camshaft Timing Oil Control Valve (VVT)
 C 4 Crankshaft Position Sensor
 C 5 Cruise Control Actuator

E 1 ECT Solenoid
 E 2 EFI Water Temp. Sensor
 E 3 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 4 Engine and ECT ECU (A/T)
 Engine ECU (M/T)

E 5 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 6 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 7 Engine Oil Level Warning SW

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F10 Front Turn Signal Light RH
 F11 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Horn (High)
 H 8 Horn (Low)
 H15 Headlight Cleaner Motor
 H16 Headlight Cleaner Relay
 H18 Headlight Control ECU
 H19 Headlight Control ECU