

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
A 1	A/C Ambient Temp. Sensor	90980-11070	C 5	Cruise Control Actuator	90980-11150	
A 2	A/C Condenser Fan Motor	90980-11410	C 6	Center Airbag Sensor Assembly	90980-11872	
A 3	A/C Lock Sensor	90980-11016	C 7	Center Airbag Sensor Assembly	90980-11869	
	A/C Magnetic Clutch		C 8	Center Airbag Sensor Assembly	90980-11867	
A 4	A/C Dual Pressure SW	90980-10943	C 9	Cigarette Lighter	90980-10795	
	A/C Single Pressure SW		C10	Clock (Europe w/ Automatic Air Conditioner, Australia)	90980-10789	
A 7	ABS Speed Sensor Front LH	90980-11003			Clock (Europe w/ Manual Air Conditioner)	90980-11475
A 8	ABS Speed Sensor Front RH		C11	Combination Meter	90980-11915	
A 9	Air Flow Meter	90980-11317	C12	Combination Meter	90980-11913	
A10	Alternator	90980-09212	C13	Combination SW	90980-11594	
A11	Alternator	90980-11349	C14	Combination SW (Australia)	90980-11671	
A12	A/C Blower Motor Linear Controller	90980-11676			Combination SW (Europe)	90980-11672
A13	A/C Control Assembly	90980-11923	C15	Combination SW	90980-11986	
A14	A/C Control Assembly	90980-11915	C16	Cruise Control Clutch SW	90980-10906	
A15	A/C Evaporator Temp. Sensor	90980-11918	C17	Cruise Control ECU	90980-11391	
A16	A/C Room Temp. Sensor	90980-10825	D 1	DLC3	90980-11665	
A17	A/C Solar Sensor	90980-11918	D 2	Door Control Receiver	90980-11909	
A18	A/C SW	90980-11923	D 3	Door Courtesy SW LH	90980-10871	
A21	Air Inlet Control Servo Motor	90980-11987	D 4	Door Courtesy SW RH		
A22	Air Mix Control Servo Motor	90980-11909	D 5	Door Key Lock and Unlock SW LH (Europe LHD, Australia)	90980-11858	
A23	Air Vent Mode Control Servo Motor				Door Key Lock and Unlock SW LH (Europe RHD)	90980-11535
A24	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884			Door Lock Detection SW LH (Europe LHD, Australia)	90980-11858
A25	Airbag Squib (Steering Wheel Pad)				Door Lock Detection SW LH (Europe RHD)	90980-11535
A26	ABS Speed Sensor Rear LH			90980-11060		Door Lock Motor LH (Europe LHD, Australia)
A27	ABS Speed Sensor Rear RH				Door Lock Motor LH (Europe RHD)	90980-11535
A28	Air Pump Motor	82824-20160	D 6	Door Key Lock and Unlock SW RH (Europe LHD, Australia)	90980-11858	
A29	Air Pump Relay	90980-11288			Door Key Lock and Unlock SW RH (Europe RHD)	90980-11535
A30	Skid Control ECU with Actuator	90980-12020			Door Lock Detection SW RH (Europe LHD, Australia)	90980-11858
A31	ABS & TRC & VSC Actuator	90980-12116			Door Lock Detection SW RH (Europe RHD)	90980-11535
B 1	Back-Up Light SW	90980-11051			Door Lock Motor RH (Europe LHD, Australia)	90980-11858
B 2	Brake Fluid Level Warning SW	90980-11207			Door Lock Motor RH (Europe RHD)	90980-11535
B 3	Blower Motor	90980-10214	D 7	Door Side Airbag Sensor LH	90980-11856	
B 4	Blower Resistor	90980-11136		D 8		Door Side Airbag Sensor RH
B 5	Blower SW	90980-10877		D 9	Deceleration Sensor	90980-11182
B 6	Body ECU	90980-11877		E 1	ECT Solenoid	90980-11658
B 7	Body ECU	90980-11915		E 2	EFI Water Temp. Sensor	90980-11062
B 8	Buckle SW LH (LHD, RHD w/o HID)	90980-10860		E 3	Engine and ECT ECU (A/T)	90980-11638
	Buckle SW LH (RHD w/ HID)	90980-10795	Engine ECU (M/T)			
B 9	Buckle SW RH (LHD w/ HID)	90980-10795				
	Buckle SW RH (RHD, LHD w/o HID)	90980-10860				
B10	Back Door Lock Motor	90980-10795				
C 1	Camshaft Position Sensor	90980-10947				
C 2	Camshaft Timing Oil Control Valve (VVL)	90980-11162				
C 3	Camshaft Timing Oil Control Valve (VVT)					
C 4	Crankshaft Position Sensor	90980-10947				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E 4	Engine and ECT ECU (A/T)	90980-11637	I 1	Ignition Coil and Igniter No.1	90980-11885
	Engine ECU (M/T)		I 2	Ignition Coil and Igniter No.2	
E 5	Engine and ECT ECU (A/T)	90980-11476	I 3	Ignition Coil and Igniter No.3	
	Engine ECU (M/T)		I 4	Ignition Coil and Igniter No.4	
E 6	Engine and ECT ECU (A/T)	90980-11421	I 5	Injector No.1	90980-11875
	Engine ECU (M/T)		I 6	Injector No.2	
E 7	Engine Oil Level Warning SW	90980-11363	I 7	Injector No.3	
F 1	Front Airbag Sensor LH	90980-11856	I 8	Injector No.4	
F 2	Front Airbag Sensor RH		I 9	ISC Valve	90980-11145
F 3	Front Clearance Light LH	90980-11156	I10	Ignition SW	90980-11778
F 4	Front Clearance Light RH		J 1	Junction Connector	90980-10803
F 5	Front Fog Light LH	90980-11003	J 2	Junction Connector	90980-11542
F 6	Front Fog Light RH		J 3	Junction Connector	90980-11686
F 7	Front Side Turn Signal Light LH	90980-11162	J 4	Junction Connector	90980-11661
F 8	Front Side Turn Signal Light RH		J 5	Junction Connector	
F 9	Front Turn Signal Light LH	90980-11019	J 6	Junction Connector	90980-11915
F10	Front Turn Signal Light RH		J 7	Junction Connector	90980-11542
F11	Front Wiper Motor	90980-11599	J 8	Junction Connector	90980-11915
F12	Front Fog Light Relay	82660-20340	J 9	Junction Connector	90980-11542
F13	Front Door Speaker LH	90980-10935	J10	Junction Connector	
F14	Front Door Speaker RH		J11	Junction Connector	90980-11686
F15	Front Door Tweeter Speaker LH	90980-10915	J12	Junction Connector	90980-11542
F16	Front Door Tweeter Speaker RH		J13	Junction Connector	
F17	Fuel Pump	90980-11077	J14	Junction Connector	90980-11661
	Fuel Sender		J15	Junction Connector	
G 1	Glove Box Light and SW	90980-11098	J16	Junction Connector	90980-11686
H 1	Headlight Beam Level Control Actuator LH	90980-11016	J17	Junction Connector	90980-11915
H 2	Headlight Beam Level Control Actuator RH		K 1	Knock Sensor	90980-11166
H 3	Headlight LH (High)	90980-11659	L 1	License Plate Light LH	90980-11148
H 4	Headlight LH (Low)	90980-10481	L 2	License Plate Light RH	
H 5	Headlight RH (High)	90980-11659	L 3	Luggage Compartment Light	90980-10121
H 6	Headlight RH (Low)	90980-10481	L 4	Luggage Compartment Light SW	90980-10871
H 7	Horn (High)	90980-10619	M 1	Moon Roof Control Relay and Motor	90980-10997
H 8	Horn (Low)		M 2	Moon Roof Control SW	90980-11533
H 9	Hazard SW	90980-10801		Personal Light	
H10	Headlight Beam Level Control SW	90980-10797	N 1	Neutral Start SW	90980-11784
H11	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	N 2	Noise Filter (Ignition System)	90980-11156
H12	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	N 3	Noise Filter (Rear Window Defogger)	90980-10825
H13	High Mounted Stop Light	90980-10859	O 1	O/D Direct Clutch Speed Sensor	90980-11156
H14	Headlight Beam Level Control ECU	90980-12200	O 2	Oil Pressure SW	90980-11363
H15	Headlight Cleaner Motor	90980-11410	O 3	O/D Main SW	90980-11011
H16	Headlight Cleaner Relay	90980-10939	P 1	Power Steering Oil Pressure SW	90980-11428
H17	Headlight Cleaner SW	90980-10789	P 2	Parking Brake SW	90980-10871
H18	Headlight Control ECU	90980-10869	P 3	Power Window Lock SW	90980-10997
H19	Headlight Control ECU		P 4	Power Window Master SW	90980-11973
H20	Height Control Sensor	90980-11860	P 5	Personal Light (w/o Moon Roof)	90980-11148

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P 6	Power Window Motor LH (LHD)	90980-11011	T 2	Transponder Key Amplifier	90980-11909
	Power Window Motor LH (RHD)	90980-10860	T 3	Turn Signal Flasher Relay	90980-10799
P 7	Power Window Motor RH (LHD)	90980-10860	T 4	Traction Cut SW	90980-10631
	Power Window Motor RH (RHD)	90980-11011	U 1	Unlock Warning SW	90980-10860
P 8	Pretensioner LH	90980-11862	V 1	VSV (ACIS)	90980-11156
P 9	Pretensioner RH		V 2	VSV (EVAP)	
R 1	Radiator Fan Motor	90980-10928	V 3	VSV (Air Pump)	
R 2	Radio and Player	90980-10997	V 4	VSC Warning Buzzer	90980-10906
R 3	Radio and Player	90980-10996	W 1	Washer Motor	90980-10981
R 4	Rear Fog Light Relay	82660-20340	Y 1	Yaw Rate Sensor	90980-11904
R 5	Rheostat	90980-10908	Z 1	Option Connector (High Mounted Stop Light)	90980-11159
R 6	Rear Combination Light LH	90980-11011	Z 2	Option Connector (Theft Deterrent Siren and Engine Hood Courtesy SW) (LHD Europe)	90980-10988
R 7	Rear Combination Light RH			Option Connector (Theft Deterrent Siren and Engine Hood Courtesy SW) (RHD Europe)	90980-10474
R 8	Rear Fog Light LH	90980-11159	Z 3	Option Connector (TVSS ECU)	90980-10908
R 9	Rear Fog Light RH	90980-10935	Z 4	Option Connector (TVSS ECU)	90980-10819
R10	Rear Speaker LH				
R11	Rear Speaker RH	90980-10913			
R12	Rear Window Defogger	90980-10914			
R13	Rear Window Defogger	90980-10908			
R14	Rear Wiper Motor and Relay	90980-11587			
R15	Remote Control Mirror LH				
R16	Remote Control Mirror RH	90980-11657			
R17	Remote Control Mirror SW	90980-10803			
R18	Radio and Player	90980-10819			
R19	Radio and Player	90980-11143			
S 1	Speed Sensor (Combination Meter)	90980-11156			
S 2	Speed Sensor (Turbine Speed Sensor)	90980-11400			
S 3	Starter	90980-09463			
S 4	Starter	90980-11490			
S 5	Security Indicator	90980-11909			
S 6	Shift Lock Control ECU	90980-11864			
S 7	Side Airbag Squib LH				
S 8	Side Airbag Squib RH	90980-11118			
S 9	Stop Light SW	90980-11857			
S10	Side Airbag Sensor LH				
S11	Side Airbag Sensor RH	90980-10825			
S12	Seat Heater LH	82660-20340			
S13	Seat Heater Relay	90980-10825			
S14	Seat Heater RH	90980-10996			
S15	Seat Heater SW	90980-11421			
S16	Skid Control ECU	90980-11476			
S17	Skid Control ECU	90980-11637			
S18	Skid Control ECU	90980-11638			
S19	Skid Control ECU	90980-12162			
S20	Steering Sensor	90980-11261			
T 1	Throttle Position Sensor				

Note: Not all of the above part numbers of the connector are established for the supply.

