


Position of Parts in Instrument Panel

[RHD]

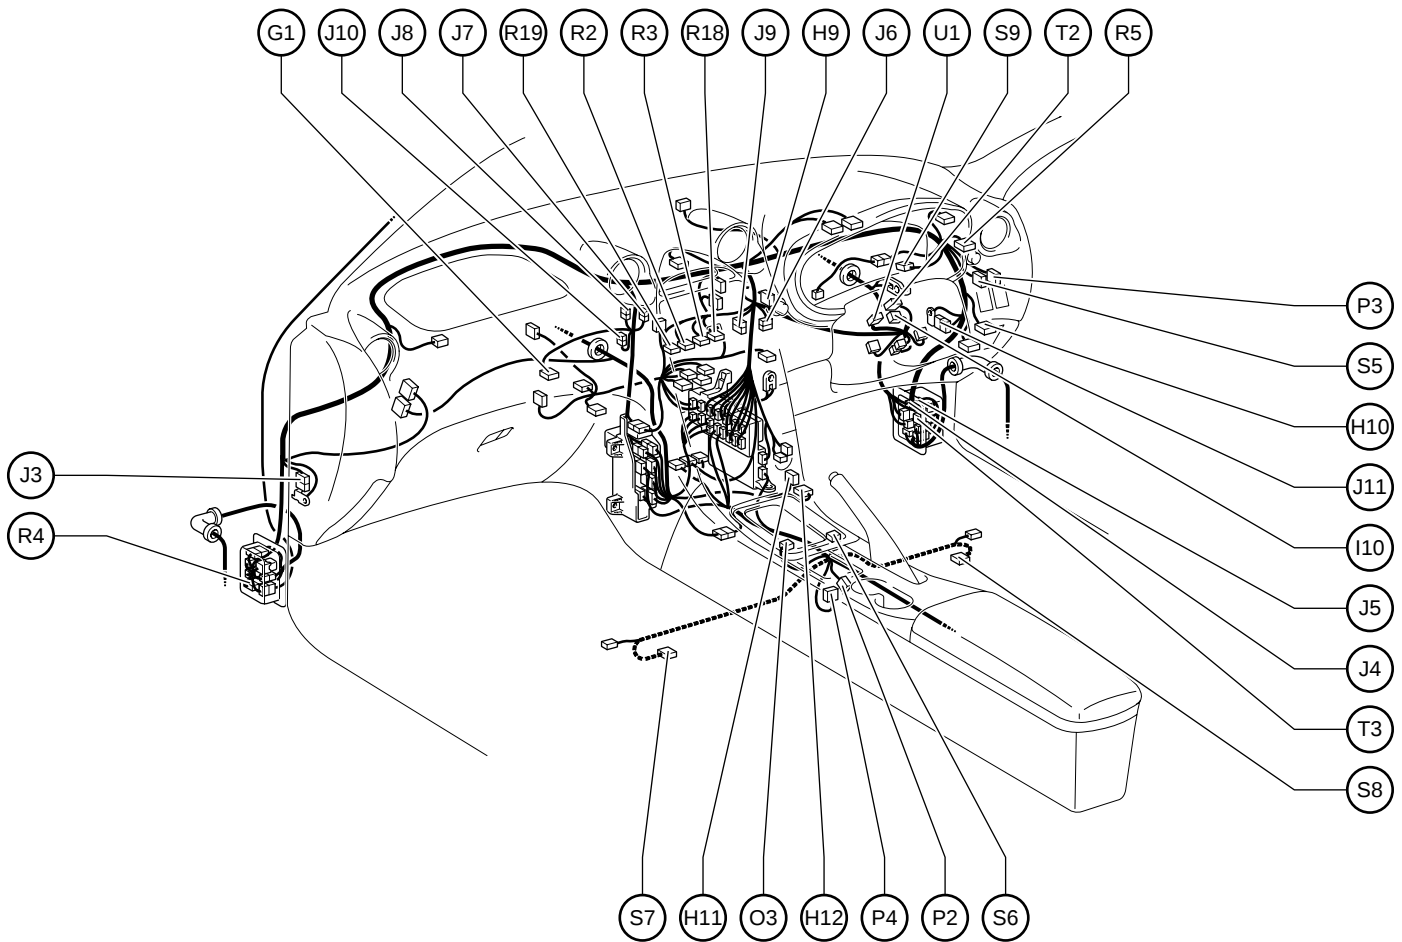

G 1 Glove Box Light and SW

H 9 Hazard SW

H10 Headlight Beam Level Control SW

H11 Heated Oxygen Sensor (Bank 1 Sensor 1)

H12 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 10 Ignition SW

J 3 Junction Connector

J 4 Junction Connector

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 8 Junction Connector

J 9 Junction Connector

J10 Junction Connector

J11 Junction Connector

O 3 O/D Main SW

P 2 Parking Brake SW

P 3 Power Window Lock SW

P 4 Power Window Master SW

R 2 Radio and Player

R 3 Radio and Player

R 4 Rear Fog Light Relay

R 5 Rheostat

R18 Radio and Player

R19 Radio and Player

S 5 Security Indicator

S 6 Shift Lock Control ECU

S 7 Side Airbag Squib LH

S 8 Side Airbag Squib RH

S 9 Stop Light SW

T 2 Transponder Key Amplifier

T 3 Turn Signal Flasher Relay

U 1 Unlock Warning SW